# P5MT-C



E2502 Revised Edition V2 March 2006

#### Copyright © 2006 ASUSTEK COMPUTER INC. All Rights Reserved.

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ASUSTEK COMPUTER INC. ("ASUS").

Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification of alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

ASUS PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL ASUS, ITS DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFITS, LOSS OF BUSINESS, LOSS OF USE OR DATA, INTERRUPTION OF BUSINESS AND THE LIKE), EVEN IF ASUS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES ARISING FROM ANY DEFECT OR ERROR IN THIS MANUAL OR PRODUCT.

SPECIFICATIONS AND INFORMATION CONTAINED IN THIS MANUAL ARE FURNISHED FOR INFORMATIONAL USE ONLY, AND ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE, AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY ASUS. ASUS ASSUMES NO RESPONSIBILITY OR LIABILITY FOR ANY ERRORS OR INACCURACIES THAT MAY APPEAR IN THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

# Contents

Notices	vii
Safety information	viii
About this guide	ix
Typography	x
P5MT-C specifications summary	xi

### Chapter 1: Product introduction

1.1	Welcom	ne!1·	-1
1.2	Package	e contents 1·	-1
1.3	Special	features 1-	-2
	1.3.1	Product highlights 1-	-2
	1.3.2	Innovative ASUS features1.	-4

### Chapter 2: Hardware information

2.1 Before you proceed		2-1	
	Onboa	rd LEDs	2-1
2.2	Mother	rboard overview	2-2
	2.2.1	Placement direction	2-2
	2.2.2	Screw holes	2-2
	2.2.3	Motherboard layout	2-3
	2.2.4	Layout Contents	2-4
2.3	Centra	I Processing Unit (CPU)	2-6
	2.3.1	Installing the CPU	2-6
	2.3.2	Installing the CPU heatsink and fan	2-9
	2.3.3	Uninstalling the CPU heatsink and fan	2-11
2.4	Systen	n memory	2-13
	2.4.1	Overview	2-13
	2.4.2	Memory Configurations	2-13
	2.4.3	Installing a DIMM	2-14
	2.4.4	Removing a DIMM	2-14
2.5	Expans	sion slots	2-15
	2.5.1	Installing an expansion card	2-15
	2.5.2	Configuring an expansion card	2-15
	2.5.3	Interrupt assignments	
	2.5.4	PCI Express x8 slot	
	2.5.5	PCI slots	2-17
2.6	Jumpe	rs	2-18

# Contents

2.7	Connect	cors
	2.7.1	Rear panel connectors 2-23
	2.7.2	Internal connectors 2-24
Chap	ter 3:	Powering up
3.1	Starting	up for the first time
3.2	Powering	g off the computer
	3.2.1	Using the OS shut down function
	3.2.2	Using the dual function power switch 3-2
Chap	ter 4:	BIOS setup
4.1	Managin	g and updating your BIOS
	4.1.1	Creating a bootable floppy disk
	4.1.2	AFUDOS utility
	4.1.3	ASUS CrashFree BIOS 2 utility 4-5
	4.1.4	ASUS Update utility 4-7
4.2	BIOS set	tup program
	4.2.1	BIOS menu screen 4-11
	4.2.2	Menu bar 4-11
	4.2.3	Navigation keys 4-11
	4.2.4	Menu items 4-12
	4.2.5	Sub-menu items
	4.2.6	Configuration fields 4-12
	4.2.7	Pop-up window
	4.2.8	Scroll bar 4-12
	4.2.9	General help 4-12
4.3	Main me	nu
	4.3.1	System Time 4-13
	4.3.2	System Date 4-13
	4.3.3	Legacy Diskette A 4-13
	4.3.4	Primary, Third, Fourth Master/Slave 4-14
	4.3.5	IDE Configuration
	4.3.6	System Information 4-17
4.4	Advance	ed menu
	4.4.1	USB Configuration
	4.4.2	MPS Configuration 4-19

# Contents

	4.4.3	Remote Access Configuration 4-20
	4.4.4	CPU Configuration 4-21
	4.4.5	Chipset 4-22
	4.4.6	Onboard Devices Configuration 4-24
	4.4.7	PCI PnP 4-25
4.5	Power	Menu 4-26
	4.5.1	ACPI APIC Support 4-26
	4.5.2	APM Configuration 4-27
	4.5.3	Hardware Monitor 4-28
4.6	Boot m	nenu 4-30
	4.6.1	Boot Device Priority 4-30
	4.6.2	Boot Settings Configuration 4-31
	4.6.3	Security
4.7	Exit me	enu
Chai	nter 5.	RAID configuration
5 1		onfiguration 5-1
5.1	5 1 1	RAID definitions 5-1
	512	Installing Serial ATA hard disks 5-2
	513	Setting RAID item in BIOS 5-2
	514	RAID configuration utility 5-2
52	Intel M	atrix Storage Manager ontion ROM utility 5-3
0.2	521	Creating a RAID 0 set (strined) 5-4
	522	Creating a RAID 1 set (mirrored) 5-6
	523	Creating a RAID 10 set (RAID $0 + 1$ ) 5-7
	524	Creating a RAID 5 set (parity) 5-8
	525	Deleting a RAID set 5-10
	526	Resetting Disks to Non-RAID 5-11
	527	Exiting the Intel Matrix Storage
	0.2	Manager utility 5-11
	5.2.8	Rebuilding the RAID
	5.2.9	Setting the Boot array in the BIOS Setup utility 5-13
5.3		uic Embedded SATA RAID Setup Utility
2.2	5.3.1	Creating a RAID set
	5.3.2	Adding or viewing a RAID configuration 5-21
	5.3.3	Initializing the logical drives

	5.3.5	Checking the drives for data consistency5-	.31
	5.3.6	Deleting a RAID configuration5-	.34
	5.3.7	Selecting the boot drive from a RAID set5-	·35
	5.3.8	Enabling the WriteCache5-	·36
5.4	Global A	rray Manager5-	·36
Chap	ter 6:	Driver installation	
6.1	RAID dri	ver installation6	<b>3-1</b>
	6.1.1	Creating a RAID driver disk	<u>3-1</u>
	6.1.2	Installing the RAID controller driver	ô-3
6.2	LAN driv	ver installation6-	·11
	6.2.1	Windows® 2000/2003 Server	·11
	6.2.2	Red Hat® Enterprise ver. 3.0	·12
6.3	VGA driv	ver installation6-	·13
	6.3.1	Windows® 2000 Server6-	·13
	6.3.2	Windows® 2003 Server6-	·14
	6.3.3	Red Hat® Enterprise ver. 3.0	·14
6.4	Manage	ment applications and utilites installation6-	·15
	6.4.1	Running the support CD6-	·15
	6.4.2	Drivers menu	·15
	6.4.3	Management Software menu 6-	·16
	6.4.4	Utilities menu 4-	·16
	6.4.5	Contact information 4-	·16
Арре	ndix: R	eference information	
A.1	Intel® EN	464TA	4-1
A.2	Enhance	ed Intel SpeedStep® Technology (EIST)	4-1

	A.2.1	System requirements	A-1
	A.2.2	Using the EIST	A-2
A.3	Intel® F	Hyper-Threading Technology	A-3
A.4	Block d	diagram	A-4

# Notices

### Federal Communications Commission Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with manufacturer's instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



The use of shielded cables for connection of the monitor to the graphics card is required to assure compliance with FCC regulations. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

### Canadian Department of Communications Statement

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

# This class B digital apparatus complies with Canadian ICES-003.

# Safety information

# **Electrical safety**

- To prevent electrical shock hazard, disconnect the power cable from the electrical outlet before relocating the system.
- When adding or removing devices to or from the system, ensure that the power cables for the devices are unplugged before the signal cables are connected. If possible, disconnect all power cables from the existing system before you add a device.
- Before connecting or removing signal cables from the motherboard, ensure that all power cables are unplugged.
- Seek professional assistance before using an adapter or extension cord. These devices could interrupt the grounding circuit.
- Make sure that your power supply is set to the correct voltage in your area. If you are not sure about the voltage of the electrical outlet you are using, contact your local power company.
- If the power supply is broken, do not try to fix it by yourself. Contact a qualified service technician or your retailer.

# **Operation safety**

- Before installing the motherboard and adding devices on it, carefully read all the manuals that came with the package.
- Before using the product, make sure all cables are correctly connected and the power cables are not damaged. If you detect any damage, contact your dealer immediately.
- To avoid short circuits, keep paper clips, screws, and staples away from connectors, slots, sockets and circuitry.
- Avoid dust, humidity, and temperature extremes. Do not place the product in any area where it may become wet.
- Place the product on a stable surface.
- If you encounter technical problems with the product, contact a qualified service technician or your retailer.



The symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulations for disposal of electronic products.

# About this guide

This user guide contains the information you need when installing and configuring the motherboard.

### How this guide is organized

This manual contains the following parts:

### • Chapter 1: Product introduction

This chapter describes the features of the motherboard and the new technology it supports.

### • Chapter 2: Hardware information

This chapter lists the hardware setup procedures that you have to perform when installing system components. It includes description of the switches, jumpers, and connectors on the motherboard.

### • Chapter 3: Powering up

This chapter describes the power up sequence, the vocal POST messages, and ways of shutting down the system.

### • Chapter 4: BIOS setup

Tells how to change system settings through the BIOS Setup menus. Detailed descriptions of the BIOS parameters are also provided.

### • Chapter 5: RAID configuration

Provides information on RAID configurations for this motherboard.

### • Chapter 6: Driver installation

This chapter provides information on RAID and LAN driver installation for this motherboard.

### • Appendix: Reference information

This appendix includes additional information that you may refer to when configuring the motherboard.

### Where to find more information

Refer to the following sources for additional information and for product and software updates.

### 1. ASUS websites

The ASUS website provides updated information on ASUS hardware and software products. Refer to the ASUS contact information.

### 2. Optional documentation

Your product package may include optional documentation, such as warranty flyers, that may have been added by your dealer. These documents are not part of the standard package.

# Conventions used in this guide

To make sure that you perform certain tasks properly, take note of the following symbols used throughout this manual.



**DANGER/WARNING:** Information to prevent injury to yourself when trying to complete a task.

**CAUTION:** Information to prevent damage to the components when trying to complete a task.



 $\ensuremath{\mathsf{IMPORTANT}}$  : Instructions that you MUST follow to complete a task.



**NOTE:** Tips and additional information to help you complete a task.

# Typography

Bold text Italics <key></key>	Indicates a menu or an item to select. Used to emphasize a word or a phrase. Keys enclosed in the less-than and greater-than sign means that you must press the enclosed key.
<key1> + <key2> + <key3></key3></key2></key1>	Example: <enter> means that you must press the Enter or Return key. If you must press two or more keys simultaneously, the key names are linked with a plus sign (+).</enter>
Command	Example: <ctrl> + <alt> +<del> Means that you must type the command exactly as shown, then supply the required item or value enclosed in brackets. Example: At the DOS prompt, type the command line: format A:/S</del></alt></ctrl>

# **P5MT-C specifications summary**

CPU	LGA775 socket for Intel <sup>®</sup> Pentium <sup>®</sup> 4/processor Compatible with Intel <sup>®</sup> PCG 05B/05A and 04B/04A and the latest Intel <sup>®</sup> Smithfield dual-core processor Supports Intel <sup>®</sup> Enhanced Memory 64 Technology (EM64T) Supports Enhanced Intel SpeedStep <sup>®</sup> Technology (EIST) Supports Intel <sup>®</sup> Hyper-Threading Technology
Chipset	NorthBridge: Intel® E7230 SouthBridge: Intel® ICH7R
Front Side Bus	1066/800 MHz
Memory	Dual-channel memory architecture 4 x 240-pin DIMM sockets support unbuffered ECC/non-ECC DDR2-533/667 memory modules Supports up to 8 GB system memory
Expansion slots	1 x PCI Express x8 slot (x8 link, PCI Express 1.0a) 1 x PCI Express x8 slot (x4 link, PCI Express 1.0a) 5 x PCI 33 MHz/32-bit/5V slots (PCI 2.3)
Storage	<ul> <li>Intel<sup>®</sup> ICH7R Southbridge supports:</li> <li>2 x Ultra DMA 100/66/33 hard disk drives</li> <li>4 x SATA-300 drives with RAID functionality using the Intel Matrix Storage Manager [IMSM] (RAID 0, RAID 1, RAID 10, and software RAID 5), or the LSI Logic Embedded SATA RAID controller (RAID 0, RAID 1, RAID 10)</li> </ul>
Graphics	ATI® RAGE-XL PCI-based VGA controller
Dual LAN	Dual embedded Broadcom BCM5753 Gigabit LAN controllers that comply with PCI Express 1.0a specifications
USB	<ul> <li>Intel ICH7R Southbridge supports:</li> <li>8 USB 2.0 ports (two on the rear panel, three connectors on the mid-borad for up to 6 additional ports)</li> </ul>
Special features	ASUS Q-Fan ASUS CrashFree BIOS 2 ASUS MyLogo2
<b>BIOS features</b>	AMI BIOS, 8 MB FWH, Green, PnP, DMI, SMBIOS 2.3, ACPI 2.0a

(continued on the next page)

# **P5MT-C specifications summary**

Rear panel	1 x PS/2 keyboard port (purple) 1 x PS/2 mouse port (green) 2 x USB 2.0 ports 1 x Parallel port 1 x Serial port (COM1) 1 x VGA port 2 x LAN (RJ-45) ports
Internal connectors	<ul> <li>1 x Floppy disk drive connector</li> <li>1 x IDE connector</li> <li>4 x Serial ATA connectors</li> <li>1 x Hard disk activity LED connector</li> <li>2 x Front fan connectors</li> <li>2 x Rear fan connectors</li> <li>2 x CPU fan connectors</li> <li>2 x CPU fan connectors</li> <li>1 x 24-pin ATX power connector</li> <li>1 x 8-pin ATX 12 V power connector</li> <li>1 x Serial port (COM2)</li> <li>3 x USB 2.0 connectors for 6 additional USB 2.0 ports</li> <li>1 x SMBus header for back-plane</li> <li>1 x 20-1 pin system panel connector</li> <li>1 x Serial port (COM2) connector</li> <li>1 x Serial port (COM2) connector</li> <li>1 x Serial port (COM2) connector</li> <li>1 x Ambient thermal sensor connector</li> </ul>
Power Requirement	SSI power supply (with 24-pin and 8-pin 12 V plugs) ATX 12 V 2.0 compliant
Form Factor	ATX form factor: 12 in x 9.8 in (30.5 cm x 24.9 cm)
Support CD contents	Device drivers ASUS Live Update utility ASUS Server Web-based Management (ASWM) Anti-virus software

\*Specifications are subject to change without notice.

This chapter describes the motherboard features and the new technologies it supports.

# Product introduction

# Chapter summary

1.1	Welcome!	1-1
1.2	Package contents	1-1
1.3	Special features	1-2

7

# 1.1 Welcome!

### Thank you for buying an ASUS® P5MT-C motherboard!

The motherboard delivers a host of new features and latest technologies, making it another standout in the long line of ASUS quality motherboards!

Before you start installing the motherboard, and hardware devices on it, check the items in your package with the list below.

# 1.2 Package contents

Check your motherboard package for the following items.

Motherboard	ASUS P5MT-C motherboard
Cables	4 x Serial ATA signal cables 2 x Serial ATA power cables 80-conductor IDE cable 3-in-1 Floppy/Ultra ATA disk drive cable
Accessories	I/O shield
Application CDs	ASUS motherboard support CD
Documentation	User guide



If any of the above items is damaged or missing, contact your retailer.

#### 1.3 **Special features**

#### 1.3.1 **Product highlights**

### Latest processor technology

The motherboard comes with a 775-pin surface mount Land Grid Array (LGA) socket designed for the Intel<sup>®</sup> Pentium<sup>®</sup> 4 processor in the 775-land package. The motherboard supports the Intel® Pentium® 4 processor with 1066/800/533 MHz Front Side Bus (FSB). The motherboard also supports the Intel® Hyper-Threading Technology and is fully compatible with Intel® 05B/05A or 04B/04A processors. See page 2-6 for details.



The motherboard supports Intel® Pentium® 4 CPUs with the Intel® EM64T (Extended Memory 64 Technology). The Intel<sup>®</sup> EM64T feature allows your computer to run on 64-bit operating systems and access larger amounts of system memory for faster and more efficient computing. See the Appendix for details

### Enhanced Intel SpeedStep® Technology (EIST)

The Enhanced Intel SpeedStep® Technology (EIST) intelligently manages the CPU resources by automatically adjusting the CPU voltage and core frequency depending on the CPU loading and system speed or power requirement. See page 4-22 and the Appendix for details.

### Intel® E7230 and Intel® ICH7R chipset

The Intel® E7230 Memory Controller Hub (MCH) and the Intel® ICH7R (I/O controller hub) provide the vital interfaces for the motherboard.

The MCH provides the processor, dual-channel DDR2-533/667 memory, and PCI Express interfaces. The ICH is a new generation server class I/O controller hub that provides the interface for PCI 2.3, USB 2.0, and SATA among others.

### DDR2-667 memory support



The motherboard supports DDR2 memory which features data transfer rates of up to 667 MHz to meet the higher bandwidth requirements of the latest server applications. The dual-channel memory architecture doubles the bandwidth of your system memory to boost system performance, eliminating bottlenecks with peak bandwidths of up to 10.7 GB/s.

# PCI Express™ interface PCI≫



The motherboard fully supports PCI Express, the latest I/O interconnect technology that speeds up the PCI bus. PCI Express features point-to-point serial interconnections between devices and allows higher clockspeeds by carrying data in packets. This high speed interface is software compatible with existing PCI or PCI-X specifications. See page 2-17 for details.

# Gigabit LAN solution 🗮

The motherboard comes with dual Gigabit LAN controllers and ports to provide a total solution for your networking needs. The onboard Broadcom<sup>®</sup> BCM5753 Gigabit LAN controllers use the PCI Express interface and could achieve network throughput close to Gigabit bandwidth. See page 2-23 for details.

# Serial ATA II technology

The motherboard supports the Serial ATA II technology through the Serial ATA interfaces controlled by the Intel<sup>®</sup> ICH7R. The SATA specification allows for thinner, more flexible cables with lower pin count, reduced voltage requirement, and up to 300 MB/s data transfer rate.

### Built-in SATA RAID solution

The Intel<sup>®</sup> ICH7R allows RAID 0, RAID 1, RAID 0+1, and software RAID 5 configuration for SATA hard disk drives via the Intel<sup>®</sup> Matrix Storage Manager or the LSI Logic Embedded SATA RAID Setup Utility (no RAID 5). See page 2-25 and Chapter 5 for details.

### USB 2.0 technology 0



The motherboard implements the Universal Serial Bus (USB) 2.0 specification, dramatically increasing the connection speed from the 12 Mbps bandwidth on USB 1.1 to a fast 480 Mbps on USB 2.0. USB 2.0 is backward compatible with USB 1.1. See pages 2-23 and 2-26 for details.

### Temperature, fan, and voltage monitoring

The CPU temperature is monitored by the ASIC (integrated in the Winbond hardware monitor) to prevent overheating and damage. The system fan rotations per minute (RPM) is monitored for timely failure detection. The ASIC monitors the voltage levels to ensure stable supply of current for critical components. See page 4-29 for details.

# 1.3.2 Innovative ASUS features

### CrashFree BIOS 2 Contractor

This feature allows you to restore the original BIOS data from the support CD in case when the BIOS codes and data are corrupted. This protection eliminates the need to buy a replacement ROM chip. See page 4-5 for details.

### ASUS Smart Fan technology

The ASUS Smart Fan technology smartly adjusts the fan speeds according to the system loading to ensure quiet, cool, and efficient operation. See page 4-29 for details.

# ASUS MyLogo2™ 🌌

This new feature present in the motherboard allows you to personalize and add style to your system with customizable boot logos. See page 4-31 for details.

This chapter lists the hardware setup procedures that you have to perform when installing system components. It includes description of the jumpers and connectors on the motherboard.

# Hardware information

# **Chapter summary**

2.1	Before you proceed	
2.2	Motherboard overview	
2.3	Central Processing Unit (CPU)	
2.4	System memory	2-13
2.5	Expansion slots	2-15
2.6	Jumpers	
2.7	Connectors	2-23

2

# 2.1 Before you proceed

Take note of the following precautions before you install motherboard components or change any motherboard settings.



- Unplug the power cord from the wall socket before touching any component.
- Use a grounded wrist strap or touch a safely grounded object or a metal object, such as the power supply case, before handling components to avoid damaging them due to static electricity.
- Hold components by the edges to avoid touching the ICs on them.
- Whenever you uninstall any component, place it on a grounded antistatic pad or in the bag that came with the component.
- Before you install or remove any component, ensure that the ATX power supply is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, or components, or all of the above articles.

#### Onboard LED

The motherboard comes with a standby power LED. The green LED lights up to indicate that the system is ON, in sleep mode, or in soft-off mode. This is a reminder that you should shut down the system and unplug the power cable before removing or plugging in any motherboard component. The illustration below shows the location of the onboard LED.



# 2.2 Motherboard overview

Before you install the motherboard, study the configuration of your chassis to ensure that the motherboard fits into it.

To optimize the motherboard features, we highly recommend that you install it in an **SSI EEB 3.5 compliant chassis**.



Make sure to unplug the power cord before installing or removing the motherboard. Failure to do so can cause you physical injury and damage to the motherboard components.

# 2.2.1 Placement direction

When installing the motherboard, make sure that you place it into the chassis in the correct orientation. The edge with external ports goes to the rear part of the chassis as indicated in the image below.

# 2.2.2 Screw holes

Place nine (9) screws into the holes indicated by circles to secure the motherboard to the chassis.



Do not overtighten the screws! Doing so can damage the motherboard.



### 2.2.3 Motherboard layout



# 2.2.4 Layout contents

Slots/Sockets		Page
1.	CPU socket	2-6
2.	DDR2 DIMM slots	2-13
3.	PCI/PCI Express slots	2-17

Jun	ipers	Page
1.	Clear RTC RAM (CLRTC1)	2-18
2.	CPU fan pin selection (3-pin FM_CPU1, FM_CPU2)	2-19
3.	USB device wake-up (3-pin USBPW12, USBPW34, USBPW56, USBPW78)	2-19
4.	Keyboard power (3-pin KBPWR1)	2-20
5.	VGA controller setting (3-pin VGA_EN1)	2-20
6.	Gigabit LAN controller setting (3-pin LAN_EN1; LAN_EN2)	2-21
7.	RAID controller selection (3-pin RAID_SEL1)	2-21
8.	Force BIOS recovery setting (3-pin RECOVERY1)	2-22

Rea	r panel connectors	Page
1.	PS/2 mouse port (green)	2-23
2.	Parallel port	2-23
3.	PS/2 keyboard port (purple)	2-23
4.	USB 2.0 ports 1 and 2	2-23
5.	Serial (COM1) port	2-23
6.	VGA port	2-23
7.	Gigabit LAN1 (RJ-45) port	2-23
8.	Gigabit LAN2 (RJ-45) port	2-23

Internal connectors				
1.	Floppy disk drive connector (34-1 pin FLOPPY1)	2-24		
2.	Primary IDE connectors (40-1 pin PRI_IDE1)	2-24		
3.	Serial ATA connectors (7-pin SATA1, SATA2, SATA3, SATA4)	2-25		
4.	Hard disk activity LED connector (4-pin HDLED1)	2-26		
5.	USB connectors (10-1 pin USB34, USB56, USB78)	2-26		
6.	Serial port connector (10-1 pin COM2)	2-27		
7.	Ambient thermal sensor (2-pin TRPWR1)	2-27		
8.	CPU and system fan connectors (3-pin CPU_FAN1/2, REAR_FAN1/2, FRNT_FAN1/2)	2-28		
9.	Backplane SMBus connector (6-1 pin BPSMB1)	2-28		
10.	SSI power connectors (24-pin ATXPWR1, 8-pin ATX12V2)	2-29		
11.	System panel connector (20-pin PANEL1)	2-30		

# 2.3 Central Processing Unit (CPU)

The motherboard comes with a surface mount LGA775 socket designed for the Intel<sup>®</sup> Pentium<sup>®</sup> 4 in the 775-land package.

- Upon purchase of the motherboard, make sure that the PnP cap is on the socket and the socket contacts are not bent. Contact your retailer immediately if the PnP cap is missing, or if you see any damage to the PnP cap/socket contacts/motherboard components. ASUS shoulders the repair cost only if the damage is shipment/ transit-related.
  - Keep the cap after installing the motherboard. ASUS will process Return Merchandise Authorization (RMA) requests only if the motherboard comes with the cap on the LGA775 socket.
  - The product warranty does not cover damage to the socket contacts resulting from incorrect CPU installation/removal, or misplacement/loss/incorrect removal of the PnP cap.

# 2.3.1 Installing the CPU

To install a CPU:

1. Locate the CPU socket on the motherboard.



P5MT-C CPU Socket 775



Before installing the CPU, make sure that the cam box is facing towards you and the load lever is on your left.

2. Press the load lever with your thumb (A), then move it to the left (B) until it is released from the retention tab.





To prevent damage to the socket pins, do not remove the  $\mathsf{PnP}$  cap unless you are installing a  $\mathsf{CPU}.$ 

- Lift the load lever in the direction of the arrow to a 135° angle.
- Lift the load plate with your thumb and forefinger to a 100° angle (A), then push the PnP cap from the load plate window to remove (B).

5. Position the CPU over the socket, making sure that the gold triangle is on the bottom-left corner of the socket. The socket alignment key should fit into the CPU notch.





The CPU fits in only one correct orientation. DO NOT force the CPU into the socket to prevent bending the connectors on the socket and damaging the CPU!

 Close the load plate (A), then push the load lever (B) until it snaps into the retention tab.





The motherboard supports Intel® Pentium® 4 LGA775 processors with the Intel® Enhanced Memory 64 Technology (EM64T), Enhanced Intel SpeedStep® Technology (EIST), and Hyper-Threading Technology. Refer to the Appendix for more information on these CPU features.

# 2.3.2 Installing the CPU heatsink and fan

The Intel<sup>®</sup> Pentium<sup>®</sup> 4 LGA775 processor requires a specially designed heatsink and fan assembly to ensure optimum thermal condition and performance.

- When you buy a boxed Intel® Pentium® 4 processor, the package includes the CPU fan and heatsink assembly.
  - Your Intel<sup>®</sup> Pentium<sup>®</sup> 4 LGA775 heatsink and fan assembly comes in a push-pin design and requires no tool to install.
  - If you purchased a separate CPU heatsink and fan assembly, make sure that you have properly applied Thermal Interface Material to the CPU heatsink or CPU before you install the heatsink and fan assembly.



- Make sure that you use Intel<sup>®</sup>-certified multi-directional heatsink and fan only.
- Make sure that you have installed the motherboard to the chassis before you install the CPU fan and heatsink assembly.

To install the CPU heatsink and fan:



Make sure to orient each fastener with the narrow end of the groove pointing outward. (The photo shows the groove shaded for emphasis.)

2. Push down two fasteners at a time in a diagonal sequence to secure the heatsink and fan assembly in place.





3. Connect the CPU fan cable to the connector on the motherboard labeled CPU\_FAN1/CPU\_FAN2.



P5MT-C CPU Fan Connectors

- Do not forget to connect the CPU fan connector! Hardware monitoring errors can occur if you fail to plug this connector.
- If there is only one CPU fan cable, connect it to the connector labeled CPU\_FAN1. Failure to do so may cause hardware monitoring errors.

### 2.3.3 Uninstalling the CPU heatsink and fan

To uninstall the CPU heatsink and fan:

- 1. Disconnect the CPU fan cable from the connector on the motherboard.
- 2. Rotate each fastener counterclockwise.



3. Pull up two fasteners at a time in a diagonal sequence to disengage the heatsink and fan assembly from the motherboard.



4. Carefully remove the heatsink and fan assembly from the motherboard.





5. Rotate each fastener clockwise to ensure correct orientation when reinstalling.



Narrow end of the groove



The narrow end of the groove should point outward after resetting. (The photo shows the groove shaded for emphasis.)





Refer to the documentation in the boxed or stand-alone CPU fan package for detailed information on CPU fan installation.

# 2.4 System memory

### 2.4.1 Overview

The motherboard comes with four Double Data Rate 2 (DDR2) Dual Inline Memory Modules (DIMM) sockets.

A DDR2 module has the same physical dimensions as a DDR DIMM but has a 240-pin footprint compared to the 184-pin DDR DIMM. DDR2 DIMMs are notched differently to prevent installation on a DDR DIMM socket.

The figure illustrates the location of the DDR2 DIMM sockets:



P5MT-C 240-pin DDR2 DIMM Sockets

# 2.4.2 Memory configurations

You may install 256 MB, 512 MB, 1 GB, and 2 GB unbuffered ECC or non-ECC DDR2-533/667 DIMMs into the DIMM sockets.

- Always install DIMMs with the same CAS latency. For optimum compatibility, we recommend that you obtain memory modules from the same vendor. Refer to the DDR2 Qualified Vendors List on the ASUS web site.
  - When installing one or two DIMMs, install the DIMM(s) to the black slots (DIMM\_A2/DIMM\_B2).
  - Three DDR2 DIMMs intalled into any three memory sockets will function in single-channel mode.

# 2.4.3 Installing a DIMM



Unplug the power supply before adding or removing DIMMs or other system components. Failure to do so can cause severe damage to both the motherboard and the components.

To install a DIMM:

- 1. Unlock a DIMM socket by pressing the retaining clips outward.
- 2. Align a DIMM on the socket such that the notch on the DIMM matches the break on the socket.
- 3. Firmly insert the DIMM into the socket until the retaining clips snap back in place and the DIMM is properly seated.



Unlocked retaining clip



- A DDR2 DIMM is keyed with a notch so that it fits in only one direction. DO NOT force a DIMM into a socket to avoid damaging the DIMM.
- The DDR2 DIMM sockets do not support DDR DIMMs. DO NOT install DDR DIMMs to the DDR2 DIMM sockets.

# 2.4.4 Removing a DIMM

Follow these steps to remove a DIMM.

1. Simultaneously press the retaining clips outward to unlock the DIMM.



Support the DIMM lightly with your fingers when pressing the retaining clips. The DIMM might get damaged when it flips out with extra force.



2. Remove the DIMM from the socket.

# 2.5 Expansion slots

In the future, you may need to install expansion cards. The following sub-sections describe the slots and the expansion cards that they support.



Make sure to unplug the power cord before adding or removing expansion cards. Failure to do so may cause you physical injury and damage to the motherboard components.

### 2.5.1 Installing an expansion card

To install an expansion card:

- 1. Before installing the expansion card, read the documentation that came with it and make the necessary hardware settings for the card.
- 2. Remove the system unit cover (if your motherboard is already installed in a chassis).
- 3. Remove the bracket opposite the slot that you intend to use. Keep the screw for later use.
- 4. Align the card connector with the slot and press firmly until the card is completely seated on the slot.
- 5. Secure the card to the chassis with the screw you removed earlier.
- 6. Replace the system cover.

### 2.5.2 Configuring an expansion card

After installing the expansion card, configure it by adjusting the software settings.

- 1. Turn on the system and change the necessary BIOS settings, if any. See Chapter 4 for information on BIOS setup.
- 2. Assign an IRQ to the card. Refer to the tables on the next page.
- 3. Install the software drivers for the expansion card.



When using PCI cards on shared slots, ensure that the drivers support "Share IRQ" or that the cards do not need IRQ assignments. Otherwise, conflicts will arise between the two PCI groups, making the system unstable and the card inoperable. Refer to the table on the next page for details.

# 2.5.3 Interrupt assignments

IRQ	Priority	Standard Function
0	1	System Timer
1	2	Keyboard Controller
2	—	Re-direct to IRQ#9
3	11	Communications Port (COM2)*
4	12	Communications Port (COM1)*
5	13	IRQ holder for PCI steering*
6	14	Floppy Disk Controller
7	15	Printer Port (LPT1)*
8	3	System CMOS/Real Time Clock
9	4	IRQ holder for PCI steering*
10	5	IRQ holder for PCI steering*
11	6	IRQ holder for PCI steering*
12	7	PS/2 Compatible Mouse Port*
13	8	Numeric Data Processor
14	9	Primary IDE Channel
15	10	Secondary IDE Channel

### Standard interrupt assignments

\* These IRQs are usually available for ISA or PCI devices.

### IRQ assignments for this motherboard

	Α	В	С	D	E	F	G	Н
PCIE x 8 slot 1	shared	_	_	_	_	_	_	_
PCIE x 8 slot 2	shared	_	_	_	_	_	_	—
Onboard USB controller 0	shared	—	—	—	—	—	—	—
Onboard USB controller 1	—	shared	—	—	—	—	—	
Onboard USB controller 2	—	—	shared	—	—	—	—	
Onboard USB controller 3	—	—	—	shared	—	—	—	
Onboard EHCI Controller	shared	—	—	—	—	—	—	
Onboard IDE port	—	—	shared	—	—	—	—	
Onboard SATA port	—	—	—	shared	—	—	—	-
Onboard Graphics Controller	—	—	—	shared	—	—	—	_
Onboard LAN Contorller1	shared	—	—	—	—	—	—	—
Onboard LAN Contorller2	—	shared	—	—	—	—	—	—
PCI slot 1	—	_	_	_	shared	shared	shared	shared
PCI slot 2	—	_	_	_	shared	shared	shared	shared
PCI slot 3	—	_	_	_	shared	shared	shared	shared
PCI slot 4	_	_	_	_	shared	shared	shared	shared
PCI slot 5	—	_	_	_	shared	shared	shared	shared
## 2.5.4 PCI Express x8 slots

This motherboard supports PCI Express x8 network cards, SCSI cards, and other cards that comply with PCI Express 1.0 specifications.



PCI Express x8 slot1 (x4 link) PCI Express x8 slot2 (x8 link)



A PCI Express card inserted to the labeled PCIE1 slot may run only at x4 speed due to chipset limitation.

### 2.5.5 PCI slots

The PCI slots support cards such as a LAN card, SCSI card, USB card, and other cards that comply with PCI 2.3 specifications. The figure shows a LAN card installed on a 32-bit PCI slot.



## 2.6 Jumpers

#### 1. Clear RTC RAM (CLRTC1)

This jumper allows you to clear the Real Time Clock (RTC) RAM in CMOS. You can clear the CMOS memory of date, time, and system setup parameters by erasing the CMOS RTC RAM data. The onboard button cell battery powers the RAM data in CMOS, which include system setup information such as system passwords.

To erase the RTC RAM:

- 1. Turn OFF the computer and unplug the power cord.
- 2. Remove the onboard battery.
- 3. Move the jumper cap from pins 1-2 (default) to pins 2-3. Keep the cap on pins 2-3 for about 5~10 seconds, then move the cap back to pins 1-2.
- 4. Re-install the battery.
- 5. Plug the power cord and turn ON the computer.
- 6. Hold down the <Del> key during the boot process and enter BIOS setup to re-enter data.



Except when clearing the RTC RAM, never remove the cap on CLRTC jumper default position. Removing the cap will cause system boot failure!



P5MT-C Clear RTC RAM



#### 2. CPU fan pin selection (3-pin FM\_CPU1, FM\_CPU2)

These jumpers allow you to connect either a 3-pin or a 4-pin fan cable plug to the CPU fan connectors (CPU\_FAN1, CPU\_FAN2). Set these jumpers to pins 1-2 if you are using a 3-pin fan cable plug, or to pins 2-3 if you are using a 4-pin plug.



3. USB device wake-up (3-pin USBPW12, USBPW34, USBPW56, USBPW78)

Set these jumpers to +5V to wake up the computer from S1 sleep mode (CPU stopped, DRAM refreshed, system running in low power mode) using the connected USB devices. Set to +5VSB to wake up from S4 sleep mode (no power to CPU, DRAM in slow refresh, power supply in reduced power mode).





- The USB device wake-up feature requires a power supply that can provide 500mA on the +5VSB lead for each USB port; otherwise, the system would not power up.
- If you are using Windows 2000, you need to install Service Pack 4 to wake up the system from S4 sleep mode.
- The total current consumed must NOT exceed the power supply capability (+5VSB) whether under normal condition or in sleep mode.

#### 4. Keyboard power (3-pin KBPWR1)

This jumper allows you to enable or disable the keyboard wake-up feature. Set this jumper to pins 2-3 (+5VSB) to wake up the computer when you press a key on the keyboard (the default is the Space Bar). This feature requires an ATX power supply that can supply at least 1A on the +5VSB lead, and a corresponding setting in the BIOS.



P5MT-C Keyboard Power Setting

#### 5. VGA controller setting (3-pin VGA\_EN1)

These jumpers allow you to enable or disable the onboard ATI $^{\ensuremath{\$}}$  RAGE-XL PCI VGA controller. Set to pins 1-2 to activate the VGA feature.



#### 6. Gigabit LAN controller setting (3-pin LAN\_EN1, LAN\_EN2)

These jumpers allow you to enable or disable the onboard Broadcom^ $\rm BCM5753$  Gigabit LAN1 or LAN2 controller. Set to pins 1-2 to activate the Gigabit LAN controller.



P5MT-C LAN\_EN2 Setting

#### 7. RAID controller selection (3-pin RAID\_SEL1)

This jumper allows you to select the RAID configuration utility to use when you create disk arrays. Place the jumper caps over pins 1-2 if you want to use the LSI Logic Embedded SATA RAID Setup Utility (default); otherwise, place the jumper caps to pins 2-3 to use the Intel<sup>®</sup> Matrix Storage Manager.



#### 8. Force BIOS recovery setting (3-pin RECOVERY1)

This jumper allows you to quickly update or recover the original  $\ensuremath{\mathsf{BIOS}}$  when it gets corrupted.

To update the BIOS:

- 1. Prepare a floppy disk that contains the latest BIOS for the motherboard (xxxx-xxx.ROM) and the AFUDOS.EXE utility.
- 2. Set the jumper to pins 2-3.
- 3. Insert the floppy disk then turn on the system to update the BIOS.
- 4. Shut down the system.
- 5. Set the jumper back to pins 1-2.
- 6. Turn on the system.



## 2.7 Connectors

### 2.7.1 Rear panel connectors



- 1. **PS/2 mouse port (green).** This port is for a PS/2 mouse.
- 2. Parallel port. This 25-pin port connects a parallel printer, a scanner, or other devices.
- 3. PS/2 keyboard port (purple). This port is for a PS/2 keyboard.
- 4. USB 2.0 ports 1 and 2. These two 4-pin Universal Serial Bus (USB) ports are available for connecting USB 2.0 devices.
- 5. Serial (COM1) port. This 9-pin communication port is for pointing devices or other serial devices.
- **6.** VGA port. This port is for a VGA monitor or other VGA-compatible devices.
- **7. Gigabit LAN1 (RJ-45) port.** This ports allow Gigabit connection to a Local Area Network (LAN) through a network hub. Refer to the table below for the LAN port LED indications.
- 8. Gigabit LAN2 (RJ-45) port. This ports allow Gigabit connection to a Local Area Network (LAN) through a network hub. Refer to the table below for the LAN port LED indications.

### LAN port LED indications

ACT/LINK LED		SPEED LED		
Status	Description	Status	Description	
OFF	No link	OFF	10 Mbps connection	[
GREEN	Linked	RED	100 Mbps connection	
BLINKING	Data activity	GREEN	1 Gbps connection	



## 2.7.2 Internal connectors

#### 1. Floppy disk drive connector (34-1 pin FLOPPY1)

This connector is for the provided Floppy Disk Drive (FDD) signal cable. Insert one end of the cable to this connector, then connect the other end to the signal connector at the back of the floppy disk drive.



P5MT-C Floppy Disk Drive Connector

#### 2. ICH7R Primary IDE connector (40-1 pin PRI\_IDE1)

This connector is for an Ultra DMA 100/66/33 signal cable. The Ultra DMA 100/66/33 signal cable has three connectors: a blue connector for the primary IDE connector on the motherboard, a black connector for an Ultra DMA 100/66/33 IDE slave device (optical drive/hard disk drive), and a gray connector for an Ultra DMA 100/66/33 IDE master device (hard disk drive). If you install two hard disk drives, you must configure the second drive as a slave device by setting its jumper accordingly. Refer to the hard disk documentation for the jumper settings.



• Pin 20 on the IDE connector is removed to match the covered hole on the Ultra DMA cable connector. This prevents incorrect insertion when you connect the IDE cable.

• Use the 80-conductor IDE cable for Ultra DMA 100/66/33 IDE devices.



Chapter 2: Hardware information

# 3. Serial ATA connectors (7-pin SATA1, SATA2, SATA3, SATA4)

These connectors are for the Serial ATA signal cables for Serial ATA hard disk drives.

If you installed Serial ATA hard disk drives, you can create a RAID 0, RAID 1, RAID 0+1, and software RAID 5 configuration using the Intel® Matrix Storage Technology or RAID 0, RAID 1 and RAID 0+1 configuration using the LSI MegaRAID® utility embedded on the Intel® ICH7R Southbridge.

These connectors are set **Standard IDE** mode by default. In Standard IDE mode, you can connect Serial ATA boot/data hard disk drives to these connectors. If you intend to create a Serial ATA RAID set using these connectors, set the **Configure SATA as** item in the BIOS to [RAID]. See section "4.3.5 IDE Configuration" for details.





#### Important notes on Serial ATA

- You must install Windows<sup>®</sup> 2000 Service Pack 4 or Windows<sup>®</sup> 2003 before using Serial ATA hard disk drives. The Serial ATA RAID feature (RAID 0/RAID 1) is available only if you are using Windows<sup>®</sup> 2000/2003.
- Use only two Serial ATA RAID connectors for each RAID 0 or RAID 1 set.
- When using the connectors in IDE mode, connect the primary (boot) hard disk drive to the SATA1 or SATA2 connector. Refer to the table below for the recommended SATA hard disk drive connections.

#### Serial ATA hard disk drive connection

Connector	Setting	Use
SATA1/SATA2	Master	Boot disk
SATA3/SATA4	Slave	Data disk

#### 4. Hard disk activity LED connector (4-pin HDLED1)

This connector supplies power to the hard disk activity LED. The read or write activities of any device connected to the SCSI connectors or the SATA connectors cause this LED to light up.



P5MT-C SCSI/SATA Card Activity LED Connector

#### 5. USB connectors (10-1 pin USB34, USB56, USB78)

These connectors are for USB 2.0 ports. Connect the USB module cable to this connector, then install the module to a slot opening at the back of the system chassis. This USB connector complies with USB 2.0 specification that supports up to 480 Mbps connection speed.





The USB port module is purchased separately.

#### 6. Serial port connector (10-1 pin COM2)

This connector is for a serial (COM) port. Connect the serial port module cable to this connector, then install the module to a slot opening at the back of the system chassis. The serial port module is purchased separately.



P5MT-C Serial Port2 (COM2) Connector

#### 7. Ambient thermal sensor (2-pin TRPWR1)

If you want additional thermal monitoring, connect the thermal sensor cable with thermistor (of 1°K or at 25°C, B=3435) to this connector.



#### 8. CPU and system fan connectors (3-pin CPU\_FAN1/2, REAR\_FAN1/2, FRNT\_FAN1/2)

The fan connectors support cooling fans of 350 mA  $\sim$  740 mA (8.88 W max.) or a total of 2.1 A  $\sim$  4.44 A (53.28 W max.) at +12V. Connect the fan cables to the fan connectors on the motherboard, making sure that the black wire of each cable matches the ground pin of the connector.

Do not forget to connect the fan cables to the fan connectors. Insufficient air flow inside the system may damage the motherboard components. These are not jumpers! Do not place jumper caps on the fan connectors!



#### 9. Backplane SMBus connector (6-1 pin BPSMB1)

This connector allows you to connect SMBus (System Management Bus) devices. Devices communicate with an SMBus host and/or other SMBus devices using the SMBus interface.



P5MT-C SMBus Connector

#### 10. SSI power connectors (24-pin ATXPWR1, 8-pin ATX12V2)

These connectors are for SSI power supply plugs. The power supply plugs are designed to fit these connectors in only one orientation. Find the proper orientation and push down firmly until the connectors completely fit.

- Use of an SSI 12 V Specification 2.0-compliant power supply unit (PSU) that provides a minimum power of 450 W is recommended for a fully-configured system.
  - By default, four ATX12V2 connector pins are covered to prevent incorrent insertion of a 4-pin ATX +12V power plug. Remove this cover when using a PSU with an 8-pin ATX +12V power plug.
  - Do not forget to connect the 4-pin or 8-pin ATX +12 V power plug; otherwise, the system will not boot up.
  - Use of a PSU with a higher power output is recommended when configuring a system with more power consuming devices. The system may become unstable or may not boot up if the power is inadequate.
  - You must install a PSU with a higher power rating if you intend to install additional devices.



P5MT-C ATX Power Connectors

#### 11. System panel connector (20-pin PANEL1)

This connector supports several chassis-mounted functions.

#### • System power LED (Green 3-pin PLED)

This 3-pin connector is for the system power LED. Connect the chassis power LED cable to this connector. The system power LED lights up when you turn on the system power, and blinks when the system is in sleep mode.

- Hard disk drive activity LED (Red 2-pin IDE\_LED) This 2-pin connector is for the HDD Activity LED. Connect the HDD Activity LED cable to this connector. The IDE LED lights up or flashes when data is read from or written to the HDD.
- System warning speaker (Orange 4-pin SPEAKER) This 4-pin connector is for the chassis-mounted system warning speaker. The speaker allows you to hear system beeps and warnings.
- ATX power button/soft-off button (Light Green 2-pin PWRSW) This connector is for the system power button. Pressing the power button turns the system on or puts the system in sleep or soft-off mode depending on the BIOS settings. Pressing the power switch for more than four seconds while the system is ON turns the system OFF.

#### • Reset button (Blue 2-pin RESET)

This 2-pin connector is for the chassis-mounted reset button for system reboot without turning off the system power.





The system panel connector is color-coded for easy connection.

This chapter describes the power up sequence, the vocal POST messages, and ways of shutting down the system.



# Chapter summary

3.1	Starting up for the first time	3-1
3.2	Powering off the computer	3-2

3

## 3.1 Starting up for the first time

- 1. After making all the connections, replace the system case cover.
- 2. Be sure that all switches are off.
- 3. Connect the power cord to the power connector at the back of the system chassis.
- 4. Connect the power cord to a power outlet that is equipped with a surge protector.
- 5. Turn on the devices in the following order:
  - a. Monitor
  - b. External SCSI devices (starting with the last device on the chain)
  - c. System power
- 6. After applying power, the system power LED on the system front panel case lights up. For systems with ATX power supplies, the system LED lights up when you press the ATX power button. If your monitor complies with "green" standards or if it has a "power standby" feature, the monitor LED may light up or switch between orange and green after the system LED turns on.

The system then runs the Power-On Self-Test (POST). While the tests are running, the BIOS beeps or additional messages appear on the screen. If you do not see anything within 30 seconds from the time you turned on the power, the system may have failed a power-on test. Check the jumper settings and connections or call your retailer for assistance.

#### AMI BIOS beep codes

Beep Description	Error
One beep	Keyboard controller error Refresh Time error No master drive detected
Two continuous beeps followed by two short beeps	Floppy controller failure
Two continuous beeps followed by four short beeps	Hardware component failure

7. At power on, hold down the <Del> key to enter the BIOS Setup. Follow the instructions in Chapter 4.

## **3.2 Powering off the computer**

### 3.2.1 Using the OS shut down function

If you are using Windows® Server 2000:

- 1. Click the Start button then click Shut Down...
- 2. Make sure that the **Shut Down** option button is selected, then click the  $\mathbf{OK}$  button to shut down the computer.
- 3. The power supply should turn off after Windows<sup>®</sup> shuts down.

If you are using Windows® Server 2003:

- 1. Click the **Start** button then select **Turn Off Computer**.
- 2. Click the **Turn Off** button to shut down the computer.
- 3. The power supply should turn off after Windows<sup>®</sup> shuts down.

### 3.2.2 Using the dual function power switch

While the system is ON, pressing the power switch for less than four seconds puts the system to sleep mode or to soft-off mode, depending on the BIOS setting. Pressing the power switch for more than four seconds lets the system enter the soft-off mode regardless of the BIOS setting. Refer to section "4.5 Power Menu" in Chapter 4 for details

This chapter tells how to change the system settings through the BIOS Setup menus. Detailed descriptions of the BIOS parameters are also provided.



### **Chapter summary**



## 4.1 Managing and updating your BIOS

The following utilities allow you to manage and update the motherboard Basic Input/Output System (BIOS) setup.

- 1. **ASUS AFUDOS** (Updates the BIOS in DOS mode using a bootable floppy disk.)
- ASUS CrashFree BIOS 2 (Updates the BIOS using a bootable floppy disk or the motherboard support CD when the BIOS file fails or gets corrupted.)
- 3. **ASUS Update** (Updates the BIOS in Windows<sup>®</sup> environment.)

Refer to the corresponding sections for details on these utilities.



Save a copy of the original motherboard BIOS file to a bootable floppy disk in case you need to restore the BIOS in the future. Copy the original motherboard BIOS using the ASUS Update or AFUDOS utilities.

### 4.1.1 Creating a bootable floppy disk

- 1. Do either one of the following to create a bootable floppy disk. DOS environment
  - a. Insert a 1.44 MB floppy disk into the drive.

b. At the DOS prompt, type format A:/s then press <Enter>. <u>Windows® 2000 environment</u>

To create a set of boot disks for Windows<sup>®</sup> 2000:

- a. Insert a formatted, high density 1.44 MB floppy disk into the drive.
- b. Insert the Windows<sup>®</sup> 2000 CD to the optical drive.
- c. Click Start, then select Run.
- d. In the Open field, type D:\bootdisk\makeboot a: assuming that D is your optical drive letter.
- e. Press <Enter>, then follow screen instructions to continue.
- 2. Copy the original or the latest motherboard BIOS file to the bootable floppy disk.

## 4.1.2 AFUDOS utility

The AFUDOS utility allows you to update the BIOS file in DOS environment using a bootable floppy disk with the updated BIOS file. This utility also allows you to copy the current BIOS file that you can use as backup when the BIOS fails or gets corrupted during the updating process.

### Copying the current BIOS

To copy the current BIOS file using the AFUDOS utility:

- Make sure that the floppy disk is not write-protected and has at least 1024 KB free space to save the file.
  - The succeeding BIOS screens are for reference only. The actual BIOS screen displays may not be same as shown.
- 1. Copy the AFUDOS utility (afudos.exe) from the motherboard support CD to the bootable floppy disk you created earlier.
- 2. Boot the system in DOS mode, then at the prompt type:

#### afudos /o[filename]

where the [filename] is any user-assigned filename not more than eight alphanumeric characters for the main filename and three alphanumeric characters for the extension name.

A:\>afudos /oOLDBIOS1.rom

#### Main filename Extension name

3. Press <Enter>. The utility copies the current BIOS file to the floppy disk.



The utility returns to the DOS prompt after copying the current  $\ensuremath{\mathsf{BIOS}}$  file.

### Updating the BIOS file

To update the BIOS file using the AFUDOS utility:

1. Visit the ASUS website (www.asus.com) and download the latest BIOS file for the motherboard. Save the BIOS file to a bootable floppy disk.



Write the BIOS filename on a piece of paper. You need to type the exact BIOS filename at the DOS prompt.

- 2. Copy the AFUDOS utility (afudos.exe) from the motherboard support CD to the bootable floppy disk you created earlier.
- 3. Boot the system in DOS mode, then at the prompt type:

```
afudos /i[filename] /pbnc
```

where [filename] is the latest or the original BIOS file on the bootable floppy disk.

A:\>afudos /iP5MT-C.ROM /pbnc

4. The utility verifies the file and starts updating the BIOS.

```
A:\>afudos /iP5MT-C.ROM /pbnc
AMI Firmware Update Utility - Version 1.19(ASUS V2.07(03.11.24BB))
Copyright (C) 2002 American Megatrends, Inc. All rights reserved.
WARNING!! Do not turn off power during flash BIOS
Reading file ..... done
Reading flash ..... done
Advance Check .....
Erasing flash ..... done
Writing flash ..... 0x0008CC00 (9%)
```



Do not shut down or reset the system while updating the BIOS to prevent system boot failure!

5. The utility returns to the DOS prompt after the BIOS update process is completed. Reboot the system from the hard disk drive.

```
A:\>afudos /iP5MT-C.ROM /pbnc
AMI Firmware Update Utility - Version 1.19(ASUS V2.07(03.11.24BB))
Copyright (C) 2002 American Megatrends, Inc. All rights reserved.
WARNING!! Do not turn off power during flash BIOS
Reading file ..... done
Reading flash ..... done
Advance Check .....
Erasing flash ..... done
Writing flash ..... done
Verifying flash .... done
Please restart your computer
A:\>
```

## 4.1.3 ASUS CrashFree BIOS 2 utility

The ASUS CrashFree BIOS 2 is an auto recovery tool that allows you to restore the BIOS file when it fails or gets corrupted during the updating process. You can update a corrupted BIOS file using the motherboard support CD or the floppy disk that contains the updated BIOS file.

- Prepare the motherboard support CD or the floppy disk containing the updated motherboard BIOS before using this utility.
  - Make sure that you rename the original or updated BIOS file in the floppy disk to **P5MT-C.ROM**.

#### Recovering the BIOS from a floppy disk

To recover the BIOS from a floppy disk:

1. Turn on the system.

La'

- 2. Insert the floppy disk with the original or updated BIOS file to the floppy disk drive.
- 3. The utility displays the following message and automatically checks the floppy disk for the original or updated BIOS file.

```
Bad BIOS checksum. Starting BIOS recovery...
Checking for floppy...
```

When found, the utility reads the BIOS file and starts flashing the corrupted BIOS file.

```
Bad BIOS checksum. Starting BIOS recovery...
Checking for floppy...
Floppy found!
Reading file "P5MT-C.ROM". Completed.
Start flashing...
```



DO NOT shut down or reset the system while updating the BIOS! Doing so can cause system boot failure!

4. Restart the system after the utility completes the updating process.

### Recovering the BIOS from the support CD

To recover the BIOS from the support CD:

- 1. Remove any floppy disk from the floppy disk drive, then turn on the system.
- 2. Insert the support CD to the optical drive.
- 3. The utility displays the following message and automatically checks the floppy disk for the original or updated BIOS file.

```
Bad BIOS checksum. Starting BIOS recovery...
Checking for floppy...
```

When no floppy disk is found, the utility automatically checks the optical drive for the original or updated BIOS file. The utility then updates the corrupted BIOS file.





DO NOT shut down or reset the system while updating the BIOS! Doing so can cause system boot failure!

4. Restart the system after the utility completes the updating process.



The recovered BIOS may not be the latest BIOS version for this motherboard. Visit the ASUS website (www.asus.com) to download the latest BIOS file.

## 4.1.4 ASUS Update utility

The ASUS Update is a utility that allows you to manage, save, and update the motherboard BIOS in Windows® environment. The ASUS Update utility allows you to:

- Save the current BIOS file
- Download the latest BIOS file from the Internet
- Update the BIOS from an updated BIOS file
- Update the BIOS directly from the Internet, and
- View the BIOS version information.

This utility is available in the support CD that comes with the motherboard package.



ASUS Update requires an Internet connection either through a network or an Internet Service Provider (ISP).

### Installing ASUS Update

To install ASUS Update:

- 1. Place the support CD in the optical drive. The Drivers menu appears.
- 2. Click the **Utilities** tab, then click **Install ASUS Update VX.XX.XX**.
- 3. The ASUS Update utility is copied to your system.



Quit all  $\mathsf{Windows}^{\circledast}$  applications before you update the BIOS using this utility.

### Updating the BIOS through the Internet

To update the BIOS through the Internet:

 Launch the ASUS Update utility from the Windows<sup>®</sup> desktop by clicking Start > Programs > ASUS > ASUSUpdate > ASUSUpdate. The ASUS Update main window appears.





- 2. Select **Update BIOS from** the Internet option from the drop-down menu, then click Next.
- Select the ASUS FTP site nearest you to avoid network traffic, or click Auto Select. Click Next.

- 4. From the FTP site, select the BIOS version that you wish to download. Click **Next**.
- 5. Follow the screen instructions to complete the update process.



The ASUS Update utility is capable of updating itself through the Internet. Always update the utility to avail of all its features.



### Updating the BIOS through a BIOS file

To update the BIOS through a BIOS file:

- Launch the ASUS Update utility from the Windows<sup>®</sup> desktop by clicking Start > Programs > ASUS > ASUSUpdate > ASUSUpdate. The ASUS Update main window appears.
- 2. Select **Update BIOS from a file** option from the drop-down menu, then click **Next**.



- 3. Locate the BIOS file from the **Open** window, then click **Save**.
- 4. Follow the screen instructions to complete the update process.

## 4.2 BIOS setup program

This motherboard supports a programmable firmware chip that you can update using the provided utility described in section "4.1 Managing and updating your BIOS".

Use the BIOS Setup program when you are installing a motherboard, reconfiguring your system, or prompted to "Run Setup". This section explains how to configure your system using this utility.

Even if you are not prompted to use the Setup program, you can change the configuration of your computer in the future. For example, you can enable the security password feature or change the power management settings. This requires you to reconfigure your system using the BIOS Setup program so that the computer can recognize these changes and record them in the CMOS RAM of the firmware hub.

The firmware hub on the motherboard stores the Setup utility. When you start up the computer, the system provides you with the opportunity to run this program. Press <Del> during the Power-On Self-Test (POST) to enter the Setup utility; otherwise, POST continues with its test routines.

If you wish to enter Setup after POST, restart the system by pressing  $\langle Ctrl \rangle + \langle Alt \rangle + \langle Del \rangle$ , or by pressing the reset button on the system chassis. You can also restart by turning the system off and then back on. Do this last option only if the first two failed.

The Setup program is designed to make it as easy to use as possible. Being a menu-driven program, it lets you scroll through the various sub-menus and make your selections from the available options using the navigation keys.

- (S)
- The default BIOS settings for this motherboard apply for most conditions to ensure optimum performance. If the system becomes unstable after changing any BIOS settings, load the default settings to ensure system compatibility and stability. Select the **Load Setup Defaults** item under the Exit Menu. See section "4.7 Exit Menu."
- The BIOS setup screens shown in this section are for reference purposes only, and may not exactly match what you see on your screen.
- Visit the ASUS website (www.asus.com) to download the latest BIOS file for this motherboard.

### 4.2.1 BIOS menu screen



Sub-menu items

Navigation keys

### 4.2.2 Menu bar

The menu bar on top of the screen has the following main items:

Main	For changing the basic system configuration
Advanced	For changing the advanced system settings
Power	For changing the Advanced Power Management (APM) configuration
Boot	For changing the system boot configuration
Exit	For selecting the exit options and loading default settings

To select an item on the menu bar, press the right or left arrow key on the keyboard until the desired item is highlighted.

### 4.2.3 Navigation keys

At the bottom right corner of a menu screen are the navigation keys for that particular menu. Use the navigation keys to select items in the menu and change the settings.



Some of the navigation keys differ from one screen to another.

## 4.2.4 Menu items

The highlighted item on the menu bar displays the specific items for that menu. For example, selecting **Main** shows the Main menu items.

The other items (Advanced, Power, Boot, and Exit) on the menu bar have their respective menu items.



Main menu items

### 4.2.5 Sub-menu items

A solid triangle before each item on any menu screen means that the item has a sub-menu. To display the sub-menu, select the item and press <Enter>.

## 4.2.6 Configuration fields

These fields show the values for the menu items. If an item is user-configurable, you can change the value of the field opposite the item. You cannot select an item that is not user-configurable.

A configurable field is enclosed in brackets, and is highlighted when selected. To change the value of a field, select it then press <Enter> to display a list of options. Refer to "4.2.7 Pop-up window."

### 4.2.7 Pop-up window

Select a menu item then press <Enter> to display a pop-up window with the configuration options for that item.

### 4.2.8 Scroll bar

A scroll bar appears on the right side of a menu screen when there are items that do not fit on the screen. Press the Up/Down arrow keys or <Page Up> /<Page Down> keys to display the other items on the screen.

### 4.2.9 General help

At the top right corner of the menu screen is a brief description of the selected item.



## 4.3 Main menu

When you enter the BIOS Setup program, the Main menu screen appears, giving you an overview of the basic system information.



Refer to section "4.2.1 BIOS menu screen" for information on the menu screen items and how to navigate through them.

Hain Advanced	Power	BIOS SETUP UTILITY Boot Exit		
System Time System Date Legacy Diskette A Primary IDE Master Third IDE Master Third IDE Master Fourth IDE Slave Fourth IDE Slave IDE Configuration System Information	:::::::::::::::::::::::::::::::::::::::	[16:37:21] [Mon,10/02/2004] [1.44M, 3.5 in.] [ST320410A] [ASUS CD-5520/A] [Not Detected] [Not Detected] [Not Detected] [Not Detected]	Use [SH: a fid Use conf time Pi Pi Pi Pi Pi B ESC	[ENTER], [TAB] or IFT-TAB] to select ald. [+] or [-] to figure the System a. Select Screen Select Iten Change Option General Help Save and Exit Exit
	North State	- 1995-9007 American Ma	and the second se	1 martine and the second se

## 4.3.1 System Time [xx:xx:xx]

Sets the system time.

### 4.3.2 System Date [Day xx/xx/xxxx]

Sets the system date.

### 4.3.3 Legacy Diskette A [1.44M, 3.5 in.]

Sets the type of floppy drive installed. Configuration options: [Disabled] [360K, 5.25 in.] [1.2M , 5.25 in.] [720K , 3.5 in.] [1.44M, 3.5 in.] [2.88M, 3.5 in.]

## 4.3.4 Primary, Third, and Fourth IDE Master/Slave

While entering Setup, the BIOS automatically detects the presence of IDE devices. There is a separate sub-menu for each IDE device. Select a device item then press <Enter> to display the IDE device information.

Primary IDE Master		Select the type of
Device Vendor Size LBA Mode Block Mode PIO Mode Async DMA Ultra DMA SMART Monitoring	: Hard Disk : ST320410A : 20.0GB : Supported : 16 Sectors : 4 : MultiWord DMA-2 : Ultra DMA-5 : Supported	device connected to the system.
Type LBA/Large Mode Block(Multi-sector ' PIO Mode DMA Mode SMART Monitoring 32Bit Data Transfer	[Auto] [Auto] Iransfer) M [Auto] [Auto] [Auto] [Auto] [Disabled]	↔ Select Screen 74 Select Iten +- Change Option Fi Ceneral Help F18 Save and Exit ESC Exit

The BIOS automatically detects the values opposite the dimmed items (Device, Vendor, Size, LBA Mode, Block Mode, PIO Mode, Async DMA, Ultra DMA, and SMART monitoring). These values are not user-configurable. These items show N/A if no IDE device is installed in the system.

### Type [Auto]

Selects the type of IDE drive. Setting to Auto allows automatic selection of the appropriate IDE device type. Select CDROM if you are specifically configuring a CD-ROM drive. Select ARMD (ATAPI Removable Media Device) if your device is either a ZIP, LS-120, or MO drive. Configuration options: [Not Installed] [Auto] [CDROM] [ARMD]

### LBA/Large Mode [Auto]

Enables or disables the LBA mode. Setting to Auto enables the LBA mode if the device supports this mode, and if the device was not previously formatted with LBA mode disabled. Configuration options: [Disabled] [Auto]

### Block (Multi-sector Transfer) [Auto]

Enables or disables data multi-sectors transfers. When set to Auto, the data transfer from and to the device occurs multiple sectors at a time if the device supports multi-sector transfer feature. When set to [Disabled], the data transfer from and to the device occurs one sector at a time. Configuration options: [Disabled] [Auto]

### PIO Mode [Auto]

Selects the PIO mode. Configuration options: [Auto] [0] [1] [2] [3] [4]

### DMA Mode [Auto]

Allows the BIOS to automatically select the DMA mode. Configuration option: [Auto] [SWDMA0] [SWDMA1] [SWDMA2] [MWDMA0] [MWDMA1] [MWDMA2] [UDMA0] [UDMA1] [UDMA2]

### SMART Monitoring [Auto]

Sets the Smart Monitoring, Analysis, and Reporting Technology. Configuration options: [Auto] [Disabled] [Enabled]

### 32Bit Data Transfer [Disabled]

Enables or disables 32-bit data transfer. Configuration options: [Disabled] [Enabled]

## 4.3.5 IDE Configuration

The items in this menu allow you to set or change the configurations for the IDE devices installed in the system. Select an item then press <Enter> if you want to configure the item.

	lain	BIOS SETUP UTILITY	
I	IDE Configuration	When in	
	Configure SATA As Onboard IDE Operate Mode Enhanced Mode Support On	[Standard IDE] [Enhanced Mode] [S-ATA]	mode, SATA controller is forced to Native mode.
	IDE Detect Time Out (Sec)	[35]	

### Configure SATA As [Standard IDE]

Sets the Serial ATA configuration. When set in Advanced Host Controller Interface (AHCI) or RAID mode the SATA controller is set to Native mode. Configuration options: [Standard IDE] [AHCI] [RAID]

### Onboard IDE Operate Mode [Enhanced Mode]

Allows selection of the IDE operation mode depending on the operating system (OS) that you installed. Set to Enhanced Mode if you are using native OS, such as Windows<sup>®</sup> 2000. Configuration options: [Disabled] [Compatible Mode] [Enhanced Mode]



If the **Onboard IDE Operate Mode** is set to [Compatible], you can only use the SATA2, SATA4, and P-ATA connectors.

#### Enhanced Mode Support On [S-ATA]

The default setting SATA allows you to use native OS on Serial ATA and Parallel ATA ports. We recommend that you do not change the default setting for better OS compatibility. In this setting, you may use legacy OS on the Parallel ATA ports only if you did not install any Serial ATA device.

The S-ATA+P-ATA and P-ATA options are for advanced users only. If you set to any of these options and encounter problems, revert to the default setting **SATA**. Configuration options: [S-ATA+P-ATA] [S-ATA] [P-ATA]



The **Onboard IDE Operate Mode** and its submenu items appear only when the **Configure SATA As** item is set to Standard IDE.

<u>Onboard Serial-ATA BOOTROM [Disabled]</u> Enables or disables the onboard Serial ATA boot ROM. Configuration options: [Disabled] [Enabled]



The **Onboard Serial-ATA BOOTROM** item appears only when the **Configure SATA As** item is set to RAID.

#### ALPE and ASP [Disabled]

Enables or disables the ALPE and ASP. Configuration options: [Disabled] [Enabled]

#### Stagger Spinup Support [Disabled]

Enables or disables the stagger spinup support. Configuration options: [Disabled] [Enabled]

#### AHCI Port 3 Interlock Switch [Disabled]

Enables or disables the Advanced Host Controller Interface (AHCI) Port 3 interlock switch. Configuration options: [Disabled] [Enabled]



The  $\mbox{ALPE}$  and  $\mbox{ASP}$  item appears only when the  $\mbox{Configure SATA}$  As item is set to AHCI.

### IDE Detect Time Out [35]

Selects the time out value for detecting ATA/ATAPI devices. Configuration options: [0] [5] [10] [15] [20] [25] [30] [35]
# 4.3.6 System Information

This menu gives you an overview of the general system specifications. The BIOS automatically detects the items in this menu.

```
AMIBIOS
Version : 08.00.11
Build Date : 12/13/05
Processor
Type : Genuine Intel(R) CPU 3.20 GHz
Speed : 3200 MHz
Count : 1
System Memory
Size : 512 MB
++ Select Screen
T1 Select Iten
+- Change Option
P1 General Help
P10 Gave and Exit
ESC Exit
```

## AMI BIOS

Displays the auto-detected BIOS information.

#### Processor

Displays the auto-detected CPU specification.

#### System Memory

Displays the auto-detected system memory.

# 4.4 Advanced menu

The Advanced menu items allow you to change the settings for the CPU and other system devices.



Take caution when changing the settings of the Advanced menu items. Incorrect field values can cause the system to malfunction.



# 4.4.1 USB Configuration

The items in this menu allow you to change the USB-related features. Select an item then press <Enter> to display the configuration options.

USB Configuration		Ena	bles USB host
Module Version - 2.24.0-F.4			
USB Devices Enabled: None			
USB Function	[8 USB Ports]		
Legacy USB Support	[Enabled]		
USB 2.0 Controller Mode	[HiSpeed]		
BIOS EHCI Hand-Off	[Enabled]	1810	2010/01/02/01/01/01
		H	Select Screen Select Iten
		1.2	Change Option
		Fi8	Save and Exit
		ESC	Exit



The Module Version and USB Devices Enabled items show the auto-detected values. If no USB device is detected, the item shows None.

# USB Function [8 USB Ports]

Allows you to disable or set the USB host controllers. Configuration options: [Disabled] [2 USB Ports] [4 USB Ports] [6 USB Ports] [8 USB Ports]

## Legacy USB Support [Enabled]

Allows you to enable or disable support for USB devices on legacy operating systems (OS). Setting to Auto allows the system to detect the presence of USB devices at startup. If detected, the USB controller legacy mode is enabled. If no USB device is detected, the legacy USB support is disabled. Configuration options: [Disabled] [Enabled] [Auto]

### USB 2.0 Controller [Enabled]

Allows you to enable or disable the USB 2.0 controller. Configuration options: [Enabled] [Disabled]

## USB 2.0 Controller Mode [HiSpeed]

Allows you to set the USB 2.0 controller mode to HiSpeed (480 Mbps) or FullSpeed (12 Mbps). Configuration options: [FullSpeed ] [HiSpeed ]

# BIOS EHCI Hand-Off [Enabled]

This is a workaround for operating systems without EHCl hand-off support. The ownership should be claimed by the EHCl driver. Configuration options: [Disabled] [Enabled]

# 4.4.2 MPS Configuration

This menu allows you to configure the Multi-Processor table. Select an item then press <Enter> to display the configuration options.



## MPS Revision [1.4]

Allows you to choose the MPS revision. Configuration options: [1.1] [1.4]

# 4.4.3 Remote Access Configuration

The items in this menu allow you to configure the Remote Access features. Select an item then press <Enter> to display the configuration options.



## Remote Access [Disabled]

Enables or disables the remote access feature. Configuration options: [Disabled] [Enabled]



The succeeding items appear when the item  $\ensuremath{\textit{Remote}}\xspace$  Access is set to [Enabled].

# Serial port number [COM1]

Sets the serial port for console redirection. Make sure the selected port is enabled. Configuration options: [COM1] [COM2]

## Base Address, IRQ [3F8h, 4]

Sets the base address and IRQ assignment of the selected serial port . This item is auto-detected and is not user-configurable.

## Serial Port Mode [115200, 8,n,1]

Allows you to select the serial port mode settings. Configuration options: [115200 8,n,1] [57600 8,n,1] [38400 8,n,1] [19200 8,n,1] [09600 8,n,1]

# Flow Control [None]

Allows you to select the flow control for console redirection. Configuration options: [None] [Hardware] [Software]

## Redirection after BIOS POST [Always]

Sets the redirection mode after the BIOS Power-On-Self-Test (POST). Some operating systems may not work when this item is set to [Always]. Configuration options: [Disabled] [Boot Loader] [Always]

# Terminal Type [ANSI]

Allows you to select the target terminal type. Configuration options: [ANSI] [VT100] [VT-UTF8]

# VT-UTF8 Combo Key Support [Enabled]

Enables or disables the VT-UTF8 combo key support for ANSI or VT100 terminals. Configuration options: [Disabled] [Enabled]

# 4.4.4 CPU Configuration

The items in this menu show the CPU-related information that the  $\ensuremath{\mathsf{BIOS}}$  automatically detects.

Rdvanced BIOS SETUP UTILITY	
Configure advanced CPU Settings	Sets the ratio between
Manufacturer : Intel Brand String : Genuine Intel (R) CPU 3.20GHz Frequency : 3200 MHz FSB Speed : 800 MHz	FSB Frequency. NOTE: If an invalid ratio is set in CMOS then actual and
Cache L1 : 16 KB Cache L2 : 1024 KB Cache L3 : 0 KB	setpoint values may differ.
Ratio Status: Unlocked (Max:16, Min:12) Ratio Actual Value : 16 Max CPUID Value Limit: [Disabled] Execute Disable Function [Disabled] Virtualization Technology [Enabled] Hardware Prefetcher: [Enabled] Adjacent Cache Line Prefetch: [Enabled] CPU Internal Thermal Control [Auto]	++ Select Screen Ti Select Item +- Change Option Fi General Help Fi0 Save and Exit ESC Exit
u80.00 (C)Converight 1985-2003 Received	Begatwends Inc.

# Max CPUID Value Limit [Disabled]

Enable this item to boot legacy operating systems that cannot support CPUs with extended CPUID functions. Configuration options: [Disabled] [Enabled]

# Execute Disable Function [Disabled]

Allows you to enable or disable the execute disable function. Configuration options: [Disabled] [Enabled]

# Virtualization Technology [Enabled]

Allows you to enable or disable the Virtualization technology, which permits you to transfer from one operating system installed to another without rebooting. Configuration options: [Enabled] [Disabled]

## Hardware Prefetcher [Enabled]

Allows you to enable or disable the hardware prefetcher feature. Configuration options: [Disabled] [Enabled]

## Adjacent Cache Line Prefetch [Enabled]

Allows you to enable or disable the adjacent cache line prefetch feature. Configuration options: [Disabled] [Enabled]

# CPU Internal Thermal Control [Auto]

Disables or sets the CPU internal thermal control. Configuration options: [Auto] [Disabled]



The following item appears only when you installed an Intel<sup>®</sup> Pentium<sup>®</sup> 4 processor that supports Hyper Threading Technology.

# Hyper Threading Technology [Enabled]

Allows you to enable or disable the processor Hyper Threading Technology. Configuration options: [Disabled] [Enabled]



The following item appears only when you installed an Intel® Pentium® 4 processor that supports Intel® Speedstep technology.

# Intel(R) SpeedStep Technology [Automatic]

Allows you to use the Enhanced Intel SpeedStep<sup>®</sup> Technology. When set to [Automatic], you can adjust the system power settings in the operating system to use the EIST feature.

Set this item to [Disabled] if you do not want to use the EIST.

Configuration options: [Automatic] [Disabled]

- Refer to the Appendix for details on how to use the EIST feature.
- The motherboard comes with a BIOS file that supports EIST.

# 4.4.5 Chipset

The Chipset menu allows you to change the advanced chipset settings. Select an item then press <Enter> to display the sub-menu.

Rdvanced	BIOS SETUP UTILITY	
Advanced Chipset Settings		Manual DRAM Frequency
DRAM Frequency Configure DRAM Timing by SPD	[Auto] [Enabled]	Setting or Auto by SPD.
Onboard LAN Boot ROM PEG Port Configuration	[Enabled]	
PEG Port PEG Port VC1 Map PEG Force x1 Memory Remap Feature	[Enabled] [TC7] [Disabled] [Enabled]	++ Select Screen 74 Select Iten +- Change Option Fi General Help F10 Save and Exit
		ESC Exit

## DRAM Frequency [Auto]

Allows you to manually set the DRAM frequency. Setting to [Auto] allows the BIOS to automatically set the DRAM frequency by Serial Presence Detect (SPD). Configuration options: [Auto] [533 MHz] [667 MHz]

# Configure DRAM Timing by SPD [Enabled]

When this item is enabled, the DRAM timing parameters are set according to the DRAM SPD (Serial Presence Detect). When disabled, you can manually set the DRAM timing parameters through the DRAM sub-items. Configuration options: [Disabled] [Enabled]

The following sub-items appear when this item is Disabled.

#### DRAM CAS# Latency [5 Clocks]

Controls the latency between the SDRAM read command and the time the data actually becomes available.

Configuration options: [5 Clocks] [4 Clocks] [3 Clocks] [6 Clocks]

#### DRAM RAS# Precharge [4 Clocks]

Controls the idle clocks after issuing a precharge command to the DDR SDRAM. Configuration options: [2 Clocks] [3 Clocks] [4 Clocks] [5 Clocks]

#### DRAM RAS# to CAS# Delay [4 Clocks]

Controls the latency between the DDR SDRAM active command and the read/write command. Configuration options: [2 Clocks] [3 Clocks] [4 Clocks] [5 Clocks]

<u>DRAM RAS# Activate to Precharge Delay [15 Clocks]</u> Configuration options: [1 Clock] ~ [15 Clocks]

<u>DRAM Write Recovery Time [4 Clocks]</u> Sets the DRAM write recovery time. Configuration options: [2 Clocks] [3 Clocks] [4 Clocks] [5 Clocks]

## Onboard LAN Boot ROM [Enabled]

Allows you to enable or disable the onboard LAN boot ROM. Configuration options: [Disabled] [Enabled]

### PEG Port [Enabled]

Allows you to enable or disable the PCI Express Graphics port. Configuration options: [Disabled] [Enabled]

#### PEG Port VC1 Map [TC7]

Allows you to disable or set the PCI Express Graphics port VC1 map. Configuration options: [Disabled] [TC1]  $\sim$  [TC7]

<u>PEG Force x1 [Disabled]</u> Configuration options: [Disabled] [Enabled]

#### Memory Remap Feature [Enabled]

Allows you to enable or disable the memory remap feature. Configuration options: [Disabled] [Enabled]

# 4.4.6 Onboard Devices Configuration

Advanced	BIOS SETUP UTILITY	
Configure Win627EHF Super IC	) Chipset	Enable or disable the
Serial Portl Address Serial Port2 Address Serial Port2 Mode Parallel Port Address Parallel Port Mode ECP Mode DMA Channel Parallel Port IRQ	[3F8/IRQ4] [2F8/IRQ3] [Normal] [378] [ECP] [DMA3] [IRQ7]	Azalia controller.

## Serial Port1 Address [3F8/IRQ4]

Allows you to select the Serial Port1 base address. Configuration options: [Disabled] [3F8/IRQ4] [3E8/IRQ4] [2E8/IRQ3]

## Serial Port2 Address [2F8/IRQ3]

Allows you to select the Serial Port1 base address. Configuration options: [Disabled] [2F8/IRQ3] [3E8/IRQ4] [2E8/IRQ3]

#### Serial Port2 Mode [Normal]

Allows the BIOS to select the Serial Port 2 mode. Configuration options: [Normal] [IrDA] [ASK IR]

## Parallel Port Address [378]

Allows you to select the Parallel Port base addresses. Configuration options: [Disabled] [378] [278] [3BC]

## Parallel Port Mode [ECP]

Allows you to select the Parallel Port mode. Configuration options: [Normal] [Bi-directional] [EPP] [ECP]

#### ECP Mode DMA Channel [DMA3]

Appears only when the Parallel Port Mode is set to [ECP]. This item allows you to set the Parallel Port ECP DMA. Configuration options: [DMA0] [DMA1] [DMA3]

#### EPP Version [1.9]

Allows selection of the Parallel Port EPP version. This item appears only when the Parallel Port Mode is set to EPP. Configuration options: [1.9] [1.7]

<u>Parallel Port IRQ [IRQ7]</u> Allows selection of the Parallel Port IRQ. Configuration options: [IRQ5] [IRQ7]

# 4.4.7 PCI PnP

The PCI PnP menu items allow you to change the advanced settings for PCI/PnP devices. The menu includes setting IRQ and DMA channel resources for either PCI/PnP or legacy ISA devices, and setting the memory size block for legacy ISA devices.



Take caution when changing the settings of the PCI PnP menu items. Incorrect field values can cause the system to malfunction.

Advanced		
Advanced PCI/PnP Settings		No: Lets the BIOS
WARNING: Setting wrong values in below sections may cause system to malfunction.		devices in the system. Yes: Lets the operating
Plug And Play O/S PCI Latency Timer Allocate IRQ to PCI VGA Palette Snooping	[No] [64] [Yes] [Disabled]	system configure Plug and Play (PnP) devices not required for boot if your system has a Plug and Play operating
IRQ-3 assigned to IRQ-4 assigned to IRQ-5 assigned to IRQ-7 assigned to IRQ-9 assigned to IRQ-10 assigned to IRQ-11 assigned to IRQ-14 assigned to	[PCI Device] [PCI Device] [PCI Device] [PCI Device] [PCI Device] [PCI Device] [PCI Device] [PCI Device] [PCI Device]	system. ++ Select Screen 14 Select Item +- Change Option F1 General Help F18 Save and Exit ESC Exit

# Plug and Play O/S [No]

When set to [No], BIOS configures all the devices in the system. When set to [Yes] and if you install a Plug and Play operating system, the operating system configures the Plug and Play devices not required for boot. Configuration options: [No] [Yes]

### PCI Latency Timer [64]

Allows you to select the value in units of PCI clocks for the PCI device latency timer register. Configuration options: [32] [64] [96] [128] [160] [192] [224] [248]

## Allocate IRQ to PCI VGA [Yes]

When set to [Yes], BIOS assigns an IRQ to PCI VGA card if the card requests for an IRQ. When set to [No], BIOS does not assign an IRQ to the PCI VGA card even if requested. Configuration options: [Yes] [No]

### Palette Snooping [Disabled]

When set to [Enabled], the palette snooping feature informs the PCI devices that an ISA graphics device is installed in the system so that the latter can function correctly. Configuration options: [Disabled] [Enabled]

# IRQ-xx assigned to [PCI Device]

When set to [PCI Device], the specific IRQ is free for use of PCI/PnP devices. When set to [Reserved], the IRQ is reserved for legacy ISA devices. Configuration options: [PCI Device] [Reserved]

# 4.5 Power menu

The Power menu items allow you to change the settings for the ACPI and Advanced Power Management (APM). Select an item then press <Enter> to display the configuration options.



# 4.5.1 ACPI APIC Support [Enabled]

Allows you to enable or disable the Advanced Configuration and Power Interface (ACPI) support in the Advanced Programmable Interrupt Controller (APIC). When set to Enabled, the ACPI APIC table pointer is included in the RSDT pointer list. Configuration options: [Disabled] [Enabled]

# 4.5.2 APM Configuration

APM Configuration		Options
Restore on AC Power Loss Resume On RTC Alarm Power On By PS/2 Keyboard Power On By PS/2 Mouse Power On By PCI Devices OnboardLan Wakeup Keyboard Wakeup Password : 1	[Last State] [Disabled] [Disabled] [Disabled] [Disabled] [Disabled] [Disabled] Not Installed	Power Off Power On Last State

## Restore on AC Power Loss [Last State]

When set to Power Off, the system goes into off state after an AC power loss. When set to Power On, the system goes on after an AC power loss. When set to Last State, the system goes into either off or on state, whatever the system state was before the AC power loss. Configuration options: [Power Off] [Power On] [Last State]

## Resume On RTC Alarm [Disabled]

Allows you to enable or disable RTC to generate a wake event. When this item is set to Enabled, the items RTC Alarm Date, RTC Alarm Hour, RTC Alarm Minute, and RTC Alarm Second appear with set values. Configuration options: [Disabled] [Enabled]

## Power On By PS/2 Keyboard [Disabled]

Allows you to use specific keys on the keyboard to turn on the system. This feature requires an ATX power supply that provides at least 1A on the +5VSB lead. Configuration options: [Disabled] [Enabled]

## Power On By PS/2 Mouse [Disabled]

When set to [Enabled], this parameter allows you to use the PS/2 mouse to turn on the system. This feature requires an ATX power supply that provides at least 1A on the +5VSB lead. Configuration options: [Disabled] [Enabled]

### Power On Ring [Disabled]

Allows you to enable or disable the RI to generate a wake event. Configuration options: [Disabled] [Enabled]

### Power On By PCI Devices [Disabled]

When set to [Enabled], this parameter allows you to turn on the system through a PCI LAN or modem card. This feature requires an ATX power supply that provides at least 1A on the +5VSB lead. Configuration options: [Disabled] [Enabled]

# OnboardLan Wakeup [Disabled]

Allows you to enable or disable the onboard LAN to turn on the system. Configuration options: [Disabled] [Enabled]

#### Keyboard Wakeup Password

This item appears only when the Power On By PS/2 Keyboard is set to Enabled. Select this item to set or change the keyboard wakeup password. The Keyboard Wakeup Password item that appears below shows the default Not Installed. After you have set a password, this item shows Installed.

## 4.5.3 Hardware Monitor

Power	BIOS SETUP UTILITY		
Hardware Monitor		CPU 1	Temperature
CPU Temperature MB Temperature	[51°C/122.5°F] [41°C/105.5°F]		
CPU Fan1 Speed	[3813 RPM]		
CPU Fan2 Speed	[N/A]		
Front Fan2 Speed	[N/A]		
Rear Fan1 Speed	[N/A]		
Rear Fan2 Speed	[N/A]		
Smart Fan Control	[Enabled]	11 11	Select Screen Select Iten
VCORE Voltage	[ 1.320V]		Change Option
3.3V Voltage	[ 3.345V]	F1	General Help
5V Voltage	[ 5.094V]	1118	Save and Exit
5VSB Voltage	[ 4.824V]	ESC	Exit
12W Weltage	[ 3.040V]		and the second
12V Voltage	[11.000V]	_	
vHH.nn (C)Copyrig	ht 1985-2002, American	Megatren	ds, Inc.

#### CPU Temperature [xxx°C/xxx°F] MB Temperature [xxx°C/xxx°F]

The onboard hardware monitor automatically detects and displays the motherboard, CPU, and ambient temperatures. Select [Ignored] if you do not wish to display the detected temperatures.

#### CPU Fan 1/2 Speed [xxxxRPM] or [N/A] Front Fan1/2 Speed [xxxxRPM] or [N/A] Rear Fan1/2 Speed [xxxxRPM] or [N/A]

The onboard hardware monitor automatically detects and displays the CPU fan speed in rotations per minute (RPM). If the fan is not connected to the motherboard, the field shows N/A.

## Smart Fan Control [Enabled]

Allows you to enable or disable the ASUS Smart Fan feature that smartly adjusts the fan speeds for more efficient system operation. Configuration options: [Disabled] [Enabled]



When Smart Fan Control item is set to [Enabled], the CPU Target Temperature and MB Target Temperature items appear.

#### CPU Tareget Temperature [xxx] MB Tareget Temperature [xxx]

Allows you to set the temperature threshold when the CPU fan speed is increased. If the CPU/MB temperature is above your setting, the CPU fan runs at its maximum speed. If the CPU/MB temperature is below your setting, the CPU fan runs at a lower speed. To set, use the <-> or <+> key.

#### VCORE Voltage, 3.3V Voltage, 5V Voltage, 5VSB Voltage, VBAT Voltage, 12V Voltage

The onboard hardware monitor automatically detects the voltage output through the onboard voltage regulators.

# 4.6 Boot menu

The Boot menu items allow you to change the system boot options. Select an item then press <Enter> to display the sub-menu.



# 4.6.1 Boot Device Priority

BIOS SETUP UTILITY		
Boot Device Priority		Specifies the boot
1st Boot Device	[1st FLOPPY DRIVE]	sequence from the availabe devices.
2nd Boot Device	[Hard Drive]	
3rd Boot Device	[ATAPI CD-ROM]	
4th Boot Device	[Network: MBA v8.1.5]	
5th Boot Device	[Network: MBA v8.1.5]	

## 1st ~ xxth Boot Device [1st Floppy Drive]

These items specify the boot device priority sequence from the available devices. The number of device items that appears on the screen depends on the number of devices installed in the system. Configuration options: [xxxxx Drive] [Disabled]

# 4.6.2 Boot Settings Configuration

BIOS SETUP UTILITY Boot			
Boot Settings Configuration		Allows BIOS to skip	
Quick Boot Full Screen Logo AddOn ROM Display Mode Bootup Num-Lock PS/2 Mouse Support Wait For 'F1' If Error Hit 'DEL' Message Display Interrupt 19 Capture	[Enabled] [Enabled] [ForceBIOS] [On] [Auto] [Enabled] [Enabled] [Disabled]	booting. This will decrease the time needed to boot the system.	

## Quick Boot [Enabled]

Enabling this item allows the BIOS to skip some power on self tests (POST) while booting to decrease the time needed to boot the system. When set to [Disabled], BIOS performs all the POST items. Configuration options: [Disabled] [Enabled]

## Full Screen Logo [Enabled]

This allows you to enable or disable the full screen logo display feature. Configuration options: [Disabled] [Enabled]



Set this item to [Enabled] to use the ASUS MyLogo2<sup>™</sup> feature.

# AddOn ROM Display Mode [ForceBIOS]

Sets the display mode for the option ROM. Configuration options: [ForceBIOS] [Keep Current]

### Bootup Num-Lock [On]

Allows you to select the power-on state for the NumLock. Configuration options: [Off] [On]

### PS/2 Mouse Support [Auto]

Allows you to enable or disable support for PS/2 mouse. Configuration options: [Disabled] [Enabled] [Auto]

## Wait for 'F1' If Error [Enabled]

When set to Enabled, the system waits for the F1 key to be pressed when error occurs. Configuration options: [Disabled] [Enabled]

# Hit 'DEL' Message Display [Enabled]

When set to Enabled, the system displays the message "Press DEL to run Setup" during POST. Configuration options: [Disabled] [Enabled]

## Interrupt 19 Capture [Disabled]

When set to [Enabled], this function allows the option ROMs to trap Interrupt 19. Configuration options: [Disabled] [Enabled]

# 4.6.3 Security

The Security menu items allow you to change the system security settings. Select an item then press <Enter> to display the configuration options.



## Change Supervisor Password

Select this item to set or change the supervisor password. The Supervisor Password item on top of the screen shows the default **Not Installed**. After you set a password, this item shows **Installed**.

To set a Supervisor Password:

- 1. Select the Change Supervisor Password item and press <Enter>.
- 2. From the password box, type a password composed of at least six letters and/or numbers, then press <Enter>.
- 3. Confirm the password when prompted.

The message "Password Installed" appears after you successfully set your password.

To change the supervisor password, follow the same steps as in setting a user password.

To clear the supervisor password, select the **Change Supervisor Password** then press <Enter>. The message "Password Uninstalled" appears.



If you forget your BIOS password, you can clear it by erasing the CMOS Real Time Clock (RTC) RAM. See section "2.6 Jumpers" for information on how to erase the RTC RAM.

After you have set a supervisor password, the other items appear to allow you to change other security settings.



#### User Access Level (Full Access]

This item allows you to select the access restriction to the Setup items. Configuration options: [No Access] [View Only] [Limited] [Full Access]

No Access prevents user access to the Setup utility.

View Only allows access but does not allow change to any field.

Limited allows changes only to selected fields, such as Date and Time.

**Full Access** allows viewing and changing all the fields in the Setup utility.

#### Change User Password

Select this item to set or change the user password. The User Password item on top of the screen shows the default **Not Installed**. After you set a password, this item shows **Installed**.

To set a User Password:

- 1. Select the Change User Password item and press <Enter>.
- 2. On the password box that appears, type a password composed of at least six letters and/or numbers, then press <Enter>.
- 3. Confirm the password when prompted.

The message "Password Installed" appears after you set your password successfully.

To change the user password, follow the same steps as in setting a user password.

### Clear User Password

Select this item to clear the user password.

### Password Check [Setup]

When set to [Setup], BIOS checks for user password when accessing the Setup utility. When set to [Always], BIOS checks for user password both when accessing Setup and booting the system. Configuration options: [Setup] [Always]

# 4.7 Exit menu

The Exit menu items allow you to load the optimal or failsafe default values for the BIOS items, and save or discard your changes to the BIOS items.





Pressing <Esc> does not immediately exit this menu. Select one of the options from this menu or <F10> from the legend bar to exit.

## Exit & Save Changes

Once you are finished making your selections, choose this option from the Exit menu to ensure the values you selected are saved to the CMOS RAM. An onboard backup battery sustains the CMOS RAM so it stays on even when the PC is turned off. When you select this option, a confirmation window appears. Select **OK** to save changes and exit.



If you attempt to exit the Setup program without saving your changes, the program prompts you with a message asking if you want to save your changes before exiting. Press <Enter> to save the changes while exiting.

#### Exit & Discard Changes

Select this option only if you do not want to save the changes that you made to the Setup program. If you made changes to fields other than System Date, System Time, and Password, the BIOS asks for a confirmation before exiting.

#### **Discard Changes**

This option allows you to discard the selections you made and restore the previously saved values. After selecting this option, a confirmation appears. Select **OK** to discard any changes and load the previously saved values.

### Load Setup Defaults

This option allows you to load the default values for each of the parameters on the Setup menus. When you select this option or if you press <F5>, a confirmation window appears. Select **OK** to load default values. Select **Exit & Save Changes** or make other changes before saving the values to the non-volatile RAM.



This chapter provides information on RAID configurations for this motherboard.



# **Chapter summary**

5.1	RAID configurations	5-1
5.2	Intel Matrix Storage Manager option ROM utility	5-3
5.3	LSI Logic Embedded SATA RAID Setup Utility	5-14
5.4	Global Array Manager	5-36

5

# 5.1 RAID configurations

The server system/motherboard comes with the Intel<sup>®</sup> ICH7R and the LSI Logic Embedded SATA RAID technology built-in the Intel<sup>®</sup> ICH7R SouthBridge chipset that allows you to configure IDE and Serial ATA hard disk drives as RAID sets. The motherboard supports the following RAID configurations:

# 5.1.1 RAID definitions

**RAID 0** (*Data striping*) optimizes two identical hard disk drives to read and write data in parallel, interleaved stacks. Two hard disks perform the same work as a single drive but at a sustained data transfer rate, double that of a single disk alone, thus improving data access and storage. Use of two new identical hard disk drives is required for this setup.

**RAID 1** (*Data mirroring*) copies and maintains an identical image of data from one drive to a second drive. If one drive fails, the disk array management software directs all applications to the surviving drive as it contains a complete copy of the data in the other drive. This RAID configuration provides data protection and increases fault tolerance to the entire system. Use two new drives or use an existing drive and a new drive for this setup. The new drive must be of the same size or larger than the existing drive.

**RAID 5** stripes both data and parity information across three or more hard disk drives. Among the advantages of RAID 5 configuration include better HDD performance, fault tolerance, and higher storage capacity. The RAID 5 configuration is best suited for transaction processing, relational database applications, enterprise resource planning, and other business systems. Use a minimum of three identical hard disk drives for this setup.

**RAID 10** is a striped configuration with RAID 1 segments whose segments are RAID 1 arrays. This configuration has the same fault tolerance as RAID 1, and has the same overhead for fault-tolerance as mirroring alone. RAID 10 achieves high input/output rates by striping RAID 1 segments. In some instances, a RAID 10 configuration can sustain multiple simultaneous drive failure. A minimum of four hard disk drives is required for this setup.

**Intel® Matrix Storage.** The Intel® Matrix Storage technology supported by the ICH7R chip allows you to create a RAID 0 and a RAID 1 set using only two identical hard disk drives. The Intel® Matrix Storage technology creates two partitions on each hard disk drive to create a virtual RAID 0 and RAID 1 sets. This technology also allows you to change the hard disk drive partition size without losing any data.



If you want to boot the system from a hard disk drive included in a created RAID set, copy first the RAID driver from the support CD to a floppy disk before you install an operating system to the selected hard disk drive. Refer to section "6.1 RAID driver installation" for details.

# 5.1.2 Installing Serial ATA hard disks

The motherboard supports Serial ATA hard disk drives. For optimal performance, install identical drives of the same model and capacity when creating a disk array.

To install the SATA hard disks for a RAID configuration:

- 1. Install the SATA hard disks into the drive bays.
- 2. Connect the SATA signal cables.
- 3. Connect a SATA power cable to the power connector on each drive.

## 5.1.3 Setting the RAID item in BIOS

You must set the RAID item in the BIOS Setup before you can create a RAID set(s). To do this:

- 1. Enter the BIOS Setup during POST.
- 2. Go to the Main Menu, select IDE Configuration, then press <Enter>.
- 3. Select the item **Configure SATA As**, then press <Enter> to display the configuration options.
- 4. Select **RAID** from the Configure SATA As item options, then press <Enter>.
- 5. Select the item **Onboard Serial-ATA BOOTROM**, press <Enter>, then select **Enabled** from the options.
- 6. Save your changes, then exit the BIOS Setup.



Refer to Chapter 4 for details on entering and navigating through the BIOS Setup.

# 5.1.4 RAID configuration utility

Depending on the RAID\_SEL1 jumper setting and the operating system, you can select a utility to create a RAID set. Refer to section "2.6 Jumpers" for details on the RAID\_SEL1 jumper settings.

Use the Intel<sup>®</sup> Matrix Storage Manager to create a RAID 0, RAID 1, RAID 0+1, or software RAID 5 under Windows<sup>®</sup> 2000/2003 Server/XP operating system.

Use the LSI Logic Embedded SATA RAID Setup Utility to create a RAID 0, RAID 1, or RAID 0+1 under Windows® 2000/2003 Server/XP or Red Hat® Enterprise ver. 3.0 operating system.

Refer to the succeeding sections for details on how to use the RAID configuration utilities.

# 5.2 Intel<sup>®</sup> Matrix Storage Manager Option ROM Utility

The Intel<sup>®</sup> Matrix Storage Manager Option ROM utility allows you to create RAID 0, RAID 1, RAID 10 (RAID 0+1), and RAID 5 set(s) from Serial ATA hard disk drives that are connected to the Serial ATA connectors supported by the Southbridge.

To enter the Intel® Application Accelerator RAID Option ROM utility:

- 1. Install all the Serial ATA hard disk drives.
- 2. Turn on the system.
- 3. During POST, press  $\langle Ctrl \rangle + \langle l \rangle$  to display the utility main menu.

<pre>Intel(R) Matrix Storage Manager Option ROM v5.0.0.1032 ICH7R wRAID5 Copyright(C) 2003-05 Intel Corporation. All Rights Reserved.</pre>				
	MAIN 1	MENU ]		5
	1. Create R	AID Volume		
	2. Delete R	AID Volume		
	<ol><li>Reset Di</li></ol>	sks to Non-RAID		
	4. Exit			
	DISK/VOLUME	INFORMATION 1-		
PATD Volumos:	DIGN/ VOLOND			
Name defined				
None dellied.				
Physical Dicks				
Part Drive Model	Sorial #	Sizo	Turne (Status (Vol TD)	
	VVVVVVVV	VV VVAD	Non-PATP Dick	
		AA . AAGD	NON-RAID DISK	
2 20000000000	XXXXXXXX VVVVVVVV	XX.XXGB	Non-RAID Disk	
2 2		AA . AAGD	NON-RAID DISK	
3 ****	*****	XX.XXGB	NON-RAID DISK	
[↑↓]-Select	[ESC]-Exi	t [ENTH	ER]-Select Menu	

The navigation keys at the bottom of the screen allow you to move through the menus and select the menu options.



The RAID BIOS setup screens shown in this section are for reference only and may not exactly match the items on your screen.

# 5.2.1 Creating a RAID 0 set (striped)

To create a RAID 0 set:

1. From the utility main menu, select **1. Create RAID Volume**, then press <Enter>. This screen appears.

Intel(R) Matrix Stora	age Manager Option ROM v5.0.0.1032 ICH7R wRAID5	
Copyright(C) 2003	-05 Intel Corporation. All Rights Reserved.	
	== [ CREATE ARRAY MENU ]	
×		
PATD Le	mail: BATDO(Stripe)	
	ske: Select Diske	
Strip S	ize: 128KB	
Capac	ity: 0.0 GB	
	Create Volume	
·		
[ DISK/VOLUME INFORMATION ] Enter a string between 1 and 16 characters in length that can be used to uniquely identify the RAID volume. This name is case sensitive and cannot contain special characters.		
[†↓]-Change [TAB]-Ne	ext [ESC]-Previous Menu [Enter]-Select	

- 2. Enter a name for the RAID 0 set, then press <Enter>.
- 3. When the **RAID Level** item is highlighted, press the up/down arrow key to select **RAID 0(Stripe)**, then press <Enter>.
- 4. When the **Disks** item is highlighted, press <Enter> to select the hard disk drives to configure as RAID. This **SELECT DISKS** screen appears.

		[ SELECT DISKS ]	
Port	Drive Model	Serial #	Size Status
0	XXXXXXXXXXXX	XXXXXXX	XX.XGB Non-RAID Disk
1	XXXXXXXXXXXX	XXXXXXX	XX.XGB Non-RAID Disk
2	XXXXXXXXXXXX	XXXXXXX	XX.XGB Non-RAID Disk
3	XXXXXXXXXXXX	XXXXXXX	XX.XGB Non-RAID Disk
	Select 2 to	4 disks to use in cr	eating the volume.
<u> </u>	Previous/Next	[SPACE]-Selects [EN	TER]-Selection Complete

5. Use the up/down arrow key to highlight a drive, then press <Space> to select. A small triangle marks the selected drive. Press <Enter> after completing your selection.

6. Use the up/down arrow key to select the stripe size for the RAID 0 array, then press <Enter>. The available stripe size values range from 8 KB to 128 KB. The default stripe size is 128 KB.



**TIP**: We recommend a lower stripe size for server systems, and a higher stripe size for multimedia computer systems used mainly for audio and video editing.

- 7. Key in the RAID volume capacity that you want, then press <Enter>. The default value indicates the maximum allowed capacity.
- 8. Press <Enter> when the **Create Volume** item is highlighted. This warning message appears.



9. Press <Y> to create the RAID volume and return to the main menu, or <N> to go back to the Create Volume menu.

# 5.2.2 Creating a RAID 1 set (mirrored)

To create a RAID 1 set:

1. From the utility main menu, select **1. Create RAID Volume**, then press <Enter>. This screen appears.

Intel(R) Matrix Storage Manager Option ROM v5.0.0.1032 ICH7R wRAID5				
Copyright(C) 2003-05 Intel Corporation. All Rights Reserved.				
[ CREATE ARRAY MENU ]				
Name: Volume1				
RAID Level: RAID1(Mirror)				
Disks: Select Disks				
Strip Size: N/A				
Capacity: XX.X GB				
Create Volume				
[ DISK/VOLUME INFORMATION ]				
Enter a string between 1 and 16 characters in length that can be used to uniquely identify the RAID volume. This name is case sensitive and cannot contain special characters.				
[↑↓]-Change [TAB]-Next [ESC]-Previous Menu [Enter]-Select				

- 2. Enter a name for the RAID 1 set, then press <Enter>.
- 3. When the **RAID Level** item is highlighted, press the up/down arrow key to select **RAID 1(Mirror)**, then press <Enter>.
- 4 When the **Disks** item is highlighted, press <Enter> to select the hard disk drives to configure as RAID. The **SELECT DISKS** screen appears.
- 5 Use the up/down arrow key to highlight a drive, then press <Space> to select. A small triangle marks the selected drive. Press <Enter> after completing your selection.
- 6. When the **Capacity** item is highlighted, key in the RAID volume capacity that you want, then press <Enter>. The default value indicates the maximum allowed capacity.
- 7. Press <Enter> when the **Create Volume** item is highlighted. This warning message appears.



8. Press <Y> to create the RAID volume and return to main menu or <N> to go back to Create Volume menu.

# 5.2.3 Creating a RAID 10 set (RAID 0+1)

To create a RAID 10 set:

1. From the utility main menu, select **1. Create RAID Volume**, then press <Enter>. This screen appears.



- 2. Enter a name for the RAID 10 set, then press <Enter>.
- 3. When the **RAID Level** item is highlighted, press the up/down arrow key to select **RAID 10(RAID0+1)**, then press <Enter>.
- 4 When the **Disks** item is highlighted, press <Enter> to select the hard disk drives to configure as RAID. The **SELECT DISKS** screen appears.
- 5 Use the up/down arrow key to highlight a drive, then press <Space> to select. A small triangle marks the selected drive. Press <Enter> after completing your selection.
- 6. When the **Stripe Size** item is highlighted, press the up/down arrow key to select the stripe size for the RAID 10 array, then press <Enter>. The available stripe size values range from 8 KB to 128 KB. The default stripe size is 64 KB.



**TIP**: We recommend a lower stripe size for server systems, and a higher stripe size for multimedia computer systems used mainly for audio and video editing.

 Key in the RAID volume capacity that you want then press <Enter> when the Capacity item is highlighted. The default value indicates the maximum allowed capacity. 8. Press <Enter> when the **Create Volume** item is highlighted. This warning message appears.



9. Press <Y> to create the RAID volume and return to the main menu or <N> to go back to the Create Volume menu.

# 5.2.4 Creating a RAID 5 set (parity)

To create a RAID 5 set:

1. From the utility main menu, select **1. Create RAID Volume**, then press <Enter>. This screen appears.



- 2. Enter a name for the RAID 5 set, then press <Enter>.
- 3. When the **RAID Level** item is highlighted, press the up/down arrow key to select **RAID 5(Parity)**, then press <Enter>.

4. When the **Disks** item is highlighted, press <Enter> to select the hard disk drives to configure as RAID. The **SELECT DISKS** screen appears.

	SELECT DISKS	5]
Port Drive Model	Serial #	Size Status
0 XXXXXXXXXXXXX	XXXXXXX	XX.XGB Non-RAID Disk
1 XXXXXXXXXXXXX	XXXXXXXX	XX.XGB Non-RAID Disk
2 XXXXXXXXXXXX	XXXXXXXX	XX.XGB Non-RAID Disk
3 XXXXXXXXXXXXX	xxxxxxx	XX.XGB Non-RAID Disk
Select 2 to 4	disks to use in	creating the volume.
=[^↓]-Previous/Next	[SPACE]-Selects	[ENTER]-Selection Complete

- 5. Use the up/down arrow key to highlight the drive you want to set, then press <Space> to select. A small triangle marks the selected drive. Press <Enter> after completing your selection.
- 6. When the **Stripe Size** item is highlighted, press the up/down arrow key to select the stripe size for the RAID 5 array, then press <Enter>. The available stripe size values range from 8 KB to 128 KB. The default stripe size is 64 KB.



**TIP**: We recommend a lower stripe size for server systems, and a higher stripe size for multimedia computer systems used mainly for audio and video editing.

- Key in the RAID volume capacity that you want, then press <Enter> when the Capacity item is highlighted. The default value indicates the maximum allowed capacity.
- 8. Press <Enter> when the **Create Volume** item is highlighted. This warning message appears.



9. Press <Y> to create the RAID volume and return to the main menu or <N> to go back to the Create Volume menu.

# 5.2.5 Deleting a RAID set



Take caution when deleting a RAID set. You will lose all data on the hard disk drives when you delete a RAID set.

To delete a RAID set:

1. From the utility main menu, select **2. Delete RAID Volume**, then press <Enter> to display this screen.

	Intel(R) Matrix St Copyright(C) 20	orage Manager Optic 003-05 Intel Corpor	on ROM v5.0.0 ation. All Ri	.1032 ICH7R w .ghts Reserved	RAID5 1.	
Name	Lorrol	E DELETE VOLUM	E MENU ]	Status	Rootablo	
Volu	ime0 RAIDX	(xxxxx) X	XXX.XGB	Normal	Yes	
		HELP	]			
	Deleting a volume will destroy the volume data on the drive(s) and					
	cause any member disks to become available as non-RAID disks.					
WAF	RNING: EXISTING DATA	WITHIN THIS VOLUME	WILL BE LOS	I AND NON-REC	OVERABLE.	
	[^↓]-Select	[ <esc>]-Previous Me</esc>	nu [ <de< td=""><td>l&gt;]-Delete Vo</td><td>lume</td></de<>	l>]-Delete Vo	lume	

2. Use the up/down arrow key to select the RAID set you want to delete, then press <Del>. This window appears.



3. Press <Y> to delete the RAID set and return to the utility main menu; otherwise, press <N> to return to the Delete Volume menu.

# 5.2.6 Resetting Disks to Non-RAID



Take caution before you reset a RAID volume HDD to non-RAID. Resetting a RAID volume HDD deletes all internal RAID structure on the drive.

To reset a RAID set hard disk drive:

1. From the utility main menu, select **3. Reset Disks to Non-RAID**, then press <Enter> to display this screen.



- 2. Use the up/down arrow key to highlight the RAID set drive you want to reset, then press <Space> to select.
- Press <Enter> to reset the RAID set drive. A confirmation message appears.
- 4. Press <Y> to reset the drive or press <N> to return to the utility main menu.
- 5. Follow steps 2 to 4 to select and reset other RAID set drives.

# 5.2.7 Exiting the Intel<sup>®</sup> Matrix Storage Manager utility

To exit the utility:

1. From the utility main menu, select **4. Exit**, then press <Enter>. This window appears.



2. Press  $\langle Y \rangle$  to exit or press  $\langle N \rangle$  to return to the utility main menu.

## 5.2.8 Rebuilding the RAID



This option is only for the RAID 1, RAID 5 and RAID 10 sets.

#### Rebuilding the RAID with other non-RAID disk

If any of the SATA hard disk drives included in the RAID array failed, the system displays the status of the RAID volume as **"Degraded"** during POST. You can rebuild the RAID array with other installed non-RAID disks.

To rebuild the RAID with other non-RAID disk:

- 1. At the prompt, press <Ctrl> + <l> to enter the Intel Matrix Storage Manager RAID configuration.
- 2. If there is a non-RAID SATA Hard Disk available, the utility will prompt to rebuild the RAID. Press <Enter>, then use up/down arrow keys to select the destination disk or press <ESC> to exit.



Select a destination disk with the same size as the original hard disk.

3. The utilty immediately starts rebuilding after the disk is selected. The status of the degraded RAID volume is changed to **"Rebuild"**.

_		Copyright(C)	2003-05 Intel Cor	poration	. All R	ights Reser	ved.
			1. Create 2. Delete 3. Reset 4. Exit	RAID Vo RAID Vo Disks to	lume Non-RAI	D	
-			[ BISK/VILLINE		[ ]   ] ==		
	RAID ID 0	Volumes: Name Volume0	Level RAID1(Mirror)	Strip N/A	Size 74.568	Status Rebuild	Bootable Yes
	Physi Port 1 3	ical Disks: Drive Model ST38001385 HDS722580VLSA80	Serial ■ 5JV7KSE9 VN6BHECBW1EKMC		<b>Size</b> 74.568 76.768	Type/Stat Nember Di Nember Di	us(Vol ID) sk(0) sk(0)
	Volu	umes with "Rebuil	d" status will be	rebuilt	within	the operation	ng system.
1		[]-Select	[ESC1-Exi	t	TENT	ER1-Select	lenu

- 4. Exit the RAID configuration utility and reboot the system.
- 5. Select Start > Programs > Intel Matrix Storage > Intel Matrix Storage Console or click the Intel Matrix Storage Manager tray icon to load the Intel Matrix Stroage Manager utility.
- 6. From the **View** menu, select **Advanced Mode** to display the details of the Intel Matrix Storage Console.
- 7. From the **Volumes view** option, select **RAID volume** to view the rebuilding status. When finished, the status is changed to **"Normal"**.

#### Rebuilding the RAID with a new hard disk

If any of the SATA hard disk drives included in the RAID array failed, the system displays the status of the RAID volume as **"Degraded"** during POST. You may replace the disk drive and rebuild the RAID array.

To rebuild the RAID with a new hard disk:

1. Remove the failed SATA hard disk and install a new SATA hard disk of the same specification into the same SATA Port.



Select a destination disk with the same size as the original hard disk.

2. Reboot the system and then follow the steps in section **"Rebuilding the RAID with other non-RAID disk"** on page 5-12.

# 5.2.9 Setting the Boot array in the BIOS Setup Utility

You can set the boot priority sequence in the BIOS for your RAID arrays when creating multi-RAID using the Intel® Matrix Storage Manager.



Set at least one of the arrays bootable to boot from the hard disk.

To set the boot array in the BIOS:

- 1. Reboot the system and press <Del> to enter the BIOS setup utility during POST.
- 2. Go to the Boot menu and select the option Boot Device Priority.
- Use up/down arrow keys to select the boot priority and press <Enter>. Refer to "4.6.1 Boot Device Priority" for details.
- 4. From the Exit menu, select Exit & Save Changes, then press <Enter>.
- 5. When the confirmation window appears, select **OK**, then press <Enter>.

# 5.3 LSI Logic Embedded SATA RAID Setup Utility

The LSI Logic Embedded SATA RAID Setup Utility allows you to create RAID 0, RAID 1, and RAID 10 set(s) from SATA hard disk drives connected to the SATA connectors supported by the motherboard Southbridge chip.



The LSI Logic Embedded SATA RAID automatically configures a RAID 1 (Mirrored) set when the SATA is configured as **RAID** in the BIOS and you installed two hard disk drives without a RAID configuration.

To enter the LSI Logic Embedded SATA RAID Setup Utility:

- 1. Turn on the system after installing all the SATA hard disk drives.
- During POST, the LSI Logic Embedded SATA RAID Setup Utility automatically detects the installed SATA hard disk drives and displays any existing RAID set(s). Press <Ctrl> + <M> to enter the utility.





You may also create a RAID set(s) in a Windows<sup>®</sup> operating environment using the Global Array Manager (GAM) application. Refer to the GAM user guide in the motherboard support CD for details.
3. The utility main window appears. Use the arrow keys to select an option from the **Management Menu**, then press <Enter>. Refer to the Management Menu descriptions below.

At the bottom of the screen is the legend box. The keys on the legend box allow you to navigate through the setup menu options or execute commands. The keys on the legend box vary according to the menu level.

was Managament Magaz	
A THE PARTY OF THE PARTY OF	
Rebuild	
Check Consistency	
	Configure Logical Drive(s)
	***************************************
Use Cursor Keys To N	avigate Between Items find Press Enter To Select An Dotion

Menu	Description
Configure	Allows you to create RAID 0, RAID 1, or RAID 10 set using the Easy Configuration or the New Configuration command. This menu also allows you to view, add, or clear RAID configurations or select the boot drive
Initialize	Allows you to initialize the logical drives of a created RAID set
Objects	Allows you to initialize logical drives or change the logical drive parameters
Rebuild	Allows you to rebuild failed drives
Check Consistency	Allows you to check the data consistency of the logical drives of a created RAID set

## 5.3.1 Creating a RAID set

The LSI Logic Embedded SATA RAID Setup Utility allows you to create a RAID 0 or RAID 1 set using two types of configurations: **Easy** and **New**.

In **Easy Configuration**, the logical drive parameters are set automatically including the size and stripe size (RAID 1 only).

In **New Configuration**, you manually set the logical drive parameters and assign the set size and stripe size (RAID 1 only).

## Using Easy Configuration

To create a RAID set using the **Easy Configuration** option:

- 1. From the utility main menu, highlight **Configure**, then press <Enter>.
- 2. Use the arrow keys to select **Easy Configuration**, then press <Enter>.



3. The **ARRAY SELECTION MENU** displays the available drives connected to the SATA ports. Select the drives you want to include in the RAID set, then press <SpaceBar>. When selected, the drive indicator changes from **READY** to **ONLIN A[X]-[Y]**, where X is the array number, and Y is the drive number.

Easy Confi	guration - ARRAY SELECTION M	ENU
Management=	PORT #	
Configure	***************	
Initialize =		
•••Objects •	*************	
Rebuild =	THE RM	
***Check Consis		
************************************		
Doet H & DISK 1	14370MR H067225129/ 5090	1220000MD
	INDIGED HDOTEESTETLEHOU	*2500 HORE
SPORE Sal ENTED Endlagen Et	B-Configure E2-Dev. Info E3-	logical Driver



The information of the selected hard disk drive displays at the bottom of the screen.

4. Select all the drives required for the RAID set, then press <Enter>. The configurable array appears on screen.

*** Management*	PORT #	
Lonfigure -		
*=inifialize =		
••Objects •		
**Rebuild =	A DESCRIPTION OF	
**Check Consis*	ARADDRONDOR CONTRACTOR	

5. Press <F10>, select the configurable array, then press <SpaceBar>.

Environmentation - GRROV SELECTION NE	NU
and an	
defect can igurable mrayis/-	
Raissocient	
Loni Loure	
***Initialize * * * William	
Objects	
Rebuild	
Chark Convise -	
	and the second
Durson Keys, SPACE-(De)Select E2-ChildInfo E3-SlotInfo E18-C	onfigure ESC-Quit

The logical drive information appears including a Logical Drive menu that allows you to change the logical drive parameters.

	**********	Louical D	rivals) Conf	ioured *****		
	D ROTO	Size	#Strings	SteineSz	Statue	
	er innan	OALO	and there	out spear	oracas.	
		11402640		27 MD	CAD THE	
	1	11491040		04 ND	CULTUE	
Managen						
Configure						
Initialize						
Objects -						
Rebuild -						
another Com						
- CHECK CORP						
	Logical I	guine gases		**********		
	- RAID - 1	SUCALS S	***********			
	Size = 114	1376MB •	***********	**********		
	<ul> <li>Strine Siz</li> </ul>	70 .				**********
	+ Becont					
	- SPON - NO					
	- arna - nu					
*************			**********			
	Choose	<b>BRID Leve</b>	I For This L	opical Drive		
Use Cursor Key	s To Novigat	te Between	Items find P	ress Enter	o Select	<b>An Option</b>

- 6. Select **RAID** from the **Logical Drive** menu, then press <Enter>.
- 7. Select the RAID level from the menu, then press <Enter>.

You need at least two identical hard disk drives when creating a RAID 1 set.

	LO	RAID	Logical Size	Brive(s) #Strip	Ses Str	peSz	Status	
Managen 2001/00/000 - Initializ - Objects - Rebuild - Check Con-	ð	1	1143768	8 2	64	KB	CHLINE	
		pical D 0 = 1 e = 114 ipe Siz ept N = NO	гіое 8 376мв е		Level			
		Cheore	SOTO Les	sel Eng D	is Looice	Deive		

8. When creating a <u>RAID 1</u> or a <u>RAID 10</u> set, select **Stripe Size** from the **Logical Drive** menu, then press <Enter>.

When creating a <u>RAID 0</u> set, proceed to step 10.

9. Key in the stripe size, then press <Enter>.

************		** Logical	Drive(s) Cor	ficured ****		
	LO RAID	Size	#Stripes	StripeSz	Status	
***********	8 1	114376	18 2	64 KB	CHLINE	
Managem=						
- Lonif Louro						
Initialize						
•••Objects •						
Rebuild =						
Check Couns						
	ter Strape	Size In K	8 (4.8.16.32	64,12817 :64	A DESCRIPTION OF	
		1 Decision Re-				
	- POID	i prive an				
	Citro -	11197000				
	Strine	Size				
	Sccont	JIII .				
	SPRN -	ND				
		*********				
************	Enter	Stripe Size	e In KB (4.8.	16.32.64.128	7 :	
************				************		
Use Cursor Ke	us To Novi	gate Betwee	en Itens find	Press Enter	o Select	An Option



5

For server systems, we recommend that you use a lower array block size. For multimedia computer systems used mainly for audio and video editing, we recommend a higher array block size for optimum performance. 10. When finished setting the selected logical drive configuration, select **Accept** from the menu, then press <Enter>.

***********		Logical D	riva(s) Conf	ioured *****		
***********	LO RAID	Size	#Stripes	StripeSz	Status	
***********						
***********	0 1	114376H8	2	64 KB	COLINE	
**** Managem=						
<ul> <li>Lonf Lourge</li> </ul>						
Initialize						
•••Objects •						
Rebuild -						
Chack Cone						
			**********	**********		
	Logical	Drive 0		**********		
	••• RHID - 1		**********			
***********	Size = 11	4376MB +	***********			
	••• Stripe Si	70 *				
	Recept		***********			
	• • • SPAN = NO		**********			**********
***********			**********			
		*********				
		********	*********	******		
liccept	his Logical	Drive Conf	iguration An	d Go To Mext	Logical	Brive
	***********	*********	***********	***********		
Use Conson Ke	eys In Novina	te Between	Items find P	ress Inter	o Select	Hin Dotion

- 11. Follow steps 5 to 10 to configure additional logical drives.
- 12. When prompted, save the configuration, then press <Esc> to return to the Management Menu.

Managener	nt N	Configura Asy Config av Config iew/Add C	tion Monu guration uration		Save Config Ves No	guration ?	
Initialize Objects	LO	RAID	Logical Dr Size	ive(s) Conf #Stripes	StripeSz	Status	
Check Con-	8		11437688		64 KB	ONLINE	
			Selec	t YES Or NO			

### Using New Configuration



When a RAID set is already existing, using the **New Configuration** command erases the existing RAID configuration data. If you do not want to delete the existing RAID set, use the **View/Add Configuration** command to view or create another RAID configuration.

To create a RAID set using the **New Configuration** option:

- 1. From the utility main menu, highlight **Configure**, then press <Enter>.
- 2. Use the arrow keys to select New Configuration, then press <Enter>.

and the second second second to work the second	
Bardina dia dia dia dia dia dia dia dia dia di	
Longiguration Monu	
Easy Configuration	
sees Managements New Coofiguration	
managemente nue contriguration	
***Konfigure: View/Hdd Configuration	
***Initialize = Clear Configuration	
<ul> <li>Select poot prive</li> </ul>	
Rebuild	
and back for interest and an	
CHACK CONSISTENCY	
***************************************	
Second a second reason of the second s	and in the Analysia and the second and the second se
<ul> <li>Defines Physical Arrays, An Array Vil</li> </ul>	1 Butomatically Become B logical drives-
Use Cursor Keys to Novigate Between It:	ens lind Press Enter To Select An Option

- 3. Follow steps 3 to 7 of the previous section.
- 4. Select Size from the Logical Drive menu, then press <Enter>.
- 5. Key in the desired logical drive size, then press <Enter>.

			Logical	Drivels	) Confis	ured			
	LD	RAID	Size	#Str	i Desi	Stein	poSa	Status	
***********	0	1	1149768	8	2	64	KB	ONLINE .	
Kanagem									
Configures									
Initializ*									
Objects =									********
Rebuild -									
Check Com									
	nter 1	ogical	brive Siz	e (MIS)	:114376	10.1216	- 100		
***********	1	ogical	Drive 8						
	10	(10 - 1)							
		7e = 11	a37588						
		Intpe 51	ze						
	<u>18</u>	DCepT							
	54	HH - NU							
				and Del		(MD)			
			Logi	COL DEL	ve a12e	1107			
Use Cursor K	eus Lo	Novical	te Betwee	n Itens	And Pre	ese F	nter	In Select	<b>Bn Option</b>

6. Follow steps 8 to 12 of the previous section to create the RAID set.

## 5.3.2 Adding or viewing a RAID configuration

You can add a new RAID configuration or view an existing configuration using the **View/Add Configuration** command.

### Adding a new RAID configuration

To add a new RAID configuration:

- 1. From the Management Menu, highlight **Configure**, then press <Enter>.
- 2. Use the arrow keys to select **View/Add Configuration**, then press <Enter>.



3. The **ARRAY SELECTION MENU** displays the available drives connected to the SATA ports. Select the drive(s) you want to include in the RAID set, then press <SpaceBar>. When selected, the drive indicator changes from **READY** to **ONLIN A[X]-[Y]**, where X is the array number, and Y is the drive number.

Management-	25081 W	
Locif Loure		
-Inilialize -		
-Dobroild	CONTRACTOR AND	10000000
Charle Come in a	A STREET CONTRACTOR	
-CHIER CONSIST		



The information of the selected hard disk drive displays at the bottom of the screen.

4. Select all the drives required for the RAID set, then press <Enter>. The configurable array appears on screen.



5. Press <F10>, select the configurable array, then press <SpaceBar>.

View/idd contiguration - HERRY SELECTION	MENU
Select Lonfigurable Hrrayisi-	
Management -	
Lonf jaure Concellation	
Initialize Banka-	
Objects	
Rebuild + -	
Check Consis	
Cursor Keys, SPACE-(De)Select F2-Chidinfo F3-Slotinfo F10-C	onfigure ESC-Quit

The logical drive information appears including a Logical Drive menu that allows you to change the logical drive parameters.

	LO RAID	Logical I Size	Stripes	StripeSz	Status	
Managem	ð 1	114976HE		64 KB	CHLINE	
Initializ-						
Rebuild - Check Con-						
	Logical	Orive B				
	Size 11	1376MB				
	Accept SPAN - NO					
Use Dunson Ke	Choose tys To Naviga	te Betweer	I For This I I tens And P	ness Enter	o Select	An Option

- 6. Follow steps 6 to 7 of the **Creating a RAID set: Using Easy Configuration** section.
- 7. Select Size from the Logical Drive menu, then press <Enter>.
- 8. Key in the desired logical drive size, then press <Enter>.

			gical Driv	e(s) Config	our of seven		
	LD R	ATD	Size II	Strings	StringSz	Status	
				and all the second	our alleger		
	a .	1 A	1497688		64 1/2	ONE THE	
Anna Managana		* *	Targe and the start of the star		ALL THE	Sector Contraction	
THE REPORT OF THE							
addining the second							
Property in the second second							
Repuild							
Check L							
	nter Log	ICAL DEL	OF 5126 18	11 14376			
************							
***********	Log	ical Uri	ne gereen		*********		
***********	REITD	- 1					
***********	Size	- 11437	5NB				**********
***********	Stri	pe Size		*********			
	Acce	pt		*********			
************	SPAN	- NO			*********		
			*********				
		Ente	r Ingical I	Drive Size	(NR)		
Use Cursor Ke	evs To N	evicate	Between It	ons And Pro	ess Enter I	o Select	<b>An Option</b>

9. Follow steps 8 to 12 of the **Creating a RAID set: Using Easy Configuration** section to add the new RAID configuration.

# 5.3.3 Initializing the logical drives

After creating the RAID set(s), you must initialize the logical drives. You may initialize the logical drives of a RAID set(s) using the **Initialize** or **Objects** command in the Management Menu.

#### Using the Initialize command

To initialize the logical drive using the **Initialize** command:

1. From the Management Menu, highlight Initialize, then press <Enter>.



 The screen displays the available RAID set(s) and prompts you to select the logical drive to initialize. Use the arrow keys to select the logical drive from the Logical Drive selection, then press <Enter>.

			Incident D	time in the set	Concernation of the second	
and Managament	North an LD	DOLD	- Logicai u	HSteinor	Steinsen	Statur
***Cooligura	manu en	- minero	oueu.	ine trapice	ouropeas	storus
Initialize	• 0	1	116376HB	2	64 KB	ONLINE
Objects						
Rebuild						
Check Consist	ency 😐					
malonical flei						
			**********			
						*********
	**********					*********
		<ul> <li>Select</li> </ul>	Logical D	106		
	00000					
	SPIRA	the lise		120		

3. When prompted, press the <SpaceBar> to select **Yes** from the **Initialize?** dialog box, then press <Enter>. You may also press <F10> to initialize the drive without confirmation.





Initializing a logical drive(s) erases all data on the drive.

4. A progress bar appears on screen. If desired, press <Esc> to abort initialization.

Kanagement Ke Configure UniUni Objects Rebuild Array	nu - LD RAID Size #Stripes Stripes Initialize Logical Drives In Progress	Status ONE_INE
Chack C-	- 16 % Completed	
Logica		
******		
	SPOCE-(De)Select E10-Initialize	

5. When initialization is completed, press <Esc>.



#### Using the Objects command

To initialize the logical drives using the **Objects** command:

1. From the Management Menu, highlight **Objects**, then press <Enter>.



2. Select Logical Drive from the Objects sub-menu, then press <Enter>.



3. Select the logical drive to initialize from the **Logical Drives** sub-menu, then press <Enter>.

•••••••••••	
(1c	aical Frivest
Han anonan all dan ton	
Configure - Concal Drive	
Initialize -Physical Drive	• • • • • • • • • • • • • • • • • • • •
Rebuild	
Chack Consistency	
	<ul> <li>Select Logical Drive -</li> </ul>
Press ENTER To Select B L	ogical Drive, (Del) To Delete B Logical Drive Arrow

4. Select **Initialize** from the pop-up menu, then press <Enter> to start initialization.

	Drives(1)	
	Urive 0	
Managemon-fidaptor		
Initialize -Physical Drive		
Rebuild	ical Drive O	
Duck Consistency	insistency	
10070	date Parameter	
Init	alize Logical Orive -	
Use Cursor Keys To Novigate Bet	een Itens And Press En	ter To Select An Option

5. When prompted, press the <SpaceBar> to select **Yes** from the **Initialize?** dialog box, then press <Enter>. You may also press <F10> to initialize the drive without confirmation.



6. A progress bar appears on screen. If desired, press <Esc> to abort initialization.



7. When initialization is completed, press <Esc>.

and a logical Driver(1)	
(D)	
Managemen-lidaptor	
Configure - Concal Drive	
Initial Initialize Louical Drives In Progress	
***Rebuild* Recay Initialization Complete # Press ESC.	
seafficient of a second	
188% Completed	
	*******
***************************************	
Use Cursor Keys To Novigate Between Items And Press Enter To Select An	Oction

# 5.3.4 Rebuilding failed drives

You can manually rebuild failed hard disk drives using the  $\ensuremath{\textit{Rebuild}}$  or  $\ensuremath{\textit{Objects}}$  command in the Management Menu.

### Using the Rebuild command

To rebuild a failed hard disk drive using the **Rebuild** command:

1. From the Management Menu, highlight Rebuild, then press <Enter>.



2. The **PHYSICAL DRIVES SELECTION MENU** displays the available drives connected to the SATA ports. Select the drive you want to rebuild, then press <SpaceBar>.



3. After selecting the drive to rebuild, press <F10>. The indicator for the selected drive now shows **RBLD**.

- Ромтан а отък 11437648 NDS722512VI.5080 V33006И0-	Management Configure Initialize Objects Check Consis	IId - PHVSICAL DRIVES SELECTION ( CONT C	4ENU
- Рост и а DTSK 11437648 HDS722512VI5080 V33006И0-			
PowrtH 0 DTSK 11637546 HDS722512VL5080 V3304640			
Port # 0 DTSK 114376#8 HDS722512VLS080 V33006#0			
	- Port H 8 DTS	K 114376HB HD\$722512VL\$A80	V33006M0

4. When prompted, press <Y> to to rebuild the drive.



5. When rebuild is complete, press any key to continue.

### Using the Objects command

To rebuild a failed hard disk drive using the **Objects** command:

- 1. From the Management Menu, select **Objects**, then select **Physical Drive** from the menu.
- 2. Use the arrow keys to select the physical drive you want to rebuild, then press <Enter>.
- 3. Select **Rebuild** from the pop-up menu, then press <Enter>.
- 4. When prompted, press <Y> to to rebuild the drive.
- 5. When rebuild is complete, press any key to continue.

## 5.3.5 Checking the drives for data consistency

You can check and verify the accuracy of data redundancy in the selected logical drive. The utility can automatically detect and/or detect and correct any differences in data redundancy depending on the selected option in the **Objects > Adapter** menu.



The Check Consistency command is available only for logical drives included in a RAID 1 set.

### Using the Check Consistency

To check data consistency using the Check Consistency command:

1. From the Management Menu, select **Check Consistency**, then press <Enter>.



 The screen displays the available RAID set(s) and prompts you to select the logical drive to check. Use the arrow keys to select the logical drive from the Logical Drive selection, then press <Enter>.

						********		
						********		
Management	Henu +	LD	RAID	Size	#Stripe	Stri	peSz.	Status
Initialize		0	1	114376H	8 2	64	KB	ONLINE
Rebuild	Topon I							
								200 - S
Ingical Dri	100150-000							
************						*******		
						********		
			Select	Logical	In the			
	SPR	E-Oe	Select	E18 Che	dk Consist	ency		

 When prompted, press the <SpaceBar> to select Yes from the Consistency Check dialog box, then press <Enter>. You may also press <F10> to check the drive consistency.



A progress bar appears on screen.



- 4. While checking the disk consistency, press <Esc> to display the following options.
  - Stop Stops the consistency check. The utility stores the percentage of disk checked. When you restart checking, it continues from the last percentage completed rather than from zero percent.
  - Continue Continues the consistency check.
  - Abort Aborts the consistency check. When you restart checking, it continues from zero percent.
- 5. When checking is complete, press any key to continue.

### Using the Objects command

To check data consistency using the **Objects** command:

- 1. From the Management Menu, select **Objects**, then select **Logical Drive** from the menu.
- 2. Use the arrow keys to select the logical drive you want to check, then press <Enter>.
- 3. Select **Check Consistency** from the pop-up menu, then press <Enter>.
- 4. When prompted, press <Y> to to check the drive.
- 5. When checking is complete, press any key to continue.

## 5.3.6 Deleting a RAID configuration

To delete a RAID configuration:

1. From the Management Menu, select **Configure > Clear Configuration**, then press <Enter>.

Configuration Neor	
Gent requirer to the method	
Lasy configuration	
Management= New Configuration	
Regulation View/Edd Configuration	
and hitighting and here have been been been been been been been be	
All training Calcast Deat Deater	
upiccts - select boot Urive	
Rebuild	
Check Consistency	
***************************************	***************************************
***************************************	***************************************
	***************************************
· Clear Existin	g Loninguration
	***************************************
Use Cursor Keys To Navigate Between It	ems And Press Enter To Select An Option

2. When prompted, press the <SpaceBar> to select **Yes** from the **Clear Configuration**? dialog box, then press <Enter>.

Configuration Menu	
Easy Configuration	
even Managements New Configuration	
TRIBUCIARITY HER CONTINUES IN	and the set Office of the set of
Tourser Treatener Control	REPORT ALL
Initialize - Edican - Edica	•••••••••••••••••••••••••••••••••••••••
Objects - Selec- No	
Rebuild	
seefback Consistance management	
GIRCEN CONSISTENCY	
***************************************	
***************************************	
Clear Existin	ng Configuration
***************************************	***************************************
Use Cursor Keys To Navigate Between II	tems And Press Enter To Select An Option

The utility clears the current array.

3. Press any key to continue.

## 5.3.7 Selecting the boot drive from a RAID set

You must have created a new RAID configuration before you can select the boot drive from a RAID set. Refer to the **Creating a RAID set: Using New Configuration** section for details.

To select the boot drive from a RAID set:

1. From the Management Menu, select **Configure > Select Boot Drive**, then press <Enter>.

Configuration Menu	
Configuration and English Configuration	
Lasy configuration	
**** Management* New Configuration	
and With Strength Wien Rodd Configuration	
and a standard a streaming constant attain	
Initialize - Clear Configuration	
saafbigete Salact Reat Drive	
Rebuild	
sasthack Consistency assessments	
CHOCK CONSIST CONCY	
***************************************	
And the All stands of the first stands of the	Real Price Price Price
Specify H Logical Unive Hi	s bool Urive Un This Heapter
Has Pressed Marrie To Marriella Difference Th	and doub because he has a first set on the becker
Use consurneys to havigate between Lte	ans hind press citter to select in uption

2. When prompted, press the <SpaceBar> to select the bootable logical drive from the list, then press <Enter>.

Bootable Logical Drives (4): Currently (0)	
Config- Soot Drive 0	
Easy Co- Boot Drive 1	
Management - New Con- Boot Drive 2	
Infigure	
Initialize - Clear C	
Hebuild	
UNECK LONSISTENCY	
Specify A Logical Drive As Boot Drive On This Adapter	

3. The logical drive is selected as boot drive. Press any key to continue.

# 5.3.8 Enabling the WriteCache

You may enable the RAID controller's **WriteCache** option to improve the data transmission performance.



When you enable WriteCache, you may lose data when a power interruption occurs while transmitting or exchanging data among the drives.

To enable WriteCache:

- 1. From the Management Menu, select **Objects > Adapter**, then press <Enter> to display the adapter properties.
- 2. Select **WriteCache**, then press <Enter> to turn the option **On** (enabled).

Too State St		
***************************************	·· Adapter 8 ·····	
RbldRate	88	
Ohies BiosState	- Fooble	
The Management Management Stool From	- Hos	
and and i outer al ani cal. Des Regionitas	<ul> <li>Date Perfiguration</li> </ul>	
Tottighte Ployter of headevice	Forthan English	
	Enable	
Lighteste	<ul> <li>Report Only</li> </ul>	
***Rebuild **** WriteBache	- 0ff	
Check Consistency ReadRhead	= 0n	
Rebuild	= 0n	
annone and a second second second second	<ul> <li>Enable</li> </ul>	
and a second second second second second	= 10 GH	
Contract Contract Contract Default	1+	
ractory berau		
***************************************		
***************************************		
	******************************	
Units	Cachas	
Har Descent Harry To Harrison De Antonio Lan	the state of the s	
Use cursor keys to havigate between ite	as and rress inter 10 50	Tect Wh Option

3. When finished, press any key to continue.

# 5.4 Global Array Manager

You may also create a RAID set(s) in Windows<sup>®</sup> operating environment using the Global Array Manager (GAM) application. The GAM application is available from the motherboard support CD.



Refer to the GAM user guide in the motherboard support CD for details.

This chapter provides information on RAID, LAN and VGA driver installation for this motherboard.



hap	ter summary	6
6.1	RAID driver installation	6-1
6.2	LAN driver installation	6-11
6.3	VGA driver installation	6-13
6.4	Management applications and utilities installation	6-15

# 6.1 RAID driver installation

After creating the RAID sets for your server system, you are now ready to install an operating system to the independent hard disk drive or bootable array. This part provides instructions on how to install the RAID controller drivers during OS installation.

### 6.1.1 Creating a RAID driver disk



You may have to use another system to create the RAID driver disk from the system/motherboard support CD or from the Internet.

A floppy disk with the RAID driver is required when installing Windows<sup>®</sup> 2000 or Red Hat<sup>®</sup> Enterprise ver. 3.0/SuSE operating system on a hard disk drive that is included in a RAID set. You can create a RAID driver disk in DOS (using the Makedisk application in the support CD).

To create a RAID driver disk in DOS environment:

- 1. Place the motherboard support CD in the optical drive.
- 2. Restart the computer, then enter the BIOS Setup.
- 3. Select the optical drive as the first boot priority to boot from the support CD. Save your changes, then exit the BIOS Setup.
- 4. Restart the computer.
- 5. Press any key when prompted to boot from CD.

```
Loading FreeDOS FAT KERNEL GO!
Press any key to boot from CDROM...
```

The Makedisk menu appears.

A)	FreeDOS command prompt
B)	Create ICH7R LSI MegaRAID IDE Driver for Windows Driver Disk
C)	Create ICH7R LSI MegaRAID IDE Driver for RHEL3UP6 driver
D)	Create ICH7R Intel Matrix Storage for Windows driver disk
E)	Broadcom ASF Firmware Update
Ple	ease choose A To E:

- 6. Place a blank, high-density floppy disk to the floppy disk drive, then select the type of RAID driver disk you want to create by typing the number before the option
- 7. Press <Enter>.
- 8. Follow screen instructions to create the driver disk.



For systems with Red Hat<sup>®</sup> Enterprise versions that are not listed in the Makedisk menu, explore the support CD and copy the RAID driver disk from the following path: \Drivers\ICH7R\LSI\Linux.

### Windows® 2000/2003 Server

To create a RAID driver disk in Windows® 2000/2003 Server environment:

- 1. Restart the system from the hard disk drive, then place the system/ motherboard support CD in the optical drive.
- 2. Browse the contents of the support CD to locate the driver disk utility. The 32-bit OS RAID driver disk for the Intel<sup>®</sup> ICH7R is located in:

\Drivers\ICH7R\Intel\Matrix\Makedisk\F6flpy32

The 64-bit OS RAID driver disk for the Intel® ICH7R is located in:

\Drivers\ICH7R\Intel\Matrix\Makedisk\F6flpy64

The 32-bit and 64-bit OS RAID driver disk for the LSI is located in:

\Drivers\LSI\Driver\Makedisk\Win32\_64

- 3. Insert a formatted high-density floppy disk to the floppy disk drive.
- 4. Follow screen instructions to complete the process.
- 5. After creating a RAID driver disk, eject the floppy disk, then write-protect it to prevent computer virus infection.

## 6.1.2 Installing the RAID controller driver

#### Windows® 2000/2003 Server OS

#### During Windows® 2000/2003 Server OS installation

To install the RAID controller driver when installing Windows  $^{\mbox{\scriptsize \$}}$  2000/2003 Server OS:

1. Boot the computer using the Windows® 2000/2003 Server installation CD. The Windows® 2000/2003 Setup starts.



- Press <F6> when the message "Press F6 if you need to install a third party SCSI or RAID driver..." appears at the bottom of the screen.
- 3. When prompted, press **<S>** to specify an additional device.



4. Insert the RAID driver disk you created earlier to the floppy disk drive, then press <Enter>.



5. Select the RAID controller driver from the list, then press <Enter>.



For LSI Logic Embedded SATA RAID driver, select LSI Logic Embedded SATA RAID.



For Intel® ICH7R SATA RAID controller driver, select Intel(R) 82801GR/GH SATA RAID Controller (Desktop ICH7R).

- 6. The Windows<sup>®</sup> 2000/2003 Setup loads the RAID controller drivers from the RAID driver disk. When prompted, press <Enter> to continue installation.
- 7. Setup then proceeds with the OS installation. Follow screen instructions to continue.

#### To an existing Windows® 2000/2003 Server OS

To install the RAID controller driver on an existing Windows® 2000/2003 Server OS:

- 1. Restart the computer, then log on with Administrator privileges.
- 2. Windows<sup>®</sup> automatically detects the RAID controller and displays a **New Hardware Found** window. Click **Cancel**.
- 3. Right-click the **My Computer** icon on the Windows<sup>®</sup> desktop , then select **Properties** from the menu.
- 4. Click the **Hardware** tab, then click the **Device Manager** button to display the list of devices installed in the system.



- 5. Right-click the RAID controller item, then select Properties.
- 6. Click the **Driver** tab, then click the **Update Driver** button.
- 7. The Upgrade Device Driver Wizard window appears. Click Next.
- 8. Insert the RAID driver disk you created earlier to the floppy disk drive.
- 9. Select the option **"Search for a suitable driver for my device** (recommended)", then click Next.
- 10. The wizard searches the RAID controller drivers. When found, click **Next** to install the drivers.



11. Click **Finish** after the driver installation is done.



To verify the RAID controller driver installation:

- 1. Right-click the  $My\ Computer\ icon\ on\ the\ Windows^{\circledast}\ desktop\ ,\ then\ select\ Properties\ from\ the\ menu.$
- 2. Click the **Hardware** tab, then click the **Device Manager** button.
- 3. Click the "+" sign before the item SCSI and RAID controllers.



When you installed the LSI logic embedded SATA RAID driver, the LSI Logic Embedded SATA RAID item should appear.

N 57 58 1	
🚨 Device Hanager	. O ×
Action Yow + + 111 🛅 😭 😚 🕺 😹 🐹 🗙	
TH A CE GEMAGERTS	
8 🔜 Ciripular	
8 - Dik dives	
😸 🚍 Disalay adapters	
In the provider controllers	
iii iiii Poppy del dives	
8 Ga Human Eventace Devices	
S-42 XE ATA/ATAK controlers	
Step(1) 829004 (3047 Fanily) Ultra ATA Storage Controllers - 270F	
- G Pinay D( Chanel	
Secondary DE Overnel	
8 😂 teyboards	
8 S Not and other porting devices	
3 👷 Modors	
3 🖬 Netvok adatera	
B - P Puris (COMB UPT)	
B G School and considers	
CO DON'N COSTON/ON WAY AND CONTROLS	
<ul> <li>E. Sound, read and game on orders</li> </ul>	
* Z YICKI OVICIS	
a ag umesa sera tus contoes	

When you installed the Intel<sup>®</sup> ICH7R SATA RAID controller driver, the Intel(R) 82801GR/GH SATA RAID Controller item should appear.

- 4. Right-click the RAID controller driver item, then select **Properties** from the menu.
- 5. Click the **Driver** tab, then click the **Driver Details** button to display the RAID controller drivers.
- 6. Click **OK** when finished.

### Red Hat® Enterprise ver. 3.0

To install the RAID controller driver when installing Red Hat  $^{\rm \tiny B}$  Enterprise ver. 3.0 OS:

1. Boot the system from the Red Hat<sup>®</sup> Installation CD.



2. At the boot:, type linux dd , then press <Enter>.

	To disable hardware probing, type: linux moprobe GENTER).
	To test the install media you are using, type: linux mediacheck GMIED
	To enable record node, type: linux rescae (DHTER). Press (P5) for more information about rescae mode.
	If you have a driver disk, type: linux dd <dnter>.</dnter>
	To prompt for the install method being used on a CD-RDH install, type linux asimethod <pre>dDMTER&gt;.</pre>
	If you have an installer update disk, type: lines updates CDNED.
	To test the memory in your system type: mentestE6 (ENTER). (This option is only evailable when booting from CD.)
00	Meini (12-Apriana) (13-General) (14-April (175-April)) 1: Linux dd_

3. Select **Yes** using the <Tab> key when asked if you have the driver disk. Press <Enter>



4. Select **fdO** using the <Tab> key when asked to select the driver disk source. Press <Tab> to move the cursor to **OK**, then press <Enter>.



5. When prompted, insert the Red Hat<sup>®</sup> Enterprise ver. 3.0 RAID driver disk to the floppy disk drive, select **OK**, then press <Enter>.



The drivers for the RAID controller are installed to the system.

6. When asked if you will load additional RAID controller drivers, select No, then press <Enter>.



# 6.2 LAN driver installation

This section provides instructions on how to install the Broadcom  $\ensuremath{^{\$}}$  Gigabit LAN controller drivers.

## 6.2.1 Windows® 2000/2003 Server

To install the Broadcom® Gigabit LAN controller driver on a Windows® 2000/2003 Server OS:

- 1. Restart the computer, then log on with Administrator privileges.
- Insert the motherboard/system support CD to the optical drive. The CD automatically displays the **Drivers** menu if Autorun is enabled in your computer.



- Windows<sup>®</sup> automatically detects the LAN controllers and displays a **New Hardware Found** window. Click **Cancel** to close this window.
- If Autorun is NOT enabled in your computer, browse the contents of the support CD to locate the file ASSETUP.EXE from the BIN folder. Double-click the ASSETUP.EXE to run the CD.
- 3. Click the Broadcom 5753 Driver option to begin installation.



4. Click **Next** when the InstallShield Wizard window appears. Follow screen instructions to continue installation.



## 6.2.2 Red Hat® Enterprise ver. 3.0

Follow these instructions when installing the Broadcom® Gigabit LAN controller base driver for the Red Hat® Enterprise ver. 3.0 operating system.

## Building the driver from the TAR file



Install first the Kernel Development tools before building the driver from the TAR file.

To build the driver from the TAR file:

- Create a directory and extract the TAR files: tar xvzf bcm5700-<version>.tar.gz
- Build the driver bcm5700.o as a loadable module for the running kernel: cd bcm5700-<version>/src make
- 3. Test the driver by loading it: insmod bcm5700.0
- 4. Install the driver and man page: make install
- 5. Refer to Red Hat distribution documentation to configure the network protocol and address.
# 6.3 VGA driver installation

This section provides instructions on how to install the ATI  $^{\mbox{\scriptsize B}}$  RAGE XL Video Graphics Adapter (VGA) driver.

#### 6.3.1 Windows® 2000 Server

You need to manually install the ATI  $^{\ensuremath{\$}}$  RAGE XL VGA driver on a Windows  $^{\ensuremath{\$}}$  2000 Server operating system.

To install the ATI® RAGE XL VGA driver:

- 1. Restart the computer, then log on with Administrator privileges.
- Insert the motherboard/system support CD to the optical drive. The support CD automatically displays the **Drivers** menu if Autorun is enabled in your computer.



Windows® automatically detects the LAN controller and displays a  $\mbox{New}$  Hardware Found window. Click Cancel to close this window.

 Click the item ATI Rage XL Display Driver from the Drivers menu.



4. The ATI Windows 2000 Driver window appears. Click Next. Follow screen instructions to complete installation.



# 6.3.2 Windows® 2003 Server

The Windows<sup>®</sup> 2003 Server operating system automatically recognizes the ATI<sup>®</sup> RAGE XL VGA driver during system installation. There is no need to install an additional driver(s) to support the onboard VGA.

#### Verifying the VGA driver installation

To verify if the ATI® RAGE XL VGA drivers are properly installed in a Windows® 2000/2003 Server operating system:

- 1. Right-click the **My Computer** icon on the Windows<sup>®</sup> desktop, then select **Properties** from the menu.
- 2. Click the Hardware tab, then click the Device Manager button.
- 3. Click the "+" sign before the item **Display adapters**.
  - The ATI Technologies Inc. RAGE XL PCI item should appear.



- 4. Right-click the **ATI Technologies Inc. RAGE XL PCI** item, then select **Properties** from the menu.
- Click the Driver tab, then click the Driver Details button to display the VGA drivers.
- 6. Click **OK** when finished.



#### 6.3.3 Red Hat® Enterprise ver. 3.0

The Red Hat® Enterprise ver. 3.0 operating system automatically recognizes the ATI® RAGE XL VGA driver during system installation. There is no need to install an additional driver(s) to support the onboard VGA.

# 6.4 Management applications and utilities installation

The support CD that came with the motherboard package contains the drivers, management applications, and utilities that you can install to avail all motherboard features.



The contents of the support CD are subject to change at any time without notice. Visit the ASUS website (www.asus.com) for updates.

## 6.4.1 Running the support CD

Place the support CD to the optical drive. The CD automatically displays the Drivers menu if Autorun is enabled in your computer.



If Autorun is NOT enabled in your computer, browse the contents of the support CD to locate the file ASSETUP.EXE from the BIN folder. Double-click the ASSETUP.EXE to run the CD.

#### 6.4.2 Drivers menu

The Drivers menu shows the available device drivers if the system detects installed devices. Install the necessary drivers to activate the devices.



The screen display and driver options vary under different operating system versions.



## 6.4.3 Management Software menu

The **Management Software** menu displays the available network and server monitoring applications. Click on an item to install.



## 6.4.4 Utilities menu

The **Utilities** menu displays the software applications and utilities that the motherboard supports. Click on an item to install.



#### 6.4.5 Contact information

Click the **Contact** tab to display the ASUS contact information. You can also find this information on the inside front cover of this user guide.

This appendix includes additional information that you may refer to when configuring the motherboard.





# A.1 Intel<sup>®</sup> EM64T



- The motherboard is fully compatible with Intel<sup>®</sup> Pentium<sup>®</sup> 4 LGA775 processors running on 32-bit operating systems.
- The motherboard comes with a BIOS file that supports EM64T. You can download the latest BIOS file from the ASUS website (www.asus. com/support/download/) if you need to update the BIOS file. See Chapter 4 for details.
- Visit www.intel.com for more information on the EM64T feature.
- Visit www.microsoft.com for more information on Windows<sup>®</sup> 64-bit OS.

#### Using the Intel® EM64T feature

To use the Intel® EM64T feature:

- 1. Install an Intel<sup>®</sup> Pentium<sup>®</sup> 4 CPU that supports the Intel<sup>®</sup> EM64T.
- 2. Install a 64-bit operating system (Windows<sup>®</sup> Server 2003 x64 Edition).
- 3. Install the 64-bit drivers for the motherboard components and devices from the support CD.
- 4. Install the 64-bit drivers for expansion cards or add-on devices, if any.



Refer to the expansion card or add-on device(s) documentation, or visit the related website, to verify if the card/device supports a 64-bit system.

# A.2 Enhanced Intel SpeedStep® Technology (EIST)



- The motherboard comes with a BIOS file that supports EIST. You can download the latest BIOS file from the ASUS website (www. asus.com/support/download/) if you need to update the BIOS. See Chapter 4 for details.
- Visit www.intel.com for more information on the EIST feature.

#### A.2.1 System requirements

Before using EIST, check your system if it meets the following requirements:

- Intel<sup>®</sup> Pentium<sup>®</sup> 4 processor with EIST support
- BIOS file with EIST support
- Operating system with EIST support (Windows<sup>®</sup> Server 2003 SP1/ Linux 2.6 kernel or later versions)

# A.2.2 Using the EIST

To use the EIST feature:

- 1. Turn on the computer, then enter the BIOS Setup.
- 2. Go to the **Advanced Menu**, highlight **CPU Configuration**, then press <Enter>.
- 3. Set the Intel(R) SpeedStep Technology item to [Automatic], then press <Enter>. See page 4-22 for details.
- 4. Press <F10> to save your changes and exit the BIOS setup.
- 5. After the computer restarts, right click on a blank space on the desktop, then select **Properties** from the pop-up menu.
- 6. When the **Display Properties** window appears, click the **Screen Saver** tab.
- 7. Click the **Power** button on the Monitor power section to open the **Power Options Properties** window.

- On the Power schemes section, click , then select any option <u>except</u> Home/Office Desktop or Always On.
- 9. Click Apply, then click OK.
- 10. Close the **Display Properties** window.

After you adjust the power scheme, the CPU internal frequency slightly decreases when the CPU loading is low.





The screen displays and procedures may vary depending on the operating system.

Di. Careal /in

# A.3 Intel<sup>®</sup> Hyper-Threading Technology



- The motherboard supports Intel<sup>®</sup> Pentium<sup>®</sup> 4 LGA775 processors with Hyper-Threading Technology.
- Hyper-Threading Technology is supported under Windows<sup>®</sup> 2003 Server and Linux 2.4.x (kernel) and later versions only. Under Linux, use the Hyper-Threading compiler to compile the code. If you are using any other operating systems, disable the Hyper-Threading Technology item in the BIOS to ensure system stability and performance.
- Make sure to enable the Hyper-Threading Technology item in BIOS before installing a supported operating system.
- For more information on Hyper-Threading Technology, visit www. intel.com/info/hyperthreading.

#### Using the Hyper-Threading Technology

To use the Hyper-Threading Technology:

- 1. Install an Intel<sup>®</sup> Pentium<sup>®</sup> 4 CPU that supports Hyper-Threading Technology.
- Power up the system and enter the BIOS Setup. Under the Advanced Menu, make sure that the item Hyper-Threading Technology is set to Enabled. See page 4-22 for details.

The BIOS item appears only if you installed a CPU that supports Hyper-Threading Techonology.

3. Restart the computer.

## A.4 Block diagrams

