
Benq

PE5120 Digital Projector Home Entertainment Series Quick Start Guide

Welcome

Shipping contents

Carefully unpack and verify that you have all of the items shown below. If any of these items are missing, please contact your place of purchase. The standard accressories may vary from country to country.

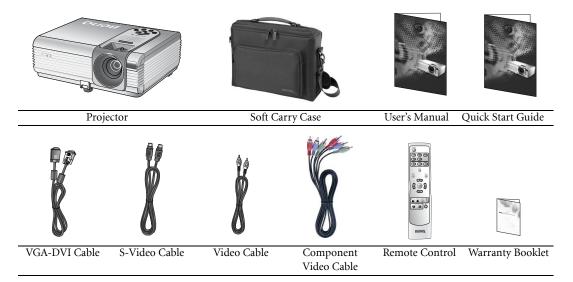

 
Choosing a location

Your projector is designed to be installed in one of four possible installation configurations:

- 1. Floor in front of screen;
- 2. Ceiling in front of screen;
- 3. Floor at rear of screen; or
- 4. Ceiling at rear of screen.

For quick setup and portability, it is recommended to position your projector in either the Floor front or Floor rear as shown below. For instructions to permanently mount the projector on the ceiling, please refer to the user's manual.

I. Floor front: The most common way to position the projector.




II. Floor rear: A special rear projection screen is required.




Connecting to video devices

Connecting video inputs


Connecting component-video devices

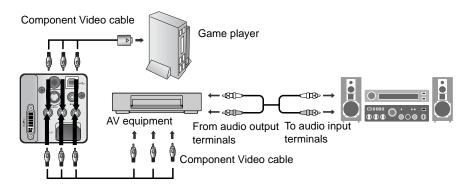

Connecting S-video or video devices

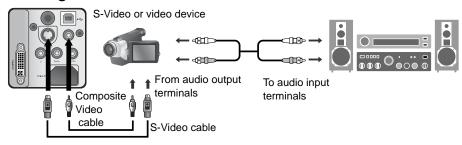

Connecting a computer

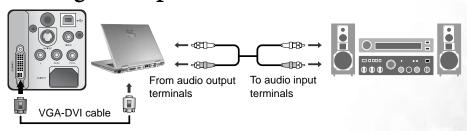

Starting up

- 1. Turn all of the connected equipment on.
- 2. Remove the lens cap.



3. Plug the supplied power cord into the AC inlet and the other end of the power cord into a wall socket and turn the wall switch on (where fitted).



4. Press and hold the **Power** button on the projector or remote control to turn the projector on.



5. The start up procedure takes about 30 seconds. Then, press **Source** on the projector or one of the Source buttons on the remote control to select your desired input signal. A message shows on the screen when the port is being searched.



• Adjusting the image


1. If you need to raise the image, tilt the projector up at the front by extending the adjuster legs. Push the quick release button to speed the operation.



2. Adjust the rear legs to balance the projector and have them sit flat without wobbling.



3. If the screen and the projector are not perpendicular to each other, the projected image becomes trapezoidal. Press the top keystone button (□) to reduce the upper part of the image. Or press the bottom Keystone button (□) to reduce the lower part until the image is square.

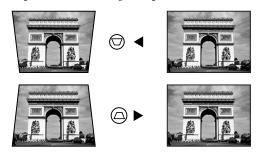


4. Rotate the Zoom ring to reduce or enlarge the image.





 5. Rotate the Focus ring to sharpen the image to a preferred quality.






Optimizing the image

The following steps are optional. You may not need to follow every step.

- 1. Change the image ratio.
- 2. Pess Auto to re-adjust the values of frequency and phase to provide the best image quality.
- 3. Select a preset mode.
- 4. Adjust brightness and contrast settings for a computer image in the **Picture** menu. Or adjust brightness, contrast, tint, and color settings for a video image.

For more advanced settings, refer to the user's manual.

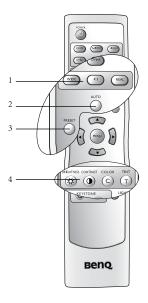

Turning the projector off

- Press Power on the projector or remote control.
 A confirmation message displays. Press Power a second time to turn the projector off.
 The Power indication light flashes orange and the lamp shuts down, the fans will continue to run approximately 110 seconds to cool down the projector.
- 2. Disconnect the power cord from the wall socket and the projetor..





For more information on storing and transporting the projector, refer to the user's manual.

Need more help?



Refer to the user's manual for more information. If the manual does not help you resolve your problem, please call your place of purchase or visit our website at www.BenQ.com for further assistance.