

TOUCH DIAMOND²

Quick Start Guide

Please Read Before Proceeding

**THE BATTERY IS NOT CHARGED WHEN YOU TAKE IT OUT OF THE BOX.
DO NOT REMOVE THE BATTERY PACK WHEN THE DEVICE IS CHARGING.
YOUR WARRANTY IS INVALIDATED IF YOU DISASSEMBLE OR ATTEMPT
TO DISASSEMBLE THE DEVICE.**

PRIVACY RESTRICTIONS

Some countries require full disclosure of recorded telephone conversations, and stipulate that you must inform the person with whom you are speaking that the conversation is being recorded. Always obey the relevant laws and regulations of your country when using the recording feature of your PDA Phone.

LIMITATION OF DAMAGES

To the maximum extent permitted by applicable law, in no event shall HTC or its providers be liable to user or any third party for any indirect, special, consequential, incidental or punitive damages of any kind in contract or tort, including, but not limited to, injury, loss of revenue, loss of goodwill, loss of business opportunity, loss of date, and/or loss of profits arising out of, or related to, in any manner, or the delivery, performance or nonperformance of obligations, or use of the weather information, stock data, data or documentation hereunder regardless of the foreseeability thereof.

FOR MORE INFORMATION

For health, safety, and regulatory information, see “Safety and Other Notices”.

Contents

1. Welcome to the HTC Touch Diamond2 Quick Start Guide	5
2. Inside the Box	5
3. Getting to Know the HTC Touch Diamond2	6
4. Installing the SIM Card, Battery, and Storage Card	7
5. Charging the Battery	9
6. Starting Up	9
7. The Home Screen	10
8. Lock Screen	11
9. Using the Start Screen	13
10. Making Your First Call	14
11. Making a Video Call	15
12. Entering Information	16
13. Basic Settings	17
14. Adding Favorite Contacts	20
15. Viewing Conversations	22
16. Sending a Text Message	23
17. Sending an MMS Message	23

18. Setting Up an Internet Email Account	24
19. Using Wi-Fi	25
20. Mobile Internet	26
21. Bluetooth.....	27
22. Keeping Track of Appointments	28
23. Capturing Photos and Recording Videos.....	29
24. Viewing Photos and Videos	30
25. Connecting Your Phone to a Computer	31
26. Synchronizing Your Phone with Your Computer.....	32
27. Copying Files to the Storage Card.....	33
28. Synchronizing Music Files	33
29. Listening to Music on Your Phone.....	34
30. Resetting Your Phone.....	35
31. Safety and Other Notices.....	36

1. Welcome to the HTC Touch Diamond2 Quick Start Guide

Congratulations on your purchase of the HTC Touch Diamond2.

This **Quick Start Guide** will help you get started with your Windows Mobile® 6.5 Professional powered Touch Phone. We've arranged this Quick Start Guide in a way that it starts from when you open the box and then it walks you through the features we feel that you want to know or use right away when you turn on your phone for the first time.

 
For a more complete guide in using your phone, please refer to the User Manual PDF which can be downloaded from the HTC website at <http://www.htc.com/au/support.aspx>.

2. Inside the Box

You should find the following items inside the box.

- HTC Touch Diamond2 phone
- Battery
- AC adapter
- Wired stereo headset
- USB sync cable
- Screen protector
- Quick Start Guide
- Pouch
- Extra stylus

3. Getting to Know the HTC Touch Diamond2

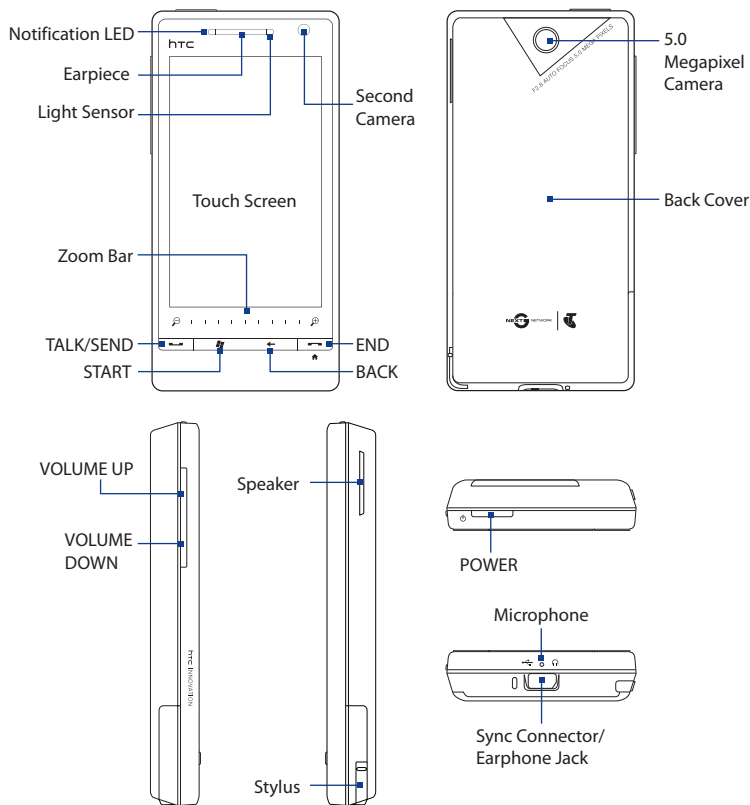


4. Installing the SIM Card, Battery, and Storage Card

Make sure your phone is turned off before installing the SIM card and battery. You also need to remove the back cover before you can install these components.


To remove the back cover

 1. Make sure your phone is turned off.
2. Firmly hold the phone with both hands and the front panel facing down.
3. Push the back cover up with your thumbs until it disengages from the phone and then slide it up to remove.

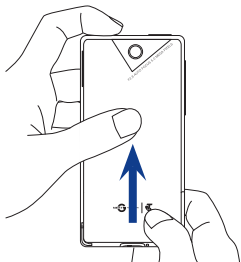


To install the SIM card

 1. Remove the battery if it is installed.
2. Locate the SIM card slot, then insert the SIM card with its gold contacts facing down and its cut-off corner facing out the card slot.
3. Slide the SIM card completely into the slot.

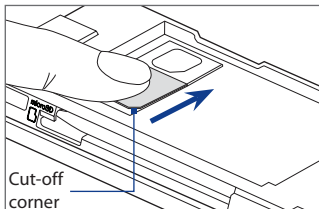

To install the battery

 
1. Align the battery's exposed copper contacts with the battery connectors at the bottom part of the battery compartment.
2. Insert the contacts side of the battery first and then gently push the battery into place.
3. Replace the back cover.

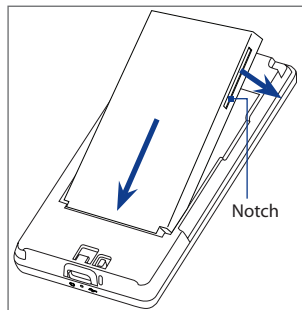

To install a microSD™ card

Locate the storage card slot, then insert the microSD card into the slot with its gold contacts facing down until it clicks into place.

 Note To remove the microSD card, press it to eject it from the slot.

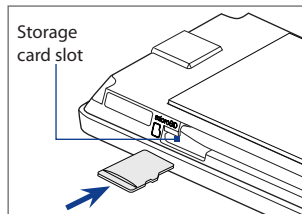

For information on how to remove or replace these components on your phone, refer to the "Getting Started" chapter in the User Manual PDF.

5. Charging the Battery

New batteries are shipped partially charged. Before you start using your phone, it is recommended that you install and charge the battery.

To charge the battery

1. Connect the USB connector of the AC adapter to the sync connector at the bottom of your phone.
2. Plug in the AC adapter to an electrical outlet to start charging the battery.

6. Starting Up

After installing the battery and charging the battery, you can now power on and start using your phone.

To turn on the power

Press the POWER button.

On first time use, the phone installs customized settings, and then displays the **SIM Card Changed** screen. Follow the on-screen instructions to import the contacts to your device.

To turn off the power

1. If the display is off, press the END/POWER button to turn the display back on.
2. Press and hold the END/POWER button for a few seconds.
3. Tap **Yes** when prompted.

7. The Home Screen

The Home screen of your phone allows finger-touch access to the most widely-used functions, such as People, Messages, Internet, and more. The Home screen has the following tabs::



To switch between the tabs of the Home screen

Do any of the following:

- Tap the desired tab on the Home screen.
- Press and hold your finger on the active tab, and then slide your finger right or left over the tabs. Release when you have selected the desired tab.
- Swipe left across the screen to move to the next tab, and swipe right across the screen to move to the previous tab.



The following sections in this Quick Start Guide will show you how to use some of the Home screen tabs. For complete information about using the Home screen, refer to the User Manual PDF.

8. Lock Screen

The Lock screen is displayed whenever your phone is locked. You can lock your phone to prevent accidental button or LCD display presses when the phone is in your bag or pocket. When your phone is locked, you are still notified of new messages, missed calls, and upcoming appointments. You can also receive a call and adjust the phone volume when the phone is locked.


Locking and unlocking your phone

The phone is locked when the time out for a phone password has elapsed. You can also lock the phone manually.

To lock your phone

Press and hold the END button.

To unlock your phone

Slide the **Lock** button () left or right.



If you have locked the phone with a password, you will be prompted for the password when you unlock the phone.



Checking notifications when the phone is locked

You are notified of missed calls, new email and text messages, and upcoming appointments even when the phone is locked. The **Lock** button displays the number of notifications.

To view notifications



1. On the Lock screen, tap the **Lock** button (). Notification buttons representing each type of received information, such as missed calls, new email, and new text messages, are then displayed below the **Lock** button.
2. Slide a notification button right or left to view the respective information. For instance, slide the Missed Call button () to access the Call History and view the missed calls.



Receiving a call when the phone is locked

You can receive and answer calls even when your phone is locked. After you end the call, your phone remains locked and the Lock screen is displayed. You need to unlock to use your phone.

9. Using the Start Screen

The Start screen gives you one-touch access to the programs and settings of your phone. To open the Start screen, tap **Start** () at the top left corner of the screen, or press the START button ().

On the Start screen:

- Swipe your finger up or down to scroll through the screen.
- Tap the **Today** icon to return to the Home screen. See “Home” in Chapter 3 for details.
- Tap a program icon to open the corresponding program.
- Tap the **Settings** icon to access the settings of your phone.
- Tap **Lock** at the bottom-left corner of the Start screen to lock your phone. See “Lock Screen” for details.
- Press the START button to close the Start screen.



To move an icon to the top of the Start screen

You can move often used icons to the top of the Start screen for easy access.



1. Press and hold the icon that you want to move.
2. Tap **Move to Top**.

The icon is moved to the top of the Start screen.

To return an icon to its original location, press and hold the icon and then tap **Move Down**.

10. Making Your First Call

 
1. On the Home screen, tap **Phone**.
2. Tap the keys on the keypad to enter the phone number.

Tip If you tapped a wrong number, tap  to erase each subsequent digit of a number. To erase the entire number, press and hold .

3. Tap **Talk** to place the call.

Tip When in a call, use the VOLUME UP/DOWN buttons on the side of the phone to adjust the phone volume.


4. When a call is in progress, tap **End Call** or press END to hang up.

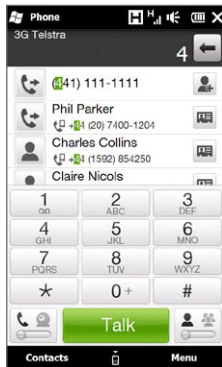

Accepting or rejecting an incoming call


To answer a call

 Press the TALK/SEND button, or fully slide the center button of the **Answer/Ignore** bar to the left.



To reject a call

 Press the END/POWER button, or fully slide the center button of the **Answer/Ignore** bar to the right.



To mute the ring without rejecting the call

Tap **Mute Ring** or press the VOLUME DOWN button.

To reject the call and automatically send a preset text message to the caller

When you receive a phone call, tap **Send Text** to reject the call and automatically send a preset text message to the caller.

Note To change the automatic text message that is sent to the caller when you reject the call, on the Phone screen, tap **Menu > Options > Advanced** tab.

11. Making a Video Call

 
On the Phone screen, tap the phone number to call, tap , then tap the **Video Call** button.

- Notes**
- The other party's image will appear on the screen about 3 to 5 seconds after a connection is established, depending on the signal strength. The streaming images quality may also be influenced by the signal.
 - You need to use a 3G-enabled SIM card and activate the video calling service on your call plan to make video calls.

Changing the video call settings

On the Phone screen, or on the screen of the ongoing video call, tap **Menu > Video Call Options** and set the general video call and services options.

Note While on a video call, you can change certain settings such as the size and brightness of the image, and the camera to use. Refer to the User Manual for details.

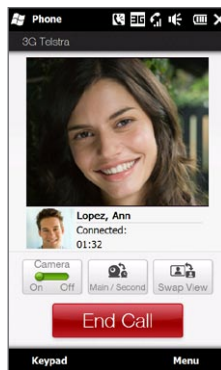


12. Entering Information

When you start a program or select a field that allows you to enter text or numbers, a keyboard icon will be displayed at the bottom center of the screen to indicate that the on-screen keyboard is available for use. Tap the keyboard icon to display or hide the on-screen keyboard.

Tap the **Input Selector** arrow that appears next to the keyboard icon to open a menu from which you can select different keyboard layouts and customize text input settings. You can choose from these keyboard layouts: **Full QWERTY**, **Compact QWERTY**, and **Phone Keypad**.

 Note The available options on the input panel vary according to the region in which you purchased your phone.

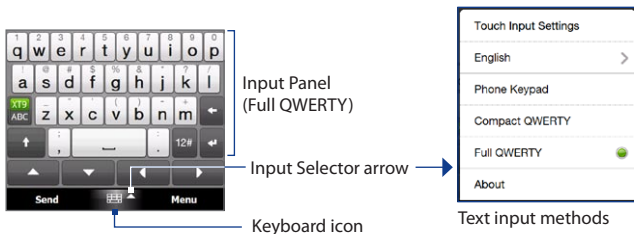

To enter text, simply tap the keys on the onscreen keyboard. Depending on the keyboard layout selected, you may need to tap the same key more than once to select the desired character.

For more information about using the different input methods, refer to the "Entering Text" chapter in the User Manual PDF.

13. Basic Settings

Customize your phone settings to suit your personal needs.

Ringtone

1. Tap **Start > Settings**, and then tap **Sound**.
2. Tap **Ringtone**, select the desired ringtone in the list, and then tap **Done**.

Phone profile

A profile is a preset that determines how your phone will alert you when there are incoming phone calls. To select a profile:

1. Tap **Start > Settings**, and then tap **Sound**.
2. Under **Profiles**, choose one of the following: **Normal**, **Vibrate**, **Silent**, or **Automatic**.


- Notes**
- **Automatic** sets your phone to vibrate only when you receive phone calls during scheduled appointments in your Calendar.
 - If you have set an alarm and you select the **Vibrate** or **Silent** profile, you will not hear the alarm sound when the alarm goes off.

Wallpaper

You can change the background image of the **Home** tab.

1. Tap **Start > Settings**, and then tap **Wallpaper**. The Album program opens.
2. Tap an image to set it as the Home tab wallpaper. If the image you want to use is not displayed, tap **Albums** and navigate to the folder where the image is located.

Alarm clock

1. On the Home tab, tap the clock and then tap the **Alarm** tab (). You can set up to three alarms on this tab.
2. Tap an alarm time.
3. On the Set Alarm screen, adjust the alarm time (hour and minutes), then tap the day of the week for the alarm.

Tip Select multiple days by tapping each desired day.
Tap a selected day to exclude it from the alarm.

 
4. Enter the alarm description, select the alarm ringtone, and then choose whether you want the phone to vibrate when the alarm goes off.
5. Tap **Done**.



Phone lock

Enabling phone lock requires you to enter a password to unlock your phone after it has been left idle for a set period of time.

1. Tap **Start > Settings**, and then tap **All Settings**.
2. On the Personal tab, tap **Lock**.
3. Select the **Prompt if device unused for** check box and choose the time to elapse before your phone requires password entry.
4. Select the **Password** type.
5. Enter and confirm the password and then tap **OK**.

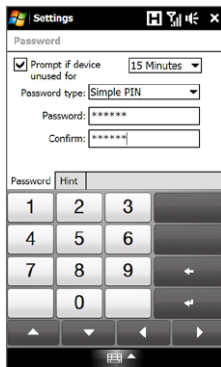

SIM card PIN

Enabling the SIM card PIN requires you to enter a PIN number first before you can use the phone features of the phone.

1. Tap **Start > Settings**, and then tap **Communications**.
2. On the **Comm Manager** screen, tap **Phone > PIN Code**.
3. Enter the PIN, tap **OK**, and then tap **OK** on the dialog box.

- Tips**
- To change the PIN, tap **Change PIN** on the Phone Settings screen.
 - Emergency calls can be placed at any time, without requiring a PIN.

Backlight and battery saving settings

Conserve battery power by adjusting backlight and battery saving settings.

1. Tap **Start > Settings**, and then tap **All Settings**.
2. On the **System** tab, tap **Power**.
3. On the **Backlight** tab, clear the **Auto adjust backlight** check box, and then adjust the brightness for battery power and for AC power by dragging the battery power and external power sliders.
4. On the **Advanced** tab, set when you want the backlight and phone screen to turn off when using battery and external power.
5. Tap **OK**.

For more information about the settings on your phone to the “Managing Your Phone” chapter in the User Manual PDF.

14. Adding Favorite Contacts

On the Home screen's **People** tab, you can add up to 15 favorite contacts. This allows you to quickly make calls, send text messages, and send email messages to contacts who you most frequently communicate with.

 
Note The first time you access the People tab, **My Contact Card** opens and lets you enter and save your contact information. My Contact Card enables you to easily share your contact information with family and friends. Follow the onscreen instructions to complete My Contact Card.

To add contacts to your phone

Before you can add favorite contacts to the People tab, you need to add or import contacts to your phone's contacts list.

1. On the Home screen, slide to the People tab, tap **All People**, and then tap **New** on top of the list.
2. Enter the contact information, and then tap **OK** to return to the Contacts tab of the People screen.

Tip If you want to import SIM contacts to your phone, tap **Start > SIM Manager**, tap **Menu > Select All**, and then tap **Menu > Save to Contacts**. (Copying SIM contacts to your phone results in duplicate contacts when you view them on the Contacts tab of the People screen).

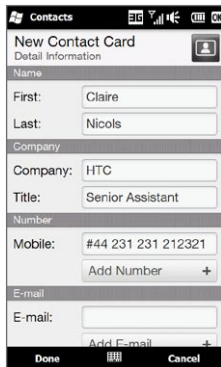A screenshot of the 'New Contact Card' form in the Contacts app. The form is titled 'New Contact Card' with a subtitle 'Detail Information' and a small contact icon in the top right corner. It contains several input fields: 'First:' with 'Claire' entered, 'Last:' with 'Nicols' entered, 'Company:' with 'HTC' entered, 'Title:' with 'Senior Assistant' entered, 'Number:' with 'Mobile: #44 231 231 212321' entered, and 'E-mail:' with an empty field. There are also buttons for 'Add Number' and 'Add E-mail'. At the bottom, there are 'Done', 'Cancel', and a central icon button.

 
To add favorite contacts to the People tab

1. On the Home screen, slide your finger to the **People** tab.
2. Tap one of the **plus (+)** icons, or tap **Add Favorite**.
3. On the Select a Contact screen, tap the name of the desired contact.
4. Select a phone number or email address to associate to the favorite contact.


Note If there is no picture assigned to the contact, the next screen allows you to select or take a picture of the contact.

To select a favorite contact on the People tab

- To flip through the contact pictures one at a time, swipe your finger upward or downward the screen.
- On the picture strip at the right side of the People tab:
 - Tap the picture of the desired favorite contact; or
 - Press and hold on the currently selected contact picture at the right side of the screen, and then slide upward or downward the picture strip until the desired favorite contact is selected.

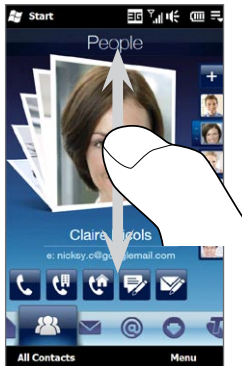

Swiping upward/downward on the screen

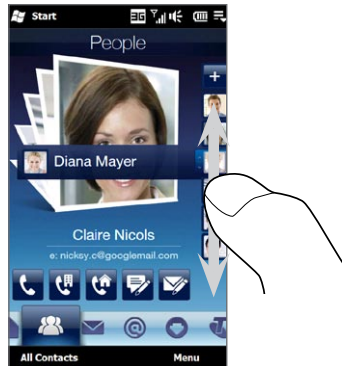 

Using the picture strip

To call or send a message to a favorite contact


1. On the Home screen, slide to the People tab.
2. Swipe your finger up or down the screen to scroll through the favorite contacts.
3. Tap an icon below the contact name to call or to compose and send a text or an email message to the contact.

Note The icons shown depend on available contact information. For example, (📞) will be shown if the contact's home phone is specified.


15. Viewing Conversations

Your Touch Diamond2 organizes all text messages, email messages, and calls that you exchanged with a favorite contact in a convenient interface.


 
On the Home screen, slide to the **People** tab, select the contact, and then tap the contact picture to open the Contact Details screen. Tap the tabs to view the contact details and all your conversations with the contact.

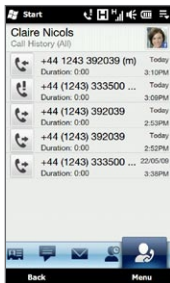


View all exchanged calls and call back.

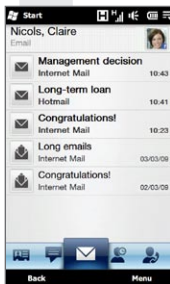 

  View all received email messages and reply.

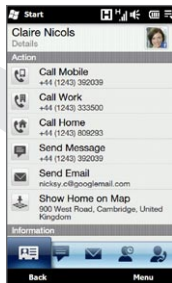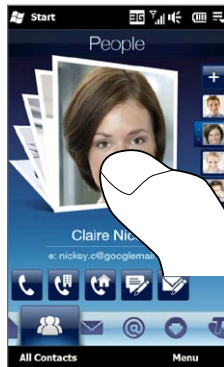

 
Communicate with the contact or edit the contact details.

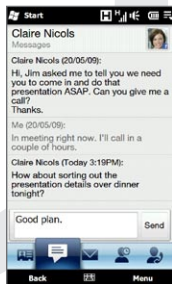

View all exchanged text messages and quickly send a reply.

16. Sending a Text Message

Easily create and send SMS text messages from your phone.

1. On the Home screen, slide to the **Messages** tab and tap .
2. In the **To** field, enter the mobile phone number of the person you want to send the message to, or tap **To** to select a contact from your contacts list.
3. Compose your message and then tap **Send**.

For more information about composing and sending text messages, refer to the “Exchanging Messages” chapter in the User Manual PDF.

17. Sending an MMS Message

Create and send multimedia messages that contain pictures, videos, and audio clips.

1. Tap **Start > Text**.
2. Tap **Menu > New > MMS**, and then tap **Custom**.
3. Enter the recipient's mobile number or email address in the **To** field and enter the message **Subject**.
4. Fill in the MMS message slide by tapping **Insert picture/video**, **Insert text here**, and **Insert audio**.
5. When finished, tap **Send**.

For more information about composing and sending multimedia messages, refer to the “Exchanging Messages” chapter in the User Manual PDF.

18. Setting Up an Internet Email Account

Set up your personal email account such as Yahoo!® Mail Plus or AOL® on your phone.


1. On the Home screen, slide to the **Email** tab.
2. Tap **Menu > Accounts > New Account** at the bottom-right of the screen.
3. Enter your email address and password, and then tap **Next**.
4. Enter your name and the account display name, and then tap **Next**.

Mail Setup then searches for the email provider settings on your phone.

If the settings are not found on your phone, you will be prompted to enter the email account settings manually. Obtain the email account settings from your email provider.

5. Tap the **Automatic Send/Receive** time, and then choose how frequently you want email messages to be automatically sent and downloaded on your phone.
6. Select or clear an advanced setting according to your preference, and then tap **Done**.

To create and send an email message

1. On the right side of the Email tab, tap an email account that you want to use.
2. Tap  to create a new email.
3. Enter the email address of the recipient and the subject line.
4. Enter your email message, and then tap **Send**.

For more information about composing and sending email messages, refer to the “Exchanging Messages” chapter in the User Manual PDF.



 
19. Using Wi-Fi

If you have access to a wireless network, you can use Wi-Fi to connect your phone to the Internet.

To turn Wi-Fi on and connect to a Wi-Fi network

1. Tap **Start > Settings**, and then tap **Communications**.
2. Tap **Wi-Fi**. Detected wireless networks are displayed on the screen.
3. Tap the desired Wi-Fi network to connect to.


- If you selected an open (unsecured) network, you are automatically connected to the network.
- If you selected a secured network, enter the security key, and then tap **Done**. You are then connected to the network.

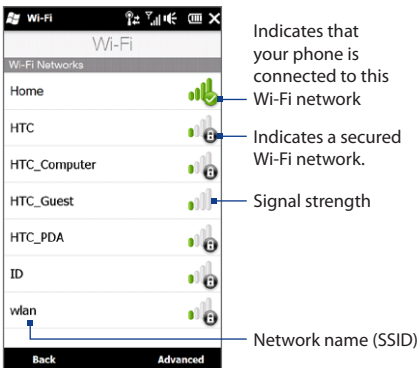

20. Mobile Internet

Experience desktop-like web surfing when using **Opera Mobile** to browse the Internet. You can also watch **YouTube** videos right on your phone.

Opera Mobile

1. On the Home screen, slide to the **Internet and Search** tab, and then tap **Launch Browser** to launch Opera Mobile.
2. Tap the address bar, enter the desired web site address, and then tap .
3. To zoom in on a web page, double-tap the screen or slide your finger right on the zoom bar.

For more information about using Opera Mobile, refer to the “Internet” chapter on the User Manual PDF.



YouTube™

With the YouTube application, you can search, watch, and bookmark YouTube videos.

To open YouTube and watch a video


1. Tap **Start > YouTube**.
2. Tap a video on the screen to watch it.
3. While watching a video, tap the screen to open the playback controls.

For more information about YouTube, refer to the “Internet” chapter on the User Manual PDF.



21. Bluetooth

To connect a Bluetooth hands-free or stereo headset

1. Make sure that both your phone and the Bluetooth headset are turned on and within close range, and that the headset is visible. Refer to the Bluetooth headset documentation on how to set the headset in visible mode.
2. Tap **Start > Settings**, tap **Communications**, and then tap **Bluetooth**.
3. Tap **Add new Bluetooth headset**. The phone scans for Bluetooth headsets within range.
4. Tap the name of the Bluetooth headset in the list to automatically pair it with your phone. When connected,  appears at the right side of the Bluetooth headset name.

Note If automatic pairing fails, manually enter the headset passcode when prompted.

If the Bluetooth stereo headset disconnects, turn the stereo headset on, repeat steps 1 and 2, then tap the stereo headset name under the Previously Paired Headsets section to reconnect.

To connect your phone with other Bluetooth devices

1. Make sure that both your phone and the other Bluetooth device are turned on and within close range, and that the other device is visible. Refer to the Bluetooth device documentation on how to set it to visible mode.
2. Tap **Start > Settings**, and then tap **Menu > Bluetooth Devices > Devices** tab.
3. Tap **Add new device**. Your phone then displays the names of other Bluetooth devices within range.
4. Tap the device name in the box, then tap **Next**.
5. Specify a passcode to establish a secure connection. The passcode can be 1 up to 16 characters. Tap **Next**.
6. Wait for the paired device to accept the partnership. The receiving party needs to enter the same passcode that you specified.
7. The name of the paired device is then displayed. You may edit and enter a new name for that device.
8. Select the check boxes of services that you want to use from the paired device, and then tap **Finish**.

For more information about using Bluetooth, refer to the “Bluetooth” chapter in the User Manual PDF.

22. Keeping Track of Appointments

Use the **Calendar** tab to create, edit, send, and view your appointments.

To create an appointment

1. On the Home screen, slide your finger to the **Calendar** tab.
2. If you are creating an appointment for the current date, tap **Menu > New**. Otherwise, tap another date on the calendar, and then tap **New Appointment**.
3. Enter a name for the appointment, then specify the location.
4. If there is a time frame for the appointment, set the start and end dates and times. If it is a special occasion such as a birthday or a whole-day event, set the **All Day** option to **Yes**.
5. When finished, tap **OK** to return to the Calendar tab.

Tip Your upcoming appointments also appear on the Home tab.

To view and manage your appointments

On the Calendar tab, dates with appointments are indicated by a triangle (■) at the upper-left corner of the date box.

 
1. Tap a date on the calendar to switch to day view. The screen displays all your appointments and the weather information for that day, if available.
2. Tap an appointment to view its details. On the appointment details screen, tap **Menu** to edit, send, or delete the appointment.
3. Tap **OK** to return to the day view.

For more information about using the Calendar tab, refer to the “Using the Home Screen” chapter in the User Manual PDF.





23. Capturing Photos and Recording Videos

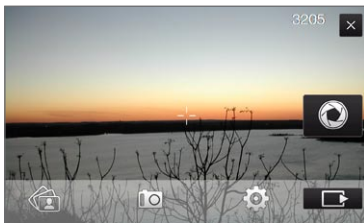

Use the built-in 5.0 megapixel camera to capture photos and record videos.



To take a photo

1. On the Home screen, slide to the **Photos and Videos** tab and then tap the camera icon ().
2. Aim the phone at the subject.
3. Tap the Virtual Camera button  to activate auto-focus. When focus is set, the camera automatically takes the shot.

To shoot video

1. On the Home screen, slide to the **Photos and Videos** tab and then tap the video icon ().
2. Aim the phone at the subject.
3. Tap the Virtual Camera button  to activate auto-focus. When focus is set, the camera automatically starts capturing video. To stop capturing video, tap the Virtual Camera button again.

To learn more about the other capture modes and functions of the Camera, refer to the “Experiencing Multimedia” chapter in the User Manual PDF.

24. Viewing Photos and Videos

 
After capturing photos and video clips with the camera, you can visually browse through them on the **Photos and Videos** tab of the Home screen and view them in full screen.

Browsing through photos and videos

1. On the Home screen, slide to the Photos and Videos tab.
2. Flip through your photos and videos by swiping your finger upward or downward in the center of the screen.
3. Tap a photo or video to open Album and view the media file in full screen.

Viewing photos in full screen

While in Album, use finger gestures to go to the next/previous media file, or the zoom bar to zoom in/out on a photo.

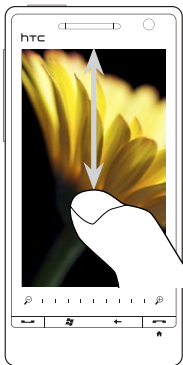

Go to the next or previous media file.



Zoom in on a photo using the zoom bar.

 


Zoom out on a photo using the zoom bar.

For information about using Album, refer to the “Experiencing Multimedia” chapter in the User Manual PDF.

25. Connecting Your Phone to a Computer

Whenever you connect your phone to the computer with the USB cable, the Connect to PC screen displays and prompts you to choose the type of connection you want to use.

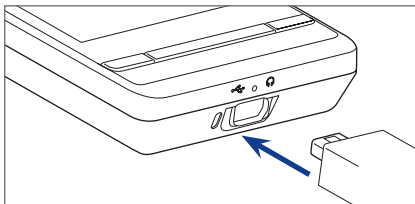

ActiveSync

Select this mode when you need to sync information and files between your phone and your computer. For more information about synchronizing data, see “Synchronizing Your Phone with Your Computer”.

Disk Drive

This mode is available for selection only when there is a microSD storage card installed on your phone. Select this mode when you want to quickly copy files between your phone's storage card and your computer. see “Copying Files to the Storage Card”.

Internet Sharing

When you do not have Internet access on your notebook or desktop computer, you can select this mode to use your phone as a modem for your computer. For more information about using Internet Sharing, see the “Internet” chapter in the User Manual PDF.

26. Synchronizing Your Phone with Your Computer

Set up synchronization software on your computer

On a Windows XP computer, you need to use **Microsoft ActiveSync® 4.5** or later. On a Windows Vista® computer, you need to use **Microsoft Windows Mobile® Device Center**.

If you do not have the software on your computer, go to the following website for information on downloading and installing Microsoft ActiveSync or Microsoft Windows Mobile Device Center to your computer: <http://www.windowsmobile.com/getstarted>.

To sync your phone with a Windows XP computer

1. Connect your phone to your computer using the supplied USB cable. The Synchronization Setup Wizard automatically starts and guides you to create a synchronization partnership. Click **Next**.
2. Clear the **Synchronize directly with a server running Microsoft Exchange** check box, and then click **Next**.
3. Select the information you want to sync, and then click **Next**.
4. Select whether or not to allow wireless data connections on your phone while it is connected to the computer, and then click **Next**.
5. Click **Finish**.

To sync your phone with a Windows Vista computer

1. Connect your phone to your computer using the supplied USB cable. Windows Mobile Device Center opens. On the screen, click **Set up your device**.
2. Select the information you want to sync and click **Next**.
3. Enter the name for your phone, and then click **Set Up**.

For more information on the types of information that can be synchronized between your phone and a computer, refer to the “Synchronizing Information” chapter in the User Manual PDF.

27. Copying Files to the Storage Card

Install a microSD™ card to your phone and have additional storage for files and programs. See “To install a microSD™ card” earlier in this Quick Start Guide for details.

To copy files from the computer to the storage card

1. Make sure that the storage card is properly installed on your phone.
2. Connect the phone to your computer using the USB cable, select **Disk Drive** on the Connect to PC screen, and then tap **Done**.
3. On your computer, navigate to the removable disk drive, and then start copying files to the storage card.
4. When finished, disconnect the phone from your computer.

If you want to copy media files such as music and videos from your computer to your phone, it is recommended that you use Windows Media Player to sync media files. See the next section for more information.

 
28. Synchronizing Music Files

Sync music files from your computer to your phone so you can listen to them while on the go.

1. Connect your phone to your computer, and then open Windows Media® Player on your computer.
2. On the **Device Setup** dialog box, enter a name for your phone and click **Finish**.
3. On the left panel of Windows Media® Player, right-click the name of your phone and click **Set Up Sync**.

Note You can also sync your storage card if you have one installed on your phone. To sync, right-click **Storage Card**.


4. Select the music playlists that you want to sync between your computer and your phone and then click **Add**.
5. Click **Finish**.

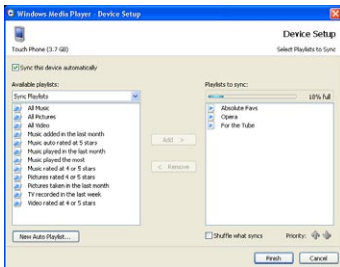


29. Listening to Music on Your Phone

After synchronizing music files to your phone, you can use the **Music** tab on the Home screen to play back music on your phone.

To listen to music

1. On the Home screen, slide to the Music tab.
2. Browse through albums or music tracks within an album by swiping up or down on the screen, and then tap  to start playing back the displayed song.

 For more information about using the Music tab, refer to the “Using the Home Screen” chapter in the User Manual PDF.

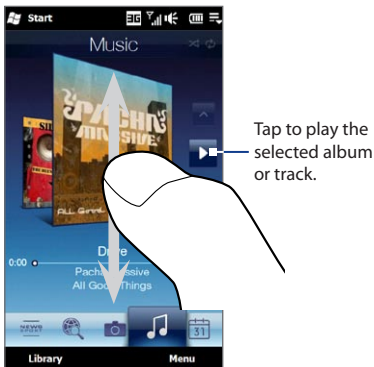


30. Resetting Your Phone

If you experience some sluggishness with your phone, you can perform a reset to shut down all programs and restart your phone.

To perform a soft reset

1. Pull out the stylus, then remove the back cover.
2. Use the stylus tip to press the RESET button (red) located at the opening of the stylus bay.

 Your phone restarts and displays the Home screen.

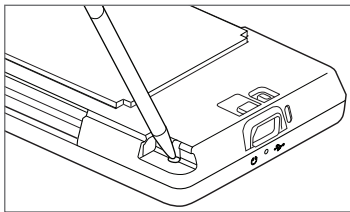

You can also perform a hard reset. **After a hard reset, the phone is restored to its default settings—the way it was when you first purchased your phone and turned it on.** Only Windows Mobile® software and other pre-installed programs will remain after a hard reset.

To learn how to perform a hard reset, refer to the “Managing Your Phone” chapter in the User Manual PDF.

31. Safety and Other Notices

Disclaimers

THE WEATHER INFORMATION, STOCK DATA, DATA, AND DOCUMENTATION ARE PROVIDED "AS IS" AND WITHOUT WARRANTY OR TECHNICAL SUPPORT OF ANY KIND FROM HTC. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, HTC AND ITS AFFILIATES expressly disclaim any and all representations and warranties, express or implied, arising by law or otherwise, regarding the Weather Information, Stock Data, Data, Documentation, or any other Products and services, including without limitation any express or implied warranty of merchantability, express or implied warranty of fitness for a particular purpose, non-infringement, quality, accuracy, completeness, effectiveness, reliability, usefulness, that the Weather Information, Stock Data, Data and/or Documentation will be error-free, or implied warranties arising from course of dealing or course of performance.

Without limiting the foregoing, it is further understood that HTC and its Providers are not responsible for Your use or misuse of the Weather Information, Stock Data, Data and/or Documentation or the results from such use. HTC and its Providers make no express or implied warranties, guarantees or affirmations that weather information will occur or has occurred as the reports, forecasts, data, or information state, represent or depict and it shall have no responsibility or liability whatsoever to any person or entity, parties and non-parties alike, for any inconsistency, inaccuracy, or omission for weather or events predicted or depicted, reported, occurring or occurred. WITHOUT LIMITING THE GENERALITY OF THE FOREGOING, YOU ACKNOWLEDGE THAT THE WEATHER INFORMATION, STOCK DATA, DATA AND/OR DOCUMENTATION MAY INCLUDE INACCURACIES AND YOU WILL USE COMMON SENSE AND FOLLOW STANDARD SAFETY PRECAUTIONS IN CONNECTION WITH THE USE OF THE WEATHER INFORMATION, STOCK DATA, DATA OR DOCUMENTATION.

Important Health Information and Safety Precautions

When using this product, the safety precautions below must be taken to avoid possible legal liabilities and damages.

Retain and follow all product safety and operating instructions. Observe all warnings in the operating instructions on the product.

To reduce the risk of bodily injury, electric shock, fire, and damage to the equipment, observe the following precautions.

ELECTRICAL SAFETY

This product is intended for use when supplied with power from the designated battery or power supply unit. Other usage may be dangerous and will invalidate any approval given to this product.

SAFETY PRECAUTIONS FOR PROPER GROUNDING INSTALLATION

CAUTION: Connecting to an improperly grounded equipment can result in an electric shock to your device.

This product is equipped with a USB Cable for connecting with desktop or notebook computer. Be sure your computer is properly grounded (earthed) before connecting this product to the computer. The power supply cord of a desktop or notebook computer has an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet which is properly installed and grounded in accordance with all local codes and ordinances.

SAFETY PRECAUTIONS FOR POWER SUPPLY UNIT

- **Use the correct external power source**

A product should be operated only from the type of power source indicated on the electrical ratings label. If you are not sure of the type of power source required, consult your authorized service provider or local power company. For a product that operates from battery power or other sources, refer to the operating instructions that are included with the product.

- **Handle battery packs carefully**

This product contains a Li-ion or Li-ion Polymer battery. There is a risk of fire and burns if the battery pack is handled improperly. Do not attempt to open or service the battery pack. Do not disassemble, crush, puncture, short external contacts or circuits, dispose of in fire or water, or expose a battery pack to temperatures higher than 60°C (140°F).



WARNING: Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 60°C (140°F), or dispose of in fire or water. Replace only with specified batteries. Recycle or dispose of used batteries according to the local regulations or reference guide supplied with your product.



- **Take extra precautions**

- Keep the battery or device dry and away from water or any liquid as it may cause a short circuit.
- Keep metal objects away so they don't come in contact with the battery or its connectors as it may lead to short circuit during operation.
- The phone should only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
- Do not use a battery that appears damaged, deformed, or discolored, or the one that has any rust on its casing, overheats, or emits a foul odor.
- Always keep the battery out of the reach of babies and small children, to avoid swallowing of the battery. Consult the doctor immediately if the battery is swallowed.
- If the battery leaks:
 - Do not allow the leaking fluid to come in contact with skin or clothing. If already in contact, flush the affected area immediately with clean water and seek medical advice.
 - Do not allow the leaking fluid to come in contact with eyes. If already in contact, DO NOT rub; rinse with clean water immediately and seek medical advice.
 - Take extra precautions to keep a leaking battery away from fire as there is a danger of ignition or explosion.

SAFETY PRECAUTIONS FOR DIRECT SUNLIGHT

Keep this product away from excessive moisture and extreme temperatures. Do not leave the product or its battery inside a vehicle or in places where the temperature may exceed 60°C (140°F), such as on a car dashboard, window sill, or behind a glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

PREVENTION OF HEARING LOSS



CAUTION: Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

NOTE: For France, Earphone (listed below) for this device have been tested to comply with the Sound Pressure Level requirement laid down in the applicable NF EN 50332-1:2000 and/or NF EN 50332-2:2003 standards as required by French Article L. 5232-1.

- Earphone, manufactured by HTC, Model HS S300.

SAFETY IN AIRCRAFT

Due to the possible interference caused by this product to an aircraft's navigation system and its communications network, using this device's phone function on board an airplane is against the law in most countries. If you want to use this device when on board an aircraft, remember to turn off your phone by switching to Airplane Mode.

ENVIRONMENT RESTRICTIONS

Do not use this product in gas stations, fuel depots, chemical plants or where blasting operations are in progress, or in potentially explosive atmospheres such as fuelling areas, fuel storehouses, below deck on boats, chemical plants, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Please be aware that sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

EXPLOSIVE ATMOSPHERES

When in any area with a potentially explosive atmosphere or where flammable materials exist, the product should be turned off and the user should obey all signs and instructions.

Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised not to use the equipment at refueling points such as service or gas stations, and are reminded of the need to observe restrictions on the use of radio equipment in fuel depots, chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. These include fueling areas, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

ROAD SAFETY

Vehicle drivers in motion are not permitted to use telephony services with handheld devices, except in the case of emergency. In some countries, using hands-free devices as an alternative is allowed.

SAFETY PRECAUTIONS FOR RF EXPOSURE

- Avoid using your phone near metal structures (for example, the steel frame of a building).
- Avoid using your phone near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.
- Use only original manufacturer-approved accessories, or accessories that do not contain any metal.
- Use of non-original manufacturer-approved accessories may violate your local RF exposure guidelines and should be avoided.

INTERFERENCE WITH MEDICAL EQUIPMENT FUNCTIONS

This product may cause medical equipment to malfunction. The use of this device is forbidden in most hospitals and medical clinics.

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

HEARING AIDS

 
Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider, or call the customer service line to discuss alternatives.

NONIONIZING RADIATION

Your device has an internal antenna. This product should be operated in its normal-use position to ensure the radiative performance and safety of the interference. As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for the safety of personnel, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

Use only the supplied integral antenna. Use of unauthorized or modified antennas may impair call quality and damage the phone, causing loss of performance and SAR levels exceeding the recommended limits as well as result in non-compliance with local regulatory requirements in your country.

To assure optimal phone performance and ensure human exposure to RF energy is within the guidelines set forth in the relevant standards, always use your device only in its normal-use position. Contact with the antenna area may impair call quality and cause your device to operate at a higher power level than needed. Avoiding contact with the antenna area when the phone is IN USE optimizes the antenna performance and the battery life.

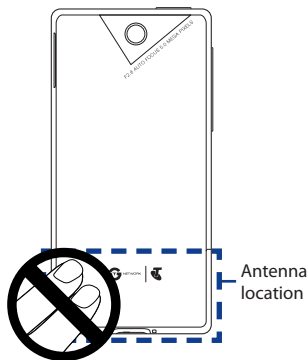

General Precautions

- **Avoid applying excessive pressure to the device**

Do not apply excessive pressure on the screen and the device to prevent damaging them and remove the device from your pants' pocket before sitting down. It is also recommended that you store the device in a protective case and only use the device stylus or your finger when interacting with the touch screen. Cracked display screens due to improper handling are not covered by the warranty.

- **Device getting warm after prolonged use**

When using your device for prolonged periods of time, such as when you're talking on the phone, charging the battery or browsing the web, the device may become warm. In most cases, this condition is normal and therefore should not be interpreted as a problem with the device.

- **Heed service markings**

Except as explained elsewhere in the Operating or Service documentation, do not service any product yourself. Service needed on components inside the device should be done by an authorized service technician or provider.

- **Damage requiring service**

Unplug the product from the electrical outlet and refer servicing to an authorized service technician or provider under the following conditions:

- Liquid has been spilled or an object has fallen onto the product.
- The product has been exposed to rain or water.
- The product has been dropped or damaged.
- There are noticeable signs of overheating.
- The product does not operate normally when you follow the operating instructions.

- **Avoid hot areas**

The product should be placed away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

- **Avoid wet areas**

Never use the product in a wet location.

- **Avoid using your device after a dramatic change in temperature**

When you move your device between environments with very different temperature and/or humidity ranges, condensation may form on or within the device. To avoid damaging the device, allow sufficient time for the moisture to evaporate before using the device.

NOTICE: When taking the device from low-temperature conditions into a warmer environment or from high-temperature conditions into a cooler environment, allow the device to acclimate to room temperature before turning on power.

- **Avoid pushing objects into product**

Never push objects of any kind into cabinet slots or other openings in the product. Slots and openings are provided for ventilation. These openings must not be blocked or covered.

- **Mounting accessories**

Do not use the product on an unstable table, cart, stand, tripod, or bracket. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

- **Avoid unstable mounting**

Do not place the product with an unstable base.

- **Use product with approved equipment**

This product should be used only with personal computers and options identified as suitable for use with your equipment.

- **Adjust the volume**

Turn down the volume before using headphones or other audio devices.

- **Cleaning**

Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning, but NEVER use water to clean the LCD screen.

Regulatory Agency Identifications

For regulatory identification purposes, your product is assigned a model number of **TOPA110**.

To ensure continued reliable and safe operation of your device, use only the accessories listed below with your **TOPA110**.

The Battery Pack has been assigned a model number of **TOPA160**.

Note This product is intended for use with a certified Class 2 Limited Power Source, rated 5 Volts DC, maximum 1 Amp power supply unit.

SAR Information

0.614 w/kg @10g (Head)

1.41 w/kg @10g (Body)

Telecommunications & Internet Association (TIA)

Safety Information

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference. If you have any reason to suspect that interference is taking place, turn the phone OFF immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider, or call the customer service line to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn the phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

WEEE Notice

The Directive on Waste Electrical and Electronic Equipment (WEEE), which entered into force as European law on 13th February 2003, resulted in a major change in the treatment of electrical equipment at end-of-life.

The purpose of this Directive is, as a first priority, the prevention of WEEE, and in addition, to promote the reuse, recycling and other forms of recovery of such wastes so as to reduce disposal.



The WEEE logo (shown at the left) on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local city center, household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.

RoHS Compliance

This product is in compliance with Directive 2002/95/EC of the European Parliament and of the Council of 27 January 2003, on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS) and its amendments.

