

# JVC

**LT-19HA22U    LT-22HG22U**  
**LT-26HG22U    LT-32HG22U**

## LCD-TV

Operating Instructions  
 Manual de instrucciones  
 Manuale di istruzioni per l'uso  
 Mode d'emploi  
 Gebruiksaanwijzing

ENGLISH

ESPAÑOL

ITALIANO

FRANÇAIS

NEDERLANDS

**HD**  
**TV**  
**1080p**

LT-22HG22U  
 LT-26HG22U  
 LT-32HG22U


**HD**  
**TV**

LT-19HA22U

**DVB**  
Digital Video  
Broadcasting

**DOLBY**  
**DIGITAL PLUS**

**HDMI**  
HIGH-DEFINITION MULTIMEDIA INTERFACE

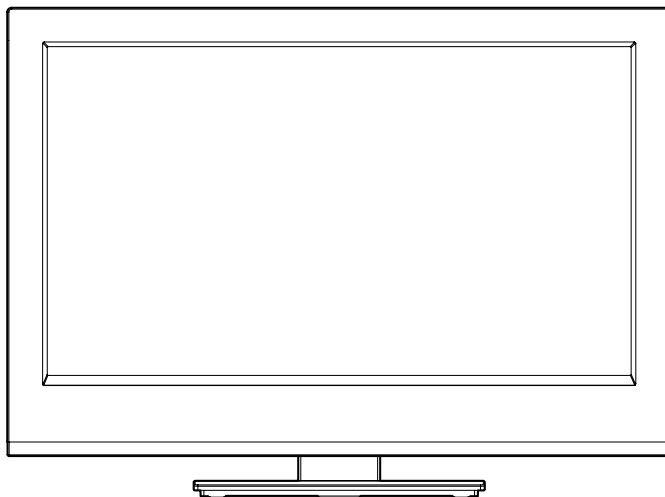

Before operating the unit, please read this manual thoroughly.  
 Consulte las instrucciones antes de utilizar la unidad.  
 Prima di mettere in funzione l'apparecchio, leggere attentamente il manuale di istruzioni per l'uso.  
 Avant d'utiliser l'appareil, lisez minutieusement ce manuel!  
 Voordat u het apparaat in gebruik neemt, raden wij u aan deze handleiding in zijn geheel zorgvuldig door te lezen.

## Features

- 16:9 LCD screen
- LED-Backlight-Technology - It realize thin profile, low power consumption, eco-friendly Hg-less design and high contrast picture.
- On-Screen Language Display in 15 languages (English, Spanish, German, French, Italian, Swedish, Dutch, Russian, Portuguese, Turkish, Greek, Finnish, Polish, Danish or Norwegian)
- Clock function
- NICAM/German A2 STEREO Hyperband cable DVB-T Combi-Tuner, MPEG 2 / MPEG 4 compatible
- Electronic Progr. Guide (EPG) for DVB-T
- 2000 Channel position memory
- Videotext – Fastext/TOPTtext
- Remote control
- Sleep timer
- COMPONENT input
- Headphone Jack (for mini plug)
- PC Connection (VGA) (see page 22)
- HDMI-connection
- Auto Power Off after 4 hours with no operation

### Headphone Warning

Loud music can damage your hearing irreversibly, therefore do not set the volume to a high level when listening through headphones, particularly for extended listening periods.

### Battery notice (valid in EU only)

Look after our environment - contact your local authorities for advice on how to safely dispose of exhausted batteries. The crossed out wheellie bin symbol indicates that used batteries should not be disposed of with your normal household waste! A separate collection system for used batteries is in place to allow the correct treatment and recycling in accordance with current legislation. Please contact your local authority for details on collection and recycling schemes in your area.

### Information for the DVB-T function

- Any function relative to the digital television (with the DVB logo) is available only within the country or area where such signals are transmitted. Verify with the salesman if it is possible to receive a DVB-T signal in the zone where you live.
- A DVB-T antenna (not supplied) must be connected for DVB-T reception.
- Even if the television conforms to the DVB-T specifications, the compatibility to future digital DVB-T transmissions is not guaranteed.
- Some digital television functions may not be available in some countries.
- The DVB-T system present in this device is FTA (Free to air).

Equipment connected to the protective earthing of the building installation through the mains connection or through other equipment with a connection to protective earthing – and to a cable distribution system using coaxial cable, may in some circumstances create a fire hazard. Connection to a cable distribution system has therefore to be provided through a device providing electrical isolation below a certain frequency range.

Utstyr som er koplet til beskyttelsesjord via nettplugg og/eller via annet jordtilkoplet utstyr – og er tilkoplet et kabel-TV nett, kan forårsake brannfare.

For å unngå dette skal det ved tilkopling av utstyret til kabel-TV nettet installeres en galvanisk isolator mellom utstyret og kabel-TV nettet.

Utrustning som är kopplad till skyddsjord via jordat vägguttag och/eller via annan utrustning och samtidigt är kopplad till kabel-TV nät kan i vissa fall medföra risk för brand.

För att undvika detta skall vid anslutning av utrustningen till kabel-TV nät galvanisk isolator finnas mellan utrustningen och kabel-TV nätet.

Dear Customer,

[European Union]

This apparatus is in conformance with the valid European directives and standards regarding electromagnetic compatibility and electrical safety.

European representative of Victor Company of Japan, Limited is:


JVC Technical Services Europe GmbH Postfach 10 05 04

2 61145 Friedberg  
Germany

## Information for Users on Disposal of Old Equipment and Batteries

### [European Union]

These symbols indicate that the electrical and electronic equipment and the battery with this symbol should not be disposed of as general household waste at its end-of-life. Instead, the products should be handed over to the applicable collection points for the recycling of electrical and electronic equipment as well as batteries for proper treatment, recovery and recycling in accordance with your national legislation and the Directive 2002/96/EC and 2006/66/EC.

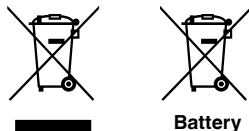

#### Notice :

The sign Pb below the symbol for batteries indicates that this battery contains lead.

By disposing of these products correctly, you will help to conserve natural resources and will help to prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of these products.

For more information about collection points and recycling of these products, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

### [Business users]

If you wish to dispose of this product, please confirm attached "KESA ELECTRICALS SAFETY INSTRUCTIONS" to obtain information about the take-back of the product.

### [Other countries outside the European Union]

These symbols are only valid in the European Union.

If you wish to dispose of these items, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical and electronic equipment and batteries.

## Contents

Features.....	2
Contents .....	3
Important safety information.....	4
Location of controls.....	7
Remote Control.....	8
Antenna connection .....	10
Auto setup.....	11
Quick guide for Menu operation .....	11
Selecting the input source.....	12
On-screen Language Selection .....	12
Station search.....	12
Changing the order of stored channels .....	12
Update Scan .....	12
Auto Synchronization .....	13
Basic Operation .....	13
Teletext .....	13
Stereo reception in analogue cable TV	
channel mode .....	14
Remarks on DVB-T system .....	15
Password Setup (Parental lock) .....	16
EPG (Electronic Program Guide) .....	16
Picture size and resolution .....	17
Picture format.....	18
Other convenience functions .....	19
PC connection .....	22
Connecting an HDMI or a DVI device to the	
HDMI input.....	23
Connection to other equipment.....	24
Troubleshooting table.....	26
Specifications .....	26

\* The "HD TV" Logo and "1080p" qualifier Logo are trademarks of DIGITALEUROPE.

\* DVB and the DVB logos are trademarks of the DVB project.

\* Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

\* THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM)

\* HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

### Important safety information

This unit has been produced according to all current safety regulations. The following safety tips should safeguard users against careless use and the dangers connected with such use.

- Although this appliance has been carefully manufactured and rigorously checked prior to leaving the factory, as with all electrical appliances it is possible for problems to develop. If you notice smoke, an excessive build-up of heat or any other unexpected phenomena, you should disconnect the plug from the mains power socket immediately.
- Ensure that the unit is sufficiently ventilated! Never place next to or underneath curtains!
- This set should be only be connected to an AC 220~240V / 50Hz mains power supply - do not attempt to connect it to any other type of supply.
- The socket-outlet must be installed near the equipment and easily accessible.
- Any repairs must be carried out by qualified service personnel only.
- Do not open this unit. A non-expert attempting to repair the unit could be dangerous and potentially cause a fire hazard.
- Keep away from rodents. Rodents (and also cockatiels) enjoy biting into electric flexes.
- The animal can cause a short cut (fire hazard!) and receive a fatal electric shock.
- Always hold plug when pulling out plug from power mains supply system. Do not pull on flex. The flex can become overloaded and cause a short cut.
- Never wet clean. Only use a damp cloth, the same as when cleaning furniture.
- Do not submerge in or under water!
- Set up unit so that no one is able to trip over the flex.
- This unit is recommended to be installed on shock-free benches in order to avoid any danger from falling.
- Take note that toddlers can pull the unit down from the table or cupboard by means of its flex. Children can hurt themselves when doing this.
- Do not use the unit near heat sources. The casing and flex could be damaged by the impact of heat.
- Watch out for kiddies copying what adults do! Do not stick any objects through the vents!
- The vents must remain open! No newspapers or covers should be put on the unit!
- The remote control is not a toy! Toddlers could swallow the batteries. If a battery has been swallowed, please seek out a doctor immediately.
- The screen is made of glass and can break if damage is done to it. Be careful when collecting sharp-edged glass splitters.
- You could be hurt or the unit could be damaged.
- If the unit is mounted on the wall, contact the shop where you purchased the unit for advice, and leave the installation work to experts. Incomplete installation work can cause you injuries.
- Taking fall-prevention measures
  - If these measures are not taken, the unit can fall and you could be injured.
  - Contact the shop where you purchased the unit to obtain full details of the measures.
- When a TV stand is used,
  - Ensure the unit is fully on the stand and placed in the centre.
  - Do not leave the stand doors open.
  - You could be hurt as a result of the unit falling or breaking, or your fingers being caught or jammed. Take extra precautions if you have children.
- Avoid placing the unit on any surfaces that may be subject to vibrations or shocks.
- To protect the unit during a thunder storm unplug the AC power cord and disconnect the antenna. Caution: Do not touch the antenna connector.
- When you leave your home for a long period of time, unplug the AC power cord for safety reasons.
- The unit becomes warm when in operation. Do not place any covers or blankets on the unit in order to prevent overheating. The ventilation holes are not to be blocked. Do not set up near radiators. Do not place in direct sunshine. When placing on a shelf leave 10 cm free space around the whole unit.  
Make some space around TV (Correct shelf assembly).
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.  
Liquids spilled into the unit can cause serious damage. Switch the set OFF and disconnect the mains power supply, then consult a qualified service person before attempting to use the unit again.

**Please pay attention to the following instructions in order to avoid receiving a life-threatening electric shock:**

- Protect against moisture. Never use in the bath or sauna.
- Never use near a bath, shower or swimming pool.
- Never use the unit if it has got wet. This can also mean condensation moisture, which occurs in the winter when the cold unit is brought into a heated flat. Wait before operating the unit especially after it has been transported in the winter, until the cold unit has adjusted to the room temperature.
- Do not place any heavy objects on the flex. Electrical isolation could be damaged.
- Never wrap insulating tape around damaged flexes or on damaged plugs. These should be repaired or replaced by qualified service personnel.
- Never use this unit if the cabinet is defective. Do not make provisional repairs if the cabinet is damaged - this should be replaced by a new cabinet if necessary.
- Unplug the unit from the mains power supply prior to the cleaning of the unit.

## Important safety information


### How to attach the stand

#### NOTE:


- Unplug the AC cord from the AC INPUT terminal.
- Before beginning this process, assure that TV is laid on a clean, safe, and cushioned space to avoid any damage to the unit.
- Do not touch or press the TV-screen, glass might break under pressure.
- Be sure to follow the instructions. Incorrect installation of the stand may result in the TV falling over.

- 1) Place the TV on its front onto a table.
- 2) Align the stand's bottom-plate (supplied) as seen here.  
It will fit in only one direction.
- 3) Hold the unit and attach the stand slowly. Finally secure the bottom-plate with 2 screws (included).

LT-19... / LT-22...

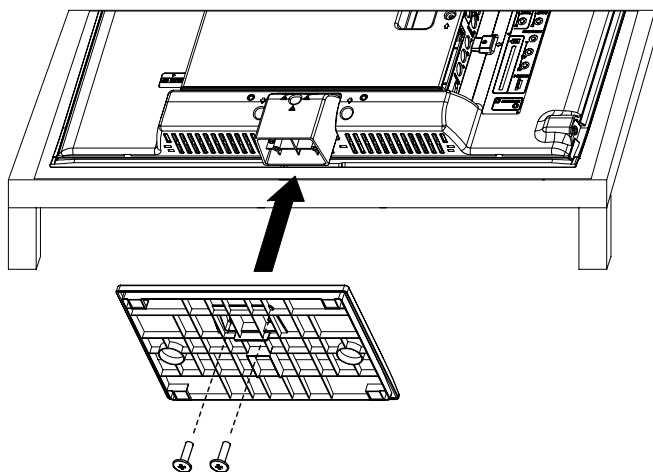


LT-26... / LT-32...

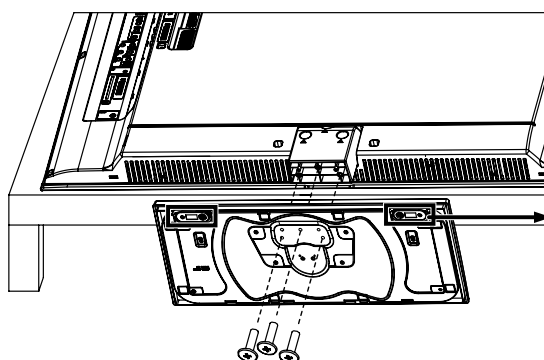

#### Warning (only for LT-32...)

To prevent injury, which could be expected due to an eventual fall, the TV should be fixed to the ground according to instruction (see below).

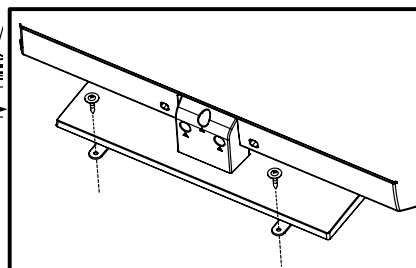

Pull out 2 plates (see illustration). Fix to the appropriate ground with the supplied screws.

Note: There is no liability for any damage to the ground.

#### NOTE:

- To detach the stand, perform these steps in reverse order.

### Dismantling the base

For wall mounting, the base must be dismantled. To do this, remove 3 screws (M, see page 10) from the back. Take off the base entirely.

## Important safety information

### WARNING

- To prevent fire, never place any type of candle or open flame on the top or near the TV set.



#### Moving the unit or carrying by hand

When the unit is moved a long way, unplug the power cord and disconnect the antenna, connecting cables and any fall-prevention apparatus.

- Moving without doing so could result in damage to the power cord, a fire, electric shocks or injuries from dropping the unit.

Ensure that unpacking and transfer of the unit is carried out by two or more people and that the unit stays upright when doing this.

When the TV stand has casters, remove caster cups from the stand and push it while supporting the unit.

- Ensure that you support the unit when the stand is pushed, as this can cause the unit to fall and you could be injured.
- The appliance could leave indentations in wooden tables with extremely soft wooden surfaces due to its heavy weight.
- Furniture polish could corrode and dissolve rubber feet. Black imprints could be visible on the table. You should therefore only use TV benches, which have been constructed for this specific purpose.

#### Secure the casters when the unit is installed on a TV stand with casters.

- The stand can move and you could be hurt if the casters are not secured. Remove casters when the stand is placed on a soft surface such as a mat and carpet.

#### The distance between eyes and the screen should be about 3 ~ 4 times as long as height of the screen.

- Viewing from too close a distance can cause strain for your eyes.

#### When installing the Monitor on a table, be careful not to place the edge of its stand.

- This may cause the Monitor to fall, causing serious injury to a child or adult, and serious damage to the Monitor.

**Possible Adverse Effects on LCD Screen:** If a fixed (non-moving) pattern remains on the LCD screen for long periods of time, the image can become permanently engrained in the LCD TV panel and cause subtle but permanent ghost images. This type of damage is NOT COVERED BY YOUR WARRANTY. Never leave your TV on for long periods of time while it is displaying the following formats or images:

- Fixed Images, such as stock tickers, video game patterns, TV station logos, and websites.
- Special Formats that do not use the entire screen. For example, viewing letterbox style (16:9) media on a normal (4:3) display (Black bars at top and bottom of screen); or viewing normal style (4:3) media on a widescreen (16:9) display (Black bars on left and right sides of screen).

#### Attention!

Cleaning instructions for your LCD TV.

#### Safety note:

Before you start to clean, switch the set's power off completely and disconnect the plug from the mains power supply.

Be careful not to scratch the plastic coated front panel - it is highly vulnerable to accidental scratching (e.g. by fingernails or other sharp items). (While cleaning, do not wear jewelry) that could cause surface scratching (such as rings, wrist-watch, etc.). Use a lint-free cloth and pure water to clean with, but make sure the cloth is thoroughly wrung out so that it is just damp and not soaking wet - also make sure that the cloth is free from any dirt that could cause scratching to the surface.

Wipe the set clean using minimal pressure.

Do not use standard window cleaning fluid. Its alcohol / ammonia will dissolve the front window's coating.

Never use solvent or thinner. Never use special cleaners which are designed for cleaning PC Monitors or CRT TVs. Finally carefully rub dry with a clean dry lint-free cloth.

Do not use paper towels or tissues to clean the set - paper can disintegrate when wet or may leave a trail of dust behind. Some paper can also be abrasive and scratch your screen.

#### Saving electricity

The high energy consumption during operation is reached only with maximal brightness of the display light. Maximal brightness is only necessary in a daylight environment in order to get a luminous and full of contrast picture. With less light in the environment, e.g. in the evening, the picture already can be too bright and might dazzle. The brightness of the display light can be reduced to the desired value in the menu Backlight (see p. 19). If the Backlight is set to a smaller value you can save up to 30 % of energy.

If there is set DBC (Dynamic Backlight Control) (see p. 19), the brightness of the display light changes depending on the video signal. The energy consumption changes with the brightness of the video scenes. Darker scenes consume less energy than bright scenes. Thus in average one gets less energy consumption with switched on DBC.


#### Note:

- Maximal contrast values are reached only with a maximal setting of Backlight.
- The biggest energy saving effect is reached with minimal setting of Background.
- With dimmed display light as well as with turned on DBC one can hear a low humming sound on technical reasons. This is normal and no reason to worry about. There is no production fault because of that. If the low humming in exceptional cases should disturb in an extremely quiet environment, reset the value of Backlight to the factory setting and turn off the DBC.

## Location of controls

LT-19.../LT-22...

LT-26.../LT-32...

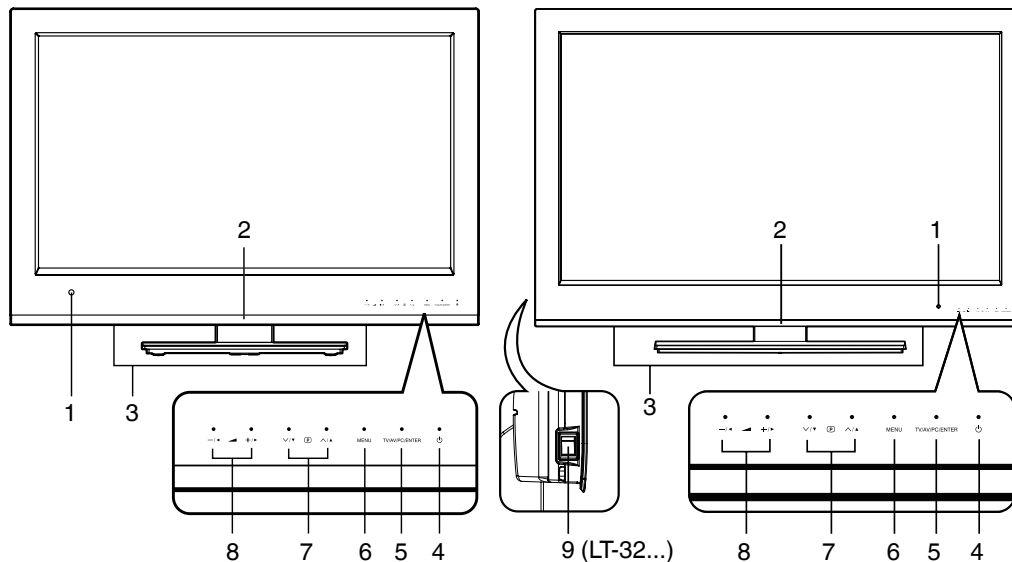


## Description of Indicators and Controls

1. **Remote sensor**
2. **(Standby/On) indicator:** The LED indicator lights up red in standby mode, and blue in the power ON mode.
3. **Loudspeakers**
4. **(Power)-button:** Preparation: Connect power-cable to AC220~240V/50Hz. (LT-32...: turn on mains switch (9).)
  - a) If standby-LED is red, you may power-off. To power-off, press power-button 1x and release. For confirmation, standby-LED will change to dark. Power-on by remote control is not available.
  - b) If standby-LED is off, you may power-on. To power-on, press power-button 1x and release. For confirmation, standby-LED will change to blue.
5. **TV/AV/PC/ENTER button:** Select input mode for TV/AV/COMPONENT/HDMI/PC. In Menu : Using as **ENTER** button.
6. **MENU button:** To display the menu screen.
7. **▲/▼/▲/▼ buttons:** Press ▲ to change to a higher numbered channel set into memory. Press ▼ to change to a lower numbered channel set into memory. In Menu: Setting.
8. **◀/▶/◀/▶ buttons / In Menu: Setting.**
9. **Mains switch (LT-32...)** toggle switch on underside. Switch on/off power supply completely.

For complete disconnection from the mains power supply, remove the supplied power cable from the socket.

## Remote Control

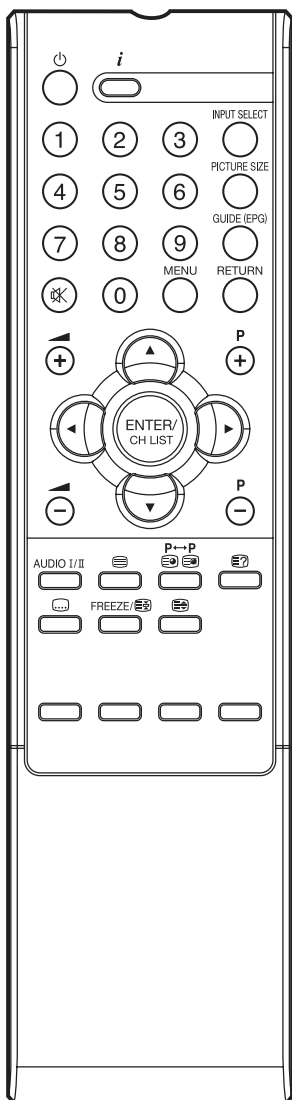

	Function	Page
	Enter standby mode or turn on the power	11
	Display program information	13
	Select channel Select Teletext page Enter password	13 14 16
	Select an input source	12
	Select picture format	18
	Display the EPG (Electronic Progr. Guide)	16
	Turn the sound on/off	13
	Activate menu	11
	Exit the menu screen	
	Volume	
	Change the TV channel or Teletext page up or down	13
	Cursor buttons	
	Memorize Channel List	13
	Select between the available broadcast audio	14
	Teletext ON / TV+Text / OFF	14
	Switches between the present channel and the last selected channel	13
	Sub Page selection	14
	Reveal quiz page answers	14
	Display the subtitle	
	Still picture Hold the text page	13 14
	Teletext enlargement	14
	Fasttext/TOPTtext buttons	13



## Remote Control

### Install the batteries


Use batteries type UM3 (AA-Size).

Do not use old or weak batteries. The remote control may not work properly with a weak voltage from such batteries. Replace exhausted batteries with new ones. Never try to recharge normal batteries - this could cause an explosion.


#### Note:

- Exhausted batteries can leak corrosive electrolyte, which may cause damage to the remote control - therefore remove exhausted batteries immediately.
- Batteries should not be exposed to excessive heat such as sunshine, fire or the like.


**1** Open the battery compartment.

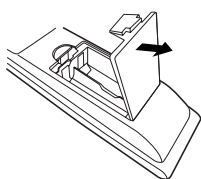


**2** Install the batteries as shown below, ensuring the correct polarity.

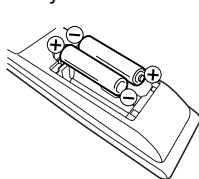



**3** Close the battery compartment.

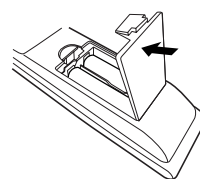



### Distance of Remote Control Operation

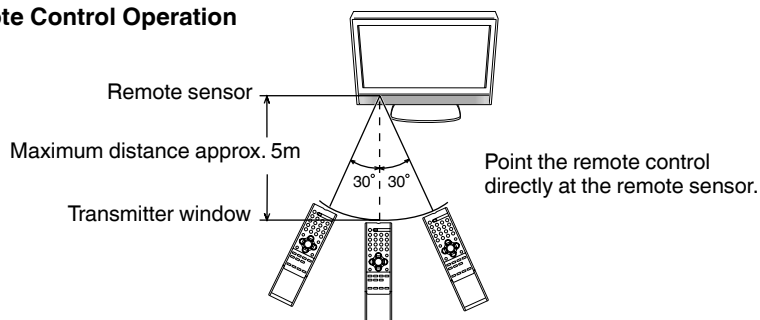

The remote control handset will not work properly in the following cases:

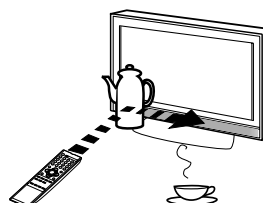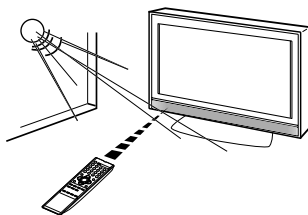

a) If bright sunlight directly beams onto the unit front. b) If an obstacle is placed between the unit and the handset.

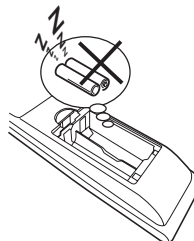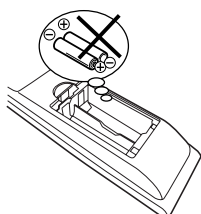

c) If the batteries have not been installed according to their polarities.


d) If the batteries are weak.

## Antenna connection

**Note:** Before you connect other appliances:

- To avoid potentially damaging your set, make sure all items are switched off and disconnected from the mains power when you make the connections.
- Arrange the desired connection.
- When you have finished making the connections, reconnect the mains power to the unit and switch it back on.

Connect your antenna as shown below (A). Connections to other equipment is explained further on P.24, 25. If you have problems with reception, consult a specialist of antenna.

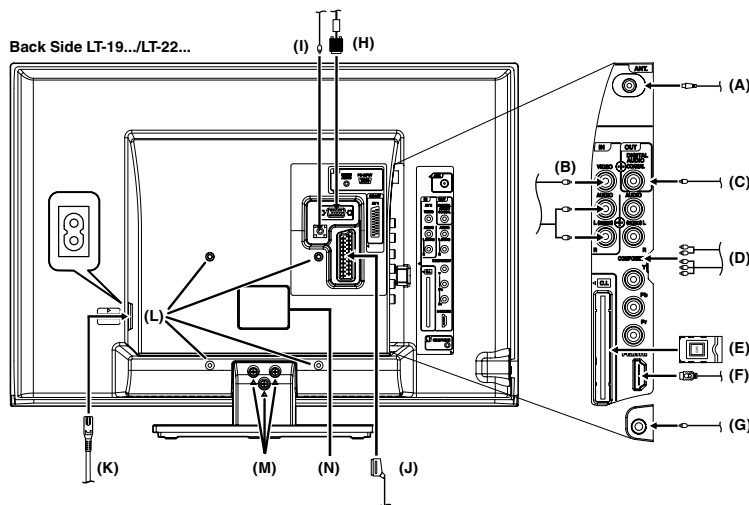

**(A) DVB-T antenna:** Connect a DVB-T antenna if DVB-T is already available in your transmission area. Or connect to an analogue cable connection. The built-in tuner receives all analogue cable programmes and DVB-T channels.

**(B) LT-19.../LT-22...: AV2 / LT-26.../LT-32...: AV3 input:** Input for analogue AV-Signal (Composite) See P.25.

**(C) DIGITAL AUDIO COAXIAL output:** Digital output for DVB-T sound (see page 25).

**(D) COMPONENT input:** See P.25.


**(E) C.I. slot:** for DVB-T-PayTV (if PayTV-provider supports this)

**(F) HDMI input (LT-19.../LT-22...: HDMI/DVI / LT-26...: HDMI/DVI1, HDMI2 / LT-32...: HDMI/DVI1, HDMI2/3) :** See P.23.

**(G) HEADPHONE jack:** Plug headphones with a mini plug (3.5 mm) into this jack.

**(H) PC-INPUT (PC):** See P.22.

**(I) PC/DVI AUDIO input:** See P.22, 23.

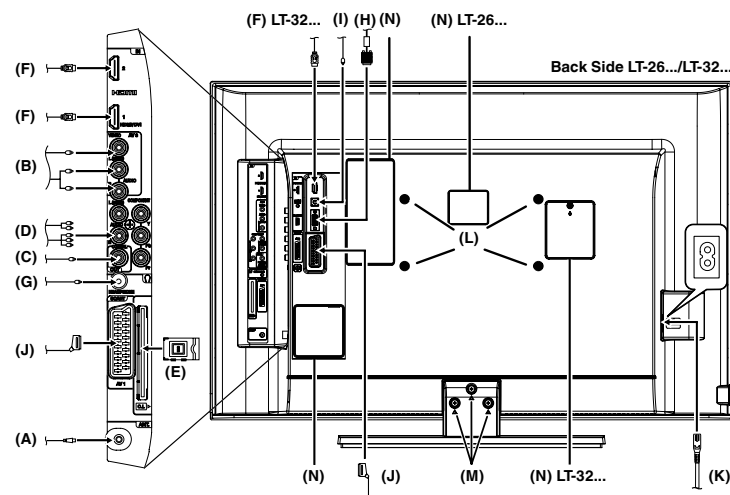

**(J) SCART socket (LT-19.../LT-22...: AV1 / LT-26.../LT-32...: AV1/AV2):** For the connection of SCART cables. AV1: Transmits RGB, S-Video and CVBS in, and CVBS tuner out. AV2: Transmits S-Video or CVBS in, and CVBS monitor out. See P.24, 25.

**(K) Power supply:** Connect the supplied power cable to an AC 220-240V/50Hz mains power supply only - do not attempt to connect it to any other type of supply. Never try to repair a damaged AC power cord with isolation-tape - this should be repaired by a specialist or replaced. Do not let your pet loose near the cable. Animals biting into the cable could receive a fatal electric shock, and could cause a hazard to others.

**(L) Bracket holes:** Fix a wall mounting bracket (not supplied) here.

**(M)** To hang the television on a wall, remove these screws and then remove a stand. Before performing work spread cushioning over the base area to lay the TV on.

**(N) Service connector cover:** Please do not open this cover. There is a socket only for service purpose inside.



## Auto setup



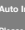
The built-in tuner allows to receive TV-channels from analog cable-tv or DVB-T. If, however, you are receiving TV-channels via separate receiver, no need to run the TV's auto-tuning. Just set your language here and then jump to next chapter.


When initially operating the TV after purchase, the menu: 'Auto Installation' will appear automatically by default. Do start 'Auto Installation' by connect DVB-T antenna-cable, if available. Wait for the TV to save all digital TV-channels. When finished, disconnect digital cable-tv. Now connecting analog cable-tv, if available. Re-run auto-tuning for analog tv-channels (see page 12, update scan).




**Note:** If analog cable-tv is not available (or you discontinued using), do connect a DVB-T-antenna (not supplied) and start auto-tuning for DVB-T-channels.

### Preparation:

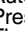 

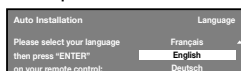
Press  (Power) on the unit or press  (On/Standby) on the remote.


- 1 Auto Installation menu will appear. Press  or  to select desired language. Then press .




- 2 Press  or  to select your country. Then press .

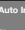

 
- 3 Press  or  to select Home. Then press .

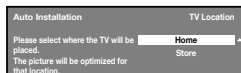

 - 4 If you cancel Auto Power Off (see page 20), press  or  to select Off. Then press .

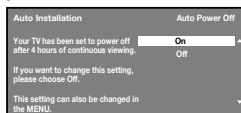

- 5 TV will search for Digital TV-channels at first. Connect your DVB-T antenna now. Continue with **ENTER** to start auto tuning. The tuning's progress will be displayed in percent for confirmation.

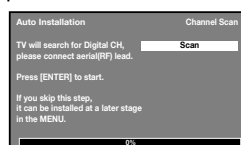


### Note:

- Please be patient - the Auto Tuning process can take several minutes to complete.

- 6 When the tuning for Digital TV-channels is completed, you will be asked if you want to proceed to autotuning for Analog TV-channels. If you wish to start autotune Analog TV-channels, connect your Analog cable-TV antenna and press **ENTER**.

### Note:

- If you do not wish to carry out the autotuning for Analog TV-channels, press **RETURN** to exit the menu.

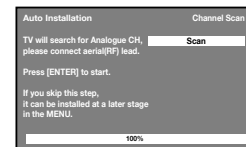

- 7 When the display reads 100%, press **ENTER** to finish.

### Note:

- To cancel the auto tuning, press **RETURN** during the process.

**THE AUTOMATIC TUNING PROCESS WILL ONLY START BY ITSELF THE FIRST TIME YOU SWITCH THE SET ON. HOWEVER YOU CAN RESTART THIS PROCESS VIA THE MENU SYSTEM (see page 12).**



**It is important to enter "Deutsch" in Step 1 and "Deutschland" in Step 2 for correct operation of the appliance in Germany.**

- If you could not set up a correct pair of language and country in this auto setup process, you will be able to make your preferred language selection as illustrated in page 12 (On-screen Language Selection).


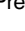





## Quick guide for Menu operation

**Make sure the antenna connection and power supply are connected as per the description on previous page.**

### Preparations:


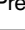
- Turn on the unit with the  (Power) button on the unit. The  (On/Standby) indicator will light up in blue.


**Call Menu and for example: Select Auto Scan.**

- 1 Press **INPUT SELECT**. Select TV. Press **MENU**.
- 2 Press  or  to select  then press .
- 3 Press  or  to select Channel Set Up, then press .



- If the channel which Channel Block (P.16) was set exits, password entering screen will appear. Then enter the password.

 - 4 Press  or  to select Auto Scan.

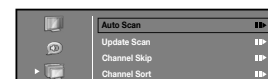

... on the following pages the MENU can be called in the same way as here.

- 5 Press **MENU** to exit the menu.

### Note:

- If no buttons are pressed for more than approx. 60 seconds, the Menu screen disappears automatically.


## Selecting the input source


Press **INPUT SELECT** to view a signal from another device connected to your TV, such as a VCR or DVD player. You can select each input source depending on which input jacks you used to connect your devices.

To select the video input source, press **INPUT SELECT** or **▲/▼**.

Then press **ENTER** within 6 seconds.

## On-screen Language Selection

- 1 Select  (unless you have already selected when the set was first switched on) then press **▶**.

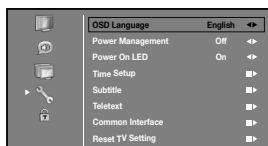


- 2 Press **◀** or **▶** to select the desired language.
- 3 Press **MENU** to exit the menu.


## Station search

**Warning! All previously saved channels are deleted in Step 2. A new channel search then starts automatically.**


### Preparation:

Make sure your antenna is connected to the antenna input (see P.10). Select TV (see above). Then press **MENU**.

- 1 Select Channel Set Up option in , then press **▶**.
- 2 Select Auto Scan, then press **▶**.

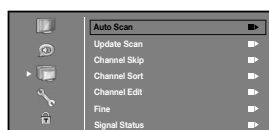

- 3 TV will search for Digital TV-channels at first. Continue with **ENTER** to start auto tuning.

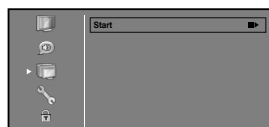

### Note:

- Press **RETURN** if you return to step 2.

- 4 The automatic scanning will search for available Digital TV-channels and should store the channels in the correct order.

12

- 5 When all DVB-T programs have been stored (100%), you will be asked if you want to proceed to autotuning Analog TV-channels. If you wish to start the tuning Analog cable-TV channels, connect your Analog cable-TV antenna and press **ENTER**.




### Note:

 
- Press **RETURN** x 2 if you return to step 2.

- 6 When all programs have been stored (100%), press **MENU** to exit the menu.

## Changing the order of stored channels

The Automatic station presetting stores the stations in a specific order. However, this order can be changed if you wish.

- 1 Press **MENU**. Select Channel Set Up option in , then press **▶**.
- 2 Select desired option, then press **▶**.

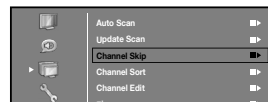

### Description about the each setting option:

**Channel Skip:** Press **▲** or **▼** to select the channel that you want to skip, then press **ENTER**. ✓ mark will appear.

**Channel Sort:** Press **▲** or **▼** to select the channel that you want to move, then press **ENTER**.

Press **▲** or **▼** to select the position that you want to move the channel to, then press **ENTER**.

**Channel Edit:** Press **▲** or **▼** to select the channel that you want to edit, then press **ENTER**.

Following options are displayed.

- **Channel Number:** Press **0-9** buttons to enter the desired memory position number, then press **ENTER**.
- **Frequency (only for analogue TV):** You can also directly enter the frequency value with **Number buttons (0-9)**, then press **ENTER**.
- **Colour system (only for analogue TV):** Colour System has already been preset to Auto. Do not change anything here. Any changes can cause picture or sound disruption.
- **Sound system (only for analogue TV):** The correct sound system is already installed. Any changes can cause sound disruption.

**Fine (only for analogue TV):** Already correctly and optimally installed. Do not change anything here. Any changes can cause picture or sound disruption. The video can also be affected.

**Signal Status (only for digital TV):** You can verify the signal strength and quality of the selected service here. If necessary, adjust the direction of the antenna to obtain the maximum signal strength.

- 3 Press **MENU** to exit the menu.

## Update Scan


If you wish to search and store only new channel, perform the Update Scan at step 2 of Station search (on the left). The current channel store is remained and only new channel will be stored to channel store.

## Auto Synchronization

This feature can display the time based on the DVB signal information.

If you wish to set the time manually, select "Off" as follows and then perform the Date and Time options.

- 1 Select /Time Setup/Time/Auto Synchronization.
- 2 Then press or to select Off.
- 3 Press to select Date, then enter the date with 0-9 buttons.

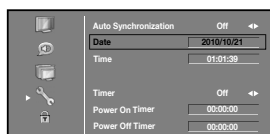

- 4 Then press . Enter the Time same as above.
- 5 Press **MENU** to exit the menu.

## Basic Operation

### Channel selection

With the numbered buttons.

Example:

- No. 2: Press **0** and within 2 seconds, press **2**.
- No. 29: Press **2** and within 2 seconds, press **9**.
- No. 929: Press **9**, **2**, **9** same as above.

Press **P** + or - to change up or down a channel. This takes approx. 2 seconds. If the auto search only stored 5 stations, only these 5 will appear. Skipped channels will not appear (see P.12).

### Channel List

The Channel List shows a list of all receivable programmes.

Press **CH LIST** to display the Channel List.

Press or to select the desired channel.


Press **CH LIST** to display the selected channel.

- If you press **CH LIST** again, the Channel Details will appear.

### Information display

Press . The program information will appear for approx. 4 seconds.

The following figure is an example of DVB-channel reception.

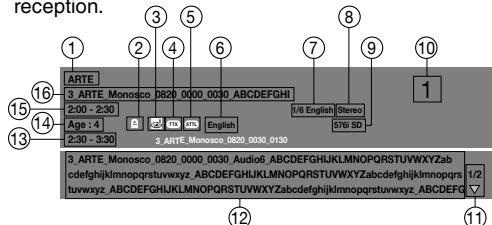

- |                           |                                  |
|---------------------------|----------------------------------|
| 1. Channel Name           | 9. Video Format                  |
| 2. Lock status            | 10. Channel Number               |
| 3. Visual Impaired Audio  | 11. There are more than 2 pages. |
| 4. DVB Teletext available | 12. Program Detail               |
| 5. DVB Subtitle available | 13. Next Program Duration        |
| 6. Subtitle Language      | 14. Parental Rating              |
| 7. Audio Language         | 15. Program Duration             |
| 8. Audio Format           | 16. Program Title                |

### Note:

- If the current watching DVB-channel has more than one audio language or subtitle language, you can change them by each pressing of **AUDIO 1/II** or .
- Some DVB-broadcasts may not provide subtitle language service.

### QuickView

**P** **P** button allows you to go back to the last selected TV channel.

- Even in external input mode, it will go back to the last selected TV channel.

### MUTING

Press . The sound will be cut off.

The muting can be released by pressing again or + or -.

### Still picture

Press **FREEZE** to make a still picture. To cancel the still picture, press **FREEZE** again.

### Note:

- The still picture function is available only for ATV/DTV-input mode.
- During still picture mode, PICTURE SIZE feature is not available. (still picture mode will be canceled)

### Note:

- If the built-in tuner does not receive anything (e.g. if no antenna is connected) during TV-operation, then the TV-unit will change to standby after approx. 15 minutes.

## Teletext

Teletext is sent page by page. This unit is able to automatically store up to 1000 pages, but they can only be accessed once they have been stored. This can take a few moments.

The TELETEXT menu allows the installation of the teletext language.

The languages displayed are only those supported by the channel. In Germany this is usually GERMAN.

### Fastext/TOPText

The Fastext/TOPText is teletext with a special directory.

On the lower part of the screen there are four different coloured fields (red, green, yellow and blue). These fields lead directly to the pages shown within. The coloured buttons on the remote control correspond to the coloured fields. Press the appropriate coloured button in order to activate the desired colour field.

**Switch on / off Teletext**

Teletext is not transmitted by all channels. Select a channel that shows teletext. Press . You will now see a teletext page. (If "100" is shown without any text information, it may mean that the channel you have selected does not support teletext.) Press again. The TV-screen will be split into two and both Teletext information and actual broadcast will be displayed at the same time. Press again in order to switch off teletext. Press again in order to switch on teletext again. The last page which was stored is now shown.

**Note:**

- You cannot select any other channels as long as teletext is switched on. Switch teletext off when you want to switch over to another channel.

**Select Page**

Press **P** + or – until the page you desire appears. Or ... enter the requested page number by using the **10 Number Buttons**.

And if you mistype something, just enter the complete 3-digit wrong page number then enter the desired number again. Or ... press one of the coloured teletext buttons so that a page from Fasttext/TOPTtext is shown.

**Note:**

- In the right upper corner you will, for example, see 1/2. That means that page has 2 types of text page - e.g.: 1/2 is English page and 2/2 is German page. You can alternate the 1/2 page and 2/2 page by the setting of Digital Teletext Language option. (see page 21)

**Hold Pages**

Some pages are divided up into subpages by the channel. Subpages are automatically shown in turn, as they are transmitted. In order to hold the page, press . Press again in order to display the next subpage.

**Directly Select Subpages**

You can directly select the subpages if required.

**Example:**

Page 128 from ARD (German teletext) comprises of 2 subpages.

Press in order to select subpage 2. 4 asterisks (S\*\*\*\*) are shown. Enter **0 0 0 2**. It can take a minute before subpage 0002 appears.

Press again in order to switch off the subpage feature.

You can only select other teletext pages when the subpage feature is switched off.

**Enlargement**

In order to enlarge the display, press .

Either the upper or lower half of the screen is enlarged.

Each time you press you switch between the display of the upper or lower half of the screen or the full picture.

 
 
**Answering Quiz Questions**

Some pages contain quiz questions with concealed answers.

Press in order to show the answers.

**Stereo reception in analogue cable TV channel mode****The following types of broadcast are possible with NICAM transmissions**

You can see the each signal type in the information display (P.13) when you press or change a channel

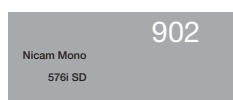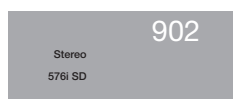**Nicam Stereo broadcast signal****Nicam Mono broadcast signal****Nicam Dual1 broadcast signal****Nicam Dual2 broadcast signal****German A2 stereo broadcast signal**

**When 2-channel sound reception is available, you can select your preferred audio with the AUDIO I/II button.**

Each time you press **AUDIO I/II**, the sound channel will switch to the alternative channel available.

**NICAM 2-channel sound reception (not available in Germany)****2-channel sound reception in Germany****Note:**

- In case of bad reception, the stereo sound also can be disturbed.
- The broadcast sound type may not be saved if Power off.

### Remarks on DVB-T system

DVB-T is at present still being developed. You can get information regarding the current stage of development on <http://www.ueberall-tv.de> or from your specialist retailer.

As a digital service DVB-T basically works differently to previous analogue TV reception.

#### Reception Possibilities:

In contrast to cable TV, DVB-T is received via room or roof antennas. A room antenna is sufficient for reception within the reception area of a DVB-T transmitter. A roof antenna may perhaps be necessary for reception in a fringe area. Existing roof antennas may have to be turned in a different direction.

Contact your specialist retailer or go to <http://www.ueberall-tv.de> to find out about the location of the reception areas or fringe areas. You cannot get DVB-T reception outside the fringe area. Ask a certified antenna specialist for advice on interference with reception. The tuner of this appliance cannot provide active room antennas with operating voltage. Active room antennas have to be equipped with a separate power supply.

#### Reception Quality:

DVB-T reception principally either works really well or not at all. There is not a smooth transition with a constant reduction in reception quality. Digital interference occurs at maximum reception range:

the image freezes, the picture becomes blocky, the sound breaks up or reception cuts out altogether at times. If you notice interference with DVB-T reception then this is usually not due to a fault on the TV appliance. Please contact an antenna specialist if you have interference with reception. Inspection of the quality of DVB-T reception is not included in the free warranty to be provided by the manufacturer of the TV appliance.

#### Image and Sound Quality:

An individual transmitter transmits up to 4 TV channels on one transmission frequency. This is possible through compression in accordance with the MPEG standard, which is similar to digital data storage on a DVD. The data rate of DVB-T is just a lot lower; at present the max. video bit rate is approx. 4Mbps and the max. audio bit rate is at 256kbps. Visible interference (e.g. blocky picture) can result at extremely low data rates despite there being excellent reception quality within vicinity of the transmitter. Blocky pictures are no fault of the receiver. They are the result of the low data rate transmitted. The digital DVB-T sound can be transmitted to the digital amplifier via the digital output of your TV set.

#### Image Format

Images are transmitted in 4:3 format, 4:3 letterbox format (with black bars above and below the picture) and anamorphic 16:9 format (without black bars). The max. transmitted resolution at present is 704x576.

#### Encryption

Encryption is basically possible, but no DVB-T channels are as yet encrypted. A CAM module and an access card are necessary to receive encrypted channels. You can get CAM modules from your specialist retailer and access cards from the respective broadcasting company. The CI slot in this appliance accepts CAM modules and therefore allows for the reception of encrypted channels. Please note: Pay TV providers are basically free to choose their encryption system. Although this TV set is manufactured according to DVB standards, it can be that a set-top box is nevertheless required to receive the desired pay TV channels. These are available from the pay TV provider.

#### Child Lock

Like DVDs, DVB-T offers can also provide age-restricted access. At the moment, no channels are equipped with this restriction. This appliance does, however, already offer the feature of setting up password protected age restrictions, which only work when the respective programmes are broadcast.


#### EPG (Electronic Program Guide)


EPG is part of the DVB-T-signal with 8-days-schedule. This TV can receive and display the EPG-information included into DVB-T. This TV's EPG-Decoder will not work with cable- and Satellite-TV.



## Password Setup (Parental lock)

Parental lock is a function of the channel provider. If it is not supported by the channel, parental lock is without function. Currently there are no channels supporting parental lock.

- 1 Press **MENU**. Select  then press **►**.
- 2 'Password' will appear. Press '0 0 0 0' using the **Number buttons (0-9)**. (This is the default password.)
- 3 Select the desired option, then press **►**.

**Channel Block:** Press **▲** or **▼** to select the channel that you want to lock, then press **ENTER**.  will appear.

**Program Block:** Press **◀** or **▶** to select desired parental rating.

**Change Password:** Enter your chosen new password with Number Buttons (be sure to remember this password). After you have entered the new password, you need to enter the same password again for confirmation.

- 4 Press **RETURN** several times to return to the normal screen.

While toggling between channels, if a service which has a parental rating (higher than your setting) is selected, the channel will be locked. Press **ENTER** to enter the password entering screen. Then enter the password to view that channel. If the channel you are currently watching supports a parental rating then the rating will also be displayed in the Channel information display (see page 13).

## EPG (Electronic Program Guide)

The Guide menu shows the available programme listings for the next 8 days only, including today.

- 1 Press **GUIDE (EPG)** to display the Guide menu.



### Service list :

Lists all the services that are currently available. As you scroll through the service list by pressing **▲** or **▼**, the Event list will be refreshed accordingly. To scroll through the service list page by page, press **Red** or **Green** button.

### Events list :

List the events in a grid of rows. Press **►** to enter the Events list. You can press **▲** or **▼** to navigate through the rest of the events. You can easily move to the Previous day or Next day in the Events List by pressing **Red** or **Green** button (the date of the programme information you are currently viewing is shown in the top left hand corner).

- 2 From within the Events list, you can open the Event detail for the currently highlighted programme by pressing **Yellow**.

The Event detail shows the extended event description of an event.

To return to the Events list, press **Yellow**. To clear the menu screen, press **ENTER** or **RETURN**.



## Picture size and resolution

### Resolution and picture quality

Broadcast wide screen films in different resolutions. The following table shows the resolution options for wide screen film broadcast media.

Resolution of the wide screen signal	Broadcast media						
	Analogue cable TV	Digital cable TV	DVB-T	Satellite (DVB-S)	DVD	HDTV Satellite (DVB-S2)	Blu-ray-Disc
432i x 704 (Letterbox)	Yes	Yes	Yes	Yes	Yes	Yes	No
576i x 704 (anamorphic)	No	Yes	Yes	Yes	Yes	Yes	No
720 x 1280 (HD)	No	Yes*	No	No	No	Yes	Yes
1080i x 1920 (HD)	No	Yes*	No	No	No	Yes	Yes

\* Digital Cable receiver with HDMI output required.

Best picture quality is achieved when the input signal has a resolution of 1920 x 1080i. If a signal with a lower resolution is input (e.g. analogue cable TV), there is a visibly poorer picture quality.

This is understandable as, if the same picture quality were available at a lower resolution, the broadcasting companies would not need to take the trouble to send the signal at the higher resolution.

### Why are there different resolutions?

Analogue cable TV uses a standardised TV signal. Each analogue tube TV, however old it is, can process this signal. That is the advantage of standardisation. The disadvantage is that the resolution has not changed since the end of the Second World War. The resolution has been max. 576i x 768, or approx. 0.4 megapixels, for over 60 years. In comparison, modern cameras typically have a resolution of 12 megapixels, e.g. 4000 x 3000.

Why do cameras have high resolutions of 12 megapixels and more?

Photos are for printing. 0.4 megapixels are far too few for a good A4 picture. Even the most expensive printer cannot make a good A4 picture from 0.4 megapixels.

For the same reason HD-TV sets cannot display a good picture from the signal of an analogue cable TV. 16:9 programmes have black frames. The resolution is only 432 x 704. That corresponds to 0.3 megapixels – far too few for HD-TV sets!

Digital cable TVs show 16:9 programmes without black frames. Vertical resolution is increased from 432 lines to 576 lines. This alone already gives a visible picture improvement. A digital cable receiver is necessary for receiving digital cable TV. Please ask your cable provider.

A digital cable receiver with HDMI output allows HD-TV reception of the optimum HD signal at a resolution of 1920 x 1080i.

### Picture quality and black bars

 
Wide screen films come in different formats. The format is the relationship between the width and height of the picture. For example, with a 16:9 film the width to height ratio is 16:9 or 1.78:1. Only 16:9 films can fill a HD-ready screen without black bars. Therefore, black bars are always visible when a format other than 16:9 is received. E.g. 4:3, A 4:3 displays vertical black bars to the right and left.

If a 4:3 picture is increased to 16:9 format then it either appears distorted (see illustration) or some parts of the picture are cropped off at the top and the bottom. This is completely normal and is not a fault in the wide screen TV.


Super Cinemascope films are wider than 16:9 films. They are in the format 2.4:1 or 22:9, for example. This is clearly wider than 16:9. Therefore, Super Cinemascope films display black bars at the top and bottom on any HD-ready TV set.

### Picture format and resolution

There is no connection between the picture format and the resolution received. For example, the Super Cinemascope format can be received in all resolutions, even in the HD resolution 1080i x 1920. For HDTV reception too an HD-ready set may display black bars at the top and bottom.

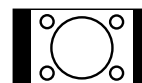

4:3 picture 1:1 on 16:9 screen

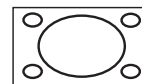 

4:3 picture zoomed on 16:9 screen

## Picture format

### Picture Size

The required picture format can be set by pressing the **PICTURE SIZE** button. Press **PICTURE SIZE** until the required format is displayed.

You move through the following formats when you press the button: Auto, 4:3, 16:9, 14:9, Cinema, Real (HDMI/DTV mode only).

### Auto

The picture is automatically only then shown in a format-filling display when a WSS-TV signal is received.

### Example:

If the analogue tuner receives a letterbox image with WSS signal then the resulting image looks like this:

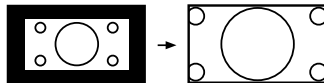 


illustration 1:  
Letterbox image is increased

### WSS:

Public broadcasters include 16:9 identification, the WSS signal (WideScreenSignalling), during transmission in order to ensure automatic conversion to 16:9.


Most private broadcasters do not transmit a WSS signal. Their 16:9 films are always broadcast in letterbox format. Automatic does not recognise anything without WSS signal and does not automatically alter the picture size. Use the **PICTURE SIZE** button to set the required picture size for private channels.

### Other formats

Press **PICTURE SIZE** until the desired size is reached.

#### 4:3

The picture is displayed in 4:3 format with black bars to the right and left.

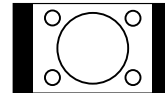 

#### 16:9

The width of the picture will be zoomed evenly.

 
**16:9** is particularly suitable for DVD players, DVB-T, DVB-C and satellite receivers, which can transmit and show 16:9 feature films without black bars. In the set-up menu of the set, adjust it to show that a 16:9 TV set is connected.

#### 14:9

The picture is increased somewhat but not up to the full screen width. Black bars remain on the right and left and also at the top and bottom.

### Cinema


Use Cinema to increase a small 4:3 letterbox signal. How do you recognise whether the broadcasting station / the set operating is using a 4:3 letterbox signal that is too low? Press the **PICTURE SIZE** button on the remote control until the 4:3 format appears. If the picture is surrounded by a black border as in the illustration, this is a 4:3 letterbox signal. Limited by the broadcasting station / the set operating, this signal is much too low for a 16:9 HD screen. Cinema increases this picture that is too small as far as possible. Natural visible poor focus emerges, rather as if a postcard were being increased to poster size. This unfocused appearance is conditioned by input signals that are too low and is in no way a production fault in this TV set.

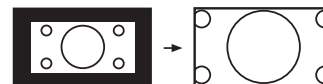

4:3 Letterbox picture increased to Cinema format.

### Real (HDMI/DTV mode only)

All images are displayed on the TV screen of 16:9 ratio without overscanning.

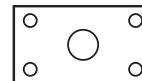 




### Note:





- In PC mode, the picture size feature is available only for 16:9- or 4:3- format.
- External receivers can automatically adjust the picture size via a SCART cable. Please read the instructions for the external receiver.
- If you select Real, the image might become a horizontal expansion according to the signal format. In this case, select an appropriate aspect with **PICTURE SIZE**.

## Other convenience functions


You can change the default settings to convenience use.

Selected Items		Setup hint
	Picture Preference	
	Memory	Your personal preferences
	Sport	Bright and dynamic picture (factory-set)
	Standard	Standard picture quality (factory-set)
	Movie	Movie-like picture setting (factory-set)
	Brightness / Contrast / Colour / Tint / Sharpness	
	You can adjust the picture to your preference.	
	Colour Temperature	
	Bluish (Cool) / Neutral (Medium) / Reddish (Warm) / Memory. Adjust R Gain, G Gain and B Gain.	
	Advanced Settings	
	DNR	Sometimes it is not possible to input a high-quality HD signal. The actual signal input is too small and noisy, e.g. a video film in letterbox format, or a noisy analogue cable TV signal. DNR can slightly reduce interferences caused by the faulty input signal.
	Low / Medium / High / Off	
	Blue Back	You can set the TV to automatically change to a blue screen and mute the sound if the signal is weak or absent.
	On / Off	
	Backlight	You can use the Backlight feature to adjust the screen brightness for improved picture clarity.
	HDMI Mode	See page 23.
	DBC	Use this feature to change the Backlight automatically according to the brightness of an image. The Backlight will become bright in a bright scene, and will become dark in a dark scene. • In DBC On mode, Backlight option is not available.
	On / Off	
	PC	See page 22.
	Reset	Select "Reset" to reset Picture Preference, Brightness, Contrast, Colour, Tint, Sharpness, Colour Temperature and Backlight to the factory preset values.
	Balance / Bass / Treble	
	You can adjust the sound quality to your preference.	
	Surround	
	On / Off	The Surround feature processes the audio signal to expand the listening field wider and deeper to create a 'pseudo surround-sound' from the TV's speakers. • The feature works with stereo signals from TV broadcast or AV input.
	Equalizer	
	Off / Rock / Pop / Live / Dance / Techno / Classic / Soft	You can change the characteristic of audio frequency.
	Speaker (LT-26.../LT-32...)	
	On / Off	You can set the audio output from speaker to "On" or "Off".
	Audio Description Setting	
	You can set the output audio of Visual Impaired Audio. This option is available, when the Audio Description setting is "On" only. Press ► to enter the following options.	
	Audio Description	You can set the Visual Impaired Audio. Visual Impaired Audio is verbal narration inserted to explain detailed scene in parallel with normal audio for people with visual impairment. • When the Audio Description is "On",  is displayed on the Information display (see page 13), if the signal with Visual Impaired Audio is received.
	On / Off	
	Volume	You can adjust the audio volume of Visual Impaired audio.
	Reset	Select "Reset" to reset Balance, Bass, Treble to the factory preset values.

## Other convenience functions

Selected Items		Setup hint
	Country	Set the country where you use this product.
	Audio Language	Select preferred audio language, if the current watching DTV channel has more than one audio language. • This option is not available for ATV channel.
	Audio Language 2nd	Select second preferred audio language, if the current watching DTV channel does not have the language set in Audio Language option above. If the Audio Language 2nd set here is not transmitted in the channel, the first displayed audio language in channel information is automatically selected. • This option is not available for ATV channel.
	Channel Set Up	See page 12.
	OSD Language	See page 12.
	Power Management	This feature controls the power management. If a period of time is elapsed with no video signal in PC mode, the power status is changed to stand by mode automatically. When there is available video signal again, the power status is returned to power on mode automatically.
	On / Off	
	Power On LED	To cancel the lighting of  indicator (P.7 (2)) during operation, set to "Off".
	On / Off	
	Time Setup	
	Time Zone	If the time displayed on the Channel Information differs from the actual time, adjust the time offset until the correct time zone is shown. • Normally, this would be done by selecting "Auto".
	Time	
	Auto Synchronization	See page 13.
	Date	
	Time	
	Timer	To activate or deactivate the Power On Timer and Power Off Timer.
	Both On/Power On Timer/Power Off Timer/Off	
	Power On Timer	Set the timer using  and <b>Number buttons (0-9)</b> .
	Power Off Timer	
	Sleep Timer	Sleep timer switches the TV to standby after a defined period of time. To cancel the Sleep Timer, set to "Off".
	Off	
	10~120 Minutes	
	Auto Power Off	When the Set and Remote key operation are not operated with specified period by this setting(1/2/4 Hours), the power status is changed to stand by mode automatically.
	Off / 1 Hour / 2 Hours / 4 Hours	
	AV Input (LT-19.../LT-22...: AV1 Input)	
	AV1 Input (LT-26.../LT-32...) AV2 Input	Only shown in AV-mode.
	Auto	Factory setting, normally OK.
	RGB (only for AV1 input)	when RGB is input.
	CVBS	when Composite is input.
	S-Video	When S-Video is input.

## Other convenience functions

Selected Items		Setup hint
	Subtitle	
	Analog Subtitle	If the receiving analog signal has the Teletext subtitle page, it displays the Teletext subtitle.
	On / Off	
	Digital Subtitle Language	Select preferred subtitle language, if the current watching DTV channel has more than one subtitle language.
	Digital Subtitle Language 2nd	Select second preferred subtitle language, if the current watching DTV channel does not have the language set in Digital Subtitle Language option above. If the Digital Subtitle Language 2nd set here is not transmitted in the channel, the first displayed subtitle language in channel information is automatically selected.
	Hearing Impaired	The hearing impaired subtitle type is output preferentially.
	On / Off	
	Teletext	
	Digital Teletext Language	First preferred Videotext language can be set here, which is used in case that the currently viewed DTV channel has more than one Videotext Languages. If the channel does not have the Videotext language set in Digital Teletext Language, the Videotext language is displayed with first receiving language.
	Analog Teletext Language	See page 13.
	Common Interface	You can access the Common Interface module information from this menu option. <ul style="list-style-type: none"> <li>This unit supports the C.I. card of "Top Up TV" and "Boxer".</li> <li>Depending on the C.I. card, CI Menu might be displayed automatically if you turn on power with the C.I. card inserted. To cancel the CI Menu, press <b>MENU</b> or <b>RETURN</b>.</li> </ul>
	Reset TV Setting	Press <b>►</b> to enter the Reset TV Setting screen. Enter the password 0 0 0 0. Press <b>◄</b> to select "OK", then press <b>ENTER</b> . Reset the TV function will now begin, and this unit will automatically turn off.
		See page 16.

## PC connection

Follow these steps: On your PC monitor choose a resolution of 1360 × 768 at 60Hz and save this configuration. Shut down your PC and connect the shut off LCD TV. Use a screensaver to avoid burning-in of static picture content.

### Select PC input

Switch on the LCD-TV.

Select the PC input mode (see page 12).

#### Note:


- If no signal or a signal with a non-supported resolution is connected, No Signal is displayed
- As this LCD-TV is not a PC monitor correct display cannot be guaranteed for every PC / graphics card.
- If by any chance the PC should create a picture on the HDMI-input then there can be no guarantees for its correct representation.

Supported PC resolutions	
resolution	fps (Hz)
640x480	60
800x600	60
1024x768	60
1280x720	60
1280x768	60
1360x768	60
1280x1024	60
1440x900	60
1920x1080	60

Use a PC-VGA cable (not supplied) to connect the LCD-Monitor to your PC. Make the connections carefully so as not to break or bend the contacts inside the plug.


LT-19.../LT-22....

TV (Rear view)

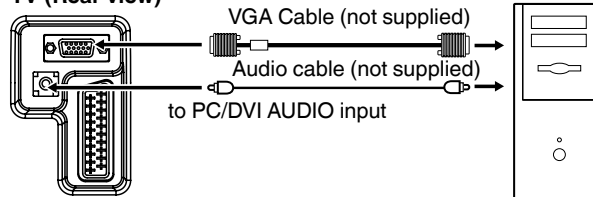


LT-26.../LT-32....

TV (Rear view)

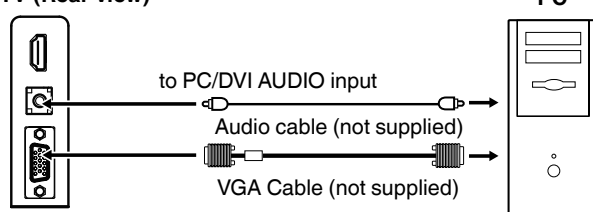

Example: Adjust the contrast.

 1 During PC mode press **MENU**.

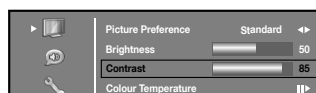

2 Select /Contrast, then press **ENTER**. Press **◀** or **▶** to adjust Contrast.


3 Press **RETURN** several times to return to the normal screen.

Selected Items		Setup hint	
	PC	Auto Adjust	Hor Position, Ver Position, Phase and Clock are adjusted automatically as per the input PC video signal. • When PC-input mode was selected and a PC-signal was input, Auto Adjust will be performed automatically.
		Hor Position	To adjust the horizontal placing of the image.
		Ver Position	To adjust the vertical placing of the image.
		Phase	Eliminates the horizontal (PHASE) interfering lines.
		Clock	Eliminates the vertical (CLOCK) interfering lines.


## Connecting an HDMI or a DVI device to the HDMI input

The HDMI input receives digital audio and uncompressed video from a HDMI equipped device or uncompressed digital video from a DVI equipped device. When you connect to a DVI device with a HDMI-to-DVI adapter cable, it only transfers the video signal, so it is necessary to use separate analogue leads to transfer the audio signals. Select the HDMI input mode (see P.12).

LT-19.../LT-22....

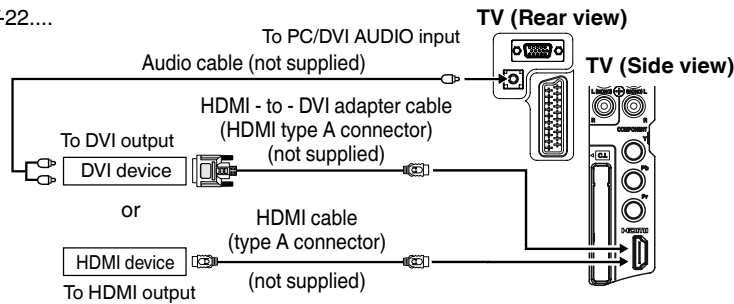


LT-26.../LT-32....

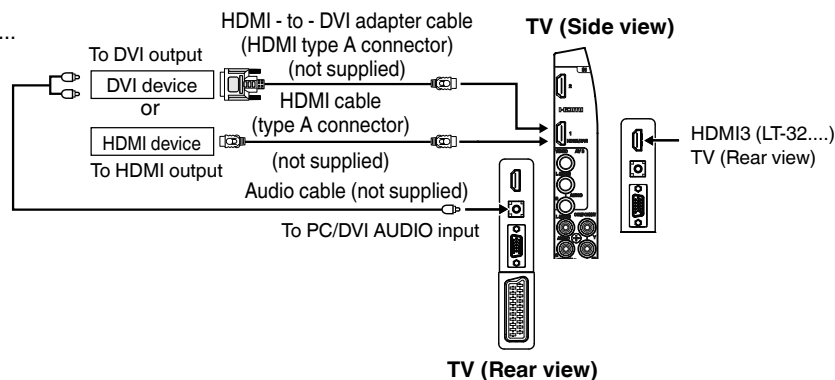

## Selecting the HDMI signal

- 1 Select /Advanced Setting/HDMI Mode option.

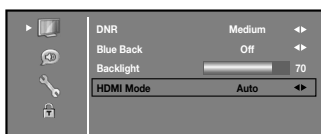

- 2 Then press ◀ or ▶ to select the desired mode.

**Auto:** Auto (factory setting), can remain in this mode. Change not necessary.

**PC:** PC (for PC), if desired.

**Video:** Video (for Video), if desired.

- 3 Press **MENU** to exit the menu.

### Note:

- Follow the user's manual that came with the HDMI-system, which you try to connect to this TV. If there is no picture available via HDMI-connection, do connect via SCART-cable first. Use the HDMI-system's remote-control to call the HDMI-system's setup-menu onto the screen. Follow the HDMI-system's manual, to set its video-output to HDMI. When successfully set to HDMI, select this TV's HDMI-input, as described on page 12 (Select Video Input).
- Some devices may not operate properly with the TV.

## Connection to other equipment

### 1. Connecting to other equipment

#### Attention: Preparation:

- Disconnect all equipment from the AC-supply, to prevent any possible damage.
- Make the necessary connections.
- Make sure all connections are safe & secure before reconnecting your equipment the AC-supply.

Please connect your satellite-receiver or DVD player via SCART (AV1). Make sure your SCART cable's cross-section is at least 1 cm or more. SCART cables with less thickness may cause visible noise.

Please make the following settings inside your receiver's / DVD-player's setup-menu:

Video signal: RGB


TV-Format: 16:9

If you miss to make these settings properly, picture quality will be inferior and parts of the picture might be missing. This is not a fault of this TV-set.

In case you need help to make this adjustment with your satellite-receiver / DVD-player, please consult the related instructions or contact the supplier or maker of those apparatus for support.

Please use the satellite's remote-control handset to select Teletext or desired TV-station. Generally it is not possible to store satellite TV-stations into a standard TV.

If the TV does not automatically switch to AV-1, please select INPUT AV1 manually, as seen on page 12.

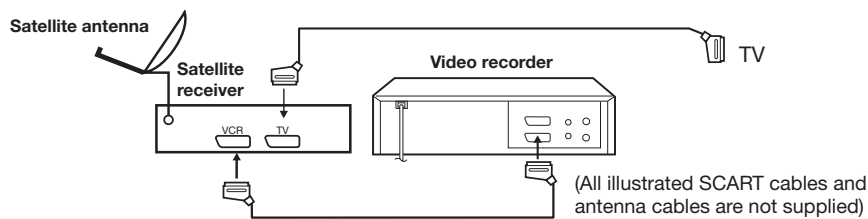


### 2. Connect video recorder (e.g. to record from DVB-T)

LT-19.../LT-22....

TV (Rear view)

Video recorder to AV1

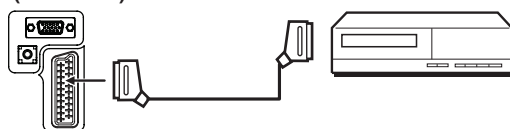


#### Note:

- Programme the video recorder timer to the desired time. The TV appliance cannot switch the video recorder on or off.

LT-26.../LT-32....

TV (Side view)

Video recorder to AV1

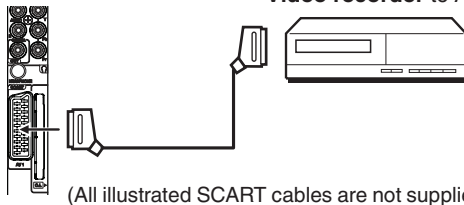




## Connection to other equipment

### 3. Connecting an audio system

You can supply the TV sound to the stereo equipment (A) with the SCART socket. Use a special SCART cable for the connection which sold at the accessory shop. (please consult your hi-fi instructions for details). If you have a surround sound amplifier/decoder (B) with a coaxial digital input, you can connect the Coaxial Digital Audio Output to it, using a suitable coaxial digital lead.


#### Note:

- For LT-19... and LT-22..., you can hear only the sound received with a built-in tuner in the connection of (A), but you can not hear the sound input to an external input terminal.
- The Balance/Bass/Treble adjustments (see P.19) only function with the sound from the TV speakers - it does not affect the audio output sockets.

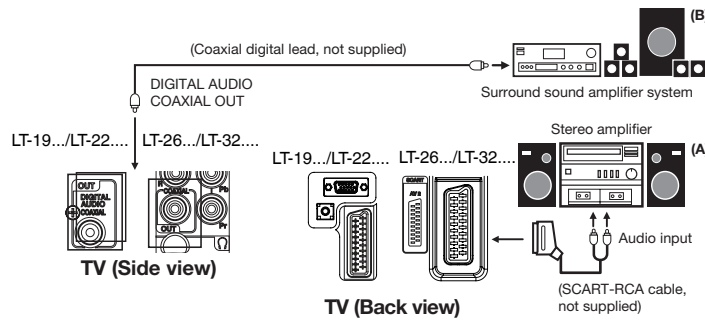


### 4. Connecting a Video camera or Games console

#### TV (Side view)

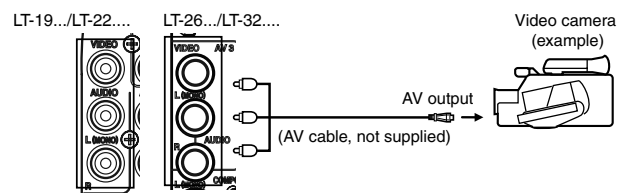

### 5. Connecting to a DVD player or other AV device with Component Video outputs

If your DVD player (or other device) has Component Video output jacks, use a suitable set of leads (RCA/Phono) to connect these to the Component Video inputs on this TV as shown - it can greatly enhance the picture quality and performance. Please remember that you will also need to connect separate leads (RCA/Phono) for the audio signals. Select the COMPONENT input mode (see P.12).

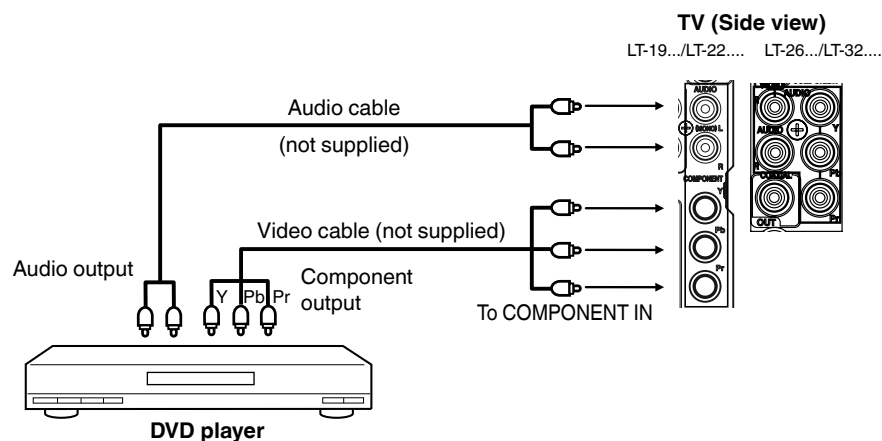


#### Note:

- The Component Video input of this unit are for use with equipment which outputs interlaced signals (PAL: 576i/1080i or NTSC: 480i/1080i) and progressive signals (PAL: 576p/720p or NTSC: 480p/720p).

## Troubleshooting table

Please check the following list before requesting service.

Symptom	Possible solution	Page
No picture, no sound	Switch on the set. Check that the mains power outlet is properly connected. Select appropriate input mode. Unplug unit for 1 minute, then plug it back in.	7 12
No reception	Have you tuned in the TV stations? Press 1 on the remote control. Connect the antenna. Make sure the set is ON and not in Standby mode	10 11
The TV switches off with missing antenna input signal	This is normal. 15 minutes after the antenna signal has disappeared, the set will change to standby mode.	13
In  menu, the Channel option cannot be selected.	The unit is set to AV mode. Press 1 on the remote control.	12
Wrong Colours	Colour and Brightness errors can occur when the viewing angle/ambient air temperature (see technical specifications) are exceeded.	
While viewing a DVB (digital) channel, there is sound but no picture.	Some channel offers audio content only. It is normal.	
Blocky image or image stops intermittently.	Check all antenna connections. Move the antenna away from areas of possible interference. Try using an antenna booster.	10
Some digital channels cannot be viewed.	Contact the service provider to subscribe.	
No colour or picture black.	AV input set to AUTO.	20
Picture appears sometimes too dark.	Switch off DBC.	19

- The LCD panel is a very high technology product, giving you fine picture details. Occasionally, a few nonactive pixels may appear on the screen as a fixed point of blue, green or red. Please note that this does not affect the performance of your product.

## Specifications

	LT-19HA22U	LT-22HG22U	LT-26HG22U	LT-32HG22U
System	Analogue: PAL UK, IR, CCIR, FRENCH System, B/G, D/K, I/I, L Digital: DVB-T (OFDM 2k/8k 16QAM/64QAM), DVB-T HD (H.264)			
Video Colour System	PAL/SECAM/NTSC 3.58/NTSC 4.43/PAL 60			
Preset channels	2000 Service in total of Analog and Digital			
Frequency Range	Analogue: IreE2~E4, X~Z+2, S1~S10, E5~E12, S11~S41, E21~E69 Digital: E5~E12, ItaD~H2, Fra1~6, Rus6~12, E21~E69			
Power Supply	AC 220-240V, 50Hz			
Power Consumption	Operation:	23W at AC230V, 50Hz	28W at AC230V, 50Hz	55W at AC230V, 50Hz
	Standby:	0.7W at AC230V, 50Hz		95W at AC230V, 50Hz
LCD	47 cm visible		66 cm visible	80 cm visible
	TFT low-glass Active Matrix Colour LCD, 1920 x 1080 (LT-19...: 1366 x 768) Pixel			
HDMI input	HDMI compliant (type A connector) HDCP compliant Suggested scan rates: PAL: 576i/576p/720p/1080i/1080p NTSC: 480i/480p/720p/1080i/1080p HDMI Audio: 2-channel PCM, 32/44.1/48 kHz sampling frequency 16/20/24 bits per sample			
Output Power	1.5W (MAX) x 2		10W (MAX) x 2	
Surrounding temperature	Operation: 5°C ~ 40°C/Storage: -20°C ~ 60°C			
Operating Humidity	Less than 80%RH			
Dimensions (W) x (H) x (D)	47 x 35 x 15 cm	54 x 39 x 15 cm	66 x 48 x 18 cm	79 x 55 x 18 cm
Weight (w/o Accessories)	3.0 kg	3.5 kg	7.0 kg	9.8 kg
Accessories	2 batteries (AA/R6/UM-3)/Remote control unit/AC cord/Stand/Screws for stand (LT-19.../LT-22...: x 2/LT-26...: x 3/LT-32...: x 5)			

Weight and dimensions are approximate. Because we continually strive to improve our products we may change specifications and designs without prior notice.



**JVC has assigned the service and in warranty responsibility to Kesa Electricals plc.**

FOR CUSTOMER SERVICE, ADDITIONAL SET-UP AND OPERATING ASSISTANCE, OR TO ORDER ACCESSORIES PLEASE CALL:

Country	Sales Company	Tel	URL Main	Service Contact
UK	COMET	0844 8009595	<a href="http://www.comet.co.uk">http://www.comet.co.uk</a>	-
France	DARTY	0978970970	<a href="http://www.darty.com/">http://www.darty.com/</a>	-
Spain	EMH	-	<a href="http://www.emh.es/">http://www.emh.es/</a>	<a href="mailto:pedidosweb@emh.es">pedidosweb@emh.es</a>
Belgium	NVB	02/334.00.00	<a href="http://www.vandenborre.be/">http://www.vandenborre.be/</a>	<a href="mailto:service@vandenborre.be">service@vandenborre.be</a>
Netherlands	BCC	0900-0555	<a href="http://www.bcc.nl/">http://www.bcc.nl/</a>	<a href="http://www.bcc.nl/info/contact">http://www.bcc.nl/info/contact</a>
Italy	DARTY IT	800928884	<a href="http://www.darty.it/">http://www.darty.it/</a>	<a href="mailto:scrivici@darty.it">scrivici@darty.it</a>
Czech	DATART	810 328 278	<a href="http://www.datart.cz/">http://www.datart.cz/</a>	<a href="mailto:infolinka@datart.cz">infolinka@datart.cz</a>

**WHEN CALLING CUSTOMER SERVICE - PLEASE HAVE YOUR MODEL NUMBER READY**