
www.philips.com/welcome

SHC5100



EN User manual

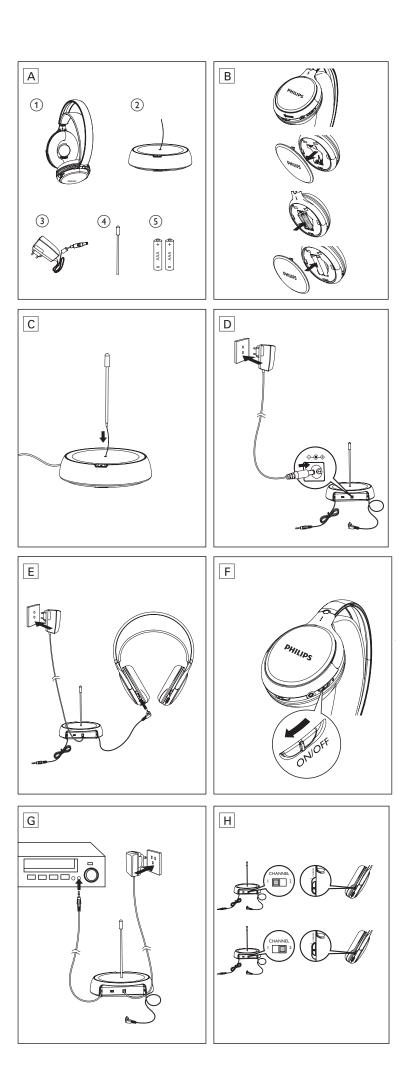



Contents

1	What's in the box	
2	Get started	
3	Product version table	

1 What's in the box

1) Headphone	2) Transmitter				
3) AC/DC adaptor	4) Antenna tube				
5) 2 x AAA rechargeable shortened sleeve NiMH batteries (SBC HB550L)					

2 Get started

Note

- Before using the headphones for the first time, charge the supplied batteries for at least 10 hours.
- Only use Philips rechargeable shortened sleeve NiMH batteries with your headphones. Other types of rechargeable batteries cannot be charged with this system.
- AAA alkaline batteries can be used to operate the headphones, but cannot be charged with this system
- cannot be charged with this system.

 If the volume of the audio source is insufficient, the transmitter automatically turns off.
- 1 Install/Replace supplied batteries (Fig. B).
 - Install the antenna tube into the transmitter (Fig. C).
- Power on the transmitter (Fig. D).
 - → Red LED is on when audio source is connected.
 - → Red LED blinks if no audio source is connected for two minutes.
 - → Red LED is off if no audio source is connected for four minutes.
- 4 To charge the headphones, connect the charging cable with the headphones (Fig. E).
 - → Headphones: red LED is off during charge.
 - → Transmitter: green LED is on during charge and is off when headphones are fully charged.
- 5 Power on the headphones and red LED is on (Fig. F).
 - Connect the audio device with the transmitter (Fig. G).
 - → Green LED is on when it is connected.



• If there is interference, tune the transmitter and the headphones to the same channel (Fig. H).

Product version table

Ver-	Adaptor type	Input	Output	Carrier /	
sion /	number	voltage /	voltage	Reception	
Region		frequency		frequency	
				Channel 1	Channel 2
/10	SVV-005-	100-240V	8V	863.5MHz	864.5MHz
Europe 080-020-A2		/ 50/60Hz	200mA		
/05 UK	SBH-005-			863.5MHz	864.5MHz
	080-020-A2	/ 50/60Hz	200mA		

For further product support, please visit www.philips.com/welcome



