

# Quasar®

P2 ~ P10  
Getting Started

P11 ~ P14  
Basic TV Operation

P15 ~ P17  
Basic VCR Operation

P18 ~ P20  
More you Can Do

P21 ~ Back Cover  
Other Information

VHS



COMBINATION-VCR

MODEL VV2007/VV2017W

## OWNER'S MANUAL

Before attempting to connect, operate or adjust this product, please read these instructions completely. Please save this instruction book for your reference.

Spanish Quick Use Guide is included.

Guía para rápida consulta en español está incluido.

# Things You Should Know

## Congratulations

on your purchase of one of the most sophisticated and reliable products on the market today. Used properly, it will bring you and your family years of enjoyment. Please fill in the information at right. The serial number is on the tag located on the back of your Combination VCR.

Date of Purchase \_\_\_\_\_  
Dealer Purchased From \_\_\_\_\_  
Dealer Address \_\_\_\_\_  
Dealer Phone No. \_\_\_\_\_  
Model No. \_\_\_\_\_  
Serial No. \_\_\_\_\_

## Safety Precautions

**Warning: To prevent fire or shock hazard, do not expose this equipment to rain or moisture.**

 
This video recorder, equipped with the HQ (High Quality) System, is compatible with existing VHS equipment. Only use those tapes with the **VHS** mark. It is recommended that only cassette tapes that have been tested and inspected for use in 2, 4, 6, and 8 hour VCR machines be used.

This television receiver provides display of television closed captioning in accordance with §15.119 of the FCC rules.

 <b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN		This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL		This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

## Table of Contents

Important Safeguards and Precautions.....	3
Unpacking Your Combination VCR • Product Features .....	4
<b>Getting Started</b>	
Antenna or Cable Connections (Outdoor Antenna, Cable Box, Scrambled/Unscrambled Channels) .....	5
Location of Controls (Remote Control, Combination VCR) .....	6, 7
One Time Setup (On-Screen Language, Channel Memory, Auto Clock Set) .....	8, 9
On Screen Displays (OSD) (Function, Channel, Menu, VCR Status/Clock, Warning, Instruction).....	10
<b>Basic TV Operation</b>	
TV Operation (Main Operation, Using the 100 key, Rapid Tune, Audio Mute, Phones, Game mode) .....	11
Picture Adjustment (Color, Tint, Bright, Picture, Sharpness, Reset) .....	12
TV Timer Features (Alarm Timer, Sleep Timer) .....	13
Closed Caption System (Main Operation, Caption On Mute).....	14
<b>Basic VCR Operation</b>	
Playback a Tape (Special Effects, Quality Picture Features) .....	15
Tape Operation (Repeat Play, One Minute Skip, Zero Search, Auto Functions).....	16
Record On a Tape (Main Operation, One Touch Record, Input Select) .....	17
<b>More You Can Do</b>	
Timer Recording (Main Operation, Cancel, Clear, Replace Program).....	18, 19
Copying Your Tapes (Connection, Main Operation) .....	19
Special VCR Features (VCR Lock, Warning Beeper) .....	20
<b>Other Information</b>	
Unit and Cassette Information .....	21
Before Requesting Service (Self-check Items) .....	22
Service Center List.....	23
Spanish Quick Use Guide/Guía para rápida consulta.....	24, 25, 26, 27
Warranty .....	Back Cover

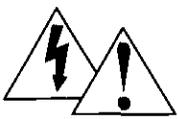

# Important Safeguards and Precautions

**FOR YOUR SAFETY, READ AND RETAIN ALL SAFETY AND OPERATING INSTRUCTIONS. HEED ALL WARNINGS IN THE MANUAL AND ON THE UNIT**

## INSTALLATION

### 1 POWER SOURCE CAUTION

Operate only from a power source indicated on the unit or in this manual.

If necessary, have your Electric Utility Service Company or Video Products Dealer verify the power source in your home.

### 2 POLARIZED OR GROUNDING PLUG

As a safety feature, this Video product comes with either a polarized power cord plug (one blade is wider than the other), or a three-wire grounding type plug.

#### POLARIZED PLUG CAUTION:

This plug will only fit into an outlet one way. If you cannot fully insert the plug, try reversing it. If it still will not fit, have an electrician install the proper wall outlet. Do not defeat the safety feature by tampering with the plug.

#### GROUNDING PLUG CAUTION:

This plug will only fit into a three-hole grounding outlet. If necessary, have an electrician install the proper outlet. Do not defeat the safety feature by tampering with the plug.

### 3 POWER CORD

Make sure power cords are routed so that they are not likely to have anything rest on them, roll over them, or be in the way of walking traffic.

If an extension cord is used, make sure it also has either a polarized or grounded plug and that the cords can be securely connected.

Frayed cords, damaged plugs, and damaged or cracked wire insulation are hazardous and should be replaced by a qualified service technician.

Overloaded outlets and extension cords are fire hazards and should be avoided.

### 4 DO NOT BLOCK VENTILATION HOLES

Ventilation openings in the cabinet release heat generated during operation. If they are blocked, heat build-up inside the unit can cause failures that may result in a fire hazard or heat damage to cassettes.

For protection follow these rules:

- Never cover ventilation slots or the unit while in use, or operate the unit when placed on a bed, sofa, rug, or other soft surface.
- Avoid built-in installation, such as a book case or rack, unless proper ventilation is provided.

### 5 AVOID EXTREMELY HOT LOCATIONS OR SUDDEN TEMPERATURE CHANGES

Do not place the unit over or near any kind of heater or regulator, in direct sunlight, inside a closed vehicle, etc.. Do not move the unit suddenly between areas of extreme temperature variation. If the unit is suddenly moved from a cold place to a warm place, moisture may condense in the unit and on the tape.

### 6 TO AVOID PERSONAL INJURY


- Do not place unsecured equipment on a sloping surface.
- Support for the unit should be firm, level, and adequately strong.
- An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- Carefully follow all operating instructions and use the manufacturer's recommended accessories when operating this unit or connecting it to any other equipment.



## OUTDOOR ANTENNA INSTALLATION

### 1 SAFE ANTENNA AND CABLE CONNECTION

If an outside antenna or cable system is connected to the equipment, be sure the antenna or cable system is grounded so as to provide some protection against built up static charges and voltage surges. Section 810 of the National Electrical Code, ANSI/NFPA 70 (in Canada, part 1 of the Canadian Electrical Code) provides

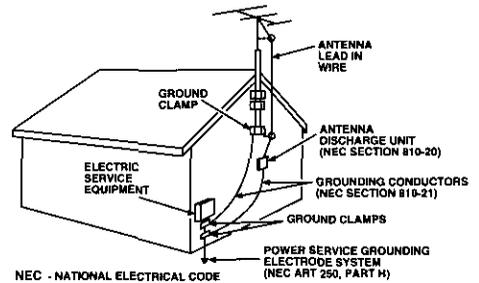

information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements for the grounding electrode.

### 2 KEEP ANTENNA CLEAR OF HIGH VOLTAGE POWER LINES OR CIRCUITS

An outside antenna system should be located well away from power lines, electric light or power circuits and where it will never come into contact with these power sources if it should happen to fall. When installing an outside antenna, extreme care should be taken to avoid touching power lines, circuits or other power sources as this could be fatal. Because of the hazards involved, antenna installation should be left to a professional.

## USING THE VIDEO UNIT

If the unit has been in storage or moved to a new location, refer first to the INSTALLATION section of these safeguards.

### 1 KEEP THIS VIDEO UNIT AWAY FROM WATER OR MOISTURE OF ANY KIND.

**2 IF EQUIPMENT IS EXPOSED TO RAIN, MOISTURE, OR STRONG IMPACT**, unplug the unit and have it inspected by a qualified service technician before use.

### 3 DURING AN ELECTRICAL STORM

During a lightning storm, whether indoors or outdoors, or before leaving the unit unused for extended periods of time, disconnect all equipment from the power source as well as the antenna and cable system.

### 4 WHEN THE UNIT IS PLUGGED IN

- Never expose the unit to rain or water. **DO NOT OPERATE** if liquid has been spilled into the unit. Immediately unplug the unit, and have it inspected by a service technician. Fire and shock hazards can result from electrical shorts caused by liquid contact inside.
- Never drop or push any object through openings in the unit. Some internal parts carry hazardous voltages and contact can cause electric shock or fire hazard.
- Avoid placing the unit directly above or below your TV set as this may cause electrical interference. Keep all magnets away from electronic equipment.

### 5 USING ACCESSORIES

Use only accessories recommended by the manufacturer to avoid risk of fire, shock, or other hazards.

### 6 CLEANING THE UNIT

Unplug the unit. Then, use a clean, dry, chemically untreated cloth to gently remove dust or debris. **DO NOT USE** cleaning fluids, aerosols, or forced air that could over-spray, or seep into the unit and cause electrical shock. Any substance such as wax, adhesive tape, etc. may mar the cabinet surface. Exposure to greasy, humid, or dusty areas may adversely affect internal parts.

## SERVICE

### 1 DO NOT SERVICE THIS PRODUCT YOURSELF

If, after carefully following the detailed operating instructions, this Video product does not operate properly, do not attempt to open or remove covers, or make any adjustments not described in the manual. Unplug the unit and contact a qualified service technician.

### 2 IF REPLACEMENT PARTS ARE REQUIRED

Make sure the service technician uses only parts specified by the manufacturer, or those having the same safety characteristics as the original parts. The use of unauthorized substitutes may result in fire, electric shock, or other hazards.

### 3 HAVE THE SERVICE TECHNICIAN PERFORM A SAFETY CHECK


After any service or repairs to the unit, request the service technician to conduct a thorough safety check as described in the manufacturer's service literature to insure that the video unit is in safe operating condition.

# Unpacking Your Combination VCR • Product Features


## Unpacking Your Combination VCR

The accessories shown below are provided to help you use or set up your Combination VCR.

### Accessories

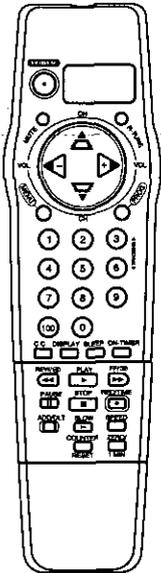

 Remote Control  
VSQS1485 (VV2007)  
VSQS1486 (VV2017W)

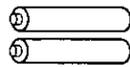


2 "AA" Batteries


To order accessories,  
call toll free 1-800-332-5368.

## Load the batteries

 
**1** Push in and up on the latch with your thumb nail and lift off the lid.

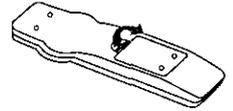

 **2** Install two batteries as indicated inside the Battery Compartment.

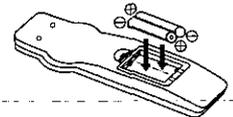

 **3** Fit the lid's hinge piece into the indent on the case, and snap the lid into place.

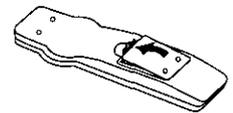

### Battery replacement caution

- Do not mix old and new batteries.
- Do not mix alkaline with manganese batteries.

## Product Features


Alarm Timer .....	13
All Channel Auto Set/181-CH TV/CATV Tuner .....	8
Auto Clock Set .....	8, 9
Auto Daylight Saving Time .....	21
Auto Operation Functions (Auto Shut Off, Auto Playback, Rewind, Tape Eject, Power Off) .....	16
Auto Repeat Function .....	16
Black Tube .....	15
Closed Caption System .....	14
Easy-to-Read English/Spanish/French On Screen Displays .....	8, 9, 18, 19
Front-mounted A/V In Terminals .....	19
Game Mode .....	11
Head Clog Sensor .....	21
One Minute Skip .....	16
One Month, 8 Program Auto Timer Recording .....	18, 19
One Touch Recording (OTR) .....	17
Quick Play Mechanism .....	22
Rapid Tune .....	11
Special Effects Playback .....	15
Special VCR Features (VCR Lock, Warning Beeper) .....	20
Zero Search .....	16



# Antenna or Cable Connections

## Outdoor Antenna Connection

Unhook the antenna from your previous TV or VCR and connect it to the back of the Combination VCR as shown in the diagram. If your antenna system has separate UHF and VHF lead-ins, you need a UHF/VHF Band Mixer (not supplied).

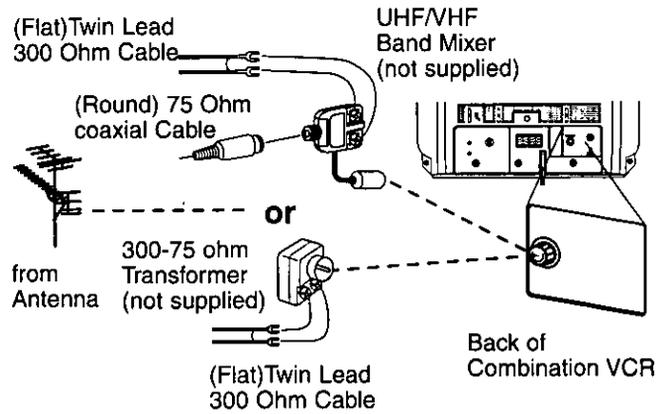



## Cable Connections

### (A) Without a Converter/Descrambler Box

With this connection, you can: use your Combination VCR remote control to select channels for viewing and select unscrambled channels for timer recording. Scrambled channels may not be viewed or recorded with this connection.

### (B) With a Converter/Descrambler Box

With this connection, you may record and view any channel including scrambled channels. Please note, however that channel selection must be made at the cable company converter box. Timer recording is limited to one channel at a time, and you can only view the channel you are recording.

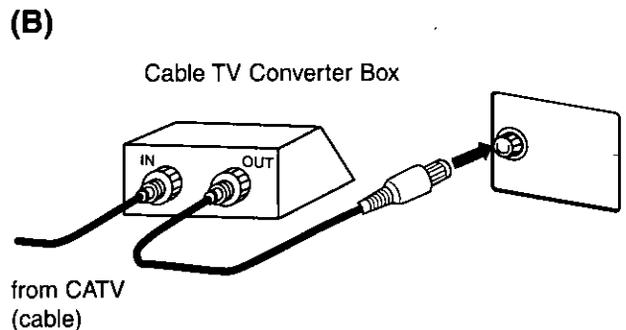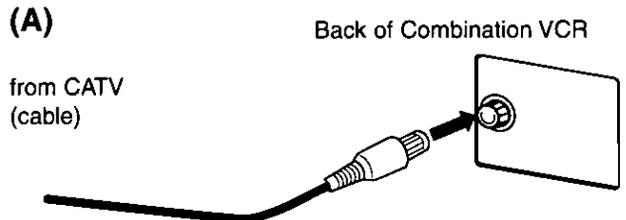

## To Watch and Record Scrambled/Unscrambled Channels

Set the Combination VCR to the output channel of the cable converter box (e.g. CH3). Now, select channels to be viewed or recorded at the cable converter box.

**FCC WARNING:** Any unauthorized changes or modifications to this equipment would void the user's authority to operate.


### Note to CATV System Installer

This reminder is provided to call the CATV (Cable TV) System Installers attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.




# Location of Controls

## Remote Control Button

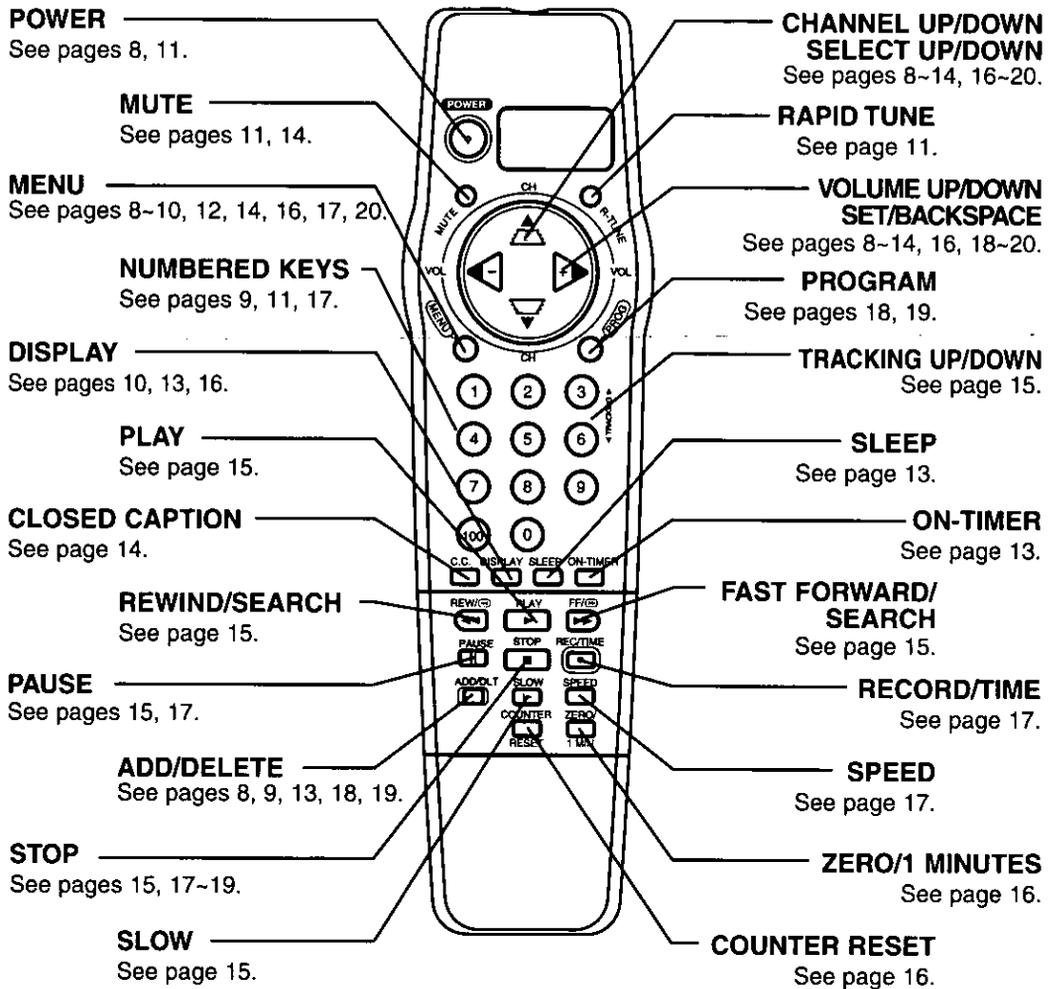

## Indicators on the Front Panel

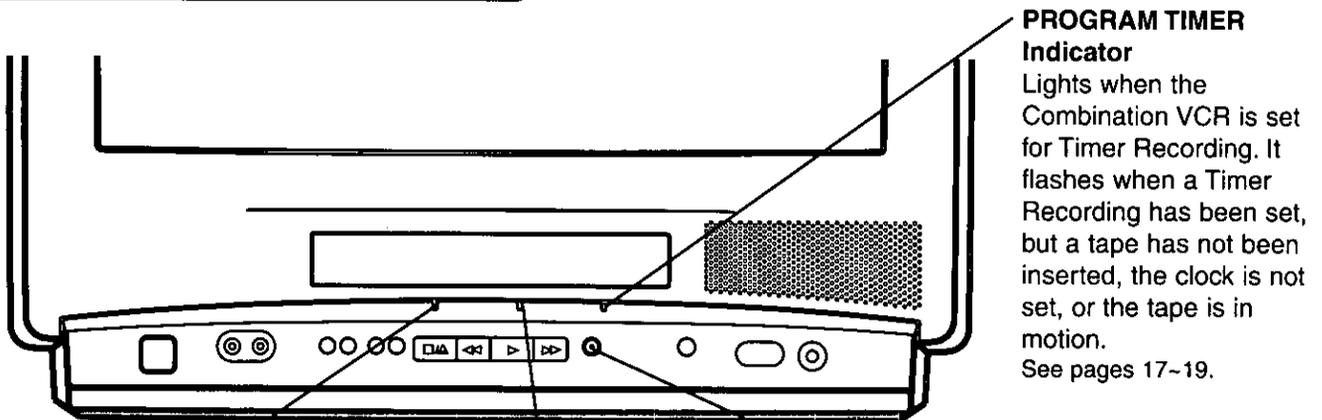


**ON TIMER Indicator**  
Lights when the On Timer is set.  
See page 13.


**REPEAT Indicator**  
Lights when "REPEAT PLAY: ON" is selected and playback is in progress.  
See page 16.

**RECORD Indicator**  
Lights during recording. In Rec Pause or OTR Pause mode, the indicator flashes.  
See page 17.

## Front View of the Combination VCR

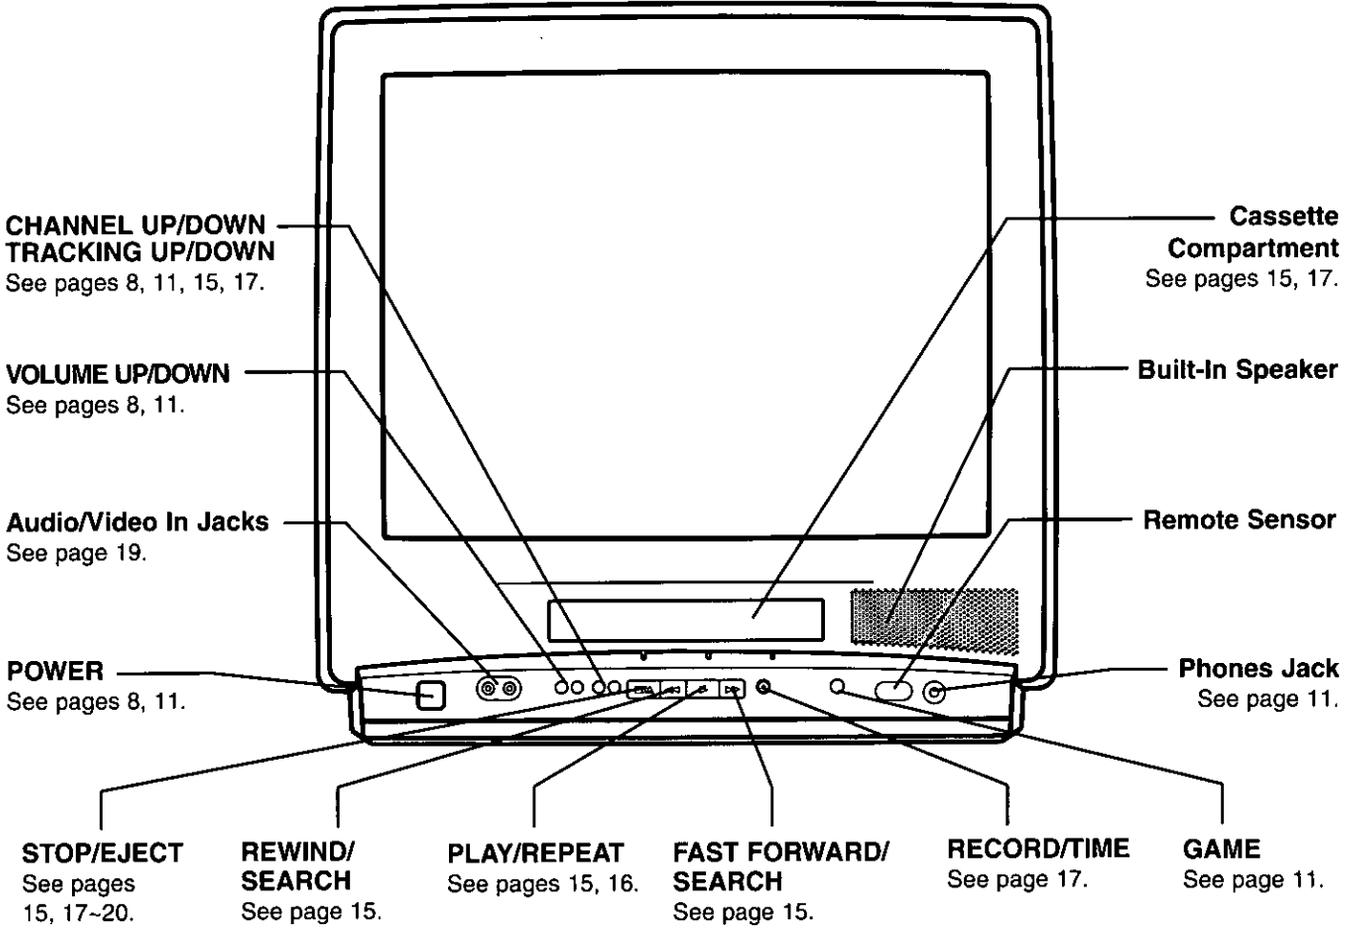

## Rear View of the Combination VCR

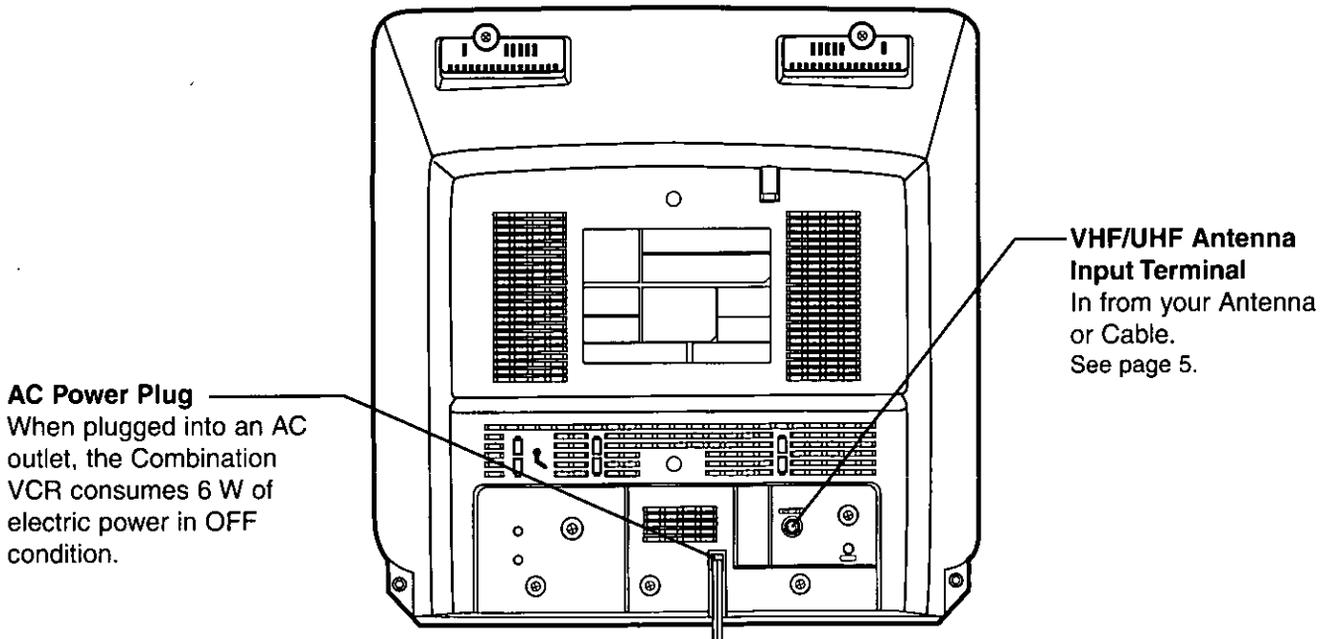





# One Time Setup

## Check list before you begin.


- Your Combination VCR is connected to an Antenna, or Cable system (see page 5).

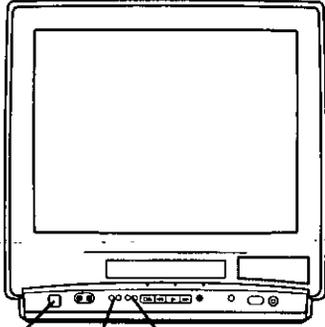

- ①
- ②
- ②
- ③
- ④

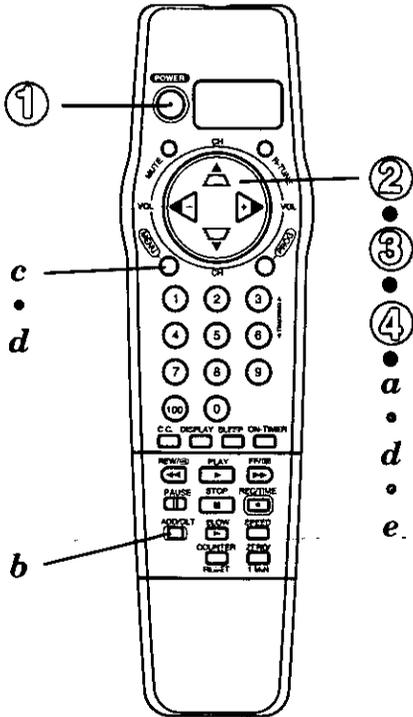

## Using the $\Delta$ $\nabla$ $\leftarrow$ $\rightarrow$ keys

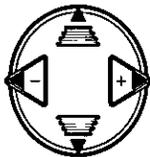

Whenever a menu or program screen is displayed, CHANNEL UP/DOWN and VOLUME UP/DOWN on the remote control function as  $\Delta$   $\nabla$   $\leftarrow$   $\rightarrow$  only. For VOLUME UP/DOWN functions, use the buttons on the Combination VCR.

## To Set Language, Channels, and Clock

When the Combination VCR power is first turned on the channel auto set and set clock screens appear automatically.



Push **POWER** to turn the Combination VCR on.



Push  $\Delta$ ,  $\nabla$  or  $\rightarrow$  for on-screen displays in English, Spanish or French.

- If you choose the wrong language, please see the "Reset all Combination VCR Memory Functions" section on page 21.
- If you use a cable box, the cable box must be left on for auto channel set.

**SELECT LANGUAGE**  
 PUSH CH  $\Delta$  :English  
 PULSE CH  $\nabla$  :Español  
 APP. VOL  $\rightarrow$  :Français



**Important: If you use a cable box, turn it on and select PBS station in your time zone.**



Push  $\Delta$  to start Channel Auto Set and Clock Auto Set.

**CHANNEL/CLOCK AUTO SET**  
 CONNECT ANTENNA CABLE AND IF YOU USE A CABLE BOX, TUNE IT TO YOUR LOCAL PBS CH THEN...  
 PLEASE PUSH CH UP KEY

These on-screen displays will appear in sequence.

- CH AUTO SET PROCEEDING
- CH AUTO SET COMPLETED
- AUTO CLOCK SET PROCEEDING

Case 1

7/28/1997 MON 12:00PM  
 DST:ON  
 SETTING : CH 10  
 AUTO CLOCK SET  
 COMPLETED  
 END : PUSH CH UP KEY

Case 2

AUTO CLOCK SET  
 IS INCOMPLETE  
 PUSH MENU TO SET CLOCK



**Case 1** Confirm that displayed time is correct and push  $\Delta$  to exit.

**If the displayed time and D.S.T. are incorrect,**

In the rare event that you live within broadcast range of two PBS stations in two different time zones, the Combination VCR may recognize the wrong PBS station. To correct this situation, do the following:


- Make a note of the SETTING: CH number shown on-screen and push  $\Delta$  to exit.
- Delete the setting channel from the Combination VCR channel memory. (See the Add or Delete a Channel section on the next page.)
- Push MENU to display the menu.
- Push  $\Delta$   $\nabla$   $\leftarrow$   $\rightarrow$  to select "CLOCK," and then push MENU to display the SET CLOCK screen.
  - If you use a cable box and have multiple PBS stations, tune the cable box to a different PBS station and try auto clock set again using the menu.
- Push  $\Delta$   $\nabla$  to select "AUTO SET," and then push  $\rightarrow$  to set and to  $\Delta$  start.




- Auto clock set will be performed when the Combination VCR is turned off the first time each day. If you use a cable box and you want auto clock set to be performed, the cable box must be left on and tuned to the PBS channel at the time the Combination VCR power is turned off.
- If for any reason the time is changed manually, automatic time correction will not occur.

**Case 2** If AUTO CLOCK SET IS INCOMPLETE appears, please set the clock manually.

- a. Push MENU to display the SET CLOCK screen.
  - b. Push  $\Delta \nabla$  to select and  $\triangleright$  to enter the month, date, year, time, and D.S.T. (Daylight Saving Time).
- To Make Corrections,**  
push  $\triangleleft \triangleright$  repeatedly to move back or forward to the desired item.
- c. Push MENU to start the clock. Then, push  $\Delta \nabla \triangleleft \triangleright$  to select "EXIT." Now, push MENU to exit the MAIN MENU.

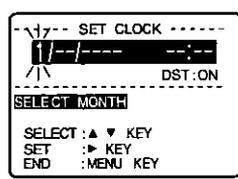


- "DST:ON" automatically adjusts for daylight saving time. (See page 21.)

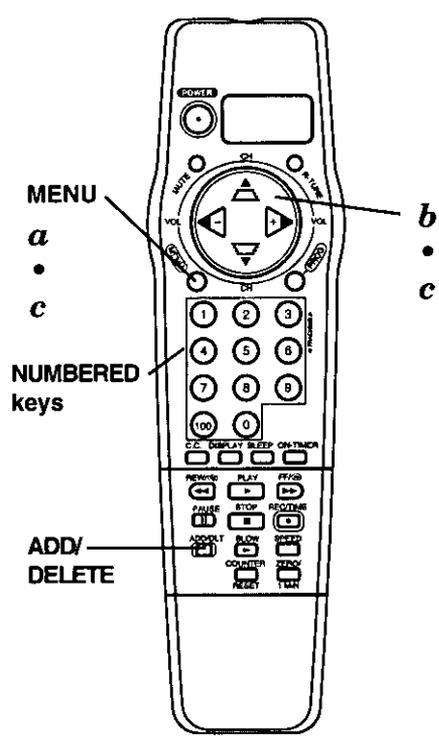

## To Change or Re-enter One Time Setup Items

### To Change the OSD Language

- 1 Push MENU to display the MAIN MENU.
- 2 Push  $\Delta \nabla \triangleleft \triangleright$  to select the language selection icon.
- 3 Push MENU repeatedly to change the language as shown.


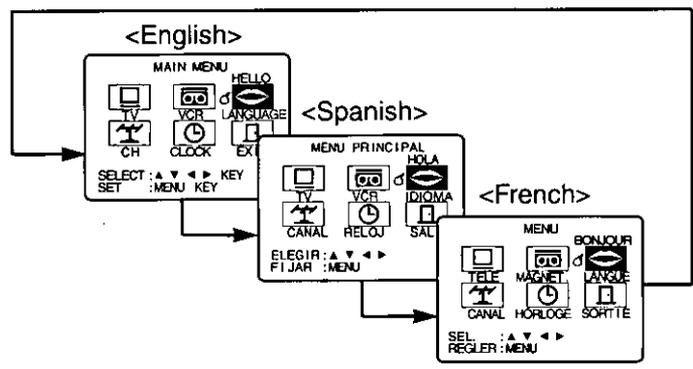


- 4 Push  $\Delta \nabla \triangleleft \triangleright$  to select "EXIT," and then push MENU to exit the MAIN MENU.

### To Replace Channels in Memory

In case, you have cable installed, etc.



- 1 Push MENU to display the MAIN MENU.
- 2 Push  $\Delta \nabla \triangleleft \triangleright$  to select "CH," and then push MENU to display the SET UP CHANNEL screen.
- 3 Push  $\Delta \nabla$  repeatedly to select ANTENNA SYSTEM, and then push  $\triangleright$  to select your antenna system (TV or CATV).
- 4 Push  $\Delta \nabla$  to select AUTO SET, and then push  $\triangleright$  to start.
  - To exit this mode, push MENU. Then, push  $\Delta \nabla \triangleleft \triangleright$  to select "EXIT." Now, push MENU to exit the MAIN MENU.

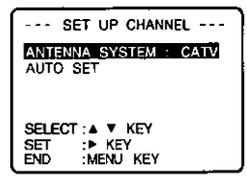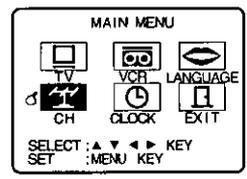

### To Set or Reset the Clock


In case the clock is wrong, or a power failure occurred.

- 1 Push MENU to display the MAIN MENU.
- 2 Push  $\Delta \nabla \triangleleft \triangleright$  to select "CLOCK." Then, push MENU to display the SET CLOCK screen.
- 3 Push  $\Delta \nabla$  to select "MANUAL SET," and then  $\triangleright$  to display the SET CLOCK screen.
- 4 Please do steps *b* and *c* at the top of this page.

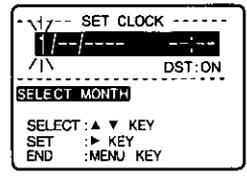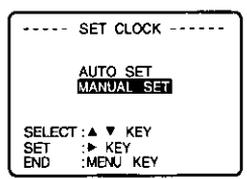

### To Add or Delete a Channel

- 1 Select a channel using the NUMBERED keys to add or the CH  $\Delta \nabla$  to delete.
- 2 Push the ADD/DLT to add or delete the channel.
  - To select a channel once it's deleted, use the NUMBERED keys.

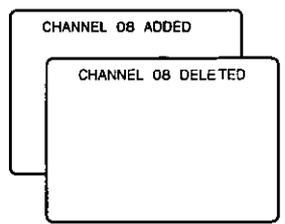

**NOTES**

- This Combination VCR will accurately maintain its calendar up to Dec. 31, 2089, 11:59PM.
- Normal TV or Cable channels are automatically selected and placed in memory depending on how your Combination VCR is hooked up.




# On Screen Displays (OSD)

## Channel & Function Display

Whenever the channel is changed, the channel number will appear for a few seconds on-screen. (Some station names may also appear.)

When a function button is pushed (PLAY, FF, etc.), the Combination VCR mode will be displayed.


- When a recording is started, both REC and the channel number will appear together.

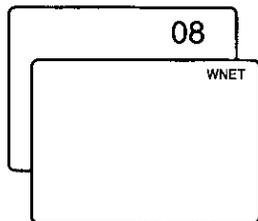

## Menu Screen

- 1 Push MENU to display the MAIN MENU.
- 2 Push  $\Delta$   $\nabla$   $\leftarrow$   $\rightarrow$  and MENU to make your selection (see page 8).


- To get the most from each feature, please read the Operation Manual before attempting any operation.

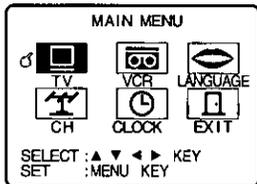

## VCR Status & Clock Display



Push DISPLAY to display and remove the overlay shown below.

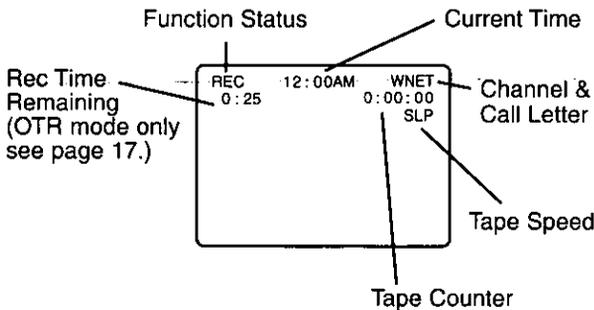


## Blank Tape/ No Video Signal Indication

When a blank section of tape comes up in Play mode, or the selected channel has no broadcast signal, the TV screen will turn solid blue.


## Warning and Instruction Displays

These displays will alert you of a missed operation or provide further instructions.


If no active channels are found for CHANNEL MEMORY... (see page 5.)

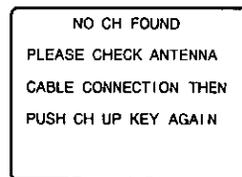


If you attempt to set or review a Timer Recording or set the On Timer and the Clock is not set... (see pages 8, 9.)

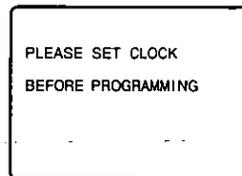


If a Timer Program was not completed before exiting the Program mode... (see pages 18, 19.)

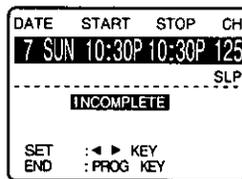


If you push REC on the remote control or the Combination VCR, and a cassette is inserted with no record tab... (see page 21.)

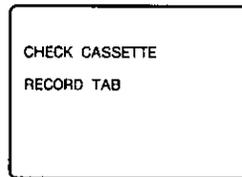

If you push STOP during a Timer Recording... (see page 19.)

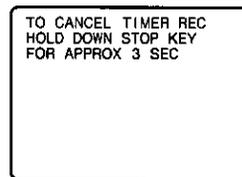


If you push PLAY, FF, REW, or REC on the remote control or the Combination VCR without a cassette inserted... (see pages 15, 16, 17.)

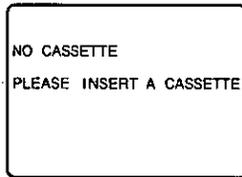


If Combination VCR is not in Stop mode or a cassette with record tab is not inserted two minutes before a Timer Recording is about to begin... (see pages 18, 19.)



If head cleaning becomes necessary while playing back a tape... (see page 21.)

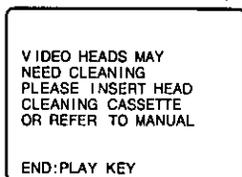

If you push a function button other than STOP/EJECT or POWER while the Combination VCR is in VCR Lock mode... (See page 20.)

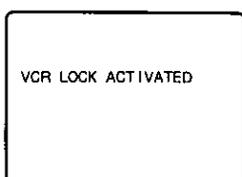






# TV Operation

## ✓ Check list before you begin.

- All connections are made (see page 5).
- Your Combination VCR is plugged in.

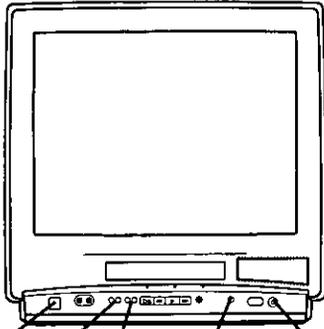


① ③ ② GAME PHONES Jack

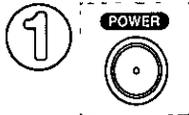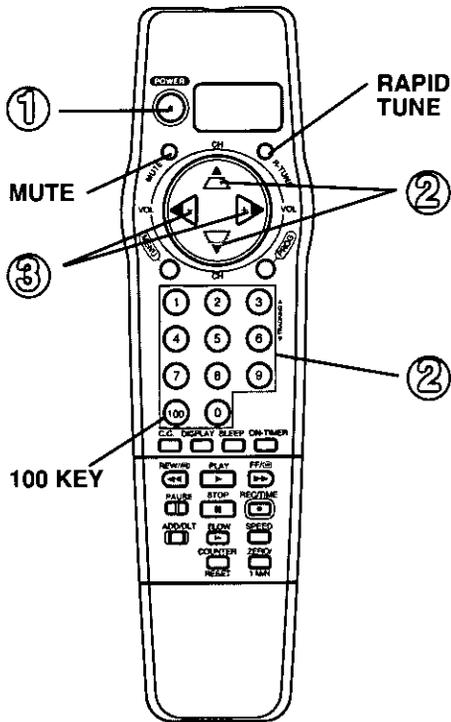 

① Push **POWER** to turn the Combination VCR on.



 ② Select a channel using  $\Delta \nabla$  or the **NUMBERED** keys.

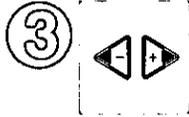

③ Push **VOL**  $\triangleleft \triangleright$  to adjust the volume level.




### Using the 100 key

 When selecting CATV channels 100 to 125 with the **NUMBERED** keys, first push the 100 key, and then enter the remaining two digits. For example, for channel 125: Push the **NUMBERED** keys 100-2-5.

### Rapid Tune

Push **R-TUNE** to display the last channel you were watching.

- When selecting channels with **CH**  $\Delta \nabla$ , the channels must be displayed for at least 4 seconds in order for the Combination VCR to recognize them as a new selection.

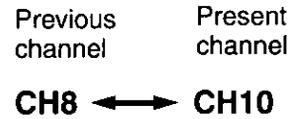

### Audio Mute

Push **MUTE** to instantly mute the sound. Push again, to restore the previous sound level.

### Phones

Connect an earphone (not supplied) or headphone (not supplied) to the **Phones Jack**.

## Game Mode Feature

This feature adjusts the color and picture intensity levels so the screen is easier on the eyes when video games are played.


- This Combination VCR contains no video game software.

GAME



Push **GAME** on the Combination VCR to select "ON".

- "GAME" is displayed for 4 seconds.

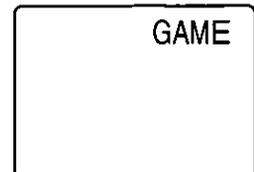

**To Cancel the Game Mode**, push **GAME** again to cancel.

- The previous color and picture settings will be restored.



- This feature is not available when tape playback is in progress.
- Game mode is turned off when one of the following functions is performed:


- Power is turned Off
- Channel is changed
- Input signal is changed
- Play mode is entered
- Power failure occurs




# Picture Adjustment

## Check list before you begin.

- All connections are made (see page 5).
- Your Combination VCR is plugged in.

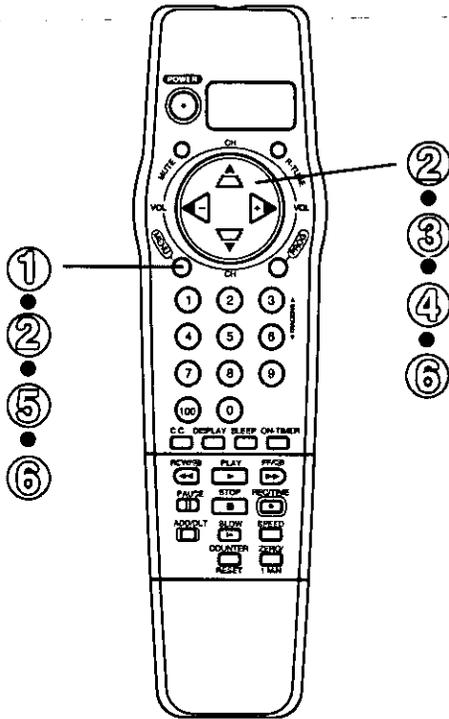


①  Push MENU to display the MAIN MENU.

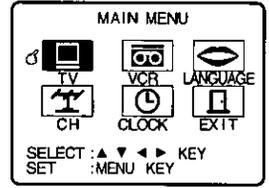

②  Push ▲ ▼ ◀ ▶ to select "TV," and then push MENU to display the SET UP TV screen.



③  Push ▲ ▼ to select "VIDEO ADJUST," and then push ▶ to display the VIDEO ADJUST screen.

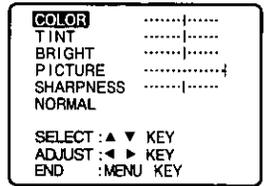

④  Push ▲ ▼ repeatedly to select the desired adjust item, and then push ◀ ▶ to adjust. (See description below.)

## Picture Adjustment

### COLOR Control

To adjust the intensity of the colors.

### TINT Control

To adjust for the most natural fleshtones.

### BRIGHT Control

To adjust the brightness of the picture.

### PICTURE Control

To adjust the intensity of the picture by adjusting contrast and color level at the same time and in the proper balance.


### SHARPNESS Control

To adjust the sharpness of the picture.

## To Reset Picture Controls to the Factory Setting

Push ▲ ▼ and ▶ to select and set NORMAL.


All controls return to factory settings.

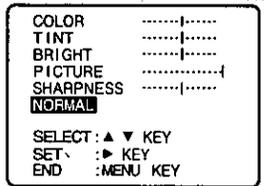

⑤  Push MENU twice to exit the VIDEO ADJUST mode.

- If no button is pushed within 5 minutes, the video adjust overlay disappears.


⑥  Push ▲ ▼ ◀ ▶ to select "EXIT," and then push MENU to exit the MAIN MENU.

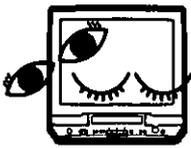


# TV Timer Features

## ✓ Check list before you begin.

- All connections are made (see page 5).
- Your Combination VCR is plugged in.

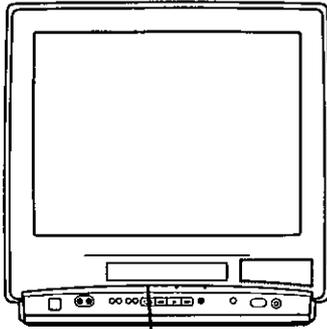

ON TIMER Indicator

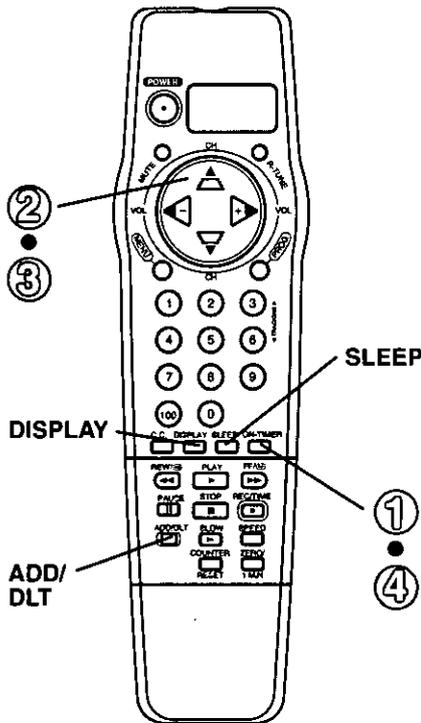


## On Timer with Alarm Feature


The Combination VCR can be set to automatically power on in one of 2 modes (TV or Playback). You can also combine the On Timer with a one minute alarm that gradually increases in volume.




1 Push ON TIMER to display the ON TIMER screen.

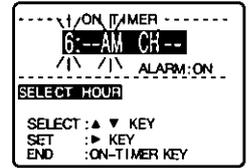


2 Push  $\Delta$   $\nabla$  to select and  $\blacktriangleright$  to fix the On Timer time and then to choose the On Timer mode (TV or PLAY).

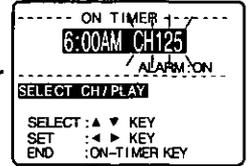

- Make sure a tape is inserted if VCR Playback mode is selected.

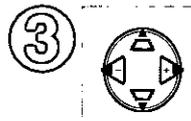

3 Push  $\Delta$   $\nabla$  to select alarm "ON" or "OFF".

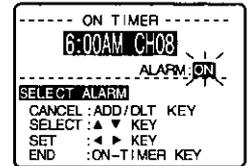

When "ON" is selected, an alarm will gradually increase in volume for one minute or until canceled by pushing any button on the remote or Combination VCR (including Volume UP/DOWN). When the alarm sound stops, the sound of the mode you selected will ensue.

### To Make Corrections,

use  $\Delta$   $\nabla$  and  $\blacktriangleleft$   $\blacktriangleright$  to move back and correct as necessary.



4 Push ON TIMER to set the On Timer. This screen will appear for about 5 seconds.



- The ON TIMER indicator lights on the front panel.

### To Cancel,

push ON-TIMER to redisplay the screen in step 3. Then, push ADD/DLT to clear the time ("6" is flashing). Now, push ON-Timer to end. "ON TIMER END" appears on-screen for a few seconds.



If no button on the remote or Combination VCR (including a button used to turn off the alarm) is pushed within 60 minutes after the Combination VCR turns itself on, it will turn itself back off.


## Set the Sleep Timer

The Combination VCR can be set for auto power off.



Push SLEEP to display the desired sleep timer.

- Each push of SLEEP will change the time in the order shown at right.

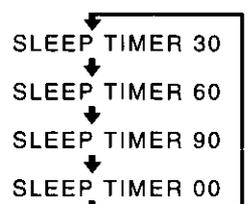

- If you push DISPLAY with the SLEEP TIMER set, the remaining time will appear on-screen.


To Cancel, push SLEEP repeatedly until "SLEEP TIMER 00" appears.

# CC Closed Caption System

This multi-use system not only allows the hearing impaired to enjoy selected programs, but also makes useful information from TV stations available to everyone


## ✓ Check list before you begin.

- All connections are made (see page 5)
- Your Combination VCR is plugged in

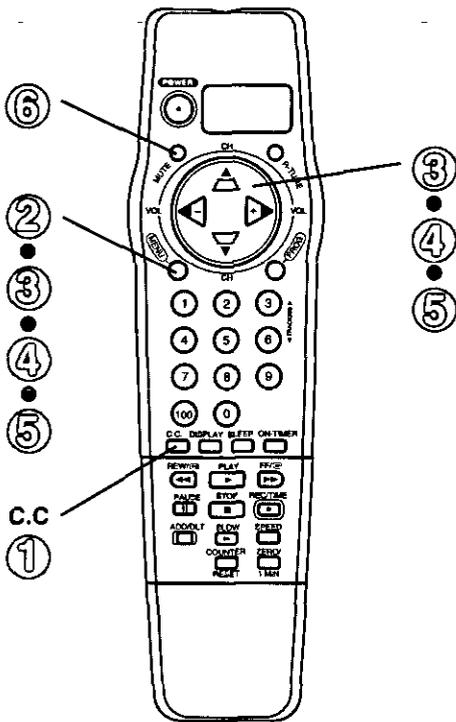

Push C C repeatedly to select the desired Caption Mode (see "Caption Mode description" below)

 - Selected mode is displayed on screen
- Each push of C C will change the Caption Mode as shown at right

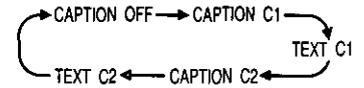

## Closed Caption Modes to Choose From

### Caption Mode CAPTION C1 or C2

A narration of selected TV programs will be displayed on the screen. Check your TV program listings for C C (Closed Captioned) broadcasts

### Caption Mode TEXT C1 or C2

The lower half of the screen will be blocked out. When the TV station broadcasts text, such as program listings, special information, etc., it will appear in this space

### Caption Mode: OFF

Narration will not appear on the screen even if a closed caption or text broadcast is received


- The closed caption or text signal may be broadcast over C1, C2, or both. Also, text contents can vary so you may wish to try different settings

## Caption On Mute Feature


This feature allows you to turn off the sound and, at the same time, display Closed Caption narration. Perfect for when you need silence, but would like to continue enjoying the program




Push C C until CAPTION OFF is displayed on screen

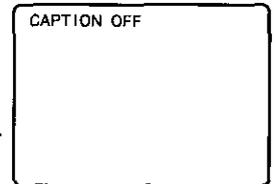

Push MENU to display the MAIN MENU

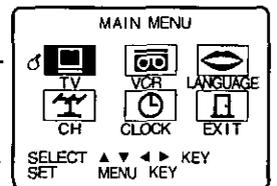


Push  $\Delta$   $\nabla$   $\leftarrow$   $\rightarrow$  to select "TV," and then push MENU to display the SET UP TV screen

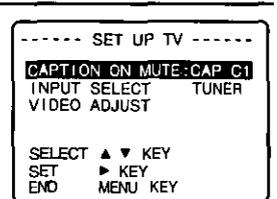

Push  $\rightarrow$  repeatedly to select the desired caption on mute mode, and then push MENU to exit the SET UP TV screen

 - Each push of  $\rightarrow$  will change the display as shown at right

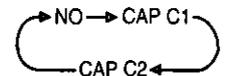

Push  $\Delta$   $\nabla$   $\leftarrow$   $\rightarrow$  to select "EXIT," and then push MENU to exit the MAIN MENU



Push MUTE to instantly mute the sound. The closed caption narration is displayed on the screen

- Push MUTE again to resume normal sound and picture
- Not all programs have Closed Caption information, therefore, narration may not be displayed

## Recording and Playing Back a Closed Caption/Text Program




**Record.** Your Combination VCR will automatically record the Closed Caption/Text signal. Just follow normal recording operation

**Playback** To display the Closed Caption narration or Text during playback, simply push C C until desired Caption Mode is displayed

# ▶ Playback a Tape

## ✓ Check list before you begin.

- All connections are made (see page 5).
- Your Combination VCR is plugged in.

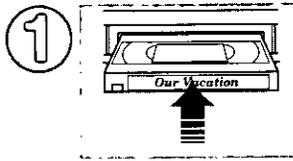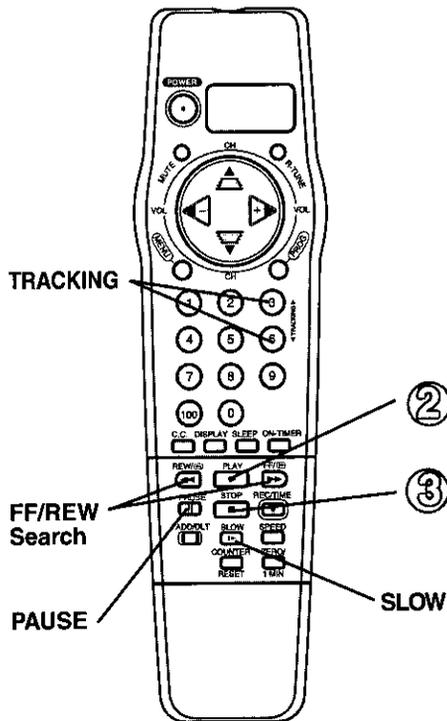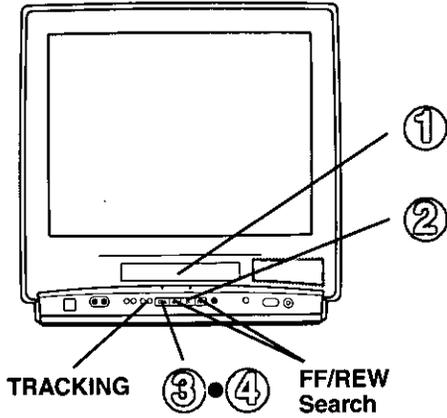


**1** Insert a cassette.

- Combination VCR power comes on automatically.



**2** Push **PLAY** on the remote control or Combination VCR to start playback.

 - Playback begins automatically if cassette has no record tab (see page 16).

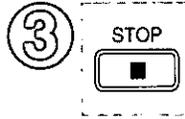


**3** Push **STOP** on the remote control or Combination VCR to stop playback.



**4** Push **STOP/EJECT** on the Combination VCR to eject the cassette.

- You may eject a cassette with power on or off.

## To Find a Particular Scene During Playback

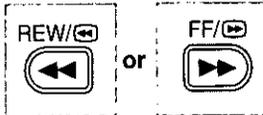 

Push **REW** or **FF** on the remote control or Combination VCR to quickly locate a scene.

- SLP mode tapes have a search speed of 27 times the normal speed.
- Some noise bars will appear during search.

## Special Effects During Playback

These features work best in SLP mode. The sound will be muted.

### Slow Motion Playback

Push **SLOW** to start slow motion playback. Push **PLAY** or **SLOW** to release.

### Still (Freeze) Frame Picture

Push **PAUSE** to freeze and release the picture.

- To reduce picture noise, first push **SLOW**. Then, use the 3 or 6 **NUMBERED** keys on the remote control or **CH UP/DOWN** on the Combination VCR to clear up the picture, then push **PAUSE**.

### Frame by Frame Advance

While in Still mode, push **SLOW** repeatedly or hold down to advance the still picture one frame at a time. Push **PAUSE** or **PLAY** to release.

(After the Combination VCR is in Still or Slow mode for 3 minutes, it will switch to the Stop mode automatically to protect the tape and the video head.)

## Features for a Quality Picture

### Digital Auto Tracking

This feature continuously analyzes the signal and adjusts for optimum picture quality.

### Manual Tracking Control


Use during Playback and Slow Motion mode to reduce picture noise. Push the 3 or 6 **NUMBERED** keys on the remote control or **CH UP/DOWN** on the Combination VCR until the picture clears up. To return to Auto Tracking, push **POWER** off and then on again.

### Black Tube

This Combination VCR uses a Black picture tube for better color reproduction and picture contrast.

### Caution:


Please inspect your cassette tapes for any loose or peeling labels as they may become jammed in your unit.

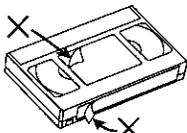



# Tape Operation


Your Combination VCR is equipped with several time saving features as well as convenient automatic functions which make tape operation easier than ever

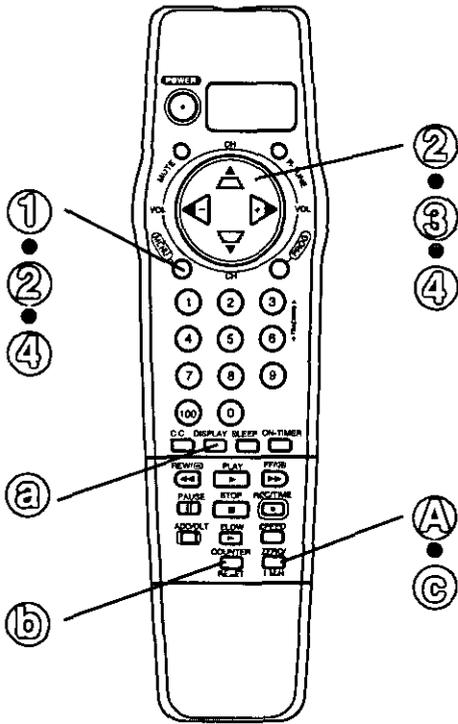


## Repeat Play

You can set your Combination VCR up to play a recording over and over

① Push MENU to display the MAIN MENU

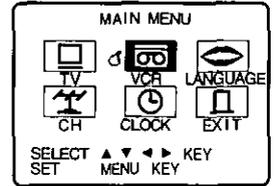

② Push  $\Delta$   $\nabla$   $\leftarrow$   $\rightarrow$  to select "VCR," and then push MENU to display the SET UP VCR screen

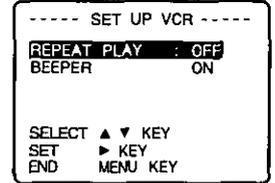

③ Push  $\blacktriangleright$  repeatedly to select "ON" or "OFF"

- When REPEAT PLAY "ON" is selected, the Combination VCR will play to the end of a tape, or until it reaches a blank portion 30 seconds or more (Erased portions of tape are not considered blank) Then, the Combination VCR will automatically rewind the tape and play it again and again until you cancel repeat play The REPEAT indicator lights on the front panel
- All function buttons (REW, FF, etc) are operational during Repeat Play

④ Push MENU to exit the SET UP VCR screen Then push  $\Delta$   $\nabla$   $\leftarrow$   $\rightarrow$  to select "EXIT" Now, push MENU to exit the MAIN MENU



You may also turn the repeat play feature on and off at the Combination VCR by pushing PLAY during playback once or twice until the repeat indicator lights up (ON), or goes out (OFF)

## Auto Operation Functions

### Auto Shut Off

In TV or Game mode, when a broadcast signal is not received for 5 minutes, the Combination VCR will automatically power off (except when LINE INPUT is selected)

In Playback mode, when a Video signal is not detected for 5 minutes, the Combination VCR will automatically power off and the tape will be rewind

- This feature is deactivated when any button on the unit or remote control is pushed even if there is no signal present

### Auto Playback

When a tape is inserted, the power turns on (Auto) If the record tab\* is removed, playback begins (Auto)

### Auto Rewind

When a tape reaches its end during playback, fast forward, or manual record the Combination VCR will rewind and go into Stop mode

### Playback Auto Eject (Repeat Play is "OFF")

When a tape without a record tab\* is played to its end, the Combination VCR will rewind and then eject the tape

### Rec Auto Eject

After a tape reaches its end during normal recording, the Combination VCR will rewind and then eject the tape

### Memory Rewind Off

When POWER is pushed during rewind, rewind will be completed even though the Combination VCR turns off

\*For record tab information, see page 21

## One Minute Skip

With this feature, you can skip over commercials recorded on a tape


A Push ZERO/1MIN in Play mode

- The Combination VCR will go into FF search mode and skip over 60 seconds of recorded time Then, normal playback will resume

## Zero Search


You can reset the Timer Counter to zero and then return to that point

a DISPLAY Push DISPLAY to display the Time Counter overlay

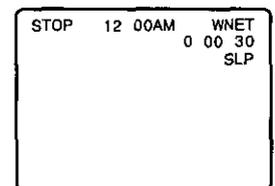

b COUNTER RESET Push COUNTER RESET to reset the Time Counter

- Reset to 0 00 00 at whatever point you wish on the tape

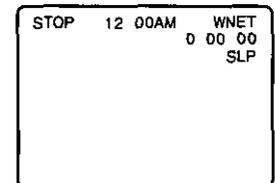



c ZERO/1MIN Push ZERO/1MIN in Stop mode

- The Combination VCR will go into FF or REW mode and stop at the last point the Time Counter was set to 0 00 00


# Record On a Tape

## Check list before you begin.


- All connections are made (see page 5).
- Your Combination VCR is plugged in.

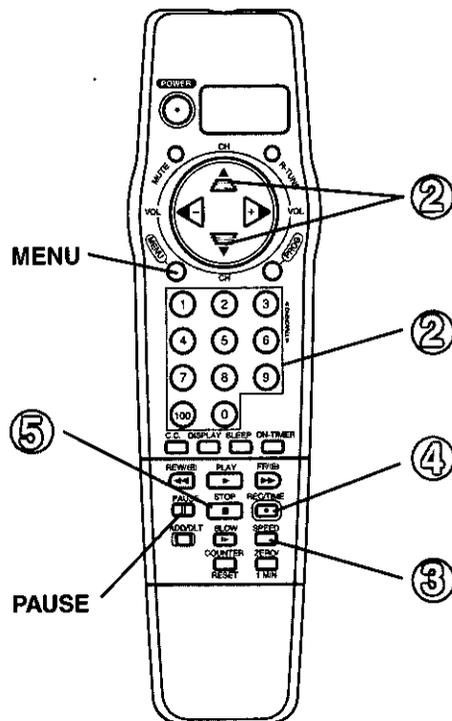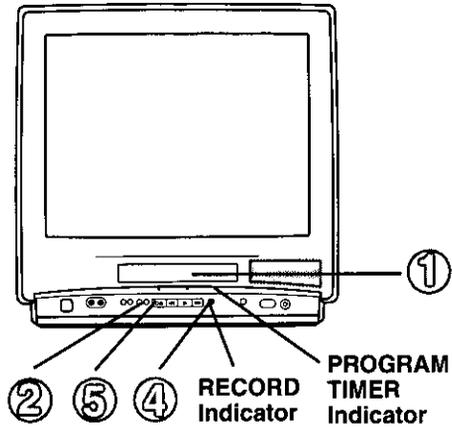


- ① Insert a cassette with record tab.
- The Combination VCR power comes on automatically.

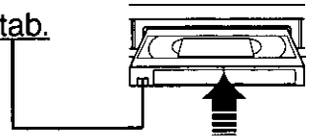


- ② Push  $\Delta$   $\nabla$  or NUMBERED keys on the remote control to select a channel.
- Or, push CH UP/DOWN on the Combination VCR.
  - To record from an outside source, push  $\Delta$   $\nabla$  to select LINE (see below).

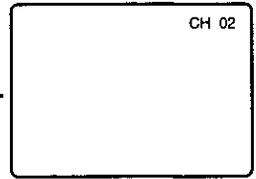

- ③ Push SPEED until the desired speed appears on-screen (See page 21).
- SP = Standard Play  
LP = Long Play  
SLP = Super Long Play

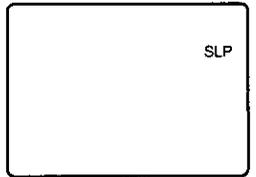


- ④ Push REC/TIME on the remote control to start recording.
- Or, push REC/TIME on the Combination VCR.
  - To edit out unwanted portions, push PAUSE to pause the recording in progress. To release, push PAUSE again.

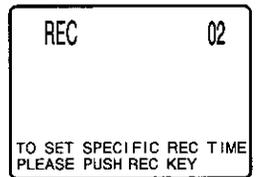

### One Touch Timer Recording (OTR)

 The Combination VCR stops recording at a preset time. In step 4, push REC/TIME repeatedly to set the length of the recording. Each push will change the time as shown.

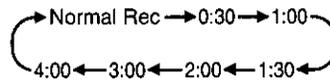

- PROGRAM TIMER indicator lights on the front panel.

- ⑤ Push STOP on the remote control to stop recording.
- Or, push STOP/EJECT on the Combination VCR.




- While it is possible to change the tape speed when you are recording, there will be some distortion on the tape where the change occurred.
- The remaining recording time can be displayed by pushing DISPLAY in OTR mode.
- After the Combination VCR has been in Rec Pause mode for 5 minutes, it will stop automatically to protect the tape and video head.

### Selecting the Input Mode

 You can select the Input Mode in one of two ways.

- Push  $\Delta$   $\nabla$ . The display will change in the order below.

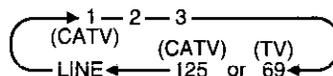

- a. Push MENU to display the menu.
- b. Push  $\Delta$   $\nabla$   $\leftarrow$   $\rightarrow$  to select "TV," and then push MENU to display the SET UP TV screen.
- c. Push  $\Delta$   $\nabla$  to select "INPUT SELECT," and then push  $\rightarrow$  repeatedly to select "TUNER" or "LINE."




# Timer Recording

Your Combination VCR can be set up to do a recording while you are away or otherwise occupied. Up to 8 programs can be placed in memory. You can choose to record one time, daily, or weekly.


## Check list before you begin.

- All connections are made (see page 5).
- Your Combination VCR is plugged in.
- The clock is set.
- The tape is long enough.
- The record tab is in place.

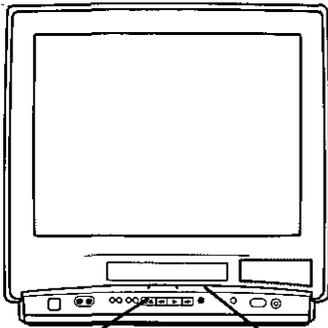


STOP/EJECT

PROGRAM TIMER Indicator

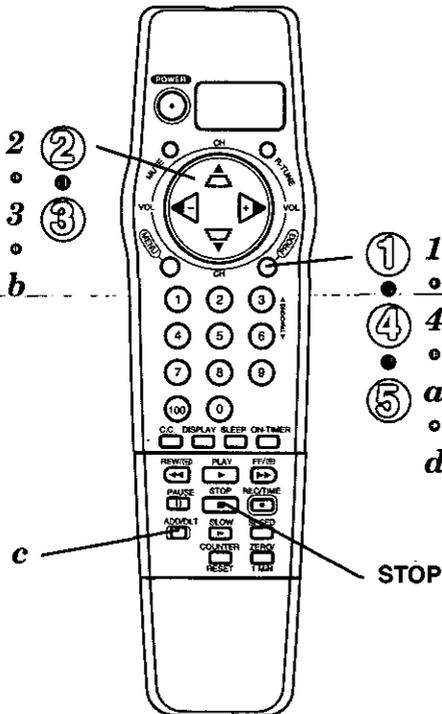


1 1  
2 2  
3 3  
4 4  
5 a

 STOP

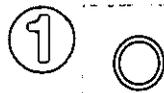

Push PROG to display the program screen.


- If a program is already in memory, push  $\Delta \nabla$  repeatedly, and then  $\triangleright$  to select an unused program number.

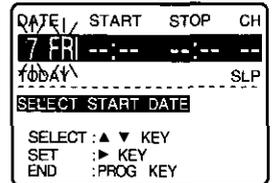

Push  $\Delta \nabla$  and  $\triangleright$  to select and set one of the following:

- 1~31 = One time recording
- DAILY = Same time MON ~ FRI
- WEEKLY = Same time once a week

Example

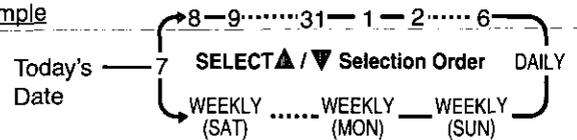

Push  $\Delta \nabla$  and  $\triangleleft \triangleright$  to select and set each of the remaining items at right.

### Remaining Items:

- START time
- STOP time
- CH(annel) number, or LINE for outside source recording
- Speed (SP, LP, SLP)


### To Make Corrections

Repeatedly push  $\triangleright$  to move the cursor to the right, or  $\triangleleft$  to move to the left to the incorrect entry and make the correction.



Push PROG to end the program.

- This screen appears for confirmation.

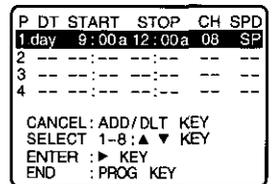

### To Enter More Programs

Push  $\Delta \nabla$  and  $\triangleright$  to select and set a blank program number, and then repeat steps 2 and 3.



Push PROG to exit this mode and return to the normal screen.


- The PROGRAM TIMER indicator lights on the front panel.
- If you're using a cable box, make sure that it is tuned to the desired channel and the power is left on for timer recording.

Two minutes before the Timer Recording starts, "TIMER REC WILL START SOON" will appear on-screen.



- If "PLEASE PREPARE FOR TIMER REC" appears and/or the PROGRAM TIMER indicator flashes, check that a cassette with record tab is loaded and the Combination VCR is in Stop mode.
- If the start times of two programs overlap, the lower numbered program will have priority.
- If the start time for a timer recording comes up during a normal recording or One Touch Recording (page 17), the timer recording will not be performed.
- If there is a power interruption of more than one minute, the recording may not be performed or continue.
- If "INCOMPLETE" appears after all items have been set, check all entries and make necessary corrections.

# Copying Your Tapes (Dubbing)

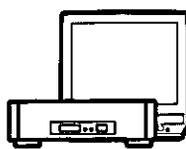

## Cancel a Timer Recording: (Recording is in progress)

Hold down STOP for a few seconds to cancel the Timer Recording.

- Any future daily or weekly recordings will be performed as programmed.

## Replace Program Contents: (Recording is not in progress)

- Do step 1 on previous page. All currently set programs will be displayed on-screen.

P	DT	START	STOP	CH	SPD
1	---	---	---	---	---
2	8	10:00p	12:00p	125	SLP
3	10	8:00p	9:00p	10	SP
4	SU	9:00p	10:00p	L	SLP

CANCEL: ADD/HLT KEY  
 SELECT: 1-8: ▲ ▼ KEY  
 ENTER: ► KEY  
 END: PROG KEY

- Push ▲ ▼ repeatedly to select the desired timer recording, and then push ► to display the settings. (See page 18.)

- Push ▲ ▼ repeatedly to select, and then push ► to enter replacement information.

DATE	START	STOP	CH
8 SAT	10:00P	11:00P	125
---	---	---	---
---	---	---	---

SELECT START DATE

SELECT: ▲ ▼ KEY  
 SET: ◀ ▶ KEY  
 END: PROG KEY

- Push PROG twice to exit this mode and return to the normal TV screen.

## Review or Clear Program Contents: (Recording is not in progress)

- Do step 1 on previous page. All currently set programs will be displayed on-screen.

P	DT	START	STOP	CH	SPD
1	day	9:00a	12:00a	08	SP
2	8	10:00p	12:00p	125	SLP
3	10	8:00p	9:00p	10	SP
4	SU	9:00p	10:00p	L	SLP

CANCEL: ADD/HLT KEY  
 SELECT: 1-8: ▲ ▼ KEY  
 ENTER: ► KEY  
 END: PROG KEY

- Push ▲ ▼ repeatedly to select the desired program number.

- Push the ADD/HLT to clear the program.

P	DT	START	STOP	CH	SPD
1	---	---	---	---	---
2	8	10:00p	12:00p	125	SLP
3	10	8:00p	9:00p	10	SP
4	SU	9:00p	10:00p	L	SLP


SELECT 1-8: ▲ ▼ KEY  
 ENTER: ► KEY  
 END: PROG KEY

- Push PROG to exit this mode and return to the normal TV screen.


## Connections you'll need to make.

- Use this same connection for your video camera, laser disc player, video games, etc.


Recording (Editing)  
Combination VCR

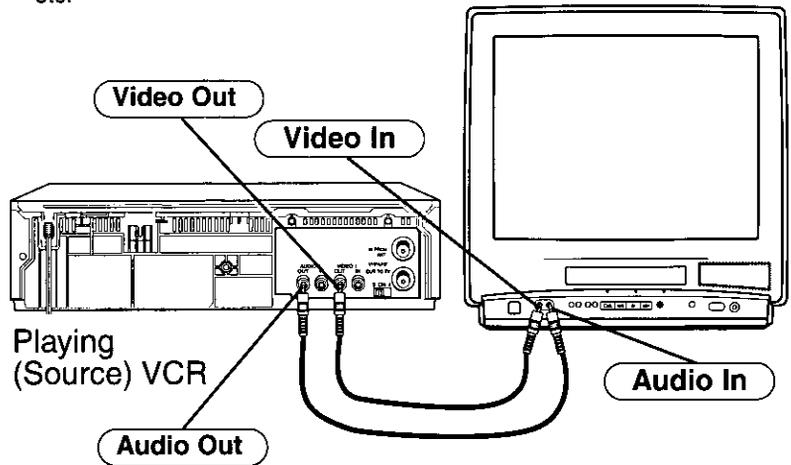

- Insert a pre-recorded tape into the Playing (source) VCR.

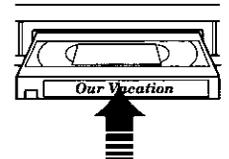

- Insert a blank tape with record tab into the Recording (editing) Combination VCR.

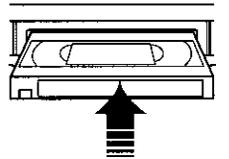

- Select "LINE" as the input on the Recording Combination VCR.

- See "Selecting the Input Mode" section on page 17.

- Push PLAY on the playing VCR. Then, push PAUSE when the tape reaches the point you want to start copying.

- Push REC on the recording Combination VCR, and then push PAUSE on the remote control immediately.

- Push PAUSE on both units at the same time to begin copying.

You can edit out unwanted parts of the original recording by using PAUSE (on the Recording unit) while copying is in progress.


- Push STOP on both units to stop copying.

### Caution:


Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.

**✓ Check list before you begin.**

- All connections are made (see page 5).
- Your Combination VCR is plugged in.

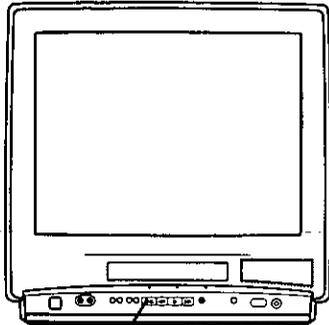


STOP/EJECT

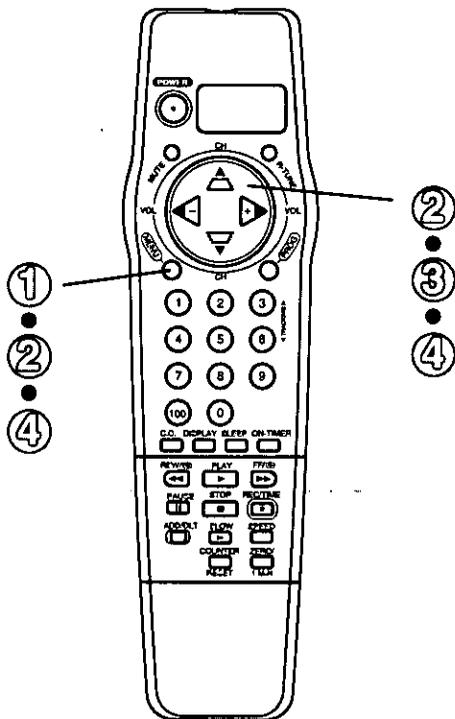

## VCR Lock Feature


When activated, this feature prohibits all operations except for timer recording and tape eject. This feature is used to keep children from operating the Combination VCR.

Hold down **STOP/EJECT** on the Combination VCR for 7 seconds during Stop or Power OFF mode.

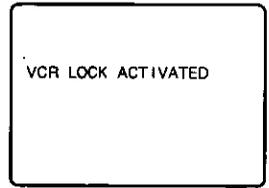

### To Cancel the VCR Lock feature,

Hold down **STOP/EJECT** on the Combination VCR for 7 seconds again during Stop or Power OFF mode.


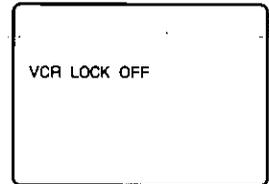


- VCR Lock mode is cancelled automatically after 24 hours as long as the clock is set.
- This feature cannot be activated or cancelled when a timer or one touch recording is in progress.

## Warning Beeper Feature

 When you select BEEPER ON, a short warning will sound each time an invalid entry or incomplete operation is made.



1 Push **MENU** to display the MAIN MENU.

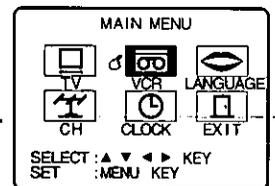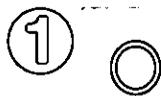


2 Push **▲ ▼ ◀ ▶** to select "VCR," and then push **MENU** to display the SET UP VCR screen.



 3 Push **▲ ▼** to select "BEEPER," and then push **▶** to select "ON" or "OFF."

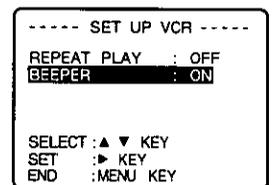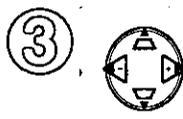

 4 Push **MENU** to end, and then push **▲ ▼ ◀ ▶** to select "EXIT." Now, push **MENU** to exit the MAIN MENU.

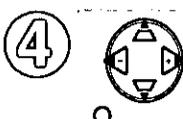




# Unit and Cassette Information

## Erase Protection (Record Tab)

Cassettes have a record tab to ensure that recordings are not accidentally erased.

 To prevent accidental erasure, break off the tab with a screwdriver.

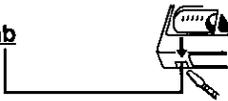

To record again, cover the hole with cellophane tape.



## Maximum Record/Playback Time


Only use tapes with the **VHS** mark in this unit.

Tape Speed Setting	Type of Video Cassette		
	T60	T120	T160
SP (Standard Play)	1 Hour	2 Hours	2 Hours 40 minutes
LP (Long Play)	2 Hours	4 Hours	5 Hours 20 minutes
SLP (Super Long Play)	3 Hours	6 Hours	8 Hours

## D.S.T. (Daylight Saving Time)


### Spring (First Sunday in April)

When the Combination VCR is set to DST:ON, it automatically adds one hour and adjusts the clock.

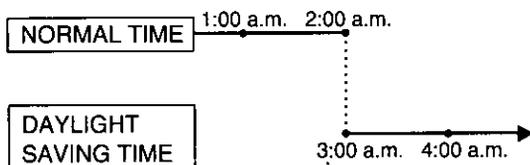

### Autumn (Last Sunday in October)

When the Combination VCR is set to DST:ON, it automatically turns back one hour and adjusts the clock.

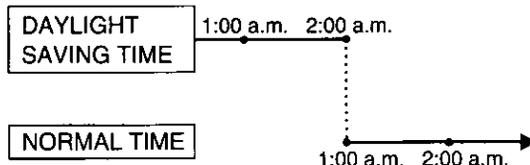

## SELF-DEMO MODE

In Power ON condition, hold down PLAY/REPEAT on the Combination VCR, with no tape inserted, for 5 seconds. The demo screen appears.

To cancel: Repeat the above operation. The demo screen disappears.

## Reset all Combination VCR Memory Functions

Use when moving the Combination VCR to a new location, or if a mistake was made in the One Time Setup section.

- Make sure a tape is not inserted in the Combination VCR.
- 1) Push POWER to turn the Combination VCR on.
  - 2) Hold down both the PLAY and REWIND buttons on the Combination VCR for more than 5 seconds.
    - The power will shut off.
  - 3) Turn the power back on and perform the One Time Setup section on page 8.

## Head Cleaning

Your Combination VCR will not normally require head cleaning, however the heads may become clogged when playing an old or damaged tape.

### Head Clog Sensor

If head cleaning becomes necessary, the Combination VCR will display the screen at right while playing back a recorded signal. To exit this screen, push PLAY on the remote control or Combination VCR.

VIDEO HEADS MAY NEED CLEANING  
PLEASE INSERT HEAD CLEANING CASSETTE OR REFER TO MANUAL

END:PLAY KEY

- Use "dry" type head cleaning cassette\* only.
- Be sure to follow the cleaning tape instructions carefully. Excessive use of a cleaning cassette can shorten head life.
- If using a head cleaning cassette does not solve the problem, contact your nearest Factory Service Center or authorized Service Center. (See page 23.)

\*Cleaning cassette part No. NV-TCL30PT is recommended.

## Product Specifications

### Display

Picture Tube: 20 inch measured diagonal 90° deflection Picture Tube

### VCR

Video Recording System: 2 rotary heads helical scanning system  
Audio Track: 1 track

### Tuner:

Broadcast Channels: VHF 2-13, UHF 14-69  
CATV Channels: Midband A through I (14-22)  
Superband J through W (23-36)  
Hyperband AA-EEE (37-64)  
Lowband A-5-A-1 (95-99)  
Special CATV channel 5A (01)  
Ultraband 65-94, 100-125

### General

Power Source: 120V AC, 60 Hz  
Power Consumption: Approx. 110 watts (Power on)  
Approx. 6 watts (Power off)  
Television System: EIA Standard NTSC color  
Speaker: 1 piece  
Operating Temperature: 41°F~104°F (5°C~40°C)  
Operating Humidity: 10%~75%  
Weight: 50.67 lbs. (23 Kg)  
Dimensions: 20-3/10" (W) X 19-4/5" (H) X 19-1/10" (D)  
515 (W) X 505 (H) X 484 (D) mm

Note: Designs and specifications are subject to change without notice.



# Before Requesting Service

Check the following points once again if you are having trouble with your Combination VCR.

Power	Correction
No power...	<ul style="list-style-type: none"> <li>• Completely insert the Power Plug into an AC wall outlet.</li> <li>• Set the POWER button to ON.</li> </ul>
Monitor	Correction
No picture or sound...	<ul style="list-style-type: none"> <li>• Make sure your antenna or cable system is connected to the Combination VCR. (P. 5)</li> <li>• Check that the power plug is completely plugged into an AC outlet.</li> <li>• Check that the POWER button is set to on.</li> </ul>
Poor picture with normal sound...	<ul style="list-style-type: none"> <li>• Adjust the BRIGHT, SHARPNESS, and PICTURE controls in the SET UP TV menu. (P. 12)</li> </ul>
Poor sound with normal picture...	<ul style="list-style-type: none"> <li>• Adjust the VOLUME control. (P. 11)</li> </ul>
Poor TV reception...	<ul style="list-style-type: none"> <li>• Adjust the SHARPNESS and PICTURE controls in the SET UP TV menu. (P. 12)</li> </ul>
No color or poor color...	<ul style="list-style-type: none"> <li>• Adjust the TINT and COLOR controls in the SET UP TV menu. (P. 12)</li> </ul>
Ghost (multiple) images...	<ul style="list-style-type: none"> <li>• Install a directional antenna.</li> </ul>
TV programs cannot be watched...	<ul style="list-style-type: none"> <li>• Make sure that the channel being received is in the Combination VCR's memory. (P. 8)</li> </ul>
VCR	Correction
TV program cannot be recorded...	<ul style="list-style-type: none"> <li>• Make sure your antenna or cable system is connected to the Combination VCR. (P. 5)</li> <li>• Make sure that the record tab is intact on the cassette. (P. 21)</li> </ul>
Timer recording cannot be performed...	<ul style="list-style-type: none"> <li>• Set the recording Start/Stop time correctly. (P. 18-19)</li> <li>• Timer recording may not be performed or continued if a power interruption of more than 1 minute occurs before or during a Timer Recording, even if power resumes thereafter.</li> </ul>
No playback picture, or the playback picture is noisy or contains streaks...	<ul style="list-style-type: none"> <li>• Adjust the TRACKING control in either direction. (P. 15)</li> </ul>
VCR cannot be controlled...	<ul style="list-style-type: none"> <li>• Make sure that VCR LOCK is set to off. (P. 20)</li> </ul>
Remote Control	Correction
Combination VCR cannot be remote controlled...	<ul style="list-style-type: none"> <li>• Aim the Remote Control directly at the remote sensor on the Combination VCR. (P. 7)</li> <li>• Avoid all obstacles which may interfere with the signal path.</li> <li>• Inspect the remote batteries for possible replacement. (P. 4)</li> <li>• Make sure that VCR LOCK is set to off. (P. 20)</li> <li>• Exposing the Combination VCR remote sensor to direct fluorescent or outdoor light may cause signal interference.</li> </ul>
Miscellaneous	Correction
Video cassette cannot be inserted...	<ul style="list-style-type: none"> <li>• Insert cassette with window side up and the record tab facing you.</li> </ul>
Video cassette cannot be removed...	<ul style="list-style-type: none"> <li>• Check that the power plug is completely plugged into an AC outlet.</li> </ul>
Eject does not function or insertion cannot be done...	<ul style="list-style-type: none"> <li>• Turn the POWER off and then on, and try ejecting or inserting the tape again.</li> </ul>
Video cassette ejects when a recording is started, or the power is turned off for timer recording...	<ul style="list-style-type: none"> <li>• Make sure the record tab is intact on the cassette. (P. 21)</li> </ul>
In stop mode, the VCR motor (CYLINDER) continues to rotate...	<ul style="list-style-type: none"> <li>• To enable the quick play mechanism, the VCR cylinder will rotate for about 5 minutes. This reduces response time from Stop to Play mode from Play to Rewind Search mode.</li> </ul>
VCR cannot be controlled...	<ul style="list-style-type: none"> <li>• Make sure that VCR LOCK is set to off. (P. 20)</li> </ul>

If you cannot resolve your problem, please call the Customer Satisfaction Center for product assistance at 201-348-9090.

To locate an authorized servicer call toll free 1-800-545-2672.

# Service Center List

**PRODUCT INFORMATION • OPERATION ASSISTANCE • LITERATURE REQUESTS • DEALER LOCATIONS**

**Customer Service Center 2F-3, One Panasonic Way, Secaucus, NJ 07094 (Headquarters)**  
201-348-9090 (9:00am-8:00pm Monday-Friday, EST)

## ACCESSORY PURCHASES

**Panasonic Services Company 20421 84th Avenue South Kent, WA 98032**  
(6 am to 6 pm Monday-Friday ; 6 am to 10:30 am Saturday ; PST)  
(Visa, Mastercard, Discover card, American Express, Check)

## AUTHORIZED SERVICENTERS • PARTS DISTRIBUTOR LOCATIONS

To locate an independent authorized servicer or parts distributor in your area,  
within the USA dial toll free **1-800-545-2672**, 24 hours a day, 7 days a week.

### PRODUCT REPAIRS

### Factory Servicenters

#### CALIFORNIA

6550 Katella Avenue  
Cypress, CA 90630  
Phone (714) 373-7426  
Fax (714) 894-8534

800 Dubuque Avenue  
S. San Francisco, CA 94080  
Phone (415) 871-6373  
Fax (415) 871-6840

20201 Sherman Way  
Suite 102  
Canoga Park, CA 91306  
Phone (818) 709-1775  
Fax (818) 709-2165

3878 Ruffin Road  
Suite A  
San Diego, CA 92123  
Phone (619) 560-9200  
Fax (619) 560-1831

#### COLORADO

1640 South Abilene Suite D  
Aurora, CO 80012  
Phone (303) 752-2024  
Fax (303) 752-0610

#### FLORIDA

3700 North 29th Avenue  
Suite 102  
Hollywood, FL 33020  
Phone (954) 925-2880  
Fax (954) 925-5224

4710 Eisenhower Boulevard  
Suite A1  
Tampa, FL 33634  
Phone (813) 884-4746  
Fax (813) 886-4564

#### GEORGIA

8655 Roswell Road  
Suite 100  
Atlanta, GA 30350  
Phone (770) 518-6301  
Fax (770) 518-6306

#### HAWAII

99-859 Iwaiwa Street  
Aiea, Hawaii 96701  
Phone (808) 488-4369  
Fax (808) 486-4369

#### ILLINOIS

1703 North Randall Road \*  
Elgin, IL 60123  
"12:30 to 4:30, Mon-Fri"  
Phone (847) 468-5464  
Fax (847) 468-5465

9060 Golf Road  
Niles, IL 60714  
Phone (847) 608-1010  
Fax (847) 299-1710

#### MARYLAND

Sulphur Springs  
Business Park  
1638 Sulphur Springs Road  
Baltimore, MD 21227  
Phone (410) 242-2607  
Fax (410) 247-3047

#### MASSACHUSETTS

60 Glacier Drive, Suite G  
Westwood, MA 02090  
Phone (617) 329-4280  
Fax (617) 329-0586

\* pick-up/drop-off only

#### MICHIGAN

37048 Van Dyke Avenue  
Sterling Heights, MI 48312  
Phone (810) 939-2060  
Fax (810) 939-2638

#### MINNESOTA

7850-12th Avenue South  
Airport Business Center  
Bloomington, MN 55425  
Phone (612) 854-8624  
Fax (612) 854-2089

#### OHIO

2236 Waycross Road  
Cincinnati, OH 45240  
Phone (513) 851-4180  
Fax (513) 851-8443

#### PENNSYLVANIA

2221 Cabot Boulevard West  
Suite B  
Langhorne, Pa 19047  
Phone (215) 741-0661  
Fax (215) 741-0521

Chartiers Valley Shopping  
Center  
1025 Washington Pike  
Bridgeville, PA 15017  
Phone (412) 257-4522  
Fax (412) 257-4650

#### TENNESSEE

919-8th Avenue South  
Nashville, TN 37203  
Phone (615) 244-4434  
Fax (615) 244-6713

#### TEXAS

7482 Harwin Drive  
Houston, TX 77036  
Phone (713) 781-1528  
Fax (713) 781-0643

13615 Welch Road  
Suite 101  
Farmers Branch, TX 75244  
Phone (972) 385-1975  
Fax (972) 960-7626

#### WASHINGTON

20425-84th Avenue South  
Kent, WA 98032  
Phone (206) 872-7922  
Fax (206) 872-0918

### Service in Puerto Rico

**Matsushita Electric  
of Puerto Rico, Inc.  
Panasonic Sales Company/  
Factory Servicer**  
Ave. 65 de Infantería, Km. 9.5  
San Gabriel Industrial Park  
Carolina, Puerto Rico 00985  
Phone (787) 750-4300  
Fax (787) 768-2910

### REPAIR INQUIRIES

### Regional Customer Care Department

#### EAST (PCE)

2221 Cabot Boulevard West  
Suite A  
Langhorne, PA 19047  
Phone (215) 741-0676  
Fax (215) 750-6492

#### Covers:

CT, DE, ME, MD, MA, NH, NJ,  
NY, PA, RI, VT, VA, DC, WV

#### EAST (PCE)

1225 Northbrook Parkway  
Suite 2-390  
Suwanee, GA 30174  
Phone (770) 338-6860  
Fax (770) 338-6548

#### Covers:

AL, FL, GA, MS, NC, SC, TN

#### CENTRAL (PCC)

1707 North Randall Road  
Elgin, IL 60123  
Phone (847) 468-5530  
Fax (847) 468-5528

#### Covers:

AR, IL, IN, IA, KS, KY, LA,  
MI, MN, MO, NE, ND, OK,  
SD, TX, WI, OH

#### WEST (PCW)


6550 Katella Avenue  
Cypress, CA 90630  
Phone (714) 373-7440  
Fax (714) 373-7447

#### Covers:

AK, AZ, CA, CO, ID, MT, NV,  
NM, OR, UT, WA, WY, HI

## Conexión de la antena externa

Desenganche la antena del televisor o de la videograbadora que tuviera anteriormente y conéctela a la parte trasera del registrador Combinación de VCR/TV, como se muestra en el diagrama. Si el sistema de su antena tiene conductores UHF y VHF separados, usted necesita un mezclador de banda UHF/VHF (no viene con el equipo).

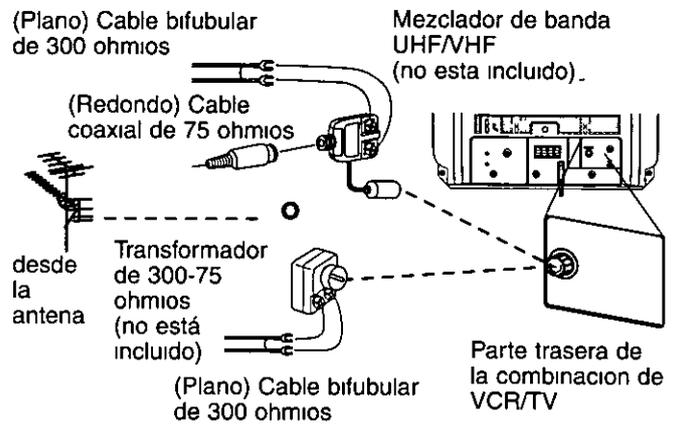



## Conexiones de TV por cable

### (A) Sin la caja convertidora/decodificadora

Con esta conexión usted podrá utilizar su control remoto de la combinación de VCR/TV para seleccionar los canales que desea ver y seleccionar canales no codificados para su grabación programada. Esta conexión no permite ver ni grabar canales codificados.

### (B) Con una caja convertidora/decodificadora

Con esta conexión, usted podrá grabar y ver cualquier canal, incluyendo los canales codificados. Sin embargo, la selección de canales se debe efectuar en la caja convertidora de TV por cable que suministra esta empresa. La grabación programada está limitada a un canal cada vez, y sólo se podrá ver el canal que esté grabando.

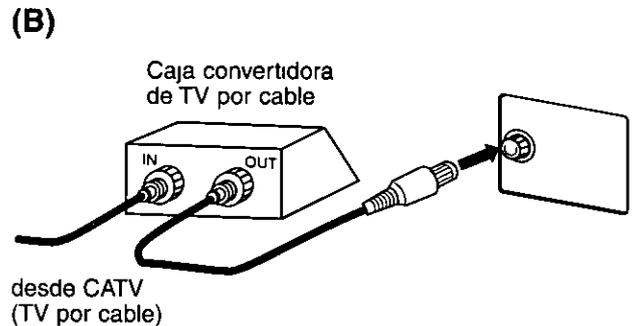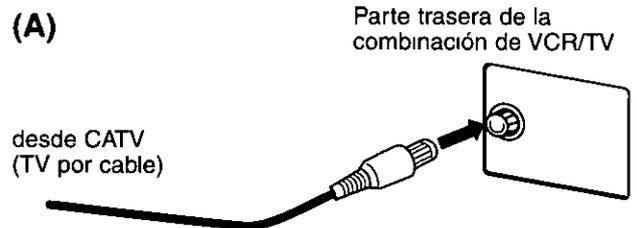


## Para ver y grabar un canal codificado/no codificado


Sintonice el canal del Registrador de la combinación de VCR/TV en el canal de salida de la caja convertidora de televisión por cable (por ejemplo el canal 3)

Después, seleccione en la caja convertidora de TV por cable el canal que se quiera ver o grabar.

## Para fijar el idioma, canal y reloj

 Al encender la combinación de VCR/TV por primera vez, aparecerán las pantallas para fijar automáticamente los canales y el reloj.

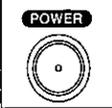 **1**  Oprimir POWER para encender el aparato.

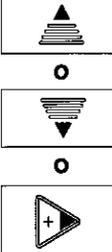**2**  Oprimir ▲, ▼ o ► para la exhibición de la pantalla en inglés, español o francés.

SELECT LANGUAGE

PUSH CH ▲ :English

PULSE CH ▼ :Español

APP. VOL + :Français

**3**  **Importante: si está usando una caja de TV por cable, encienda la caja y sintonice al canal PBS de su zona.**

FIJACION AUTO. (CA/RELOJ)


CONECTE EL CABLE DE LA ANTENA Y SI ESTA USANDO UNA CAJA DE TV POR CABLE SINTONICE AL CANAL PBS DE SU LOCAL LUEGO...

POR FAVOR OPRIMIR CH UP

Oprimir ▲ para iniciar la fijación de los canales y el reloj.

Las siguientes informaciones aparecerán seguidamente:

- AUTOPROGRAMACION EN PROCESO
- AUTOPROGRAMACION COMPLETO
- FIJACION AUTOMATICA DEL RELOJ EN PROCESO

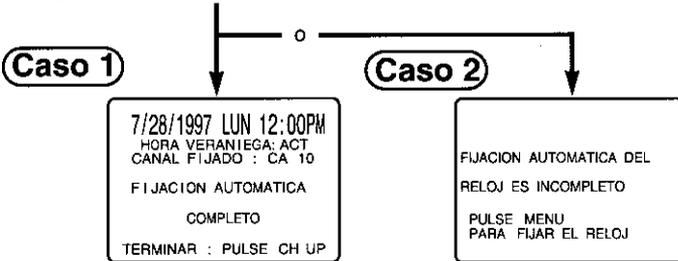

**4** **Caso 1** Comprobar si la hora está fijada para terminar la fijación.

**Si la hora y la hora veraniega es incorrecta,** Raras veces, en caso de que ud. vive cerca de dos zonas con hora diferente, el aparato puede elegir un canal PBS con diferente hora de su zona. En este caso, haga los siguientes pasos:

- Tome nota del canal que está fijado en la pantalla y salga desde este modo oprimiendo el botón ▲.
- Anule este canal desde los canales memorizados en la combinación de VCR/TV.
- Oprima el botón MENU para que aparezca la pantalla del MENU.
- Oprima ▲ ▼ ◀ ▶ para elegir "RELOJ" y luego oprima MENU para que aparezca la pantalla de FIJACION DEL RELOJ.
  - Si ud. esta usando una caja de TV por cable y tiene muchos canales PBS, sintonice la caja de TV por cable a un canal PBS diferente e intente la fijación automática otravez usando el menú.
- Oprimir ▲ ▼ para elegir "FIJACION AUTOMATICA", luego oprimir ► para fijar y oprimir ▲ para iniciar.

- Por cualquier razón, si ha cambiado la hora manualmente, no funcionará la corrección automática de la hora.
- La fijación automática del reloj efectuará cada día al apagar la combinación de VCR/TV por primera vez. Si ud. usa una caja de TV por cable y desea efectuar la fijación automática del reloj, la caja de TV por cable debe permanecer encendido y sintonizado el canal PBS cuando se apaga la combinación de VCR/TV.

**Caso 2** Si aparece FIJACION AUTOMATICA DEL RELOJ ES INCOMPLETO, por favor fije el reloj manualmente.

- Oprimir MENU para que aparezca la pantalla de la fijación del reloj.
- Oprimir ▲ ▼ para elegir y oprimir ► para fijar el mes, la fecha, el año, la hora y la hora veraniega.

**Para hacer correcciones,**

Oprimir ◀ ▶ repetidamente para retroceder o avanzar hasta el paso que desea corregir.

- Oprimir MENU para iniciar a funcionar el reloj. Luego oprimir ▲ ▼ ◀ ▶ para elegir "SALIR" y oprimir MENU para salir de la pantalla del MENU PRINCIPAL.

 
## Para fijar o fijar de nuevo el reloj

En caso de que el reloj es incorrecto o ha ocurrido un corte eléctrico.


- Oprima MENU para que parezca el MENU PRINCIPAL.
- Oprima ▲ ▼ ◀ ▶ para elegir "RELOJ". Luego, oprima MENU para que aparezca la pantalla de la FIJACION DEL RELOJ.
- Oprima ▲ ▼ para elegir "FIJACION MANUAL", y luego ► para que aparezca la pantalla de la FIJACION DEL RELOJ.
- Por favor continúe con los pasos **b** y **c** de la instrucción anterior (Caso 2).




## Operaciones para ver la TV

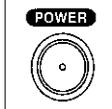**1**  Oprimir POWER para encender la combinación de VCR/TV.

  **2**  Elegir el canal usando ▲ ▼ o usando la teclas numéricas.

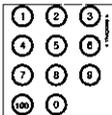

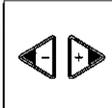**3**  Oprimir ◀ ▶ para ajustar el nivel del volumen.




## Encendedor automático con alarma

La combinación de VCR/TV se puede fijar para que se encienda automáticamente en uno de los dos modos (TV o reproducción). Ud. también puede combinar con un alarma despertador de un minuto.


**1**  Oprimir ON TIMER para que aparezca la pantalla del encendedor automático.

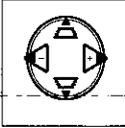

**2**  Oprimir  $\Delta$   $\nabla$  para elegir y oprimir  $\triangleright$  para fijar la hora del encendedor automático y luego para elegir el modo (TV o reproducción).




- Asegúrese de que una cinta de video esté introducido en la combinación de VCR/TV, si ha elegido la reproducción de la videgrabadora.

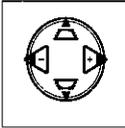
**3**  Oprimir  $\Delta$   $\nabla$  para elegir la fijación del alarma.

**Si ha elegido "ACT",** sonará un alarma por un minuto o hasta cancelar oprimiendo cualquiera de las teclas del control remoto. Cuando se apaga el alarma, sonará el sonido del modo que ha elegido.



 **Para hacer correcciones,** use  $\Delta$   $\nabla$  y  $\triangleleft$   $\triangleright$  para retroceder o avanzar como se necesita.

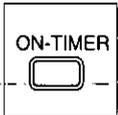**4**  Oprimir ON TIMER para fijar la función del encendedor automático. Esta pantalla aparecerá cerca de 5 segundos.

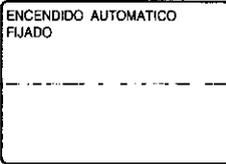

- El indicador de ON TIMER (encendedor automático) se encenderá en el panel delantero.

**Para cancelar,** oprima ON-TIMER para que aparezca de nuevo la pantalla del paso 3. Luego, oprima ADD/DLT para anular la hora ("6" destellará). Ahora, oprima ON-TIMER para terminar. "ENCENDIDO AUTOMATICO ANULADO" aparecerá unos segundos en la pantalla.


60 minutos luego de que la combinación de VCR/TV se ha encendido automáticamente, éste se apagará por sí mismo si no se ha oprimido ningún botón del control remoto o del aparato.

## Fijación del temporizador para dormir

La combinación de VCR/TV se puede fijar para que se apague automáticamente.

**SLEEP**  Oprimir SLEEP para que aparezca el tiempo de la fijación.

- Si ud. oprime el botón DISPLAY con el temporizador para dormir fijado, aparecerá en la pantalla el tiempo que sobra para apagarse.

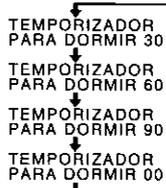

**Para cancelar,** oprimir SLEEP sucesivamente hasta que aparezca "TEMPORIZADOR PARA DORMIR 00".


## Operaciones básicas para la reproducción

 
**1** Introducir una cinta.

- La combinación de VCR/TV se enciende automáticamente.

**2**  Oprimir PLAY en el control remoto o combinación de VCR/TV para comenzar a reproducir.


- Si la cinta no tiene la lengüeta para evitar el borrado, la combinación de VCR/TV comienza a reproducir automáticamente.

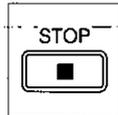 **3**  Oprimir STOP en el control remoto o combinación de VCR/TV para parar la reproducción.

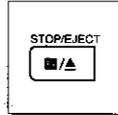**4**  Oprimir STOP/EJECT en la combinación de VCR/TV para expulsar la cinta.

- Usted puede expulsar la cinta cuando el aparato está encendido o apagado.


## Para buscar una escena en particular durante la reproducción

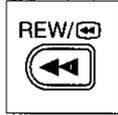  Oprimir REW o FF durante la reproducción para buscar una escena.

- La velocidad de búsqueda es a 27 veces más rápida que la velocidad normal para el mode SLP.




## Operaciones básicas para la grabación

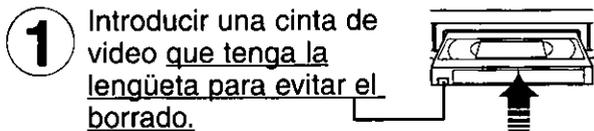


**1** Introducir una cinta de video que tenga la lengüeta para evitar el borrado.

- la combinación de VCR/TV se enciende automáticamente.

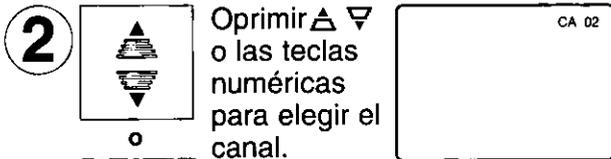


**2** Oprimir  $\Delta$   $\nabla$  o las teclas numéricas para elegir el canal.

- U oprimir  $\Delta$   $\nabla$  de la combinación de VCR/TV.
- Para grabar desde una fuente externa, oprimir  $\Delta$   $\nabla$  y elija LINEA.

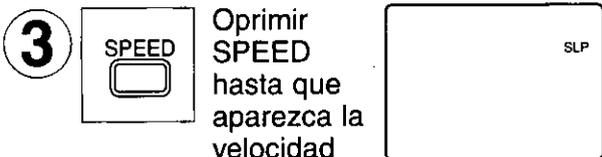

**3** Oprimir SPEED hasta que aparezca la velocidad deseada.

- SP = reproducción normal
- LP = reproducción larga
- SLP = reproducción super larga

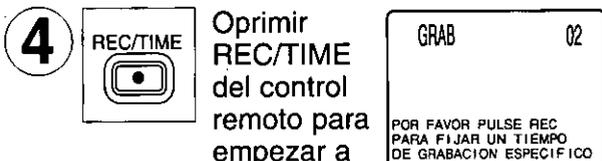


**4** Oprimir REC/TIME del control remoto para empezar a grabar.

- U oprimir REC/TIME de la combinación de VCR/TV.
- Oprimir PAUSE para hacer una pausa en la grabación de un toque.


### Grabación de un toque (OTR)

 La combinación de VCR/TV se puede fijar para parar la grabación a una hora fijada anteriormente.

En el paso 4, oprimir repetidamente REC/TIME para fijar el tiempo de grabación.

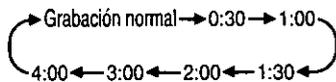


- La luz indicador de la grabación programada (TIMER) se enciende en el panel delantero.

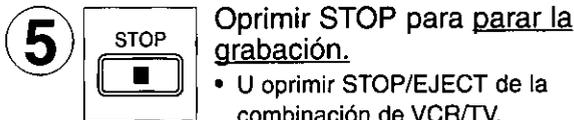

**5** Oprimir STOP para parar la grabación.


- U oprimir STOP/EJECT de la combinación de VCR/TV.

## Grabación con temporizador

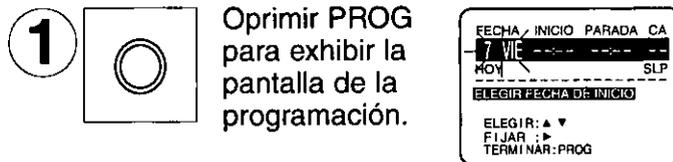

**1** Oprimir PROG para exhibir la pantalla de la programación.


- Si ya existe una programación memorizada, oprima  $\Delta$   $\nabla$  y  $\triangleright$  para elegir un número sin programación.

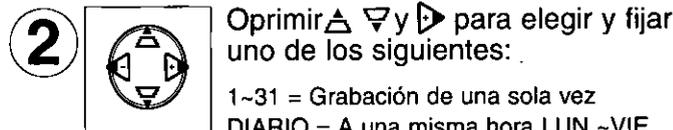

**2** Oprimir  $\Delta$   $\nabla$  y  $\triangleright$  para elegir y fijar uno de los siguientes:

- 1~31 = Grabación de una sola vez
- DIARIO = A una misma hora LUN ~VIE
- SEMANAL = Una vez a la semana a una misma hora

### Ejemplo

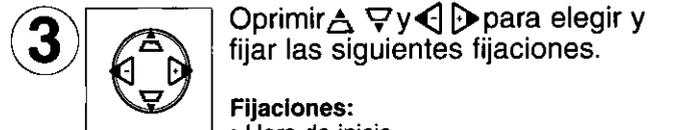


**3** Oprimir  $\Delta$   $\nabla$  y  $\triangleleft$   $\triangleright$  para elegir y fijar las siguientes fijaciones.

### Fijaciones:

- Hora de inicio
- Hora de parada
- Canal o LINEA para una fuente externa
- Velocidad de la cinta (SP, LP, SLP)

### Para hacer correcciones


Oprimir  $\triangleright$  sucesivamente para avanzar u  $\triangleleft$  para retroceder hasta el paso que desea corregir.

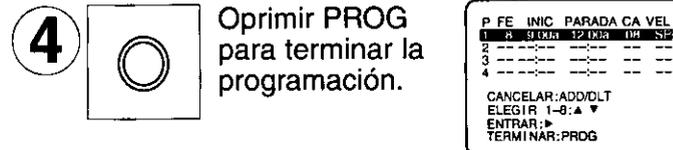

**4** Oprimir PROG para terminar la programación.

### Para hacer más programaciones

 Oprimir  $\Delta$   $\nabla$  y  $\triangleright$  para elegir y fijar un número de programa en blanco y luego repita los pasos 2 y 3.

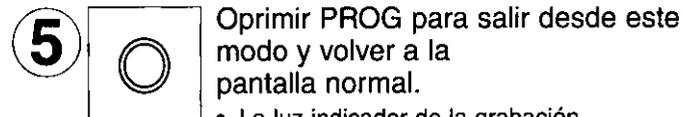

**5** Oprimir PROG para salir desde este modo y volver a la pantalla normal.

- La luz indicador de la grabación programada (TIMER) se enciende en el panel delantero.
- Si ud. está usando una caja de TV por cable, asegúrese de que esté sintonizado al canal deseado y que esté encendido para la grabación con temporizador.

Dos minutos antes de empezar la grabación, "GRABACION PROGRAMADA INICIARA ENSEGUIDA" aparecerá en la pantalla.

# Warranty

Panasonic Consumer Electronics  
Company, Division of Matsushita  
Electric Corporation of America,  
One Panasonic Way  
Secaucus, New Jersey 07094

Panasonic Sales Company,  
Division of Matsushita Electric of Puerto Rico, Inc.  
AVE. 65 de Infanteria, Km. 9.5  
San Gabriel Industrial Park  
Carolina, Puerto Rico 00985

## QUASAR Video Products Limited Warranty

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the Warrantor") will repair this product with new or refurbished parts, free of charge, in the USA or Puerto Rico, in the event of a defect in materials or workmanship as follows (all time periods commence from the date of the original purchase):

<u>PRODUCT</u>	<u>PARTS</u>	
CAMCORDER	ONE (1) YEAR, EXCEPT CCD IMAGE SENSOR	NINETY (90) DAYS
	CCD IMAGE SENSOR - SIX (6) MONTHS	NINETY (90) DAYS
VCR	ONE (1) YEAR	NINETY (90) DAYS
A/V MIXER	ONE (1) YEAR	NINETY (90) DAYS
MONITOR-VCR	ONE (1) YEAR, EXCEPT CRT	NINETY (90) DAYS
	CRT - TWO (2) YEARS	CRT LABOR ONE (1) YEAR SECOND YEAR CUSTOMER PAYS ALL LABOR CHARGES

### Monitor-VCR In-home or carry-in Service: 19" (diagonal) CRT / LCD and Larger

### Monitor-VCR Carry-in Service: 18" (diagonal) CRT / LCD and smaller

Batteries (if included) - New rechargeable batteries in exchange for defective rechargeable batteries for ten (10) days from the date of original purchase. Non-rechargeable batteries are not warranted.

Tape (if includes) - New video cassette tape in exchange for a defective video cassette tape for five (5) days from the date of the original purchase.

In-home, carry-in or mail-in service, as applicable, in the USA can be obtained during the warranty period by contacting a Panasonic Services Company (PASC) Factory Servicenter listed in the Service Directory. Or call 1-800-545-2672, toll free, to locate an authorized PASC Servicenter. Carry-in or mail-in service in Puerto Rico can be obtained during the warranty period by calling the Panasonic Sales Company telephone number listed in the Servicenter Directory.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of the date of the original purchase is required before warranty service is rendered.

This warranty only covers failures due to defects in materials and workmanship which occur during normal use and does not cover normal maintenance, including, but not limited to, video and audio head cleaning. The warranty does not cover damage which occurs in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, modification, faulty installation, set-up adjustments, improper antenna, inadequate signal pickup, maladjustment of consumer controls, improper operation, power line surge, lightning damage, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or serviced by anyone other than a PASC Factory Servicenter or an authorized PASC Servicenter, or damage that is attributable to acts of God.

### LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES) RESULTING FROM THE USE OF THIS PRODUCTS, OR ARISING OUT OF ANY BREACH OF THE WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the Customer Satisfaction Center at the Panasonic Consumer Electronics Company address above.

SERVICE CALLS WHICH DO NOT INVOLVE DEFECTIVE MATERIALS OR WORKMANSHIP AS DETERMINED BY THE WARRANTOR, IN ITS SOLE DISCRETION, ARE NOT COVERED. COSTS OF SUCH SERVICE CALLS ARE THE RESPONSIBILITY OF THE PURCHASER.

warvid 8/20/96

Panasonic Consumer Electronics  
Company, Division of Matsushita  
Electric Corporation of America  
One Panasonic way Secaucus,  
New Jersey 07094

Printed in U.S.A.  
VQTS3302 (A)

