 
## What's in the Box?

CAUTION: Do not attempt to install, activate, or adjust any of the setting options described in this Quick Start Guide unless your vehicle is parked in a safe location.





Aux In Cable

Routing Adapter

Antenna Alcohol

# 1 Mount the Magnetic Mount Antenna

A. Mount the Magnetic Mount Antenna outside your vehicle, on a clean and dry horizontal surface that will always face the sky.

The best location is on the roof above the front windshield, centered between





 




• Install the Cable Routing Adapter to direct the antenna cable downward, if mounting on an




the surface.



## 2 Route the Antenna Cable

- A. Tuck the antenna cable under the windshield rubber molding and run it to the nearest corner.
- **B.** Route the cable out of the molding and into the rubber weather stripping around the door opening.
- Closer to A-Pillar if Cable Doesn't Reach Center of Roof **C.** Lift the weather stripping. Tuck and run the cable inside it to the bottom of the door opening. Replace the Power Adapter or Cigarette Lighter Socket Location
- **D.** Pull the cable out and route it toward the power adapter or cigarette lighter socket location.
- E. Plug the Magnetic Mount Antenna connector into the ANTENNA connector on the Base of Snap.




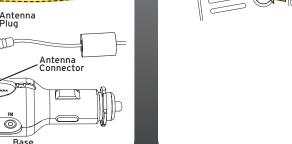

# 4 Initiate the Courtesy Period

- vehicle is outside and the antenna has a clear view of the sky.
- Courtesy Period Begun message will verify that the Courtesy Period
  - prompted to set up the audio connection. Snap will then tune to

 
the User Guide for additional help.




Magnetic Mount Antenna" on page 14, or to "Troubleshooting" on page 42 of



  - A. Power on your Snap by pressing the Power button. Ensure the When prompted, press the number button 1, then 2, then 3. The MENU FM
- C. You will be notified about the length of the Courtesy Period and Press 1,2,3








Decide on one of the following in-box audio connection options. Refer to "Connect the Audio" on page 23 of the User Guide for details including other connection options.

Option 1: Best: Use the provided Aux In Cable, if your vehicle's stereo system has an auxiliary input jack.

- A. Plug one end of the cable into the AUDIO connector on Snap and the other end into the auxiliary input jack on the vehicle's stereo system.
- **B.** Turn on your vehicle's stereo system and set it to play from the auxiliary input source.
  - **C.** You should now hear the XM channel 1. The installation is complete.




TIP! Refer to your vehicle's owner's manual to find the location of the auxiliary input jack, or consult the

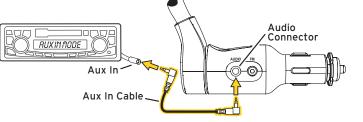



continued on other side.


- A. Mount Snap by plugging the Base into the power adapter or cigarette lighter socket. B. Grasp the rear of Snap's Base and gently push in, while at the same time rotating the Base

     
3 Find a Location for Snap and Mount It

 


 












weather stripping.


### Connect the Audio (continued)

Option 2: Good: Use the *Power*Connect™ feature of Snap. *Power*Connect plays the XM audio through your vehicle's FM radio.

- A. Find and make a list of all available FM channels in your area that are not being used by an FM radio station.
- B. Pick the first FM channel on your list. Tune your vehicle's FM radio to this FM channel. MENU FM
- C. Set your Snap to transmit on the same FM channel that you have selected on your vehicle's FM radio:
- i. Press FM on the top of Snap.
- ii. Turn the Rotary knob to select the available FM channel you have chosen.
- **D.** You should hear XM channel 1 through your vehicle's FM radio. If you are satisfied with the sound quality, the installation is complete.
- **E.** If you are not satisfied, move to the next FM channel on your list and repeat the process. Continue until you have found an FM channel with which you are satisfied.
- F. Press FM or wait 10 seconds to exit the FM mode



 TIP: Refer to "PowerConnect Installation Instructions" on page 25 of the User Guide for details on how to find an available FM channel.




90.1

# 6 Explore, Enjoy and Subscribe

 Once installation is complete, you can tune to other channels and listen to all the commercial-free

- A. Turn the Rotary knob to tune to other channels and press the Previous or Next Category button Number Buttons to browse and select the different categories.
- 3. Subscribe before the Courtesy Period expires. Follow the instructions displayed on the screen.



- You can also subscribe anytime you want online or by phone. Just go to www.xmradio.com and click on Activate Radio or call 1-800-XM-RADIO (1-800-967-2346).
- TIP: To subscribe, you will need your Radio ID, which you can find by pressing MENU, on a label on the Scan Button bottom of the gift box, on the label on the back of your Snap, and by tuning to channel 0.

### Snap Button Functions Snap Main Display

Menu Button

audio level.

FM Button

to FM mode for

Press to access

Press to change

Radio ID and adjust

Antenna Signal Strength -

or Sports Teams/Score

or Talk Show Host

Favorite Channel or

FM Preset is selected

 
Displayed when a -

When listening to a channel, information about the channel and what is currently playing is music, plus live sports and the latest news, talk & entertainment on XM. displayed. The screen will alternate between displaying the artist name and song/program title; and displaying the category, channel name and channel number.

### Top View (Radio Control Unit) Press to tune to a stored favorite channel, press and hold to store a favorite ∕snap!∣ channel: in FM mode, press to select a stored FM preset. To Subscribe press and hold to store an FM preset.


Turn to tune to the previous or next channel within the current category: in FM mode turn to tune FM channels.

Press to start or stop scanning through channels within the current category.



configuring FI

 Previous/Next Category Button Press to access the previous or next category; press and hold to cycle through the



Self installation instructions and tips are provided for your convenience. It is your

Displayed when Snap

pressing the MENU button)

FM mode (after pressing

- Song/Program Title or Talk Show Schedule or Game Time/Game Details

🗕 is in menu mode (after

the FM button)

– Channel Number

- Channel Name

New York, NY 10020

www.xmradio.com

SIRIUS XM Radio Inc. 1221 Avenue of the Americas 1.800.967.2346

© 2010 SIRIUS XM Radio Inc.

XSN1QSG 082610a





