

Astra

TwinTop

Quick Reference Guide

Refer to the Owner's Manual for more detailed information.

Important information

With TwinTop, a convertible hardtop, Astra unites the benefits of a coupe with those of a convertible.

Take care when operating the convertible hardtop. Risk of injury.

 
Vehicle passengers must be informed accordingly.

Monitor the action zone above, to the side and to the rear of the vehicle roof during operation. Make sure that nothing could become trapped or pinched.


Make sure no-one is in the action zone of the roof or boot lid during roof operation. Risk of injury.

Check the amount of height, length and width of available space before operating the roof, e.g. in a parking garage or when a bicycle rack is fitted.


Before leaving the vehicle, remove the ignition key in order to prevent unauthorized operation of the windows, sunroof and TwinTop.

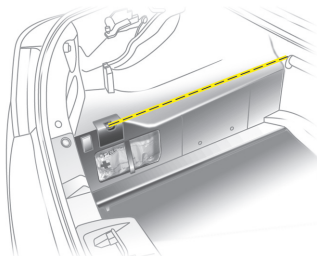

S 12610

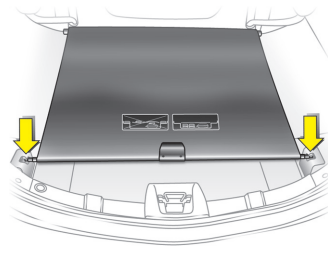 

S 12611

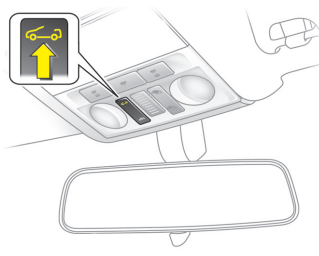 

S 12612

Luggage compartment

The roof can only be opened if the load in the luggage compartment does not exceed the height of the luggage compartment blind.

The marked load height (see illustration) must not be exceeded and it must be possible for the blind to close flat. Otherwise, the roof or load could be damaged when the roof is opened.

Operating the TwinTop

Turn key to position 1 in starter switch. Requirements:

 
 
- Vehicle is stationary or being driven at no more than 20 mph (30 km/h).
- Luggage compartment blind is closed and engaged (see illustration).
- Boot lid is closed.

If any of the requirements are not fulfilled, a warning buzzer sounds when the switch is actuated and the roof does not open or close.


To open the roof

Place no objects in front of rear window or in pivot area of roof and boot lid. Hold button  in roof console until the roof is completely open and the boot lid is closed.


An acoustic signal sounds at the end of the opening procedure. Open the windows slightly before opening the roof. If button  is pressed again after the acoustic signal sounds, the windows will close.

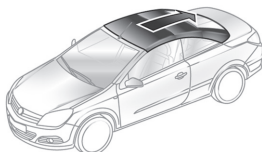

S 12608

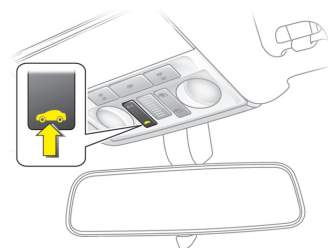 

S 12613

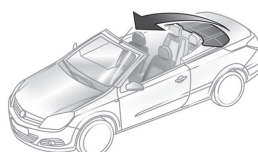 

S 12609

 
The roof can also be opened with remote control when the vehicle is stationary. Unlock the vehicle. Press button  again and hold until the roof is completely open and the boot lid is closed.

During operation with the remote control, the windows are opened completely.

To close the roof

Place no objects in pivot area of roof and boot lid. Hold button  in roof console until the roof and boot lid are completely closed. An acoustic signal sounds at the end. Open the windows slightly before closing the roof. If button  is pressed again after the acoustic signal sounds, the windows will close.

The roof can also be closed with remote control when the vehicle is stationary. Lock the vehicle. Press button  again and hold until the roof and boot lid are completely closed.

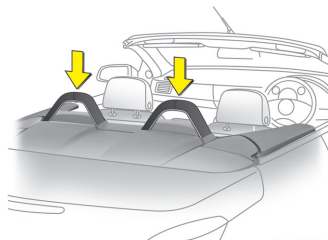


S 12614

Rollover protection system

To optimise safety in the event of a rollover, the Astra TwinTop is equipped with reinforced windscreen frame and anti-roll bars behind the rear seat head restraints.

The anti-roll bars are fixed or deployable depending on vehicle variant.

 Fixed anti-roll bars are secured to the vehicle bodywork (see illustration).

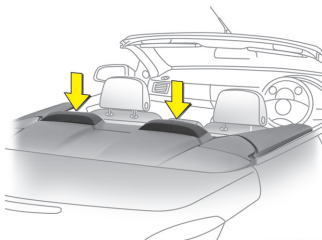


S 12615

Deployable anti-roll bars*

Located between the rear head restraints and the boot lid in such a way that they are out of sight. In the event of a rollover, head-on collision or side impact, the anti-roll bars deploy upwards within milliseconds.

The convertible hardtop must not be operated if the anti-roll bars have been deployed. A continuous warning will sound if the switch is actuated.

 The airbag control indicator  illuminates if the anti-roll bars have been deployed.

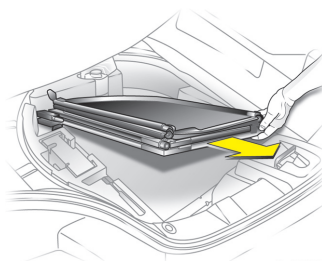

S 12607

Wind deflector*

With the wind deflector installed, turbulence, draughts and noise in the passenger's compartment are reduced when the roof is open.

The rear seats cannot be occupied when the wind deflector is in place.

Place no objects on the wind deflector.

The wind deflector is folded together in a stowage compartment  in the luggage compartment beneath the floor hatch. If vehicle is fitted with a spare wheel , the wind deflector is in the luggage compartment.

For instructions on how to fit and remove wind deflector, see Owner's Manual.

Indicator and warning buzzers

- Indicator buzzer upon completed opening or closing of the convertible hardtop.
- Indicator buzzer upon completed raising or lowering of the luggage compartment loading aid.
- Gong tone if the boot lid is not closed during roof operation.
- Gong tone if the boot lid is not fully opening during operation of the luggage compartment loading aid.

- Gong tone during roof operation if vehicle speed exceeds 20 mph (30 km/h).
- Gong tone when vehicle speed exceeds 20 mph (30 km/h) if the roof is not fully open or closed.
- Three gong tones during roof or loading aid operation if the luggage compartment blind is not attached.
- Three gong tones during roof operation if outside temperature is below -20 °C, vehicle battery voltage is too low or the system is overloaded.

- Continuous warning buzzer during roof operation if the anti-roll bars  have been triggered.
- Continuous warning buzzer starting one minute before the end of the 9-minute standby time with the roof in an intermediate position.
- Continuous warning buzzer starting one minute before the end of the 9-minute standby time with the luggage compartment loading aid in a raised position.

Tyre pressures (psi) for loads of up to 3 persons.

Engines	Tyres	Front	Rear
Z 16 XER,	All except below	30	30
Z 18 XER	225/40 R 18	33	30
Z 16 LET	All except below	33	30
	225/40 R 18	36	33
Z 19 DTH	All except below	33	30
	225/40 R 18	36	33
Temporary spare wheels			
All	T 115/70 R 16	61	61

Tyre pressures (psi) ECO* for loads of up to 3 persons.

Engines	Tyres	Front	Rear
Z 16 XER	205/55 R 16	36	36
	225/45 R 17	36	36
Z 18 XER	205/55 R 16	36	36
	225/45 R 17	36	36

* To achieve the smallest amount of fuel consumption possible. Not for use with run-flat tyres.

Tyre pressures (psi) for full loads.

Engines	Tyres	Front	Rear
Z 16 XER,	All except below	32	38
Z 18 XER	225/40 R 18	35	41
Z 16 LET	All except below	35	41
	225/40 R 18	38	44
Z 19 DTH	All except below	35	41
	225/40 R 18	38	44
Temporary spare wheels			
All	T 115/70 R 16	61	61



VAUXHALL