

**User
Manual**

**Tumble
Dryer**



ZTE 280

Dear customer,

Please read these operating instructions carefully and pay particular attention to the safety notes indicated in the first pages. We recommend that you keep this instruction booklet for future reference and pass it on to any future owners.

Transport damages

After unpacking the machine please check it is not damaged. If in doubt, do not start it but contact your local Service Centre.

The symbols you will see on some paragraphs of this booklet have the following meaning:



The warning triangle emphasize information that is particularly important for your safety or correct functioning of the appliance.



The information marked with this symbol provides additional instructions and practical tips on the use of the appliance.



Tips and information about economical and ecological use of the machine are marked with this symbol.

Our contribution to the protection of the environment: we use recycled paper.

Contents

Important safety information	3	Use	10
Disposal	5	• Programme chart	13
Tips for environmental protection	5	• Operating sequencee	14
Technical specifications	6	• Useful hints	16
Description of the appliance	6	Maintenance and Cleaning	17
Adjusting the level of conductivity	7	• External cleaning	17
Installation	8	• Cleaning the door	17
• Unpacking	8	• Cleaning the filters	17
• Positioning	8	• Cleaning the condenser unit	17
• Electrical connection	8	• Emptying the water reservoir	18
• Stacking kit	8	• Cleaning the drum	18
• Door reversal	8	Something not working?	19
• Connecting a drain hose	9		
• The control panel	10		



Important safety information

In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

General safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat).
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Always unplug the appliance after use, clean and maintenance.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.
- Items that have been soiled with substances such as cooking oil acetone, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Danger of explosion: Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substance are volatile, they could cause an explosion. Only tumble dry items washed with water.
- Risk of fire: items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer.
- If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer.
- Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance
- **Danger of explosion:** Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substance are volatile, they could cause an explosion. Only tumble dry items washed with water.
- **Risk of fire:** items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer
- If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer.

- Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance



WARNING!

Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Risk of fire !

Installation

- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that items will not be damaged.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely.
- After having installed the appliance, check that it is not pressing or standing on its electrical supply cable.
- If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory).

Use

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash fabrics which are designed to be machine dried. Follow the instructions on each garment label.
- Do not dry unwashed items in the tumble dryer.
- Do not overload the appliance. See the relevant section in the user manual.
- Clothes which are dripping wet should not be placed in the dryer.
- Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
- Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible.
- Fabric softeners, or similar products should be used as specified by the fabric softener instructions.


Child safety

- This machine is not intended for use by young children or infirm persons without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach.
- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb into the drum.



Disposal

Packaging materials

The materials marked with the symbol  are recyclable.


This means that they can be recycled by disposing of them properly in appropriate collection containers.

- Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance.
- When the appliance is to be scrapped, cut off the power supply cable and make the door closing device unusable to prevent young children from being trapped inside.

Machine

Use authorised disposal sites for your old appliance. Help to keep your country tidy!

Old appliance

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Tips for environmental protection

To save energy and to help protect the environment, we recommend that you follow these hints:

- Try to load the maximum capacity of the machine as small loads are **uneconomical**.
- Always load well spun laundry. The higher the spin speed, the lower the electricity consumption and the shorter the drying times.
- Do not over-dry laundry, this avoids creasing and saves energy. Select the drying time/section according to the type of laundry and the required degree of dryness.
- To utilize the maximum load, laundry which is to be dried ready to put away (store dry) can be dried together with items to be ironed. To do this, select the time for iron-dry, remove the iron-dry items at the end of the programme and then finish-dry the rest of the load.
- Clean the filters regularly to avoid excessive drying times and high electricity consumption.
- Ventilate the room well. The room temperature should not exceed +35°C during drying.

Technical specifications

DIMENSIONS:	Height	85cm
	Width	60 cm
	Depth	58 cm
ELECTRICAL CONNECTION:		230 V/50 Hz
MAX. POWER ABSORBED:		2350 W
MIN. FUSE RATING:		16 A
MAX. DRYING CAPACITY:	Cotton, linen	7 kg
	Synthetics	3 kg
CONSUMPTION:	Cotton, linen	4.4 kWh (7 kg store dry)
	Cotton, linen	3.41 kWh (7 kg iron dry)
	Synthetics	1.36 kWh (3 kg store dry)




This appliance complies with the following E.E.C. Directives:

- 73/23 EEC of 19.2.73 (Low Voltage Directive) and subsequent modifications;
- 89/336 EEC of 3.5.89 (Electromagnetic Compatibility Directive) and subsequent modifications.

Description of the appliance

1. Table top
2. Time selector dial
3. Control panel
4. Water reservoir
5. Fluff filters
6. Rating Plate
7. Condenser Unit
8. Adjustable feet

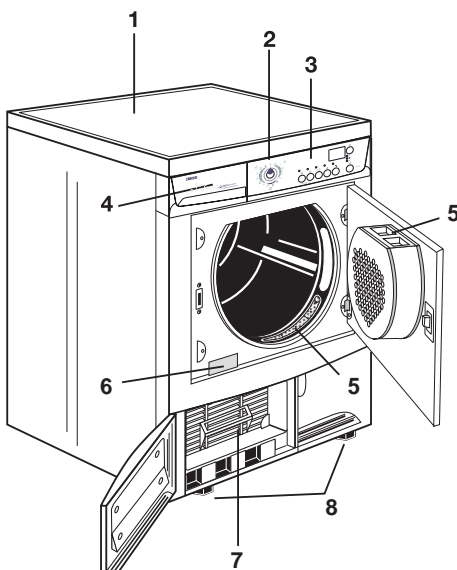


Adjusting the level of conductivity

Water contains, a variable quantity of limestone and mineral salts of which quantities vary according to geographical locations thus varying its conductivity values. Relevant variations of the conductivity of the water compared to those prefixed by the factory could slightly influence the residual humidity of the laundry at the end of the cycle.

Your dryer allows you to regulate the sensitivity of the drying sensor based on conductivity values of the water by using the following procedure.


Procedure:

Turn the programme selector dial to switch on the appliance. In selection mode press simultaneously the buttons **3** and **6** until «CO» appears on the digits.

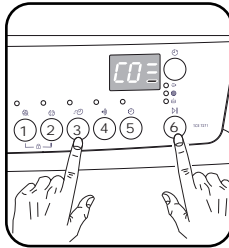

Adjusting the level of conductivity:

Press the button **6** sequentially: the level of conductivity is indicated by the lighting of the horizontal hyphens.

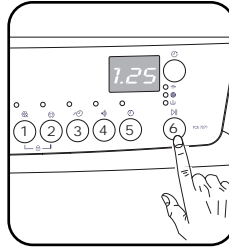

Normally, the appliance is factory-set to the highest level; however, certain models may be configured differently.

Memorizing the new setting:


Simultaneously press down the buttons **3** and **6** until the previous drying cycle time appears again on the display and the buzzer sounds.


Display	Conductivity degree	Approximative value (µS/cm)
CO -	Low	< 300
CO =	Medium	300 - 600
CO ≡	High	> 600

Installation

Warning!

Unpacking

 Slide out the polythene bag with the polystyrene stuffing before using the appliance pull off adhesive strips from inside machine on top of drum.

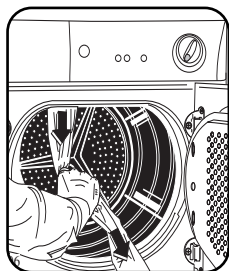

 **Should the appliance be moved, it must be transported vertically.**

Positioning

It is recommended that, for your convenience, the machine is positioned close to your washing machine. The tumble dryer must be installed in a clean place, where dirt does not build up.

Air must be able to circulate freely all round the appliance. Do not obstruct the

front ventilation grille or the air intake grilles at the back of the machine.

To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface. Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the feet until it is.

The feet must never be removed.

Do not restrict the floor clearance through deep-pile carpets, strips of wood or similar. This might cause heat build-up which would interfere with the operation of the appliance.

Important!

The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures.

When operating the tumble dryer, the

room temperature must not be lower than +5°C and higher than +35°C, as it may affect the performance of the appliance.

Electrical connection

This machine is designed to operate on a 230 V, 16A, single-phase, 50 Hz supply.

Check that your domestic electrical installation can take the maximum load required (2.35 kW), also taking into account any other appliances in use.

Connect the machine to an earthed socket, in accordance with current wiring regulations.

 **The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre.**


Important!

The power supply cable must be accessible after installing the machine.

Stacking kit

A special stacking kit is available through your dealer, to enable the mounting of the dryer on top of a front loading washing machine with cover's depth between 48 and 60 cm.

Read carefully the instructions supplied with the kit.

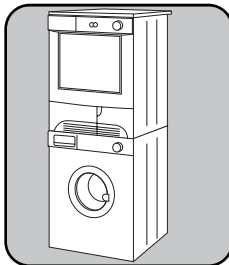

Door reversal

To make it easier to load or unload the laundry the door can be reversed.

This operation must be carried out by qualified personnel. Please contact the nearest Service

Connecting a drain hose

If there is a sink or drain near the appliance, the condensed water can be discharged directly through a hose that is available on the market.



In order to connect the hose to the appliance proceed as follows:

- Remove the clamp **(A)**;
- Pull out the plug **(B)**;
- Insert the drain hose **(C)**;

- Fasten the hose **(C)** to the appliance using the clamp **(A)**.


If the appliance is stacked on the washing machine, the condensed water can be discharged through

the hose **C** as shown in figure, but take into account that the hose must be pointed downwards.

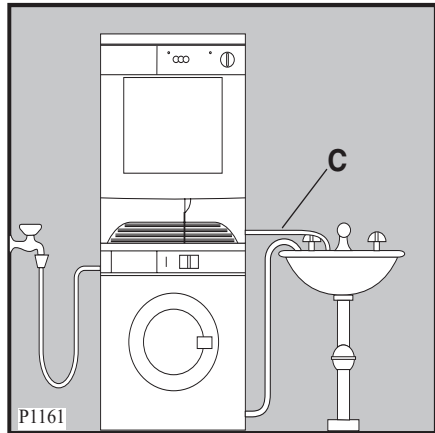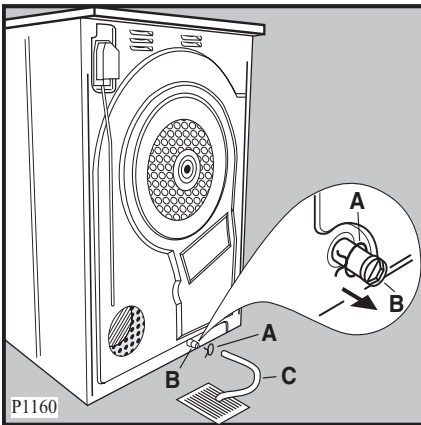

Use

The control panel

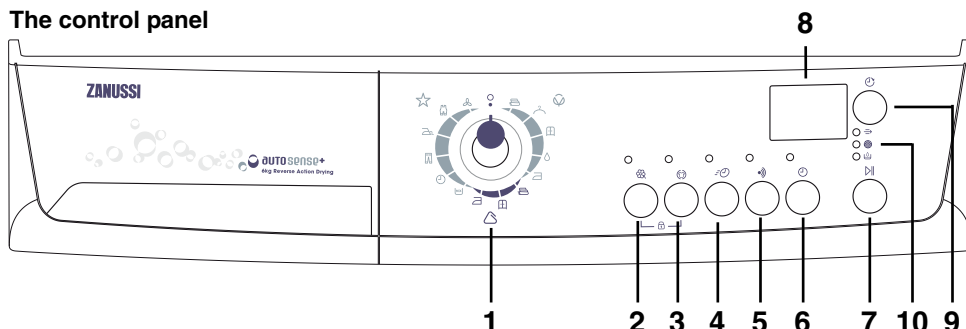

1 Programme/Time selector dial

Allows you to select electronically controlled or time controlled drying. Turn the dial to the required programme or time.

Electronically controlled drying (automatic)

The appliance runs these programmes with the help of probes which detect the degree of dampness of the laundry. Simply select the programme according to the type of laundry and degree of drying required.

2 Low temperature button



Pressing this button allows drying to be performed at a

lower temperature, for delicate items. The corresponding pilot light comes on.

This option can also be used for time controlled drying.

3 Long Anticrease



If this additional function is selected, the anti-crease phase at the end of the drying cycle is lengthened by 60 minutes. The laundry can be removed at any time during the anti-crease phase.

4 Quick drying button



By depressing this button the drying time is reduced in the following programmes:

- Cotton&linen
- Synthetics

The corresponding light illuminates. This option cannot be selected together with "low temperature" function .

5 Buzzer - button



A buzzer sounds

- when selecting the programme
- when depressing the buttons
- when an incorrect option selection is made
- when the programme selector dial is turned to another position during the programme or when you depress an option button during the

cycle

- at the end of the programme
- when the water reservoir is full
- if the machine is not working correctly
- when the small door at the bottom is open



By depressing button the acoustic signal is switched off. The corresponding light comes on.


6 Time button



To select the programme duration after setting the programme. You can select a programme duration from 20 mins to 2 hrs in 10-minute steps.

1. Turn the

programme knob to the  programme. The display will show 0.10 (corresponding to the  programme).


2. Press the  button repeatedly until the desired programme duration is shown in the display, e.g. 00.20 for a programme of 20 minutes. If the programme duration is not selected, the duration is automatically set to 10 mins.


7 Start/pause button



Press this button to start the dryer after having selected the programme and the options. The relevant light will stop flashing. If you have chosen a delayed start, the machine will begin the count down.

If the door of the appliance or the small door at the bottom is opened while the programme is running, this button must be pressed again after closing the door in order to restart the programme from

the point at which it was interrupted. This button must also be depressed after a power failure and after having re-inserted the water reservoir, if it has been emptied in the middle of a programme after lighting up of the  light.


In both cases the light of the  button flashes to remind you that the start button needs to be pressed again.

8 DISPLAY

The display shows the following information:

- duration of selected programme
- delayed start
- end of programme
- incorrect option selection
- alarm code
- **Duration of selected programme**
After you have selected the programme, its duration (in hours and minutes) appears on the display. It is calculated automatically on the basis of the maximum load


accepted for each type of fabric and of the required degree of drying.

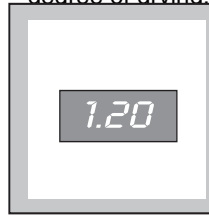

When the programme starts, the remaining time is displayed every 5 minutes.


- **Delayed start**
If you have selected a delay time by means of the relevant button, the display shows it for 3 seconds; then it shows the duration of the previously selected programme.

The countdown is displayed every 30 minutes until it displays "90 minutes" and then hour by hour.

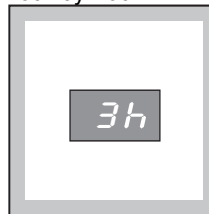


- **End of programme**
A zero indicates the end of the programme and it

is displayed after the "anti-creasing" phase.

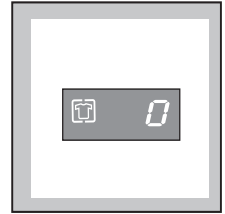


- **Incorrect option selection**
If you select an option that is not compatible with the programme you have selected, the display shows **Err** (error).

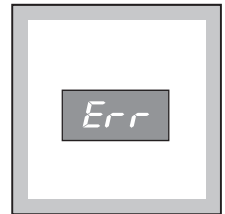

This code will reappear during the execution of the programme if you press one of the option buttons or turn the programme selector.

- **Alarm code**
In case of a functional anomaly, the display shows an alarm code (e.g. **E21**). See page 19 for more detailed information.

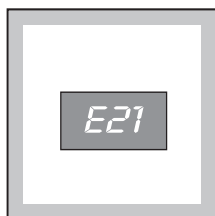

9 Delay Start button



This button allows you to delay the starting of the programme by 20 hours max.

This option must be selected **after** having selected the programme and **before** pressing ► to start the programme.

Every time the button is pressed, the time is increased by 30 minutes, until the display shows a delay of "2 hours". After this, the delay is displayed hour by hour.

The minutes or hours of delay that have been selected are displayed for 2 seconds, then the display shows the duration of the previously selected programme.

The countdown begins after you have pressed the ► button.

To cancel the delay time press the ►

button and after press the ⌚ button until the display indicates 0'.

Then press the ► button again.

When the delay is cancelled, the display shows 0' and after the duration of the programme.

During the delayed start, it is not possible to change the programme or the delay time that have been selected.

To do this, you must first switch off the machine by setting the programme selector dial to O.

Select the new programme, the options and the delayed start, then press the ► button.

During the delayed start, to cancel or change functions that have been selected, simply set the appliance to PAUSE. Once you perform the desired operation, press once again the ► button.

If you wish to add more laundry while the machine is performing the countdown, simply open the door.

This button must be depressed also after a power failure and after having re-

inserted the water reservoir, if it has been emptied in the middle of a programme after lighting up of light ☼. When you close the door, press the ► button again to cause the countdown to be resumed.

10 Indicator lights

These lights indicate the following functions:

⇒ light (Clogged condenser)

It comes on every 80 cycles to remind you that the condenser must be cleaned.

● light (Clogged filters)























This light illuminates at the end of the programme to remind you that the filters must be cleaned.

☼ light (Full tank)


This light comes on at the end of the programme to remind you that the water reservoir must be emptied out. If this light illuminates during a programme this means that the water reservoir is

full. The buzzer sounds, the programme stops, the light of the ► button flashes.

Programme chart Automatic drying (electronic programmes)

Type of Laundry	Degree of drying required	Max-load ^(*)	Programme
 Cotton & linen	extra dry	7 kg	
	ready to wear	7 kg	
	store dry	7 kg (*)	
	slightly damp	7 kg	
	iron dry	7 kg	
 Synthetics	extra dry	3 kg	
	store dry	3 kg	
	iron dry	3 kg	
 Cotton & easy care	Mix	3 kg	
 Cotton and Synthetics	Time	1 kg	
 Cotton	Jeans	7 kg	
 Jackets, shirts, chemises.	Easy iron	1 kg	
 Jumpers	Baby cycle	2 kg	
 Cotton, linen and Synthetics	Cooling	7 kg	

(*) According to IEC 61121 Standards.

-  is a special programme for jumpers to be dried “ready to wear”.

Cooling

This position on programme selector dial can be used to freshen the laundry (e.g. to remove a persistent odour of moth-balls). Programme duration 10 mins.

Load

It is often difficult to estimate the weight of items to be dried. We therefore recommend that you adopt the following guidelines:

- **cotton, linen:** drum full but not too tightly packed;
- **synthetics:** drum no more than half full;
- **delicate fabrics:** drum no more than one third full.


Operating sequencee


Before using your tumble dryer for the first time, we recommend to place a few dampclothsinside the appliance and dry for 30 minutes.



There may be dust inside a brand new tumble dryer.


Drying

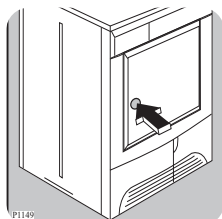

1. Connect the appliance.
2. Open the door (see picture).



3. Load the items one at a time, shaking them out loosely.
4. Close the door. Please check the laundry does not get caught between the door and filter.
5. Select the drying programme or time. The light of the  button flashes and the display shows the duration of the programme.

6. If required, press the  button and/or the  button.

7. Select the  if required. The selected delay appears on the display for 2 seconds, then the duration of the selected programme is displayed.

8. Press the  button: the corresponding light stops flashing and drying starts. If you have selected the , the machine begins its countdown.

The drum turns alternately in both directions during drying.



All drying programmes end with a 10 minute cooling phase. You may remove the laundry after this phase.


The  and  lights illuminate and the buzzer sounds

The display shows a static zero.

9. If the laundry is not removed at the end of the cycle, the dryer performs an **anti-creasing** phase (duration: 30 minutes maximum).

If you do not remove the laundry, the dryer will stop automatically at the end of the anti-creasing phase.

The  and  lights remain lit and the buzzer sounds every 10 seconds for 2 minutes.

The light of the  button goes off and a flashing zero appears on the display.


10. Turn the programme selector dial to **O** ; all the lights go out. The appliance is switched off. Remove the laundry.


If you open and then close the door before turning the programme selector dial to **O , all the lights corresponding to the phases making up the performed programme come on and the display shows the duration of the programme.**

After each use


- Clean the filters (see page 17).
- Empty the water reservoir (see page 18).

Important!

If the drying programme has to be stopped before it reaches the end, we recommend that you turn the programme selector dial to position  and wait until the end of this phase before removing the laundry. This will avoid a build-up of

heat inside the appliance. To do this first turn the dial to **O** and then to and depress  Button.



Modifying the programme

To change a programme which is running, first cancel it by turning the programme selector dial to **O**. Select the new programme and press the  Button.

Child safety device

The child lock can be set to prevent a programme being accidentally started or a programme in operation being accidentally changed.

The child safety device locks all buttons and the programme knob.

The child safety device can be activated or deactivated by holding down the  and  buttons simultaneously for 5 seconds.

- Before programme is started:

Appliance cannot be used

- After programme is started:

Programme in operation cannot be changed

The  symbol

appears in the display to indicate that the child safety device is activated.

The child safety device is not deactivated once the programme comes to an end.

If you want to set a

new programme, you must first deactivate the child safety device.

Useful hints

- Try to load to the maximum capacity of the machine as small loads are uneconomical. For information, here is a list of the average weights of some common laundry items.

Sheet
700 - 1000 g

Tablecloth
400 - 500 g

Kitchen towel
70 - 120 g

Table napkin
50 - 100 g

Towelling hand towel
150 - 250 g

Bathrobe
1000 - 1500 g

Man's shirt
200 - 300 g

Pillowcase
100 - 200 g

Man's pyjamas
400 - 500 g

Ladies' nightdress
200 - 250 g

- Never tumble dry the following: Particularly delicate items such as net curtains, woollen, silk, fabrics with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdowns, sleeping bags, feather quilts and any items containing rubber foam or materials similar to rubber foam.

- Always follow the instructions on garment labels:



may be tumble dried



normal drying (high temperature)



delicate drying (low temperature)



do not tumble dry

- Close pillowcases and covers with fasteners to prevent small laundry items getting tangled inside them. Close press studs, zips and hooks and tie belts and apron strings.

- Sort laundry according to type and degree of drying required.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Avoid drying dark clothes with light coloured fluffy items such as towels as they could attract the fluff.
- The laundry must be thoroughly spun before tumble drying.
- **Easy-care items**, too, e.g. shirts, should be briefly pre-spun before drying (depending on crease resistance approx. 30 seconds or using the special brief spin programme of your washing machine).
- Knitted textiles (knitted underwear) may shrink a little during drying. Please do not overdry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases.
- You can also put starched items

into your dryer. However, to achieve the desired starched effect, choose the programme "iron dry". To remove any starch residues, wipe out the internal drum after drying with a moist cloth and then rub it dry.

- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying.
- If individual items are still damp after drying, set a brief post-drying time, but **at least 30 minutes**. This will be necessary particularly for multilayered items (e.g. collars, pockets, etc.).

Maintenance and Cleaning

You must **disconnect** the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

External cleaning


Use only soap and water and then dry thoroughly.

Important: do not use methylated spirit, diluents or similar products.

Cleaning the door

Clean periodically the interior part of the door to remove any fluff from the seals around the filter.

Accurate cleaning ensures correct drying.

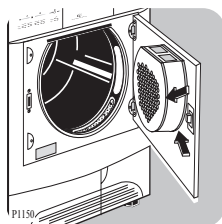


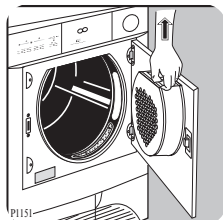
Cleaning the filters

Your dryer will only function well if the filters are clean.

The filters collect all

the fluff which accumulates during drying and they must therefore be cleaned **at the end of each programme**, before removing the laundry, with a damp cloth

The light  (Filter cleaning) is on to remind you this operation.



The filter in the inner door must be removed for cleaning.


Do not be alarmed by the amount of fluff. It is not due to excessive wear caused by the dryer. All fabric loses fluff when drying but it goes un-noticed in the air. In a tumble dryer it simply collects in the filter. After a while, a whitish patina due

to detergent residue on laundry forms on the filters. When this occurs, clean the filters with warm water using a brush. Remove the filter in the door opening as per picture (it can be positioned with the tooth facing to the left or to the right).




Do not use the appliance without filters.



Cleaning the condenser unit

Clean the condenser when light  (Condenser cleaning) comes on.


The condenser is situated at the lower part of the cabinet behind a small door. To open the door, push the catch as per picture.

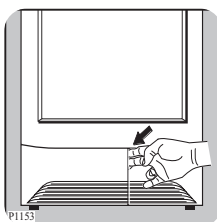

During the drying cycle or at the end, it is normal for water to be present on the surface of the condenser insertion. To pull out the condenser, first turn the two red stops downwards and then remove the condenser unit holding it at the handle.

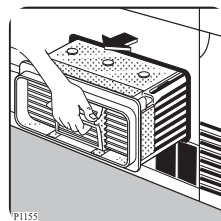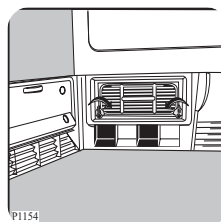

Clean it with a brush and rinse it under the shower if necessary.

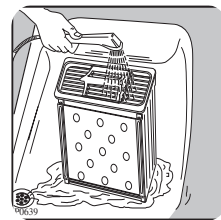

Also clean the outside, removing all fluff.

Clean the rubber seal round the condenser cabinet and in the inner part of the small door with a damp cloth.

Important!

Do not use pointed objects or utensils to clean the spaces between the plates, as this could damage the condenser and make it permeable.

Re-fit the condenser, turn the red stops upwards and close the door.




Do not use this appliance if the condenser has not been fitted.

Emptying the water reservoir



Water extracted from the laundry condenses inside the machine and is collected in a reservoir.

The reservoir must be emptied **after each drying cycle** to ensure efficient operation when the


machine is next used. The pilot light  (Water reservoir full) reminds you this operation.

Proceed as follows:


- Pull out the reservoir
- Turn it upside down and let water flow down
- Re-fit the reservoir

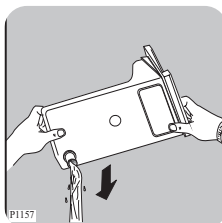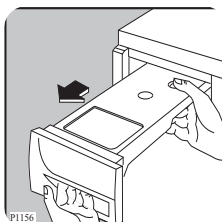

The reservoir must be re-inserted correctly.

If this is not done the pilot light  comes on during

next drying and the programme stops, leaving the laundry damp. The buzzer will sound.

After emptying and inserting the reservoir the  button has to be depressed again to allow the programme to continue.

Handy tip: The condensed water may be used in a steam iron or to top up a battery, etc. In this case it must be filtered (e.g. through a coffee filter).

Cleaning the drum





When your laundry does not reach the desired degree of dryness, in other words, when it turns out either too dry or too damp, we advise you to clean the inside of the drum with a cloth soaked with vinegar.

This will eliminate the slight patina that has formed in the drum (due to residues of

detergent and softeners used in the washing, and to the lime contained in the water), which prevents the probes from detecting the correct degree of dryness.

Something not working?

Before contacting your local Service Centre, please make the following checks:

Problem	Possible cause
<ul style="list-style-type: none"> The dryer does not work: 	<ul style="list-style-type: none"> The door(s) has (have) not been closed. The plug is not properly inserted in the power socket. There is no current at the socket. The main fuse or the fuse in the plug has blown. The selector dial is not set correctly. The water reservoir is full or not properly inserted (the  light is on). The programme starts in any case but it stops after approx. 4 minutes. The  Button has not been depressed. The  option has not been selected.
<ul style="list-style-type: none"> The dryer does not dry properly: 	<ul style="list-style-type: none"> The laundry has not been spun properly. The filters and/or the condenser are clogged up. The water reservoir is full. The room temperature is too high. The selected time or drying cycle was not suitable for the laundry. The  button has been pressed. There is too much laundry inside the appliance. The dryer is not correctly installed.

If, after the above checks, there is still a fault, call your local Service Centre.
Please make sure you give the model and serial number of the appliance.
This information can be found on the rating plate (see picture on page 6).



www.electrolux.com