

ZTE C76
User Manual

LEGAL INFORMATION

Copyright © 2011 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : R1.0

Edition Time : 2011.03.18

Manual No. : 079584502596

Contents

| | | |
|-----------|------------------------------------|-----------|
| 1. | Getting Started | 8 |
| | Phone Overview | 8 |
| | Technical Specifications | 10 |
| | Battery | 10 |
| | Installing the Battery..... | 10 |
| | Charging the Battery | 11 |
| | Removing the Battery..... | 12 |
| | Powering On/Off..... | 13 |
| | Locking/Unlocking the Keypad | 14 |
| | Main Display Icons | 14 |
| | Connecting to the Network | 15 |
| | Activating Your Phone | 15 |
| 2. | Calls..... | 16 |
| | Making a Voice Call..... | 16 |
| | Making a Speed Dial Call | 16 |
| | Answering a Voice Call..... | 17 |
| | In-Call Features | 17 |
| | Three-Way Call..... | 18 |

| | | |
|-----------|---|-----------|
| | Call History..... | 19 |
| 3. | Entering Text..... | 20 |
| 4. | Contacts | 22 |
| | Adding a New Contact | 22 |
| | Searching for a Contact | 22 |
| | Adding a Contact to a Group | 23 |
| | Setting Speed Dial to a Contact..... | 23 |
| 5. | Messaging..... | 24 |
| | Sending an SMS Message | 24 |
| | Sending an MMS Message..... | 24 |
| | Message Folders | 25 |
| | Voicemail..... | 26 |
| 6. | E-mail..... | 27 |
| 7. | Multimedia..... | 28 |
| | Playing Your Tunes..... | 28 |
| | Viewing Your Images | 29 |
| 8. | Download | 30 |
| | Downloading or Purchasing Applications..... | 30 |


| | | |
|------------|---------------------------------------|-----------|
| | Download Settings..... | 30 |
| 9. | Browser..... | 31 |
| | Opening Web Pages | 31 |
| | Setting the Browser | 32 |
| 10. | Info Portal | 33 |
| 11. | Bluetooth® | 34 |
| | Setting Up Bluetooth..... | 34 |
| | Pairing With a Bluetooth Device | 35 |
| 12. | Tools..... | 36 |
| | Calculator | 36 |
| | Alarm Clock | 36 |
| | Calendar | 36 |
| | Tip Calculator | 37 |
| | World Clock | 37 |
| | Voice Memo..... | 37 |
| | Games | 37 |
| 13. | Setting Up Your Phone | 38 |
| | Setting the Sound | 38 |
| | Volume | 38 |


| | |
|---------------------------------|-----------|
| Voice Call Ringers | 38 |
| Message Ringers | 39 |
| Keypad Tone | 39 |
| Power On/Off Tone | 39 |
| System Alerts..... | 39 |
| Setting the Display | 40 |
| Setting the System..... | 41 |
| Call Setup | 41 |
| Automatic Keyguard | 41 |
| Memory Info..... | 41 |
| Phone Info | 41 |
| System Settings..... | 42 |
| TTY Mode | 42 |
| Security..... | 43 |
| HAC Mode | 43 |
| Language | 44 |
| GPS..... | 44 |
| Airplane Mode | 44 |
| 14. For Your Safety..... | 45 |
| General Care..... | 45 |

| | |
|--|-----------|
| Aircraft Safety | 48 |
| Hospital Safety | 49 |
| General Guidelines..... | 49 |
| Road Safety..... | 50 |
| Vehicles Equipped With an Airbag | 52 |
| Third Party Equipment..... | 52 |
| Efficient Use | 52 |
| Radio Frequency (RF) Energy..... | 53 |
| Emergency Services..... | 54 |
| FCC Compliance | 55 |
| IC Notice..... | 57 |
| Using Your Phone With a Hearing Aid Device | 58 |
| Turning on the HAC Setting..... | 60 |
| Copyright Notice | 60 |
| 15. Troubleshooting..... | 61 |

1. Getting Started

Phone Overview

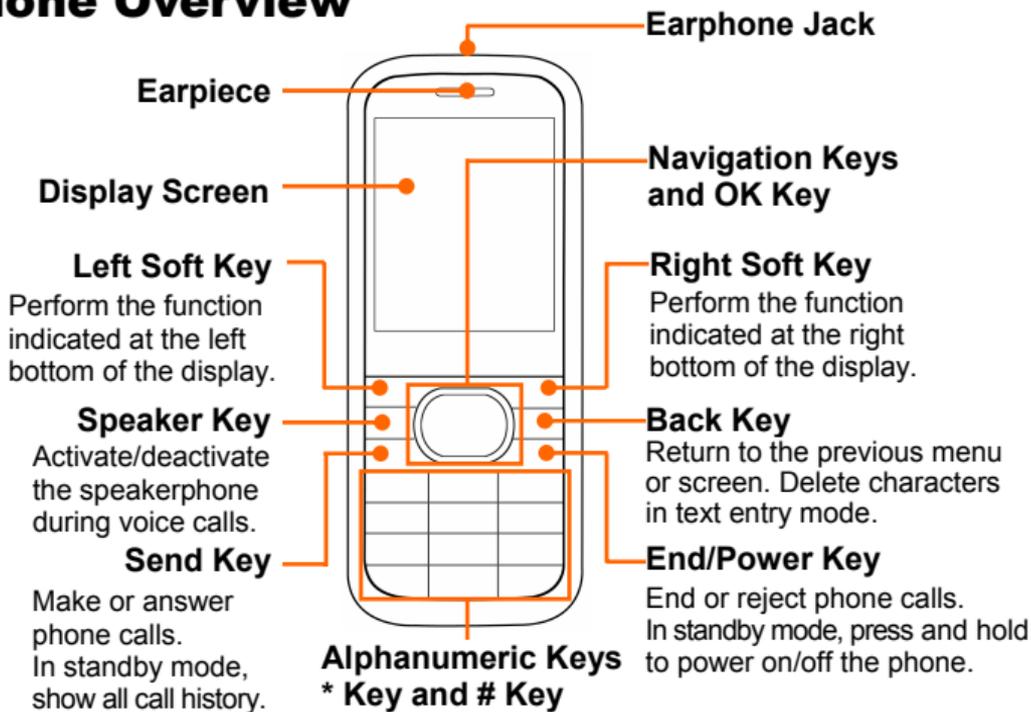

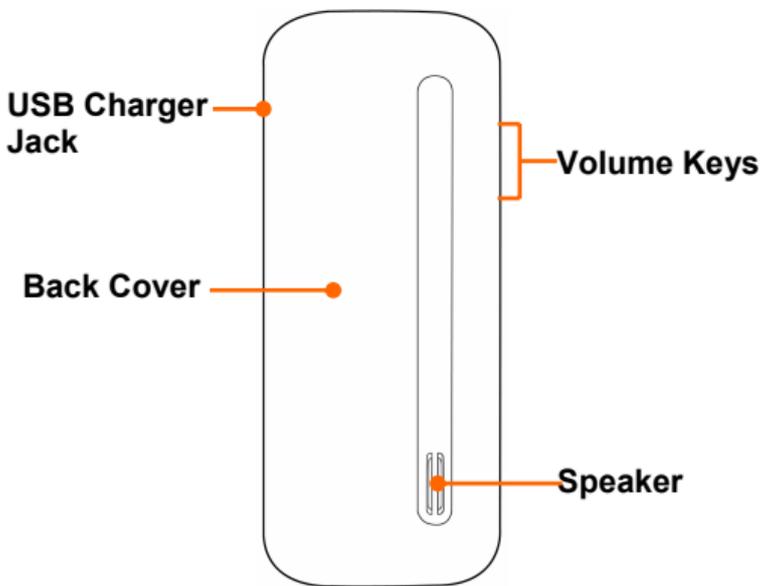

Note: The pictures presented in this manual are meant for illustrative purposes only and may not accurately represent the actual pictures and icons found on the phone. Your phone contains the most up-to-date information.



Technical Specifications

| | |
|-------------------------|--------------------------------------|
| Model | ZTE C76 |
| Dimensions (L x W x H) | 108 mm×46 mm×12.7 mm |
| Weight | 75 g (including battery) |
| Continuous Standby Time | 220 hours (subject to the network) |
| Continuous Talk Time | 220 minutes (subject to the network) |


Battery

Installing the Battery

1. Make sure that the phone is powered off and the charger is disconnected from the phone.
2. Turn the phone over. Hook the edge of the back cover and lift it up to remove the back cover.

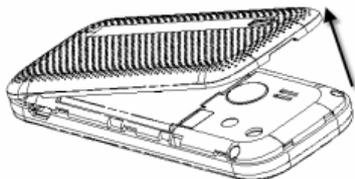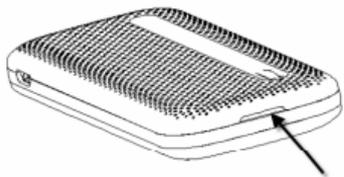

3. Insert the battery by aligning the metal contacts on the battery with the contacts in the battery compartment.

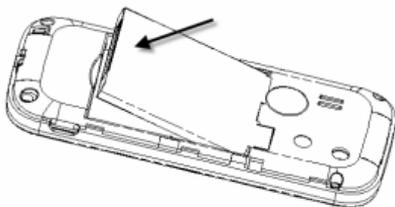

4. Replace the back cover.

Charging the Battery

When not using the battery for a long time, remove it from the phone and store in a cool, dry place.

Caution: Do not charge the battery out of the temperature range of 0°C to 45°C.


1. Connect your adapter to the charger jack on the side of your phone as shown in the following picture. Ensure the adapter is inserted with the correct orientation.
2. Connect the other end of the adapter to the mains socket.

Remove the charger from both the mains socket and the phone once the charging completes.



Removing the Battery

1. Make sure that your phone is switched off.
2. Remove the back cover.
3. Pull the battery up and remove it from your phone.

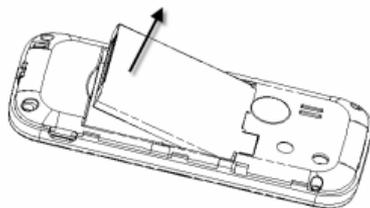

Powering On/Off

- To power on the phone, press and hold the **End Key** until the LCD screen lights up.

If the phone lock code has been activated, the phone will prompt you to enter the code. The default lock code for an inactivated phone is 0000. Once you have activated your phone, the default lock code will be the last 4 digits of your phone number.

Note: It is also possible that the lock code has been updated by the user. If the updated lock code is lost or forgotten, please contact your service provider.

- To power off the phone, press and hold the **End Key** until the display turns off.

Warning: Do not power the phone on when wireless phone use is prohibited, or when it may cause interference or danger.

Locking/Unlocking the Keypad

- To lock the keypad, press and hold the **# Key** in standby mode.
- To unlock the keypad, press the **Right Soft Key** and then press the **# Key**.

Main Display Icons

| | | | |
|---|--------------------------------|---|-------------------------|
|  | Airplane Mode |  | Alarm Clock |
|  | Bluetooth |  | Bluetooth Headset |
|  | Calendar Alarm |  | Call Connected |
|  | Data Dormant |  | Data Transferring |
|  | Earphone |  | Low Battery |
|  | Missed Call |  | New MMS and SMS Message |
|  | New MMS Message |  | New SMS Message |
|  | New Voice Mail |  | New Web Message |
|  | New Voice Mail and Web Message |  | No Signal |

| | | | |
|---|----------------|---|---------------------------|
|  | Ringer Off |  | Ringer On |
|  | Roaming |  | Signal Strength |
|  | Silent Mode |  | SMS Full |
|  | Speaker On |  | SSL (Web Security) |
|  | TTY Mode |  | Vibration and Ringer Mode |
|  | Vibration Mode | | |

Connecting to the Network

After your phone is powered on, it will automatically search for the network.

Activating Your Phone

Before placing a call with your new phone, you must activate the phone on the network. To activate the phone, dial *228 and press the **Send Key** from the standby screen and follow the step-by-step instructions. Once the display indicates that programming is successful, please restart the phone. You may then place a call with your phone.

2. Calls

Making a Voice Call

1. Enter a phone number including the full area code in standby mode by using the numeric keypad. If an incorrect character is entered, use the **Back Key** to delete the digit. Holding the **Back Key** will erase all digits before the cursor.
2. Press the **Send Key** to make the voice call.
3. Press the **End Key** to end the call.

Note: To make an emergency call, enter the emergency number and press the **Send Key**. If possible, remain stationary and keep the line connected.

Making a Speed Dial Call

1. In standby mode, press and hold a number key (2 to 9) to call the corresponding speed dial number.
2. Press the **End Key** to end the call.

Note: The number key 1 is reserved to speed dial your voicemail.

Answering a Voice Call

1. When a voice call comes in, press the **Send Key** to answer it.
2. Press the **End Key** to end the call.

Note: If your phone is connected to a compatible Bluetooth headset, you can answer or end the call by pressing the Send/End Key on the Bluetooth headset.

In-Call Features

Volume

During a call, you can adjust the earpiece volume by pressing the **Volume Keys** on the side of the phone. You can also press the **OK Key** and press the **Navigation Keys** up or down to adjust the volume.

Mute

You can mute or unmute your voice during the call by pressing the **Right Soft Key**.

Speakerphone

Your phone has a speakerphone function that allows you to talk hands-free with the use of the phone's speaker. To activate the speakerphone, press the **Speaker Key** after the call has been connected. Press the **Speaker Key** again to deactivate the speakerphone.

Advanced Features

To enter the advanced in-call features, press the **Left Soft Key** during a call. The following options will be available:

- **Call Third Party:** Enter and dial another number. Please refer to the following section: **Three-Way Call** for detailed information.
- **Messaging:** Switch to the Messaging menu during the call.
- **Contacts:** Switch to the Contact List menu during the call.
- **Switch to Phone/Bluetooth Headset:** Switch to talk on your phone or Bluetooth headset.

Three-Way Call

Your phone has a three-way calling feature, which enables you to have conference calls with two parties. You can activate this function by following the procedure below:

1. Once a voice call has been established with Party A, select **Options > Call Third Party**.
2. The dialing window will appear. Enter the phone number of Party B and press the **Send Key**.
3. When Party B answers the call, you will be connected with Party B only. Party A will remain on hold.
4. To activate the three-way call, press the **Send Key** again. You will be able to converse with both parties simultaneously.
5. Press the **Send Key** again to end the call with Party B. You may press the **End Key** to end both calls.

Note: The three-way calling feature requires network support and may result in additional charges. Please contact your service provider for more information.

Call History

In standby mode, select **Menu > Calls** to check the all, missed, incoming and outgoing calls and the call timers.

Tip: Press the **Send Key** in standby mode to view the All Calls list.

3. Entering Text

- **To change input mode:** Press the **Right Soft Key** and select the input mode (word predictive/alphabetic/ numeric/symbol mode).
- **To input letters:** In alphabetic mode (abc/ABC/Abc), press the **2-9 Key** repeatedly till the desired letter appears.
- **To input words:** In word predictive mode, you can input text quickly with a built-in dictionary. Press each key only once for a single letter. The word changes after each key press. Press the **Navigation Keys** up/down to select the desired word, and press the **OK Key** or **# Key** to confirm.
- **To input numbers:** In numeric mode, press the **0-9 Key** to enter numbers.
- **To input symbols:** Press the **Right Soft Key** and select **Symbols** to choose symbols. In word predictive or alphabetic mode, press the **1 Key** to enter commonly used symbols.
- **To input space:** Press the **# Key** to input space.

- **To delete character:** Press the **Back Key** to delete a character. Press and hold the **Back Key** to delete all characters before the cursor.

Tip: In word predictive or alphabetic mode, press the * **Key** to switch among uppercase, lowercase and standard mode.

4. Contacts

Your phone has an address book capable of storing 500 contacts containing phone numbers, E-mail address and many other fields.

Tip: To access the Contact List quickly, press the **Left Soft Key** in standby mode.

Adding a New Contact

1. Select **Menu > Contacts > New Contact** from standby mode.
2. Enter the contact information such as the contact name, mobile phone number, Email address, etc.
3. Press the **OK Key** to save the new contact.

Note: When entering the contact information, the contact name and a phone number or an E-mail address must be entered in order to save the contact.

Searching for a Contact

1. Select **Menu > Contacts > Contact List** from standby mode.
2. Type the desired contact name in the search field at the bottom of the screen. The contact matching the name most closely will be displayed.

Adding a Contact to a Group

1. Select **Menu > Contacts > Contact List** from standby mode.
2. Select a desired contact and press the **OK Key**.
3. Press the **OK Key** to edit the contact information.
4. Press the **Navigation Keys** up or down to highlight the Group field and press the **Navigation Keys** left or right to select a desired group.
5. Press the **OK Key** to add the contact to the group.

Setting Speed Dial to a Contact

1. Select **Menu > Contacts > Contact List** from standby mode.
2. Select a contact and press the **Left Soft Key**.
3. Select **Set Speed Dial** and press the **OK Key**. Choose a phone number if needed and press the **OK Key**.
4. Choose a speed dial number between 2-9 and press the **OK Key**.
5. Press the **OK Key** to complete the setting.

5. Messaging

You can use your phone to send and receive text messages (SMS), multimedia messages (MMS) and voicemail messages.

Tip: To access the Messaging menu quickly, press the **Right Soft Key** in standby mode.

Sending an SMS Message

1. Select **Menu > Messaging > Send New** from standby mode.
2. Enter the recipient's number. You can press the **OK Key** to enter additional numbers after entering one number, or select **Options > Contacts** to choose the recipient(s).
3. Enter the message in the text field.
4. When entering the message, press the **Left Soft Key** to display more options. You can add quick texts or signature to the message, or save the message to the drafts folder.
5. When the message is done, press the **OK Key** to send it.

Sending an MMS Message

1. Select **Menu > Messaging > Send New** from standby mode.

2. Enter the recipient's number. You can press the **OK Key** to enter additional numbers after entering one number, or select **Options > Contacts** to choose the recipient(s).
3. When entering the message, press the **Left Soft Key** to display more options. You can insert images, tunes, quick texts and signature, add the Cc/Bcc recipients and subject, or even make a slide show.
4. When the message is done, press the **OK Key** to send it.

Message Folders

- The **Inbox** folder contains all of your received messages. In this folder, you can view/reply to/forward your received messages.
- The **Outbox** folder contains all messages that were not sent successfully. In this folder, you can edit or resend your messages.
- The **Drafts** folder contains unfinished messages. In this folder, you can complete and send your messages.
- The **Sent** folder contains messages that were sent successfully. In this folder, you can edit or forward the messages.
- The **Saved** folder contains saved messages. The messages saved in this folder will not be deleted automatically. In this folder, you can reply to or forward the messages.

Voicemail

When the voicemail function is available, all unanswered calls to your phone can be transferred to your voicemail box, even if your phone is not being used or powered off. You should set up your voicemail box and personal greeting as soon as your phone is activated. For more information, contact your service provider.

To check your voicemail box:

1. Select **Menu > Messaging > Voice Mail** from standby mode.
2. Press the **OK Key**.
3. Follow the prompts and listen to your messages.

Tip: To quickly access voicemail, press and hold the **1 Key** from standby mode.

6. E-mail

With the Mobile E-mail application, you can connect your phone to your personal or workplace e-mail accounts.

1. Select **Menu > E-mail** from standby mode to launch the application.
2. Follow the onscreen instructions to set up your account and use the Mobile E-mail.

Note: For detailed information, please contact your service provider.

7. Multimedia

Select **Menu > Multimedia** from standby mode to access the Multimedia menu.

Note: Please obey local laws concerning the copyright and intellectual property rights connected with any media files, including music and images.

Playing Your Tunes

1. Select **Menu > Multimedia > My Tunes** from standby mode.
2. Select an audio file and press the **OK Key**.
3. In the audio player interface, you can:
 - Press the **OK Key** to start and pause playing.
 - Press and hold the **Navigation Keys** left or right to rewind or fast forward.
 - Press the **Volume Keys** to adjust the volume.
 - Select **Options** to set the play mode or view the audio file information.

Note: The recorded voice memo and audio files received via Bluetooth or downloaded from the Internet are saved in **My Tunes**.

Tip: You can choose an audio file in **My Tunes** and select **Options** to send it via MMS/Bluetooth or set it as the call ringer, message ringer, alarm ringer, etc.

Viewing Your Images

1. Select **Menu > Multimedia > My Images** from standby mode.
2. Select an image and press the **OK Key** to view it.
3. When viewing the image, you can:
 - Press the **Navigation Keys** to view the previous or next images.
 - Press the **Right Soft Key** to view the image in full screen.
 - Select **Options** to send the image or set it as the wallpaper.

Note: The images received via Bluetooth or downloaded from the Internet are saved in **My Images**.

8. Download

Select **Menu > Multimedia > Download** from standby mode. You can use this feature to browse, purchase or download applications online.

Downloading or Purchasing Applications

You can use MobileShop to download or purchase various applications.

1. Select **Menu > Multimedia > Download > MobileShop** from standby mode.
2. Select **Catalog** to view the applications or select **Search** to search for applications by keywords.
3. Follow the onscreen instructions to continue.

Note: For information about the charges, please contact your service provider.

Download Settings

In the **Download** menu, select **Settings** to display the setting options.

You can order, move and manage the applications in your phone, set the main menu view and the screen savers, or view the log.

Note: To view the detailed help information about applications, select **Help** in the **Download** menu.

9. Browser

You can use the web browser on your phone to browse the Internet. To open the browser, select **Menu > Browser** from standby mode.

Opening Web Pages

In the browser, you can open a web page in the following ways:

- Select **Options > Home** to open the home page.
- Select **Options > Go To URL**, enter the web address and press the **OK Key**.
- Select **Options > Bookmarks > Open Bookmarks** to choose a website bookmark.
- Select **Options > History** and select a record to open the web page you have visited.
- Select **Options > Save Page > View Saved Page** to choose the web pages you have saved.
- Select **Options > Search Web** to search the Internet.

Setting the Browser

Select **Options > Advanced** in the browser and you can set any of the following:

- **Home:** View and edit the homepage address.
- **Multimedia:** Set preferences for displaying pictures and background music.
- **Clear Memory:** Clear the stored cookies, cache, history and autofill records.
- **Scroll Mode:** Set the scroll mode and speed for web browsing.
- **Send Referrer:** Enable or disable the addition of the "referrer" field into the HTTP request header.
- **Security:** Set the security options.

10. Info Portal

Select **Menu > Info Portal** from standby mode to open the preset web page in the web browser.

For detailed information, please contact the service provider.

11. Bluetooth®

Bluetooth lets devices work with each other over a short distance – about 10 meters – without wires.

You can connect your phone to a Bluetooth headset, transfer files between other Bluetooth devices, etc.

Setting Up Bluetooth

1. Select **Menu > Settings > Bluetooth > Bluetooth Manager** from standby mode.
2. Highlight **Power** and turn it on to enable Bluetooth function. If you want other Bluetooth devices to find your phone (within 60 seconds), turn **Discovery Mode** on.
3. Press the **OK Key**.

Note: To change the name of your phone as it appears to others, select **Device Name** in **Bluetooth Manager** to edit your phone name.

Pairing With a Bluetooth Device

To pair with another Bluetooth device, you need to turn the Bluetooth function of both devices on and make the other Bluetooth device visible.

1. Select **Menu > Settings > Bluetooth > Bluetooth Device** from standby mode.
2. Press the **Right Soft Key** to search for other Bluetooth devices.
3. The available devices will appear in the list when the search is over. Select the desired device and press the **OK Key**.
4. Enter the Bluetooth pass code if prompted. The same code should be entered on the other device.

Note: You may need to refer to the user manual of the other device to obtain the pass code.

5. Once paired, you will see the device listed in the Bluetooth Device menu.

12. Tools

Calculator

Your phone has a basic calculator for addition, subtraction, multiplication and division.

Select **Menu > Tools > Calculator** from standby mode.

Note: This calculator has limited accuracy. Rounding errors may occur especially in long division.

Alarm Clock

You can set up multiple separate alarms and set workdays for the alarms.

Select **Menu > Tools > Alarm Clock** from standby mode.

Calendar

You can use the calendar function to access and modify your agenda conveniently.

Select **Menu > Tools > Calendar** from standby mode.

Tip Calculator

You can use the tip calculator to calculate a tip based on the tip rate and bill quickly. Select **Menu > Tools > Tip Calculator** from standby mode.

World Clock

If you want to know what time it is in various cities around the world, select **Menu > Tools > World Clock** from standby mode.

You can enable or disable daylight saving time and set the default city and time zone for the phone.

Voice Memo

This feature allows you to record brief voice memos. You can also send the voice memo via MMS/Bluetooth.

Select **Menu > Tools > Voice Memo** from standby mode.

Note: The recorded audio files are saved in **My Tunes**.

Games

Select **Menu > Tools > Games** from standby mode. You can select the preinstalled game to play.

13. Setting Up Your Phone

To access the Settings menu, select **Menu > Settings** from standby mode.

Setting the Sound

Select **Menu > Settings > Sound Settings** from standby mode.

Tip: Press and hold the * **Key** in standby mode to enable or disable the vibration mode.

Volume

- **Silent Mode:** Enable or disable the silent mode.
- **Master Volume:** Set the master volume level.
- **Earpiece:** Set the volume level for the earpiece.

Voice Call Ringers

- **Default Ringer:** Set the default ringtone for voice calls.
- **Unknown Calls:** Set the ringtone for blocked or restricted phone numbers.
- **Roaming Calls:** Set the ringtone for roaming calls.

Message Ringers

- **Voice Mail:** Set the ringtone for voicemail.
- **Messaging:** Set the ringtone for new messages.
- **Web Alerts:** Set the ringtone for web alerts.
- **Reminder:** Set the reminder time for new messages.

Keypad Tone

Set the volume level of the keypad tone.

Power On/Off Tone

Enable or disable the sound played during power on and off.

System Alerts

- **Minute Beep:** The phone will alert you with a beep before the end of every minute during a call if this feature is enabled.
- **Call Connect:** The phone will alert you when a call is connected if this feature is enabled.
- **Call Lost:** The phone will alert you when a call is lost if this feature is enabled.

- **Low Battery:** The phone will alert you when the battery power is low if this feature is enabled.
- **Roam Alert:** The phone will alert you when the phone is roaming if this feature is enabled.

Setting the Display

Select **Menu > Settings > Display Settings** from standby mode.

- **Banner:** Edit the banner name displayed on the idle screen.
- **Banner Display:** Turn on or off the banner display.
- **Wallpaper:** Set the wallpaper for the idle screen.
- **Screen Backlight:** Set the screen backlight time or turn the backlight off.
- **Keypad Backlight:** Set the keypad backlight time or turn the backlight off.
- **Digital Clock:** Set the clock display format or turn the clock display off.
- **Main Menu Style:** Choose between the icon and list main menu styles.
- **Dialing Font:** Choose the size of dialing font.
- **Brightness:** Adjust the screen brightness.

Setting the System

Select **Menu > Settings > System** from standby mode.

Call Setup

- **Call Answer:** Set the way of answering a call.
- **Auto Answer:** Set the delay time for auto answer or turn this feature off. This feature is intended for use when your phone is connected to an optional hands-free headset.
- **Speed Dial:** Enable or disable the speed dial feature.

Automatic Keypad

Enable or disable the automatic keypad feature.

Memory Info

View the used, available and total memory on your phone.

Phone Info

View phone information such as the phone number, phone software version, serving system and icon glossary.

System Settings

Select the mode of choosing the network, or set the phone's NAM (Number Assignment Module). Please contact your service provider for more information about NAM.

Note: Additional fees may apply when roaming on another network.

TTY Mode

Your phone is a TTY (Teletypewriter) compatible device. Simply connect the TTY equipment to the earphone jack. The following TTY modes are available:

- **TTY Full:** Users who cannot talk or hear may use this mode to send and receive text messages through TTY equipment.
- **TTY + Talk:** Users who can talk, but cannot hear, may use this mode to talk through the phone and receive responses via text messages.
- **TTY + Hear:** Users who can hear, but cannot talk, may use this mode to listen to conversation of the other party, and respond via text messages.
- **TTY Off:** Users who can hear and talk can disable TTY support.

Security

- **Lock Mode:** You can select **Unlock**, **Lock** or **On Power Up**. If **On Power Up** is selected, the phone will be locked automatically when it is powered on.
- **Change Code:** You can change the phone lock code. Enter the old lock code, input the new code and input the new code again to confirm.
- **Reset Factory Settings:** Reset all settings to factory defaults.

Note: You should input the phone lock code to enter the Security menu. The default lock code for an inactivated phone is 0000.

HAC Mode

This phone supports HAC (Hearing Aid Compatibility) function. When you turn on the HAC mode and use a hearing aid with a Telecoil to answer the phone, it will help you hear more clearly during the phone call.

Select **Menu > Settings > System > HAC Mode** from standby mode to enable or disable the HAC mode.

For detailed information on HAC, please refer to Section 14: **For Your Safety – Turning on the HAC Setting.**

Language

You can choose English or French for the phone language.

Select **Menu > Settings > Language** from standby mode.

GPS

This phone supports the GPS (Global Positioning System) feature. It can identify your location to the network in emergencies.

You can check the current GPS Status by selecting **Menu > Settings > GPS** from standby mode.

Airplane Mode

When the airplane mode is turned on, all wireless communications are disabled. You cannot make phone calls or connect to the internet. When you are in an airplane or other area where RF signals may cause interference, please activate the airplane mode.

To turn the airplane mode on or off, select **Menu > Settings > Airplane Mode: Off/On** from standby mode.

14. For Your Safety

General Care

Your handset contains delicate electronic circuitry, magnets and battery systems. You should treat it with care and give particular attention to the following points:

- Do not allow the handset, battery or accessories to come into contact with liquids or moisture at any time. Do not immerse it in any liquid.
- Do not place the handset alongside computer disks, credit cards, travel cards or other magnetic media. The information contained on the disks or cards may be affected by the handset.
- Do not paint the handset.
- Do not leave the handset or battery in places where the temperature could exceed 140 °F, e.g. on a car dashboard or a windowsill, behind glass in direct sunlight, etc.
- Do not remove the handset battery while the handset is switched on.
- Take care not to allow metal objects, such as coins or key rings, to contact or short circuit the battery terminals.

- Do not dispose of batteries in fire. The handset's Li-ION batteries may be safely disposed of at a Li-ION recycling point. Follow local requirements for recycling.
- Do not put the handset's battery in your mouth, as battery electrolytes may be toxic if swallowed.
- Only use the battery with a charging system that has been qualified by ZTE. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not disassemble, open, crush, bend, deform, puncture, or shred the handset.
- Do not short circuit a battery or allow metallic or conductive objects to contact the battery terminals.
- Promptly dispose of used batteries in accordance with local regulations.
- Improper battery use may result in a fire, explosion, or other hazard.
- Do not put a battery into a microwave oven, dryer or high-pressure container.
- Do not contact battery directly into an electric outlet or cigarette lighter charger. Use only authorized chargers.
- Do not puncture the battery with a sharp object such as a needle.

- When the battery is disposed, be sure it is non-conducting by applying vinyl tape to the (+) and (-) terminals.
- Do not drop, throw, or subject the handset to rough treatment.
- Stop using the battery if abnormal heat, odor, discoloration, deformation, or abnormal condition is detected during use, charge or storage.
- Do not use your handset with a damaged or deformed battery.
- Do not solder the battery directly.
- Remove the battery whose life cycle has expired from equipment immediately.
- The earpiece may become warm during normal use. Also, the handset itself may become warm while the battery is being charged.
- When a handset is in vibration mode, the vibration may cause the handset to move.
- Be careful not to place the handset near heat sources (such as a heater).
- Use a damp or anti-static cloth to clean the handset. Do not use an ordinary dry cloth or electrostatic cloth. Do not use chemical or abrasive cleaners as these could damage the casing.
- Third party equipment: The use of third party equipment, cables, or accessories, not made or authorized by ZTE, may invalidate the warranty of your phone and also adversely affect the phone's safety and operation.

- Remember to make backup copies of all important data on your handset.
- Remember to recycle: The cardboard packing supplied with this handset is ideal for recycling.

Warnings: In the unlikely event of a battery leak, take care to keep the battery discharge away from your eyes and skin. If the leakage does come into contact with the eyes or skin, flush thoroughly with clean water and consult with a doctor.

Aircraft Safety

- Switch off your phone or activate the airplane mode when inside or near an aircraft. Use of handsets in an aircraft may be dangerous to the operation of the aircraft and may disrupt the cellular network. Failure to observe this instruction may lead to suspension or denial of phone service to the offender, or legal action, or both.
- Airplane mode allows you to use many of your phone's features, such as calculator, voice memos, and many others when you are in an airplane or other area where wireless signals may cause interference. In the airplane mode, you are prohibited from making or receiving calls.

Hospital Safety

- Switch off your phone and remove its battery in areas where handset use is prohibited.
- Follow the instructions given by any respective medical facility regarding the use of cellular handsets on their premises.

General Guidelines

- Many jurisdictions have laws and regulations about taking pictures in public or private areas regarding the processing and further use of such pictures. ZTE encourages its customers to obey all laws and to honor the personal rights of others.
- Check the roaming agreement availability with your network operator.
- The use of mobile phones is not allowed in some radiation sensitive areas, such as hospitals, research centers, and airplanes. The user is responsible for powering off the device. If there is any uncertainty, the battery should be removed.
- Observe any signs that indicate powering off your handset, such as those near gas stations or explosives.

- If you have a heart condition, be careful with the setting of call vibration or tone volume. This phone is capable of producing loud noises which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.
- Do not allow children to play with the handset, charger or batteries.
- The operation of some medical electronic devices, such as hearing aids and pacemakers, may be affected if a handset is used next to them. Observe any caution signs and the manufacturer's recommendations.
- Take care not to put your phone in the back pocket of your pants and then sit on the phone. Also, do not put your phone at the bottom of a bag where it may be subject to excessive weight or pressure as this may damage the LCD and cause them to malfunction.
- The phone contains metal and may cause a reaction for overly sensitive skin types.
- Do not leave the phone discharged or without a battery for a long period of time. Otherwise some data may be erased.

Road Safety

- You must exercise proper control of your vehicle at all times. Give your full attention to driving.

- Observe all of the recommendations contained in your local traffic safety documentation.
- Pull off the road and park before making or answering a call, if driving conditions require so. Check if local laws and/or regulations restrict the use of cellular phones while driving.
- You must not stop on the hard shoulder of a motorway to answer or make a call, except in emergency situations.
- Switch off your handset at a refueling point, such as a gas station, even if you are not refueling your own car.
- Do not store or carry flammable or explosive materials in the same compartment as the handset.
- Electronic systems in a vehicle, such as anti-lock brakes, speed control and fuel injection systems are not normally affected by radio transmissions. The manufacturer of such equipment may advise if it is adequately shielded from radio transmissions. If you suspect vehicle problems caused by the radio transmitter in the handset, consult your dealer and do not switch on the handset until your handset has been checked by a qualified technician.

Vehicles Equipped With an Airbag

An airbag inflates with great force. Do not place objects, including either installed or portable wireless equipment, in the area over the airbag or in the airbag deployment area. If in-vehicle wireless equipment is improperly installed and the airbag inflates, serious injury could result.

Third Party Equipment

The use of third party equipment, cables or accessories, not made or authorized by ZTE, may invalidate the warranty of the handset and also adversely affect the handset's operation. For example, use only the ZTE charger supplied with the handset.

Efficient Use

For optimum performance with minimum power consumption, do not cover the antenna area (It's on the bottom of your phone when you are holding it.) with your hand. Covering the antenna affects the call quality, may cause the handset to operate at higher power levels than needed, and may shorten talk and standby times.

Radio Frequency (RF) Energy

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government:

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for this model phone as reported to the FCC when tested for use at the ear is 1.23 W/kg and when worn on the body, as described in this user guide, is 0.484 W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of individual ZTE C76 phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid> after searching on

FCC ID: Q78-C76

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

Emergency Services

To make an emergency call in any country:

1. Ensure your phone is **ON** and in service.

2. Press the **End Key** as many times as needed to clear the display and ready the device for calls.
3. Enter a local emergency number, i.e., 911.
4. Press the **Send Key** to dial the number. Follow instructions received and do not end the call until told to do so.

IMPORTANT: Tell the operator which service you require: Police, Ambulance, Fire Engine, Coastguard or Mountain Rescue Service. Give your position, and if possible, remain stationary and maintain contact. Due to the nature of the cellular system, the connection of emergency calls cannot be guaranteed. You should never rely on any wireless device for essential communication such as medical emergencies.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC Notice

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

The County Code Selection feature is disabled for products marketed in the US/Canada.

IC: 5200A-C76

IMPORTANT NOTE:

IC Radiation Exposure Statement

This EUT is compliance with SAR for general population/uncontrolled exposure limits in IC RSS-102 and had been tested in accordance with the measurement methods and procedures specified in IEEE 1528. This equipment should be installed and operated with minimum distance 1.5cm between the radiator & your body.

Using Your Phone With a Hearing Aid Device

Your ZTE C76 device is compliant with the FCC Hearing Aid Compatibility (HAC) requirements.

When some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed ratings for some of their mobile phones to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that have been rated have a label on the box. Your ZTE C76 has been tested for hearing aid device compatibility and has an M4 and/or T4 rating.

These ratings are not guaranteed. Results will vary, depending on the level of immunity of your hearing device and the degree of your hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference with hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices contain telecoils.) The more immune your hearing aid device is, the less likely you are to experience interference noise from your wireless phone.

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device.

For additional information about the FCC's actions with regard to hearing aid compatible wireless devices and other steps the FCC has taken to ensure that individuals with disabilities have access to telecommunications services, please go to www.fcc.gov/cgb/dro.

Turning on the HAC Setting

When the HAC setting is on, your ZTE C76 sends the audio from your phone calls to the telecoil rather than to the microphone of your hearing aid. You are likely to hear calls much better because volume is increased and background noise and feedback are diminished. The HAC setting improves only the calls you listen to through the earpiece. It does not affect calls heard on the speakerphone or with a headset. It's better to turn off the Bluetooth function when the HAC setting is on. HAC requires extra battery power, so watch your battery consumption when it's turned on.

CAUTION: Do not turn on the HAC setting unless you use a hearing aid with a telecoil. Using this setting without a hearing aid or with a hearing aid without a telecoil may be harmful to your hearing.

Copyright Notice

The audio recordings you make/download are protected by copyright laws. They are for personal use only and must not be otherwise used without the permission of the copyright owner.

15. Troubleshooting

Fail to power on the phone

Check whether the battery has adequate capacity to power on.

The phone has powered off automatically

The battery capacity is quite low. Please charge the battery.

Can not connect to the network

Check whether the phone is in the CDMA network service area or move to other places to try again.

No key tone when pressing the keys

Check whether the keypad tone has been disabled. You can set key tone settings by selecting **Menu > Settings > Sound Settings > Keypad Tone** from standby mode.

No incoming ringtone when receiving a call

Check whether the phone is set to the silent mode or the phone volume is turned off by pressing the **Volume Keys**.

Can not send a message

Check the status of the network.

Can not receive a new message

Check whether the network condition is OK and then check whether the Inbox is full. If you turn off the **Auto Delete Inbox** function, you may not receive new messages when the inbox is full.

You should delete some messages and change the settings by selecting **Menu > Messaging > Settings > Message Settings > Auto Delete Inbox** from standby mode.

Can not answer an incoming call by the headset automatically

Check whether the **Auto Answer** function is enabled by selecting **Menu > Settings > System > Call Setup > Auto Answer** from standby mode.

Can not establish Three-Way Call

Check the network condition and whether you have applied for this service from your network provider.

To dial an emergency call

You can still dial an emergency call even if the keypad is locked. Please enter the emergency number directly and press the **Send Key**.

Consumer Limited Warranty

ZTE ("Seller") offers you a limited warranty that the enclosed product or products (the "Product") will be free from defects in material and workmanship for a period that expires one year from the date of sale of the Product to you, provided that you are the original end-user purchaser of the Product and provided that your purchase was made from a supplier authorized by the Seller. Transfer or resale of a Product will automatically terminate warranty coverage with respect to that Product. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product. This limited warranty is applicable only to end users in Canada.

Seller will, at its sole and absolute discretion, either repair or replace a Product (which unit may use refurbished parts of similar quality and functionality) if found by Seller to be defective in material or workmanship, or if Seller determines that it is unable to repair or replace such Product, Seller will refund the purchase price for such Product, provided that the subject Product (i) is returned to a Seller authorized service center within the one year warranty period, and (ii) is accompanied by a proof of purchase in the form of a bill of sale or receipted invoice which evidences that the subject Product is within the one year warranty period. After the one year warranty period, you must pay all shipping, parts and labor charges. In the event that the product is deemed un-repairable or has been removed from the list of products supported by the Seller, you will only be liable for shipping and labor charges.

This limited warranty does not cover and is void with respect to the following: (i) any Product which has been improperly installed, repaired, maintained or modified; (ii) any Product which has been subjected to misuse (including any Product used in conjunction with hardware electrically or mechanically incompatible or used with accessories not approved by Seller), abuse, accident, physical damage, abnormal operation, improper handling, neglect, exposure to fire or liquid; (iii) any Product operated outside published maximum ratings; (iv) cosmetic damage; (v) any Product on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) cost of installation, removal or reinstallation; (vii) signal reception problems (unless caused by defects in material and workmanship); (viii) damage the result of fire, flood, acts of God or other acts which are not the fault of Seller and which the Product is not specified to tolerate, including damage caused by mishandling, shipping and blown fuses; (ix) consumables (such as fuses); or (x) any Product which has been opened, repaired, modified or altered by anyone other than Seller or a Seller authorized service center.

USE ONLY SELLER APPROVED ACCESSORIES WITH SELLER PHONES.
USE OF ANY UNAUTHORIZED ACCESSORIES MAY BE DANGEROUS
AND WILL INVALIDATE THE PHONE WARRANTY IF SAID ACCESSORIES
CAUSE DAMAGE OR A DEFECT TO THE PHONE.

SELLER SPECIFICALLY DISCLAIMS LIABILITY FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, PUNITIVE, EXEMPLARY, AGGRAVATED, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, WHETHER FORESEEABLE OR UNFORESEEABLE OF ANY KIND WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS, UNANTICIPATED BENEFITS OR REVENUE, ANTICIPATED PROFITS ARISING OUT OF USE OF OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT) OR CONTRIBUTION OR INDEMNITY IN RESPECT OF ANY CLAIM RELATED TO A PRODUCT.

REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT OR REFUND OF THE PURCHASE PRICE RELATING TO A DEFECTIVE PRODUCT, AS PROVIDED UNDER THIS WARRANTY, ARE YOUR SOLE AND EXCLUSIVE REMEDIES FOR BREACH OF THE LIMITED WARRANTY, AND SUBJECT TO THIS WARRANTY, THE PRODUCTS ARE APPROVED AND ACCEPTED BY YOU "AS IS". SELLER MAKES NO OTHER WARRANTIES, REPRESENTATIONS OR CONDITIONS OF ANY KIND, ORAL OR WRITTEN, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, WITH RESPECT TO THE PRODUCTS, INCLUDING BUT NOT LIMITED TO ANY

IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR AGAINST INFRINGEMENT OR ANY IMPLIED WARRANTY OR CONDITION ARISING OUT OF TRADE USAGE OR OUT OF A COURSE OF DEALING OR COURSE OF PERFORMANCE. NO DEALER, DISTRIBUTOR, AGENT OR EMPLOYEE IS AUTHORIZED TO MAKE ANY MODIFICATION OR ADDITION TO THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction.

For warranty service information, please call the following telephone number: 1-877-999-5055 or return to the point of sale.