

Register your product and get support at
www.philips.com/welcome



22HFL3381D/10
26HFL3381D/10

EN User Manual

PHILIPS

Notice


Congratulations with this new hospitality television set.

In this User Manual it sometimes happen that the remark 'Only available on consumer remote control'.


This means that the mentioned action is not accesible via the included hospitality remote control (22AV1104/10). If needed, a consumer remote is included as well and you can use this if needed.

Although the consumer remote is included, it is foreseen to be useful for some installation purpose only (as example: re-order channels), the hospitality remote will serve the guest best.

Hospitality Remote Control

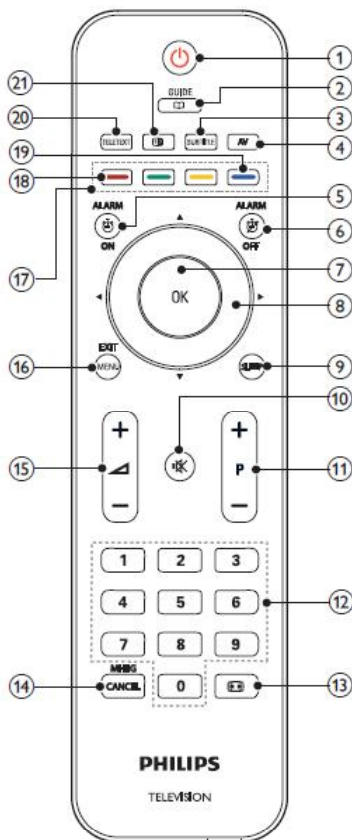

Consumer Remote Control

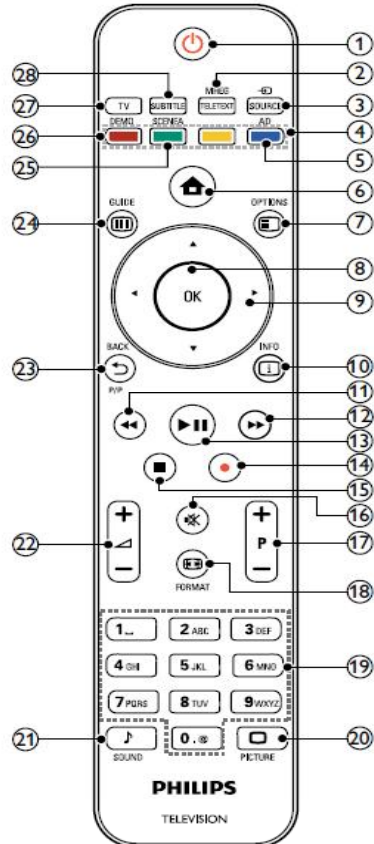



Österreich	0810 000205	€0.07 pro Minute
België/Belgique	078250145	€0.06 Per minuut/Par minute
България	+3592 489 99 96	Местен разговор
Hrvatska	01 6403 776	Lokalni poziv
Česká republika	800142840	Bezplatný hovor
Danmark	3525 8759	Lokalt opkald
Estonia	6008600	local
Suomi	09 2311 3415	paikallispuhelu
France	0821 611655	€0.09 Par minute
Deutschland	01803 386 852	€0.09 pro Minute
Ελλάδα	0 0800 3122 1280	Κλήση χωρίς χρέωση
Magyarország	0680018189	Ingyenes hívás
Ireland	North 0800 055 6882 South 1800-PHILIPS 7445477	free
Italia	840320086	€0.08 Al minuto
Қазақстан	+7 727 250 66 17	local
Latvia	52737691	local
Lithuania	67228896	local
Luxemburg/Luxembourg	40 6661 5644	Ortsgespräch/Appel local
Nederland	0900 8407	€0.10 Per minuut
Norge	2270 8111	Lokalsamtale
Polska	(022) 3491504	połączenie lokalne
Portugal	800 780 903	Chamada local
România	021-203-2060	Apel local
Россия	Moscow (495) 961-1111 Outside Moscow 8-800-200-0880	Местный звонок
Србија	+381 114 440 841	Lokalni poziv
Slovensko	0800 004537	Bezplatný hovor
Slovenija	01 280 95 22	lokalni klic
España	902 888 784	€0.10 Por minuto
Sverige	08 5792 9100	Lokalsamtal
Suisse/Schweiz/Svizzera	0844 800 544	Appel local/Ortsgespräch/Chiamata locale
Türkiye	0800 261 3302	Şehir içi arama
United Kingdom	0845-6010354	local
Україна	8-800-500-69-70	Місцевий виклик

This information is correct at the time of press. For updated information, see www.philips.com/support.

Contents

1 Notice	2	7 Professional mode instruction	24
		Introduction	24
		Benefits of Professional mode	24
		Professional Setup Remote control (2573 optional)	24
		Activating the Professional mode setup menu	25
		Professional mode options	26
2 Important	4	8 Connect devices	34
		Back connector for 22 inch TV	34
		Back connector for 26 inch TV and larger	36
		Side connector	37
		Connect a computer	38
		Use a Conditional Access Module	39
		Use Philips EasyLink	40
		Use a Kensington lock	40
3 TV overview	6	9 Product information	41
Side controls and indicators	6	Supported display resolutions	41
Guest remote control	6	Multimedia	41
		Tuner/Reception/Transmission	41
		Remote control	41
		Power	41
		Supported TV mounts	41
4 Use your product	8	10 Troubleshooting	42
Switch your TV on/off or to standby	8	General TV issues	42
Switch channels	8	TV channel issues	42
Watch connected devices	9	Picture issues	42
Adjust TV volume	9	Sound issues	43
Use Teletext	9	HDMI connection issues	43
		Computer connection issues	43
		Contact us	43
5 Use more of your product	10		
Access TV menus	10		
Remove devices from the home menu	10		
Change picture and sound settings	10		
Use advanced Teletext features	13		
Use the Electronic Programme Guide	14		
Use Timers	14		
Use subtitles	15		
Use the TV clock	16		
View photos and play music from a USB storage device	17		
Listen to digital radio channels	18		
Update the TV software	18		
Change TV preferences	19		
Access decoder channel	19		
Start a TV DEMO	20		
Reset the TV to factory settings	20		
6 Install channels	21		
Automatically install channels	21		
Manually install channels	22		
Rename channels	23		
Reorder channels	23		
Test digital reception	23		

1 Notice

2009 © Koninklijke Philips Electronics N.V. All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly. The material in this manual is believed adequate for the intended use of the system. If the product, or its individual modules or procedures, are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. Philips warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied.

Warranty

- Risk of injury, damage to TV or void of warranty! Never attempt to repair the TV yourself.
- Use the TV and accessories only as intended by the manufacturer.
- The caution sign printed on the back of the TV indicates risk of electric shock. Never remove the TV cover. Always contact Philips Customer Support for service or repairs.



Any operation expressly prohibited in this manual, or any adjustments and assembly procedures not recommended or authorised in this manual shall void the warranty.

Pixel characteristics

This LCD product has a high number of colour pixels. Although it has effective

pixels of 99.999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen.

This is a structural property of the display (within common industry standards) and is not a malfunction.

Open source software

This television contains open source software. Philips hereby offers to deliver or make available, upon request, for a charge no more than the cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code on a medium customarily used for software interchange. This offer is valid for a period of 3 years after the date of purchase of this product. To obtain the source code, write to:

GBU Customer Care Manager
Customer Care department
Philips Lighting
GBU Hospitality
Hurksestraat 2c
5652 AJ Eindhoven
The Netherlands

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

Mains fuse (UK only)

This TV is fitted with an approved moulded plug. Should it become necessary to replace the mains fuse, this must be replaced with a fuse of the same value as indicated on the plug (example 10A).

- 1** Remove fuse cover and fuse.
- 2** The replacement fuse must comply with BS 1362 and have the ASTA approval mark. If the fuse is lost, contact your dealer in order to verify the correct type.
- 3** Refit the fuse cover.

In order to maintain conformity to the EMC directive, the mains plug on this product must not be detached from the mains cord cable.

Copyright



VESA, FDMI and the VESA Mounting Compliant logo are trademarks of the Video Electronics Standards Association.

® Kensington and Micro Saver are registered US trademarks of ACCO World Corporation with issued registrations and pending applications in other countries throughout the world.



Manufactured under licence from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Note


- Only applicable to TVs supporting MPEG4-HD standard

All other registered and unregistered trademarks are the property of their respective owners.

2 Important

Read and understand all instructions before you use your TV. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

- Risk of electric shock or fire!
 - Never expose the TV to rain or water. Never place liquid containers, such as vases, near the TV. If liquids are spilt on or into the TV, disconnect the TV from the power outlet immediately. Contact Philips Consumer Care to have the TV checked before use.
 - Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight.
To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.
- 
- Never insert objects into the ventilation slots or other openings on the TV.
 - When the TV is swivelled ensure that no strain is exerted on the power cord. Strain on the power cord can loosen connections and cause arcing.
 - Risk of short circuit or fire!
 - Never expose the remote control or batteries to rain, water or excessive heat.
 - Avoid force coming onto power plugs. Loose power plugs can cause arcing or fire.
 - Risk of injury or damage to the TV!
- Two people are required to lift and carry a TV that weighs more than 25 kg.
 - When stand mounting the TV, use only the supplied stand. Secure the stand to the TV tightly. Place the TV on a flat, level surface that can support the combined weight of the TV and the stand.
 - When wall mounting the TV, use only a wall mount that can support the weight of the TV. Secure the wall mount to a wall that can support the combined weight of the TV and wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that result in accident, injury or damage.
 - Risk of injury to children! Follow these precautions to prevent the TV from toppling over and causing injury to children:
 - Never place the TV on a surface covered by a cloth or other material that can be pulled away.
 - Ensure that no part of the TV hangs over the edge of the surface.
 - Never place the TV on tall furniture (such as a bookcase) without anchoring both the furniture and TV to the wall or a suitable support.
 - Educate children about the dangers of climbing on furniture to reach the TV.
 - Risk of overheating! Never install the TV in a confined space. Always leave a space of at least 4 inches or 10 cm around the TV for ventilation. Ensure curtains or other objects never cover the ventilation slots on the TV.
 - Risk of damage to the TV! Before you connect the TV to the power outlet, ensure that the power voltage matches the value printed on the back of the TV. Never connect the TV to the power outlet if the voltage is different.

- Risk of injury, fire or power cord damage! Never place the TV or any objects on the power cord.
- To easily disconnect the TV power cord from the power outlet, ensure that you have full access to the power cord at all times.
- When you disconnect the power cord, always pull the plug, never the cable.
- Disconnect the TV from the power outlet and aerial before lightning storms. During lightning storms, never touch any part of the TV, power cord or aerial cable.
- Risk of hearing damage! Avoid using earphones or headphones at high volumes or for prolonged periods of time.
- If the TV is transported in temperatures below 5°C, unpack the TV and wait until the TV temperature matches room temperature before connecting the TV to the power outlet.

Screen care

- Avoid stationary images as much as possible. Stationary images are images that remain on-screen for extended periods of time. Examples include: on-screen menus, black bars and time displays. If you must use stationary images, reduce screen contrast and brightness to avoid screen damage.
- Unplug the TV before cleaning.
- Clean the TV and frame with a soft, damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the TV.
- Risk of damage to the TV screen! Never touch, push, rub or strike the screen with any object.
- To avoid deformations and colour fading, wipe off water drops as soon as possible.

Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.


Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

3 TV overview

This section gives you an overview of commonly used TV controls and functions.


Please read section 3 to 6 to set the basic consumer menu first, then follow the instructions in section 7 to set the Professional mode menu.



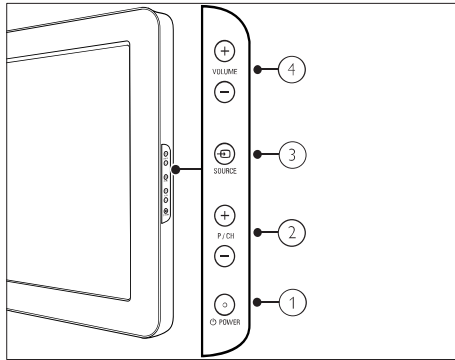



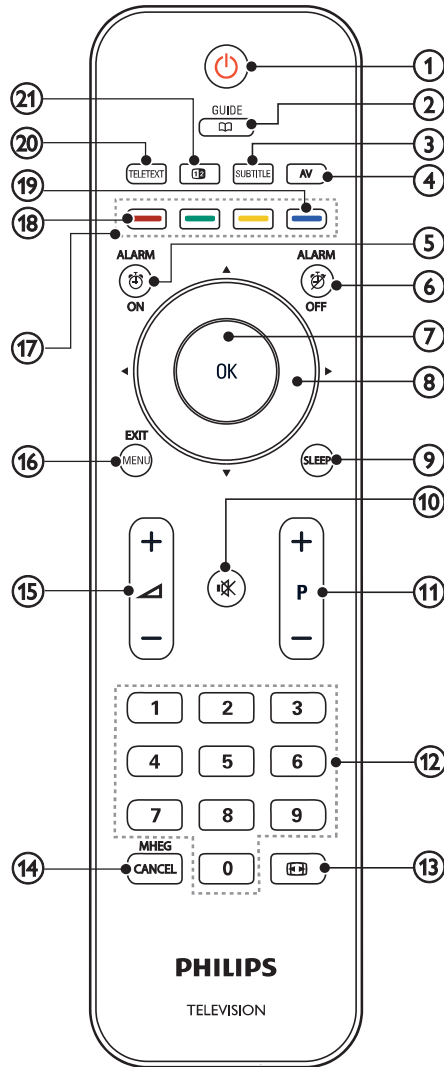


Side controls and indicators



- a **POWER**: Switches the product on or off. The product is not powered off completely unless it is physically unplugged.
- b **P/CH +/-**: Switches to the next or previous channel.
- c **SOURCE**: Selects connected devices.
- d **VOLUME +/-**: Increases or decreases volume.

Guest remote control



- a  (Standby-On)
- Switches the TV to standby if the TV is on.
 - Switches the TV on if the TV is in standby
- b  **GUIDE**
Switches between channel grid and programme list.
- c **SUBTITLE**
Launches the subtitle menu.
- d **AV**
Selects connected devices.
- e  **NO FUNCTION**
- f  **NO FUNCTION**
- g **OK**
- Confirms an entry or selection.
 - Press to display the channel grid, when watching TV.
- h  (Navigation buttons)
Navigates through the menus.
- i **SLEEP**
NO FUNCTION
- j  (MUTE)
Mutes or restores audio output.
- k **P+/- (Programme +/-)**
Switches to the next or previous channel. When the TV menu is on, this functions as Page Up/Down.
- l **0-9 (Numeric buttons)**
Selects a channel or setting.
- m  (Picture format)
Launches the picture format menu.
- n **MHEG / CANCEL**
UK only: Enables audio commentary for the visually handicapped.
- o  (Volume +/-)
Increases or decreases volume.
- p **MENU / EXIT**
NO GUEST MENU
- q **Colour buttons**
- Selects tasks or options.
 - When Professional mode is On, press to operate Multi remote control function. (See page 33 “Multi remote control”).
- r **Red button(DEMO)**
Toggles the demonstration menu on or off. (Only applicable in [Signage] mode, or Professional mode is set to Off).
- s **Blue button (Audio Descriptor) (For RF Digital TV only)**
UK only: Enables audio commentary for the visually handicapped.
- t **TELETEXT**
Toggles Teletext on or off.
- u  (OPTION)
NO FUNCTION


**Note**

- Channel grid is not available in some specific modes.

4 Use your product

This section helps you perform basic operations

Switch your TV on/off or to standby

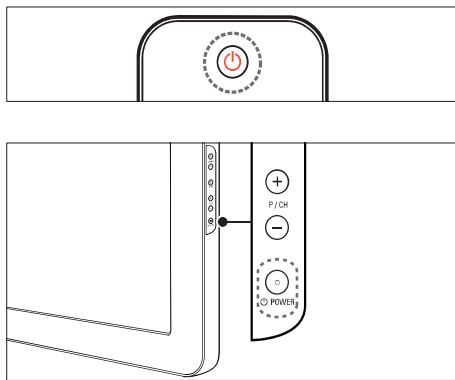

To switch on

- If the standby indicator is off, press **POWER** at the side of the TV.
- If the standby indicator is red, press **Standby-On** on the remote control.

To switch to standby

- Press **Standby-On** on the remote control.
 - » The standby indicator switches to red.

To switch off

- Press **POWER** at the side of the TV.
 - » The standby indicator switches off.



Tip

- Though your TV consumes very little power when in standby, energy continues to be consumed. When not in use for an extended period of time, disconnect the TV power cable from the power outlet.

Note

- If you cannot locate your remote control and want to switch on the TV from standby, press **P/CH +/-** or **SOURCE** at the side of the TV.

Switch channels

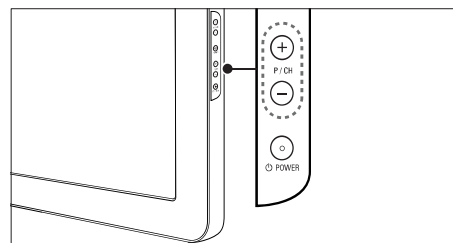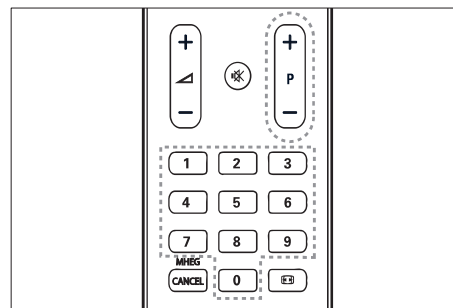

- Press **P +/-** on the remote control or **P / CH +/-** on the side of the TV.
- Enter a channel number using the **Numeric buttons**.
- Use the channel grid.

Note


- When you use a favourite list, you can only select those channels in the list.

Watch connected devices

Note



- Switch on the device before selecting it as a source on the TV.

Use the AV button

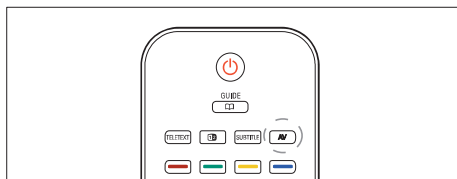

- 1 Press **AV**.
 - » The source list appears.
- 2 Press the **Navigation buttons** to select a device.
- 3 Press **OK** to confirm your choice.
 - » The TV switches to the selected device.

Adjust TV volume

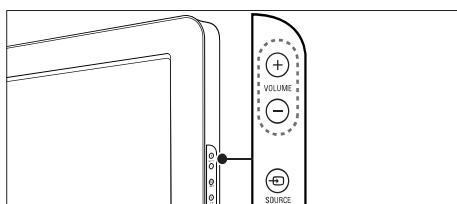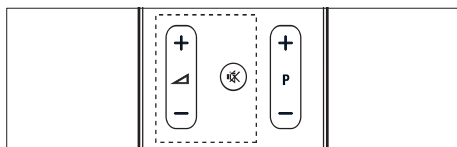

To increase or decrease volume

- Press **+/-**.
- Press **VOLUME +/-** on the side of the TV.

To mute or unmute sound

- Press **MUTE** to mute the sound.
- Press **MUTE** again to restore the sound.

Use Teletext



- 1 Press **TELETEXT**.
 - » The main index page appears.
- 2 Select a page as follows:
 - Press the **Numeric buttons** to enter a page number
 - Press **P +/-** or **▲▼** to view the next or previous page
 - Press the **Colour buttons** to select a colour coded item
- 3 Press **TELETEXT** to exit Teletext.

Note


- For UK users only: Some digital TV channels offer dedicated digital text services (for example, BBC1).v

5 Use more of your product

Access TV menus

Menus help you to install channels, change picture and sound settings and access other features.

- 1 Press **MENU**.
 - » The menu screen appears.

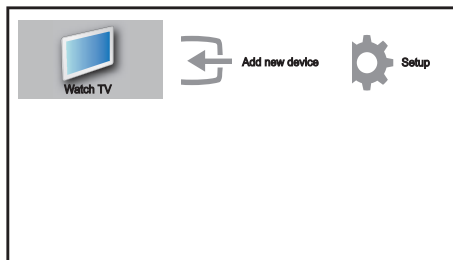

- 2 Press the **▲▼◀▶** to select and navigate through one of the following menus.
 - **[Watch TV]** Switches back to the aerial source if another source is selected.
 - **[Setup]** Accesses menus that allow you to change picture, sound and other TV settings.
 - **[Add new device]** Adds new devices to the home menu.
- 3 Press **OK** to confirm your choice.
- 4 Press **EXIT** to exit.

Tip

- After selecting **[Add new device]**, follow the on-screen instructions to select the correct device and connector.

Remove devices from the home menu

(Only available on consumer remote control)

If a device is no longer connected to the TV, remove it from the home menu.

- 1 Press **MENU**.
- 2 Press **▲▼◀▶** to select a device to remove.
- 3 Press **☰** (**OPTIONS**)
 - » The **[Remove device]** list appears.
- 4 Press **OK** and select **[Remove]** to remove the device.
 - » The selected device is removed from the home menu.

Change picture and sound settings

Change picture and sound settings to suit your preferences. You can apply pre-defined settings or change settings manually.

Use Settings assistant

Use the Settings assistant to guide you through the best picture and sound settings.

- 1 Press **MENU**.
- 2 Press **▲▼◀▶** to select **[Setup] > [Picture] > [Settings assistant]**.
- 3 Press **OK**.
 - » The **[Settings assistant]** menu appears. Follow the on-screen instructions to choose your preferred picture settings.

Use Smart picture

Use Smart picture to apply pre-defined picture settings.

- 1 Press **MENU**.
- 2 Press **▲▼◀▶** to select **[Setup] > [Picture] > [Smart picture]**.

- 3 Press ▲▼ to select one of the following Smart picture settings.
 - **[Personal]** Lists customised personal picture settings.
 - **[Vivid]** Maximises picture settings.
 - **[Standard]** Adjusts picture settings to suit most environments and types of video.
 - **[Movie]** Applies picture settings ideally suited for movie viewing.
 - **[Game]** Applies picture settings maximised for fast-moving games.
 - **[Energy saving]** Applies low-energy picture settings.
- 4 Press OK to confirm your choice.
 - » The selected Smart picture setting is applied.

Manually adjust Picture settings

- 1 Press MENU.
- 2 Press ▲▼◀▶ to select [Setup] > [Picture].

Picture	Settings assist.	Action
	Smart picture	Personal
Sound	Contrast	
	Brightness	
Features	Colour	
	Hue	
Installation	Sharpness	
	Noise reduction	Off
Software update		

- 3 Press ▲▼◀▶ to select one of the following picture settings.
 - **[Smart picture]** Accesses pre-defined smart picture settings.
 - **[Contrast]** Adjusts the intensity of bright areas, keeping dark areas unchanged.
 - **[Brightness]** Adjusts the intensity and details of dark areas.
 - **[Colour]** Adjusts colour saturation.
 - **[Hue]** Compensates colour variations in NTSC encoded transmissions.

- **[Sharpness]** Adjusts the level of sharpness in image details.
- **[Noise reduction]** Filters and reduces noise in an image.
- **[Tint]** Adjusts the colour balance in an image.
- **[Custom tint]** Make a customised tint setting. (Only available if [Tint] > [Custom] is selected)
- **[Digital Crystal Clear]** Fine-tunes each pixel to match surrounding pixels. This produces a brilliant, high-definition image.
 - **[Dynamic contrast]** Automatically enhances contrast in an image. A [Medium] setting is recommended.
 - **[Dynamic backlight]** Adjusts the brightness of the TV backlight to match lighting conditions.
 - **[MPEG artifact reduction]** Smooths out transitions on digital pictures. You can switch this feature on or off.
 - **[Colour enhancement]** Makes colours more vivid and improves the resolution of details in bright colours. You can switch this feature on or off.
- **[PC mode]** Adjusts the picture when a PC is connected to the TV via HDMI or DVI.
- **[Picture format]** Changes the picture format.
- **[Horizontal shift]** Adjusts the picture horizontally for PC-VGA, DVI, HDMI or YPbPr.
- **[Vertical shift]** Adjusts the picture vertically for PC-VGA, DVI, HDMI or YPbPr.

Change picture format

 
- 1 Press **OK**.
 - » A picture format bar appears.
- 2 Press **▲▼** or **OK** to select a picture format.
 - » The selected picture format is activated.
- 3 Press **OK** to confirm your choice.

Summary of picture formats

The following picture settings can be configured.

Note

- Depending on the format of the picture source, some picture settings are not available.



[Auto format](Not for PC mode.) Enlarges the picture automatically to best fit the screen. The subtitles remain visible.



[Super zoom](Not for HD and PC mode.) Removes the black bars on the side of 4:3 broadcasts. There is minimal distortion.



 
[4:3]Shows the classic 4:3 format.



[Subtitle zoom]Displays 4:3 pictures over the full area of the screen, with sub-titles visible. Part of the top of the picture is clipped off.



[Movie expand 14:9](Not for HD and PC mode.) Scales 4:3 format to 14:9.



[Movie expand 16:9](Not for HD and PC mode.) Scales 4:3 format to 16:9.



[Wide screen]Stretches the classic 4:3 format to 16:9.



[Unscaled]For HD and PC mode only, and in selected models only. Allows maximum sharpness. Some distortion may be present due to the broadcaster's systems. Set your PC resolution to wide screen mode for best results.


Use Smart sound

Use Smart sound to apply pre-defined sound settings.

- 1 Press **MENU**.
- 2 Press **▲▼◀▶** to select **[Setup]** > **[Sound]** > **[Smart sound]**.
- 3 Press **▲▼** to select one of the following Smart sound settings.
 - **[Standard]** Adjusts sound settings to suit most environments and types of audio.
 - **[News]** Applies sound settings ideally suited for spoken audio, such as the news.
 - **[Movie]** Applies sound settings ideally suited for movies.
 - **[Personal]** Applies the settings that were customised in the sound menu.
- 4 Press **OK** to confirm your choice.
 - » The selected Smart sound setting is applied.

Adjust sound settings

- 1 Press **MENU**.
- 2 Press **▲▼◀▶** to select **[Setup]** > **[Sound]**.
 - » The **[Sound]** menu appears.

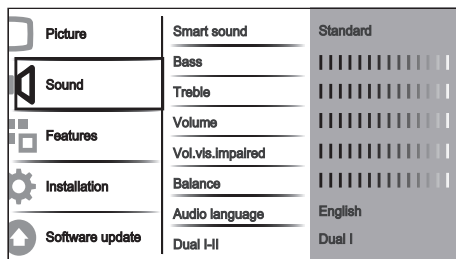

- 3 Press **▲▼◀▶** to select one of the following sound settings.
- **[Smart sound]** Accesses pre-defined smart sound settings.
 - **[Bass]** Adjusts the bass level.
 - **[Treble]** Adjusts the treble level.
 - **[Volume]** Adjusts the volume.
 - **[Vol.vis.impaired]** Adjusts the volume of visually impaired audio when your current channel supports visually impaired function. (Applies for UK only)

Note

- **[Vol.vis.impaired]** only appears if you select **[Setup] > [Installation] > [Language] > [Visually impaired] > [On]**.
- **[Visually impaired]** (Audio Descriptor): Sets the mix of visually impaired audio with regular audio. When available, visually impaired audio includes audio descriptions of on-screen action.
- **[Balance]** Adjusts the balance of the right and left speakers to best suit your listening position.
- **[Audio language]** Available for digital channels, when multiple languages are broadcast. Lists available audio languages.
- **[Dual I-II]** Selects between audio languages if dual sound is broadcast.
- **[Mono/Stereo]** Selects between mono or stereo if stereo is broadcast.
- **[TV speakers]** Turns TV speakers on or off.
- **[Surround]** Enables spatial sound.

- **[Headphone volume]** Adjusts headphone volume. (Only appears when Professional mode is **[Off]**)
- **[Auto volume]** Automatically reduces sudden volume changes, for example, when switching channels. When enabled, this produces a more consistent audio volume.
- **[Delta volume]** Levels out volume differences between channels or connected devices. Switch to the connected device before you change the delta volume.

Use advanced Teletext features (Only available on consumer remote control)

Access the Teletext options menu

Most of the advanced Teletext features are accessed via the Teletext options menu.

- 1 Press **TELETEXT**.
 - » The Teletext screen appears.
- 2 Press **☰** (**OPTIONS**).
 - » The Teletext options menu appears.
- 3 Press **▲▼** to select one of the following options.
 - **[Freeze page]** Freezes the current page.
 - **[Dual/Full screen]** Enables and disables dual screen Teletext, which splits the current channel or source to the left of the screen, with Teletext on the right.
 - **[Reveal]** Hides or reveals hidden information on a page, such as solutions to riddles or puzzles.
 - **[Cycle subpage]** Cycles through subpages automatically if subpages are available.
 - **[Language]** Switches to a different language group to display a language correctly when that language uses a different character set.

- 4 Press **OK** to confirm your choice.
- 5 Press **TELETEXT** to exit the Teletext options menu.

Select Teletext subpages

A Teletext page can hold several subpages. Subpages are displayed on a bar next to the main page number.

- 1 Press **TELETEXT**.
 - » The Teletext screen appears.
- 2 Press **▲▼** to select a Teletext page.
- 3 Press **◀▶** to enter a subpage.

Use the Electronic Programme Guide

EPG is an on-screen guide available for digital channels. EPG allows you to:

- View a list of digital programmes being broadcast
- View upcoming programmes
- Group programmes by genre

Switch on EPG

- 1 When watching TV, press **GUIDE**.
 - » The EPG planner screen appears displaying information about the scheduled programmes.

Note

- EPG data is available only in selected countries and can take some time to load.

Tip

- Press **GUIDE** to switch between EPG and channel grid. (Channel grid will only appear in some specific modes).

Use EPG

- 1 When watching TV, press **GUIDE**.
 - » The EPG planner screen appears.
- 2 Press **MENU**.
 - » The program guide menu appears.
- 3 Press **▲▼◀▶** to select an option, and then press **OK** to confirm it.
- 4 Press **EXIT** to exit the EPG menu.

Use the EPG options menu (Only available on consumer remote control)

Use the EPG options menu to set or clear reminders, change day and access other useful EPG options.

- 1 Press **GUIDE**.
- 2 Press **OPTIONS**.
 - » The EPG menu appears.
- 3 Press **▲▼** to select one of the following options.
 - [Show info]
 - [Search by genre]
- 4 Press **OK** to enter or activate the option.
- 5 Press **EXIT** to exit the EPG menu.

Use Timers

You can set timers to switch the TV on or switch to standby at a specified time.




Automatically switch the TV to standby (Sleep timer)

(Only available on consumer remote control)

Sleep timer switches the TV to standby after a pre-defined period of time.

Tip

- You can always switch off your TV earlier or reset the Sleep timer during the countdown.
- Press **SLEEP** on the Guest remote control to quick access the Sleep timer menu.

- 1 Press  (OPTIONS).
- 2 Press  to select [Sleep timer].
 - » The bar appears..
- 3 Press  to set the sleep time.
 - » The Sleep timer can be up to 180 minutes in steps of five minutes. If set to zero minutes, the Sleep timer is switched off..
- 4 Press OK to activate the Sleep timer.
 - » The TV switches to standby after the pre-defined period of time.

Use subtitles

You can enable subtitles for each TV channel. Subtitles are broadcast via Teletext or DVB-T digital broadcasts. With digital broadcasts, you have the additional option of selecting a preferred subtitle language.

Enable subtitles on analogue TV channels

- 1 Select an analogue TV channel.
- 2 Press **TELETEXT**.
- 3 Enter the three-digit page number of the subtitle page with the **Numeric buttons**.
- 4 Press **TELETEXT** to switch off Teletext.
- 5 Press **SUBTITLE**.
 - » The [Subtitle mode] menu appears.
- 6 Select **[On]** to display subtitles always or **[On during mute]** to display subtitles only when audio is muted.
- 7 Press **OK** to enable subtitles.

Note

- Repeat this procedure to enable subtitles on each analogue channel.

Tip

- Select **[Subtitle mode] > [Off]** to disable subtitles.

Enable subtitles on digital TV channels

- 1 When watching digital channels, press **SUBTITLE**.
 - » The [Subtitle mode] menu appears.
- 2 Select **[On]** to display subtitles always or **[On during mute]** to display subtitles only when audio is muted.
- 3 Press **OK** to enable subtitles.

Select a subtitle language on digital TV channels

Note

- When you select a subtitle language on a digital TV channel as described below, the preferred subtitle language set in the installation menu is temporarily overruled.

- 1 Press **MENU**.
- 2 Press **▲▼◀▶** to select **[Setup] > [Features] > [Subtitle language]**.
- 3 Press **OK** or **▶** to enter the list of available languages.
- 4 Press **▲▼** to select a subtitle language.
- 5 Press **OK** to enable your selection.

Tip

- You can also access **[Subtitle language]** menu while watching TV by pressing **12** (**OPTIONS**) **> [Subtitle language]**.


View photos and play music from a USB storage device

! Caution

- Philips is not responsible if the USB storage device is not supported nor is it responsible for damage or loss of data from the device.

Your TV is fitted with a USB connector that enables you to view photos or listen to music stored on a USB storage device.

- 1 Turn on the TV.
- 2 Connect the USB device to the USB port on the side of your TV.
 - » The home menu appears.

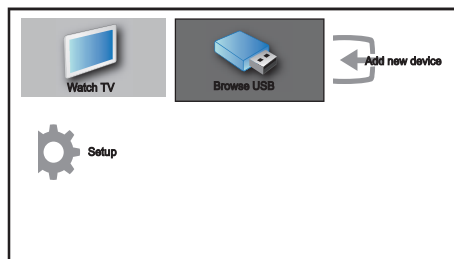

- 3 Press **▲▼◀▶** to select **[Browse USB]**.
- 4 Press **OK** to confirm.
 - » The USB thumbnail browser appears.

* Tip

- Press **GUIDE** to switch between thumbnail and file browsing views.

View photos

- 1 In the USB thumbnail browser, select **[Picture]** and press **▶** to enter.
- 2 Press **GUIDE** to switch between thumbnail and file browsing views.
- 3 Press **▲▼◀▶** to select a photo or a photo album.

- 4 Press **OK** to view the selected photo in full screen mode.

* Tip

- When in full screen mode, press **◀▶** to move between photos.

View a slide show of your photos

- 1 When a full screen image of a photo is displayed, press **OK**.
 - » A slide show begins from the selected image.
- 2 Press:
 - **OK** to pause the slide show.
 - » The **||** icon appears.
 - Press **◀▶** to go back or move forward to the next image.
 - **EXIT** to stop the slide show.

Change slide show settings (Only available on consumer remote control)

- 1 When viewing a slide show, press **OPTION**.
 - » The slide show options menu appears.
- 2 Press **▲▼** to select one of the following.
 - **[Start/Stop slide.]** Starts or stops a slide show.
 - **[Slideshow trans.]** Sets the transition from one picture to the next.
 - **[Slideshow freq.]** Sets the amount of time that a picture is shown.
 - **[Rotate image]** Rotates a picture.
 - **[Show info]** Displays the picture name, date, size and next picture in the slide show.
- 3 Press **OK** to confirm your setting.

≡ Note

- **[Rotate image]** and **[Show info]** appear only when you press **OK** to pause the slideshow.

Listen to music

- 1 In the USB thumbnail browser view, select **[Music]** and press **▶** to enter.
- 2 Press **GUIDE** to switch between thumbnail and file browsing views.
- 3 Press **▲▼◀▶** to select music or a music album.
- 4 Press **OK** to play the selected music.

Music settings

(Only available on consumer remote control)

When listening to music, press **OPTION** to access one of the following music settings.

- **[Start/Stop play]**
- **[Repeat/Play once]**
- **[Shuffle on/off]**
- **[Show info]**
- **[TV speakers]**

Disconnect a USB storage device



Caution

- Follow this procedure to avoid damage to your USB storage device.

- 1 Press **EXIT** to exit the USB browser.
- 2 Wait for five seconds before you disconnect the USB storage device.

Update using OAD (On the Air software Download)

If Professional mode is **[On]**, your TV automatically receives software updates in semi-standby mode without notice on screen. The TV restarts after the software update is complete.

Change TV preferences

- 1 Press **MENU**.
- 2 Press **▲▼◀▶** to select **[Setup]** > **[Installation]** > **[Preferences]**.
- 3 Press **OK** or to enter **[Preferences]**.
 - **[Location]** Optimises TV settings for your location - home or shop.

Note

If **[Shop]** mode is selected:

- The **[Smart picture]** setting will be switched to **[Vivid]** automatically to display the brightest backlight on screen.
- E-sticker is applicable to display the TV selling features on screen.
- **[Volume bar]** Displays the volume bar when adjusting the volume.
- **[Channel info.]** Displays information about the TV channel every time you switch channels. Select **[Full]** to view channel information or **[Off]** to turn off the channel information.
- **[EasyLink]** Enables one-touch play and one-touch standby between EasyLink compliant devices.
- **[E-sticker]** For shop mode only. Sets the location of the e-sticker.

Access decoder channel

You can map channels provided through a decoder or descrambler to your TV channel selection. In this way, you can select these channels by using the RC of your TV. The decoder or a descrambler must be connected to EXT1 (SCART).

Set decoder channel

Map channels from a decoder or descrambler

- 1 Press **MENU**.
- 2 Press **▲▼◀▶** to select **[Setup]** > **[Installation]** > **[Preferences]** > **[Decoder]**.
- 3 Press **OK** or **▶** to enter **[Decoder]** menu.
- 4 Press **▲▼** to select **[Channel]** and press **OK** or **▶** to enter.
 - » A list of analogue channels appears on the screen.
- 5 Press **▲▼** to select one channel to map to the decoder/descrambler channel and press **OK** to confirm.
- 6 Select **[Status]** and press **OK** or **▶** to enter.
- 7 Press **▲▼** to select **[EXT 1]** (SCART) the connector used by the decoder/descrambler.
- 8 Press **OK**.
- 9 Press **EXIT** to exit.

Start a TV DEMO

Note

Before starting DEMO, make sure to activate one of the following setting for TV DEMO to take effect:

1. [PBS settings] > [PBS mode] > [Off].
2. [PBS settings] > [Applications] > [Signage].

- 1 Press **Red button (DEMO)** on the remote control.
- 2 Press **▲▼** to select a demo and press **OK** to view it.
- 3 Press **Red button (DEMO)** to exit.

Reset the TV to factory settings

You can restore the default picture and sound settings of your TV. Channel installation settings remain the same.

- 1 Press **MENU**.
- 2 Press **▲▼◀▶** to select **[Setup]** > **[Installation]** > **[Factory settings]**.
- 3 Press **OK** or **▶** to enter the **[Factory settings]** menu.
» A factory setting message appears.
- 4 Select **[Reset]** to start resetting.
- 5 Press **EXIT** to exit.

6 Install channels


The first time you set up your TV, you are prompted to select a menu language and to install TV and digital radio channels (if available). This chapter provides instructions on how to re-install and fine tune channels.

Automatically install channels

This section describes how to search and store channels automatically.

Step 1 Select your menu language

- 1 Press **MENU**.
- 2 Press **▲▼◀▶** to select **[Setup] > [Installation] > [Language] > [Menu language]**.
- 3 Press **OK** or **▶** to enter **[Menu language]**.

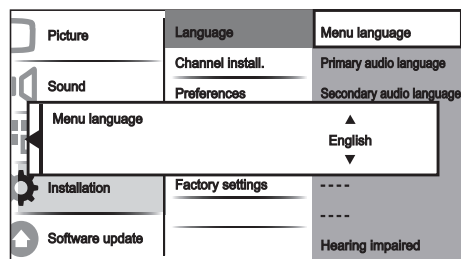


- 4 Press **▲▼** to select a language setting.
- 5 Press **OK** to confirm.
- 6 Press **◀** to return to **[Installation]** menu.


Step 2 Select your country

Select your country for proper channel installation.

- 1 Press **MENU**.
- 2 Press **▲▼◀▶** to select **[Setup] > [Installation] > [Channel install.] > [Channel assistant]**.

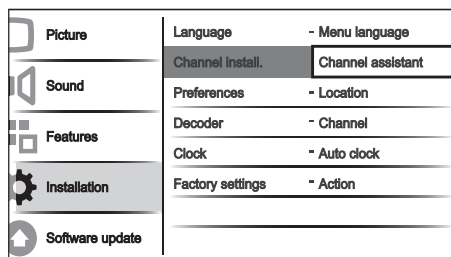

- 3 Press **OK** or **▶** to enter the menu.
 - » The country menu appears.

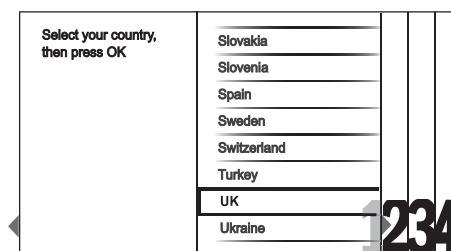


- 4 Press **▲▼** to select your country.
- 5 Press **OK** to confirm your choice.
 - » The channel installation guide appears on the screen.


Step 3 Install channels

Install the available analogue and digital TV channels and digital radio channels automatically.

- 1 From the channel installation guide screen, select **[Full installation]** to automatically install all TV channels and digital radio channels.

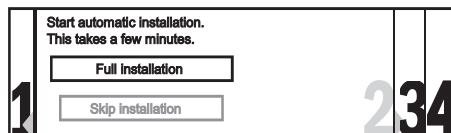

 - 2 Press **OK** to confirm.
 - » The TV starts to search and store all the available channels.



- 3 When installation is complete, press **OK** to return to **[Installation]** menu.

Step 4 Update the channel list

You can choose to enable standby mode auto update of channels. If you enable this feature, the new channels stored in your TV will be updated every morning according to the channel information in the broadcast.

- 1 Press **MENU**.
- 2 Press **▲▼◀▶** to select **[Setup]** > **[Installation]** > **[Channel install.]** > **[Standby update]**.
- 3 Select **[On]** to enable the automatic update or select **[Off]** to disable it.

Manually install channels


This section describes how to search and store analogue TV channels manually.

Step 1 Select your system

Note

- Skip this step if your system settings are correct.

- 1 Press **MENU**.
- 2 Press **▲▼◀▶** to select **[Setup]** > **[Installation]** > **[Channel install.]** > **[Analogue: Manual]**.
 - » The **[Analogue: Manual]** menu appears.

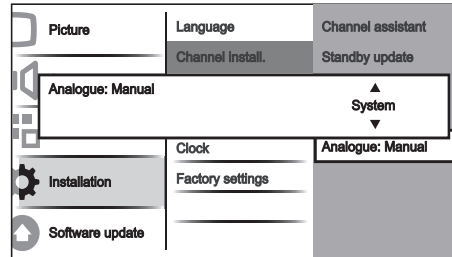

- 3 Press **OK** or **▶** to enter **[System]** menu.
- 4 Press **▲▼** to select your country or region.
- 5 Press **OK** to confirm.
- 6 Press **◀** to return to **[Channel install.]** menu.

Step 2 Search and store new TV channels

- 1 Press **MENU**.
- 2 Press **▲▼◀▶** to select **[Setup]** > **[Installation]** > **[Channel install.]** > **[Analogue: Manual]**.
 - » The **[Analogue: Manual]** menu appears.
- 3 Press **▲▼** to select **[Search]** and then **OK** or **▶** to enter **[Search]**.
- 4 Press **▲▼◀▶** to manually enter the three-digit frequency.
- 5 Press **OK** to begin search.
 - » If a channel is unavailable at the selected frequency, press **OK** to search for the next available channel.
- 6 Press **◀** when the new channel is found.
- 7 Press **▲▼** to select **[Store new channel]** to store the new channel under a new channel number.
- 8 Press **OK** or **▶** to enter **[Store new channel]** and press **OK**.
- 9 Press **◀** to return to the **[Analogue: Manual]** menu.

Step 3 Fine-tune analogue channels

- 1 Press **MENU**.
- 2 Press **▲▼◀▶** to select **[Setup]** > **[Installation]** > **[Channel install.]** > **[Analogue: Manual]**.
» The **[Analogue: Manual]** menu appears.
- 3 Press **▲▼** to select **[Fine-tune]** and then **OK** or **▶** to enter **[Fine-tune]**.
- 4 Press **▲▼** to adjust frequency.
- 5 Press **OK** when done.
- 6 Press **▲▼** to select **[Store current channel]** to store the fine-tuned channel under the current channel number.
- 7 Press **OK** or **▶** to enter **[Store curr. chan.]** and press **OK**.
- 8 Press **◀** to return to the **[Channel install.]** menu.

Rename channels

(Only available on consumer remote control)

Channels can be renamed so that a name of your choice appears whenever the channel is selected.

- 1 When watching TV, press **OK** to display the channel grid .
- 2 Press **▲▼◀▶** to select the channel you want to rename.
- 3 Press **≡** (**OPTIONS**).
» The channel options menu appears.
- 4 Press **▲▼** to select **[Rename channel]**.
» A text input box appears.
- 5 Press **▲▼◀▶** to select and change characters.
- 6 Select **[Done]** to finish renaming channels.

Tip

- Use **[Aa]** to change upper-case letter to lower-case letter and vice versa.

Reorder channels

(Only available on consumer remote control)

After you install channels, you can rearrange the order in which they appear.

- 1 When watching TV, press **OK** to display the channel grid .
- 2 Press **≡** (**OPTIONS**).
» The channel options menu appears.
- 3 Press **▲▼** to select **[Reorder]** and then **OK** to return to the channel grid.
- 4 Press **▲▼◀▶** to select the channel you want to reorder and press **OK**.
» The selected channel is highlighted.
- 5 Press **▲▼◀▶** to move the highlighted channel to your preferred position and press **OK**.
- 6 Press **≡** (**OPTIONS**).
» **[Done reordering]** appears on the screen.
- 7 Press **OK** to finish reordering.

Test digital reception

If using digital broadcasts, you can check the quality and signal strength of digital channels. This allows you to reposition and test your antenna or satellite dish.

- 1 Press **MENU**.
- 2 Press **▲▼◀▶** to select **[Setup]** > **[Installation]** > **[Channel install.]** > **[Digital: test recept.]**.
- 3 Press **OK** or **▶** to enter the menu.
- 4 Press **▲▼◀▶** to enter the frequency of the channel you want to test.
- 5 Press **OK** to confirm the frequency and then press **OK** again to confirm **[Search]**.
- 6 When complete, select **[Store]** to store the frequency.



Note

- If the signal quality and strength is poor, reposition the antenna or satellite dish and retest.
- If you still have problems with the reception of your digital broadcast, contact a specialised installer.

7 Professional mode instruction

Introduction

Included in this TV is a special functional mode that allows the TV to be configured for Hospitality or Signage applications. This feature is called Professional mode.


This section has been designed to help install and operate this TV in Professional mode. Before reading this section, please read section 3 to 6 to set the basic functionality of this TV.

Benefits of Professional mode

This TV is specially designed to operate in Professional Mode. Professional Mode offers the following benefits:

- Access to the **[Consumer Menu]** can be blocked. This prevents users (e.g. guests) from deleting or changing channel settings and/or modifying picture and sound settings. This ensures that TVs are always set up correctly.
- A switch-on volume and channel can be selected. After switching on, the TV will always start on the specified volume level and channel.
- The maximum volume level of the TV can be limited in order to prevent disturbance to other guest.
- Channels can be blanked (Video only).
- The TV local buttons **VOLUME +/-**, **P/CH +/-** and **SOURCE** can be locked
- Screen information can be suppressed.

Professional Setup Remote control (2573 optional)

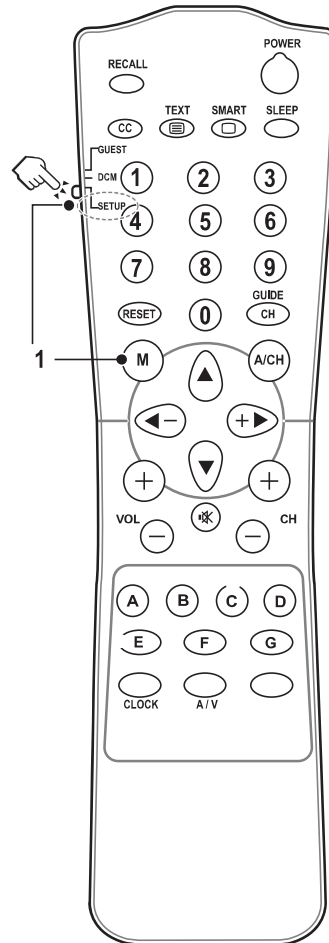

- a (Enters Professional setup menu)
- Selects **SETUP** mode first.
 - Press **M button** to enter the Professional setup menu.

 Note

- **SETUP** mode should be selected for hotel installer.

Activating the Professional mode setup menu

- 1 Switch on the TV and select a TV channel.
- 2 Press the following buttons to access Professional mode setup menu:
 - **[3, 1, 9, 7, 5, 3+MUTE]** on Guest remote control.
 - **M button** on Professional setup remote control. (When **SETUP** mode is selected on the Professional setup remote control.)
- 3 Press **▲▼◀▶** on the remote control to select and change any of the settings.
- 4 Select **[STORE settings] > [Yes]** and select **[OK]** to save the setting. Press **MENU / EXIT** to exit Professional mode menu without saving.
- 5 For Professional mode settings to take effect, you must restart the TV mains power.

<Page Intended left blank >

Professional mode options

This paragraph describes the functionality of each item in the Professional mode setup menu.

Layer 1	Layer 2	Layer 3
Setup Menu	BDS mode	Off / On
	Local Keyboard Locked	Off / On
	Remote Control Locked	Off / On
	OSD Display	Off / On
	Switch On Volume	0 - 60
	Maximum Volume	0 - 60
	Switch On Channel	List available channels
	High Security Mode	Off / On
	Power On	On / Standby
	Display message	Off / On
	Welcome message Line 1	Popop menu
	Welcome message Line 2	Popop menu
	Power on	On / Standby / Last status
	Auto SCART	Off / On
	Auto EasyLink	Off / On
	Auto USB	Off / On
	Browse USB	Off / On
	Blank Channels	List of available chanel to select from
	Store settings	Yes / No (popup)
	Smartloader to TV	Action Menu
	TV to Smartloader	Action Menu

BDS settings

[BDS mode]

Enables / disables the Professional mode.

- **[On]:** All settings in the Professional mode Setup menu are in effect.
- **[Off]:** The TV operates as a normal (consumer) TV.

[Local KB lock]

- **[Off]:** The TV local buttons **VOLUME+/-**, **P/CH +/-** and **SOURCE** will function normally.
- **[On]:** The TV local buttons **VOLUME +/-**, **P/CH +/-** and **SOURCE** are locked.

[RC lock]

Disables the operation of the Guest remote control.

- **[Off]:** All buttons on Guest remote control will function normally.
- **[On]:** All buttons on the Guest remote control are disabled. (It is still possible to enter the Professional setup menu by pressing **[3, 1, 9, 7, 5, 3+MUTE]**).

[OSD display]

Sets this function to show or hide screen information.

- **[Off]:** Screen information is suppressed.
- **[On]:** Normal screen information is displayed.

[Switch on volume]

When the guest switches the TV on, it will play at the specified volume level.

- The installer can adjust his/her preferred switch on volume level.

[Maximum volume]

This option specifies the maximum allowable volume level of the TV.

[Switch on channel]

When the guest switches the TV on, it will play at the specified channel.

- The installer can choose his/her preferred switch on channel from a list.

[High security mode]

- **[Off]:** Professional mode setup menu can be accessed by both Guest remote control (Press **[3, 1, 9, 7, 5, 3 + MUTE]**) and the Professional setup remote control (Press **M button**)
- **[On]:** Professional mode setup menu can only be accessed by the Professional setup remote control.

[Power on]

The power on function allows the TV to enter a specific mode (**[On]**, **[Standby]**, or **[Last status]**) of operation after the mains power is activated.

- **[On]:** When set, the TV will always turn on after the mains power is activated.
- **[Standby]:** When set, the TV will always turn to standby after the mains power is activated.

[Display message]

- **[Off]:** Disables the display of the welcome message.
- **[On]:** Enables the display of the welcome message for a pre-defined time after the TV turns on from standby or off.

[Welcome message]

The Welcome message function allows the TV to show a customized greeting to the hotel guest whenever the TV is switched on. This helps to personalize the hotel experience for guests. The Welcome message can consist of 2 lines of text, with each line containing a maximum of 20 alphanumeric characters. Use **keys 0 - 9 on the remote control to compose the Welcome message (using Multi-Tab).**

Note

- To activate the Welcome message, the **[Display message]** option must be **[On]**.

- **[Line 1]**: Sets the characters of the first line message.
- **[Line 2]**: Sets the characters of the second line message.
- **[Clear]**: Clear the settings in Line 1 and Line 2.

[Auto scart]

Enables auto scart switching or break-in Professional mode.

- **[Off]**: Disables auto scart switching or break-in Professional mode.
- **[On]**: Enables auto scart switching or break-in Professional mode.

[Auto Easylink]

HDMI-CEC (Philips EasyLink) enables one-touch play and one touch standby between HDMI-CEC compliant devices.

Note

- Before activating HDMI-CEC in function, make sure the HDMI-CEC compliant devices are turned to on.
- Selects **[EasyLink] > [On]** first before enabling **[HDMI-CEC in]** in Professional mode.
- Refer to page 40 on "**Use Philips EasyLink**" for more details about HDMI-CEC function.

- **[Off]**: Disables HDMI-CEC feature in Professional mode.
- **[On]**: Enables HDMI-CEC feature in Professional mode.

[Auto USB]

Enables or disables USB break-in feature in Professional mode.

- **[Off]**: When USB is plugged in, the **[Multimedia]** menu will not appear automatically, but users can access **[Multimedia]** menu from the **[Consumer setup]** menu.
- **[On]**: When USB is plugged in, the **[Multimedia]** menu appears automatically.

[Browse USB]

Enables or disables USB content browse feature in Professional mode.

- **[Off]**: When Off, the **[Multimedia]** icon in the Home screen will not show.
- **[On]**: When On, the **[Multimedia]** icon in the Home screen will show.

[Blank channel]

The Blank channel function disables the display of video on the TV, but does not affect the audio output. This function can be used for audio applications (example: music-only channels, and so on) which do not necessarily require the display of video.

- 1 Enters the **[Blank channel]**, the list of all channels appear.
- 2 Selects one or more channels and press **OK** to mark.
- 3 The channels marked with **[X]** will not display video on the TV.

[Store Settings]

Selects **[Confirm]** to store Professional mode settings.

[Smartloader to TV]

Loads the TV configuration data (including the video, audio, channel Table, and Professional mode settings) from a Smartloader / USB device to the TV set.

[TV to Smartloader]

Loads the TV configuration data (including the video, audio, channel Table, and Professional mode settings) from the TV set to a Smartloader /USB device.

8 Connect devices


For best picture quality, we recommend you use the following connection types, listed below from highest to basic quality:

- 1 HDMI
- 2 Y Pb Pr (component)
- 3 SCART
- 4 VIDEO (composite)

Note

- The connectivity diagrams provided in this section are examples only. Other types of connections are possible.


Back connectors

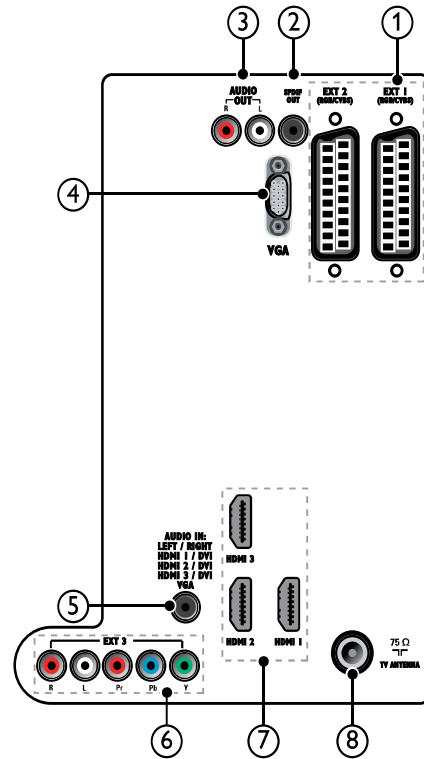


Note

- Back connectors on 19-22" models vary slightly from the diagram.
- The number of HDMI connectors available varies according to TV model.


- a **EXT 1/EXT 2 (SCART)**
 Analogue audio and video input from analogue or digital devices such as DVD players or game consoles.

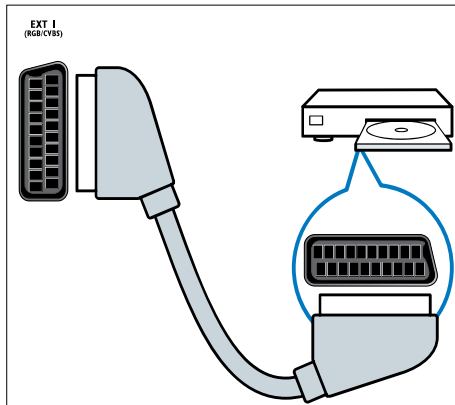


- b **SPDIF OUT**
 Digital audio output to home theatres and other digital audio systems.

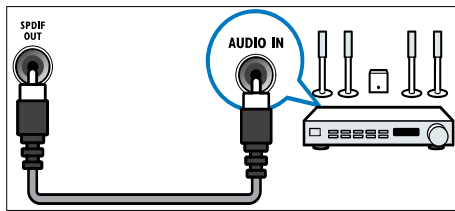


- c **AUDIO OUT L/R**
 Analogue audio output to home theatres and other audio systems.

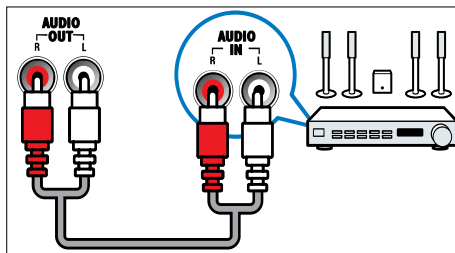


- d **VGA**
 Video input from a computer.

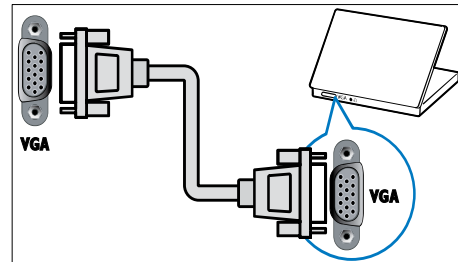

- e **AUDIO IN**
 Audio input from devices that require a separate audio connection, such as a computer.

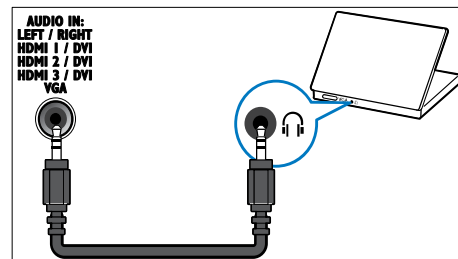


- f **EXT 3 (Y Pb Pr and AUDIO L/R)**
 Analogue audio and video input from analogue or digital devices such as DVD players or game consoles.

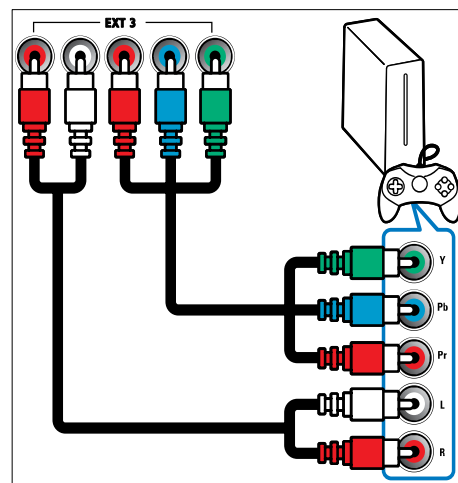

g HDMI 1/2/3

Digital audio and video input from high-definition digital devices such as Blu-ray players.

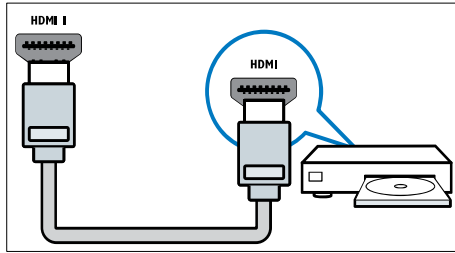


Note

- Only one HDMI connector is available on 19/22" models. The HDMI connector on these models is labelled as **HDMI** instead of **HDMI 1**.

h TV ANTENNA


Signal input from an antenna, cable or satellite.

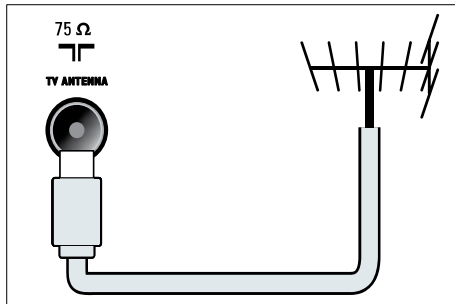

Side connectors

Refer to the correct connector diagram for your TV screen size:


26-52"

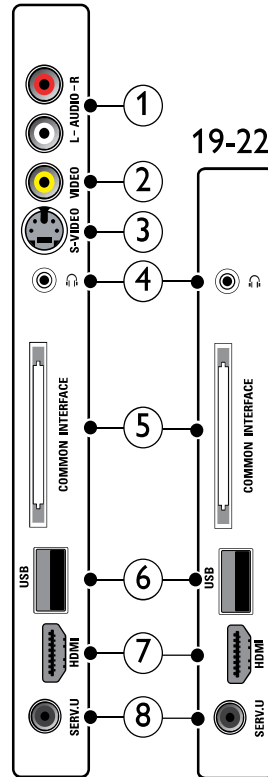


19-22"

a AUDIO IN L/R


Audio input from analogue devices connected to VIDEO or S-VIDEO.

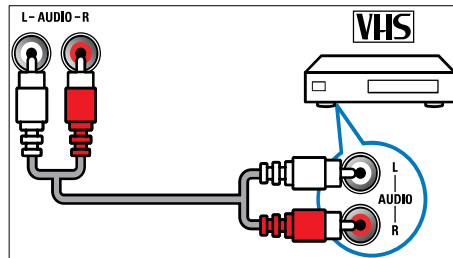


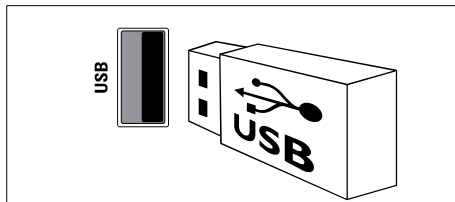
- b **VIDEO**
Composite video input from analogue devices such as VCRs.

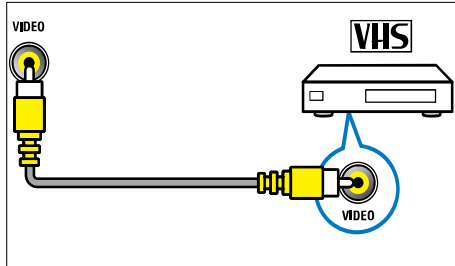

- c **S-VIDEO**
Video input from analogue devices such as satellite receivers.

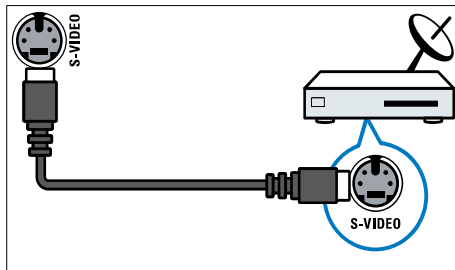

- d  Stereo audio output to headphones or earphones.
- e **COMMON INTERFACE**
Slot for a Conditional Access Module (CAM).
- f **USB**
Data input from USB storage devices.



- g **HDMI**
Digital audio and video input from high-definition digital devices such as Blu-ray players.
- h **SERV. U**
For use by service personnel only.

Connect a computer

Before you connect a computer to the TV:


- Set the screen refresh rate on your computer to 60Hz.
- Select a supported screen resolution on your computer.
- Enable **[PC mode]** in the **[Picture]** menu (see 'Manually adjust picture settings' on page 15), and set the picture format to **[Unscaled]**.

Connect a computer with one of the following connectors:


Note

- Connections via DVI or VGA require an additional audio cable.


- **HDMI cable**

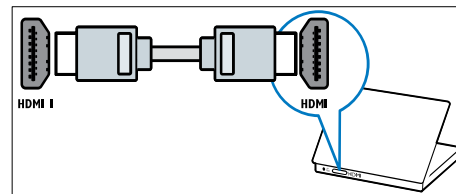


- DVI-HDMI cable (rear HDMI and AUDIO IN)

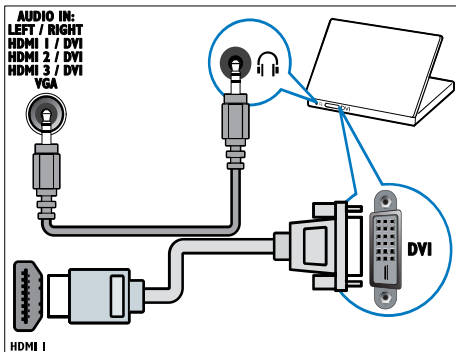


- HDMI cable and HDMI-DVI adaptor (side HDMI and AUDIO IN L/R)

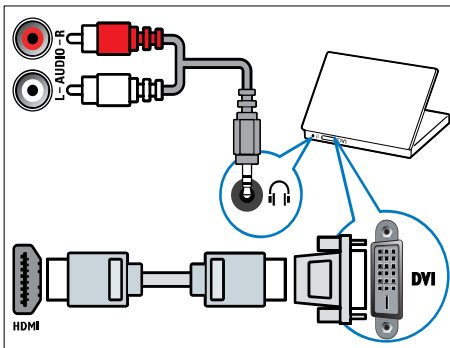


- DVI-HDMI cable (side HDMI and AUDIO IN L/R)

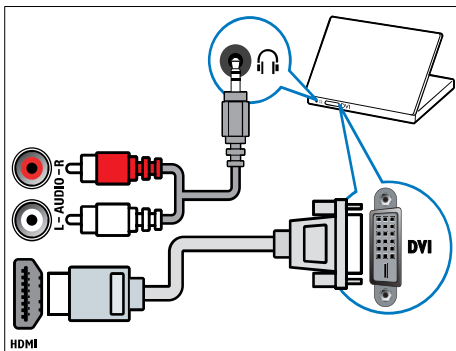

- VGA cable

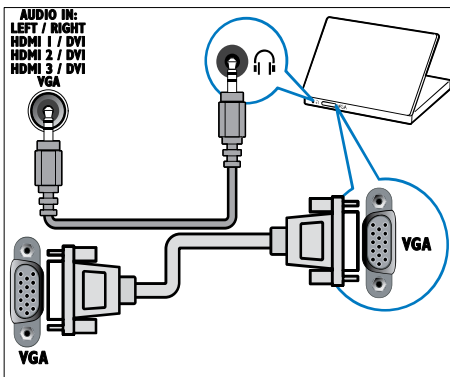

- HDMI cable and HDMI-DVI adaptor (rear HDMI and AUDIO IN)

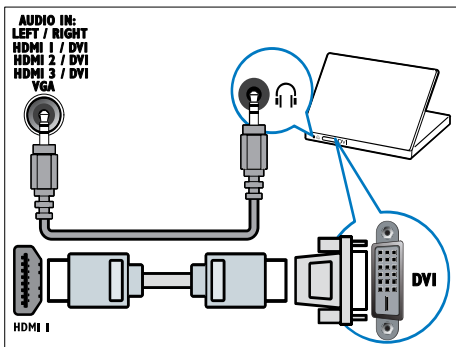

Use a Conditional Access Module

A Conditional Access Module (CAM) is provided by digital TV service operators to decode digital TV channels.

Note


- If required, refer to documentation from your operator on how to insert a smart card into the Conditional Access Module.

Insert and activate a CAM

Caution


- Be sure to follow the instructions described below. Wrong insertion of a CAM may damage both the CAM and your TV.

- 1 Switch off the TV.
- 2 Following the directions printed on the CAM, gently insert the CAM into the **COMMON INTERFACE** at the side of the TV.

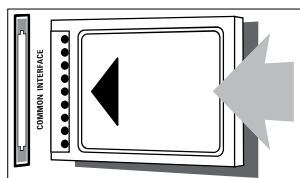


- 3 Push the CAM in as far as it will go.
- 4 Turn on the TV and wait for the CAM to be activated. This may take several minutes. Do not remove the CAM from the slot when in use — removing the CAM will deactivate digital services.

 Access CAM services

- 1 After inserting and activating the CAM, press  **OPTIONS**.
 - » The options menu appears.
- 2 Press the **Navigation buttons** to select **[Common interface]**.
- 3 Press **OK**.
 - » A list of CAM applications appears.
- 4 Press the **Navigation buttons** to select a CAM application.
- 5 Press **OK** to confirm your choice.
 - » The selected CAM application is enabled.

Assign a channel decoder

Before using a SCART digital channel decoder, select the channel to decode and assign the decoder to **EXT 1** or **EXT 2**.

- 1 While watching TV, press  (**Home**).
 - » The home menu appears.
- 2 Press the **Navigation buttons** to select **[Setup]**.
- 3 Press **OK**.
 - » The **[Setup]** menu appears.
- 4 Press the **Navigation buttons** to select **[Installation] > [Decoder] > [Channel]**.
- 5 Press the **Navigation buttons** to select **[Status]**, then the location of the decoder (eg. **EXT 1** or **EXT 2**).
- 6 Press **OK** to confirm your choice.
 - » The decoder is assigned.

Use Philips EasyLink

Your TV supports Philips EasyLink, which uses the HDMI CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI connectors can be controlled by a single remote control.

Note

- Philips does not guarantee 100% interoperability with all HDMI CEC devices.

Note

- The EasyLink-compliant device must be switched on and selected as the source.

EasyLink features

One-touch play

When you connect your TV to devices that support one-touch play, you can control your TV and the devices with one remote control.

One-touch standby

When you connect your TV to devices that support standby, you can use your TV remote control to put your TV and all connected HDMI devices in standby mode.

System audio control

When you connect your TV to HDMI CEC compliant devices, your TV can switch automatically to play audio from the connected device.

To use one-touch audio, you must map the audio input from the connected device to your TV.

You can use the remote control from the connected device to adjust the volume.

Remote control (RC) key forwarding

RC key forwarding allows you to control EasyLink-compliant devices using your TV remote control.

Enable or disable EasyLink

Note

- Do not enable Philips EasyLink if you do not intend to use it.

- 1 When watching TV, press **⬆ (Home)**.
 - » The home menu appears.
- 2 Press the **Navigation buttons** to select **[Setup]**.
 - » The **[Setup]** menu appears.
- 3 Press the **Navigation buttons** to select **[Installation] > [Preferences] > [EasyLink]**.
 - » The EasyLink menu appears.
- 4 Select **[On]** or **[Off]**.
- 5 Press **OK** to confirm your choice.
 - » EasyLink is enabled or disabled.

Enable or disable remote control key forwarding

Note

- Enable EasyLink before enabling remote control key forwarding.

- 1 When watching TV, press **⬆ (Home)**.
 - » The home menu appears.
- 2 Press the **Navigation buttons** to select **[Setup]**.
 - » The **[Setup]** menu appears.
- 3 Press the **Navigation buttons** to select **[Installation] > [Preferences] > [EasyLink Remote Control]**.
- 4 Select **[On]**, then press **OK**.
 - » RC key forwarding is enabled or disabled on the selected HDMI connector.

Note

- If you cannot exit from a device's menu, press **⏏ OPTIONS** then **OK**.


Set TV speakers to EasyLink mode

When enabled, this feature automatically turns off TV speakers when content from an EasyLink-compliant home theatre system is played. Audio is played only from the home theatre system's speakers.

- 1 When watching content from an EasyLink device, press **⏏ OPTIONS**.
 - » The options menu appears.
- 2 Press the **Navigation buttons** to select **[TV speakers]**.
 - » The **[TV speakers]** menu appears.
- 3 Press the **Navigation buttons** to select **[Automatic (EasyLink)]**.
- 4 Press **OK** to confirm your choice.
 - » The TV speakers are set to EasyLink mode.
- 5 Press **⏏ OPTIONS** to exit.

Use a Kensington lock

There is a Kensington security slot at the back of the TV. Prevent theft by looping a Kensington lock between the slot and a permanent object, such as a heavy table.

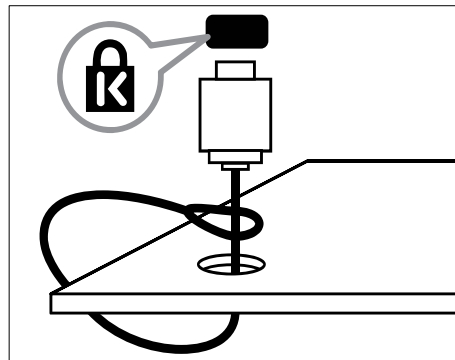

9 Product information

Product information is subject to change without notice. For detailed product information, go to www.philips.com/support.

Supported display resolutions

Computer formats

- Resolution - refresh rate:
 - 640 × 480 - 60Hz
 - 800 × 600 - 60Hz
 - 1024 × 768 - 60Hz
 - 1280 × 1024 - 60 Hz (supported on full HD TVs only)
 - 1360 × 768 - 60Hz
 - 1600 × 1200 - 60Hz (supported on full HD TVs only)
 - 1920 × 1080 - 60Hz

Video formats

- Resolution - refresh rate:
 - 480i - 60Hz
 - 480p - 60Hz
 - 576i - 50Hz
 - 576p - 50Hz
 - 720p - 50Hz, 60Hz
 - 1080i - 50Hz, 60Hz
 - 1080p - 24Hz, 25Hz, 30Hz, 50Hz, 60Hz

Multimedia

- Supported storage device: USB (FAT or DOS-formatted; Mass Storage Class compliant only)
- Supported multimedia file formats:
 - Images: JPEG
 - Audio: MP3, LPCM
 - Video: MPEG1, MPEG2, H.264/ MPEG-4 AVC



Note

- Multimedia file names must not exceed 128 characters.

Tuner/Reception/Transmission

- Antenna input: 75ohm coaxial (IEC75)
- TV system: DVB COFDM 2K/8K
- Video playback: NTSC, SECAM, PAL
- DVB-T (Digital Video Broadcasting-Terrestrial) and DVB-C (Digital Video Broadcasting-Cable). See listed countries on the back of the TV

Remote control

- Type: PF03E09B/PF02E09B/PF02E09W
- Batteries: 2 × AAA (LR03 type)

Power

- Mains power: AC 220-240; 50Hz
- Standby power: < 0.15W
- Ambient temperature: 5 to 35 degrees Celsius

Supported TV mounts

To mount the TV, purchase a Philips TV mount or a VESA-compatible TV mount. To prevent damage to cables and connectors, be sure to leave a clearance of at least 2.2 inches or 5.5cm from the back of the TV.



Warning

- Follow all instructions provided with the TV mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper TV mounting that results in accident, injury or damage.

TV screen size	Recommended VESA mount
19 inches/ 48cm	VESA MIS-D 75, 4
22 inches/ 56cm	VESA MIS-D 100, 4
26 inches/ 69cm	VESA MIS-E 200, 100, 4
32 inches/ 81cm	VESA MIS-F 200, 200, 6
37 inches/ 94cm	VESA MIS-F 200, 200, 6
42 inches/ 107cm	VESA MIS-F 400, 400, 6
47 inches/ 119cm	VESA MIS-F 400, 400, 8
52 inches/ 132cm	VESA MIS-F 400, 400, 8

EPG information

8 days EPG is only available in some countries

Country	8 days EPG
UK	Yes
France	No
Finland	Yes
Sweden	Yes
Denmark	Yes
Norway	Yes
Spain	Yes
Germany	Yes
Italy	Yes
Greece	No
Netherlands	Yes
Czech Republic	Yes
Belgium	No
Austria	Yes
Switzerland	Yes
Estonia	Yes
Lithuania	Yes
Croatia	No
Hungary	No
Ireland	No
Luxemburg	No
Poland	No
Portugal	No
Russia	No
Slovakia	No
Slovenia	No
Romania	No
Serbia	No
Latvia	No
Ukraine	No
Bulgaria	No
Kazakhstan	No

10 Troubleshooting

This section describes commonly encountered issues and accompanying solutions.

General TV issues

The TV does not switch on:

- Disconnect the power cable from the power outlet. Wait for one minute then reconnect it.
- Check that the power cable is securely connected.

The TV does not respond to remote control or side controls when switched on

- When the TV is switched on, the front LED indicator flashes for about 20 to 25 seconds. This is normal behaviour. During this time, the TV will not respond to the remote control or side controls. When a picture appears on-screen, the TV responds only to the following remote control buttons for the first few seconds: **◀ +/- (VOLUME +/-), P +/- (Program +/-), * (MUTE) and ⏻ (Standby-On)**. All buttons can be used when the front LED indicator stops flashing.

The remote control is not working properly:

- Check that the remote control batteries are correctly inserted according to the +/- orientation.
- Replace the remote control batteries if they are flat or weak.
- Clean the remote control and TV sensor lens.

The standby light on the TV blinks red:

- Disconnect the power cable from the power outlet. Wait until the TV cools down before reconnecting the power cable. If the blinking reoccurs, contact Philips Consumer Care.

You forgot the code to unlock the child lock feature

- Enter '8888'.

The TV menu is in the wrong language.

- Change the TV menu to your preferred language (see 'Change language settings' on page 12).

When turning the TV on/off/to standby, you hear a creaking sound from the TV chassis:

- No action is required. The creaking sound is normal expansion and contraction of the TV as it cools down and warms up. This does not impact performance.

When the TV is in standby mode, a startup splash screen is displayed, then returns to standby mode.

- This is normal behavior. The startup screen is displayed when the TV is disconnected from the mains and reconnected.

TV channel issues

Previously installed channels do not appear in the channel list:

- Check that the correct channel list is selected.

No digital channels were found during the installation:

- Check that the TV supports DVB-T, DVB-T Lite or DVB-C in your country. See the listed countries on the back of the TV.

Picture issues

The TV is on, but there is no picture:

- Check that the antenna is properly connected to the TV.
- Check that the correct device is selected as the TV source.

There is sound but no picture:

- Check that the picture settings are correctly set.

There is poor TV reception from an antenna connection:

- Check that the antenna is properly connected to the TV.
- Loudspeakers, unearthed audio devices, neon lights, high buildings and other large objects can influence reception quality. If possible, try to improve the reception quality by changing the antenna direction or moving devices away from the TV.
- If reception on only one channel is poor, fine tune this channel.

There is poor picture quality from connected devices:

- Check that the devices are connected properly.
- Check that the picture settings are correctly set.

The TV did not save your picture settings:

- Check that the TV location is set to the home setting. This mode offers you the flexibility to change and save settings.

The picture does not fit the screen; it is too big or too small:

- Try using a different picture format.

The picture position is incorrect:

- Picture signals from some devices may not fit the screen correctly. Check the signal output of the device.

The picture from broadcasts is scrambled:

- You may need to use a Conditional Access Module to access content. Check with your operator.

An “e-sticker” banner displaying information appears on the TV display:

- The TV is in [Shop] mode. Remove the e-sticker by setting the TV to [Home] mode. In the [Home] menu, select [Setup] > [Installation] > [Preferences] > [Location] menu. It is necessary to switch the TV to standby to ensure that the TV exits [Shop] mode completely.

Sound issues

There is a picture but sound quality is poor:

 Note

- If no audio signal is detected, the TV automatically switches the audio output off — this does not indicate malfunction.

- Check that all cables are properly connected.
- Check that the volume is not set to 0.
- Check that the sound is not muted.
- Check that the TV speakers setting is on in the sound menu.
- Check that the TV audio output is connected to the audio input on the HDMI CEC enabled/EasyLink-compliant HTS device. Sound should be heard from the HTS speakers.

There is a picture but the sound quality is poor:

- Check that the sound settings are correctly set.

There is a picture but sound comes from one speaker only:

- Verify that sound balance is set to the centre.

HDMI connection issues

There are problems with HDMI devices:

- Note that HDCP support can delay the time taken for a TV to display content from a HDMI device.
- If the TV does not recognize the HDMI device and no picture is displayed, try switching the source from one device to another and back again.
- If there are intermittent sound disruptions, check that output settings from the HDMI device are correct.
- If a HDMI-to-DVI adaptor or HDMI to DVI cable is used, check that an additional audio cable is connected to **AUDIO L/R** or **AUDIO IN** (mini-jack only).

You cannot use EasyLink features:

- Check that your HDMI devices are HDMI-CEC compatible. EasyLink features only work with devices that are HDMI-CEC compatible.

If a HDMI CDC/EasyLink-compliant audio device is connected to the TV and the TV does not display any mute or volume icon when the volume is muted, increased or decreased.

- This behavior is normal when a HDMI CEC/EasyLink-compliant device is connected.

USB connection issues

USB device content is not displayed:

- Check that the USB storage device is set to 'Mass Storage Class' compliant, as described in the storage device's documentation.
- Check that the USB storage device is compatible with the TV.
- Check that the audio and picture file formats are supported by the TV.

Audio and picture files do not play or display smoothly

- The transfer performance of the USB storage device may limit the data transfer rate to the TV, causing poor playback.

Computer connection issues

The computer display on the TV is not stable:

- Check that a supported resolution and refresh rate is selected on the computer.
- Set the TV picture format to unscaled.

Contact us

If you cannot resolve your problem, refer to the FAQs for this TV at www.philips.com/support.

If the problem remains unresolved, contact Philips Consumer Care in your country as listed in this user manual.

**Warning**

- Do not attempt to repair the TV yourself. This may cause severe injury, irreparable damage to your TV or void your warranty.

**Note**

- Make a note of your TV model and serial number before you contact Philips. These numbers are printed on the back of the TV and on the packaging.

Index

B

Batteries 39

C

Channel list

install

- Automatic 21
- Manual 22

Test digital reception 23

Troubleshooting 41

Update 22

Computer

Connect 34

display resolutions 39

Troubleshooting 42

D

DEMO 20

Digital channels

CAM 36

Test digital reception 23

Display resolutions 39

E

EasyLink

disable 38

Enable 38

EPG 14

F

factory settings 20

H

HDMI

HDMI-CEC in 29

Troubleshooting 42

I

Installation

Automatic 21

Manual 22

K

Kensington lock 38

L

Language

Audio language 13

menu language 21

subtitle language 16

Troubleshooting 42

Lock

Kensington lock 38

Local KB lock 28

M

MENU

Main menu 10

Troubleshooting 41

Multimedia

Technical specifications 41

USB 17

Music

18

O

One-touch play 37

One-touch standby 37

<hr/>	
P	
Photo	
Slide show	17
USB	17
Picture format	12
Picture settings	10
POWER	8
Power on	28
Technical specifications	39
Professional mode	
Activat	25
Options	27
BDS mode	28
Settings	28
<hr/>	
R	
Remote control	
Professional Setup Remote control	24
RC lock	28
Technical specifications	39
Troubleshooting	41
<hr/>	
S	
Smart card	36
Smart settings	12
Software version	18
Sound settings	12
Subtitles	
On analogue channels	15
On digital channels	16
<hr/>	
T	
Technical specifications	39
Teletext	9, 13
Troubleshooting	41
TV overview	6
<hr/>	
U	
USB	
Listen to music	18
Auto USB	29
View photos	17
<hr/>	
V	
Video formats	39
Volum	9
Volume	7
<hr/>	
W	
Wall mounts	40
Welcome message	29

Information about how to re-tune your TV during the digital TV switchover.

Keep this user manual safe – you'll need it.

.....



Television in the UK is going digital, bringing us all more choice and new services. Starting in late 2007 and ending in 2012, television services in the UK will go completely digital, TV region by TV region.

Please see the next page to find out when your area switches to digital.

Digital UK is the independent, non-profit organisation leading the process of digital TV switchover in the UK. Digital UK provides impartial information on what people need to do to prepare for the move to digital, and when they need to do it.

How the switchover affects your TV equipment:

Your new TV has a digital tuner built in, which means it is ready to receive the Freeview signal by simply plugging it into your aerial socket (check if you can get digital TV through your aerial now, or whether you'll have to wait until switchover, at www.digitaluk.co.uk).

When the TV switchover happens in your area, there are at least two occasions when you will need to re-tune your TV in order to continue receiving your existing TV channels, and also to pick up new ones.

get set for digital 

Digital UK, the body leading the digital TV switchover, will advise you when you need to re-tune during the switchover. If you choose to connect your TV to satellite or cable with a digital box then it will not be affected by switchover, and you won't need to re-tune.

If you have any questions, please contact your equipment supplier or call Digital UK on ... 0845 6 50 50 50 or visit www.digitaluk.co.uk

How to re-tune:

To find out how to re-tune your TV, check this user manual for details.

Go to section **6 Install channels**.

If you do not re-tune your channels when advised to do so by Digital UK, you may lose some or all of your channels until you do re-tune. You should re-tune your TV every few months to check for any new channels.

If you are missing any channels, it may be that they are not available in your area, or that your aerial needs upgrading.

When does switchover happen?

*Copeland switches on October 17, 2007

The exact date you switch depends on the transmitter you are served by. To check when you switch, go to Digital UK's postcode checker on www.digitaluk.co.uk

Check your ITV news service or look at Teletext page 106 to see what TV region you're in.

Visit us at digitaluk.co.uk
Call us on 0845 6 50 50 50†

† Calls charged at BT rate of 3p per minute daytime and 1p per minute evenings and weekends. Rates may vary for calls from non-BT lines.



