

BenQ

Joybook S52

欢迎



2005 BenQ Corporation



BenQ Corporation

Corporation

BENQ

Windows Internet Explorer Outlook Express Microsoft Corporation

3D Surround

SRS Labs,Inc.



SRS Labs,Inc.



Joybook

Joybook

• Joybook S52

Joybook

Joybook

.....	1
Joybook.....	1
.....	2
.....	3
.....	4
.....	5
.....	6
Windows XP	8
Q-Media Bar.....	10
QMedia Bar	10
.....	11
.....	12
LAN	13
Bluetooth.....	14
Bluetooth	14
Bluetooth	16
.....	16
Bluetooth	16
Joybook Bluetooth	16
Bluetooth	17
.....	18
QMusic	18
CD	18
.....	18
CD MP3	19
MP3 CD	19
.....	20
Photo Explorer	20
.....	20
.....	20
.....	21
DVD/VCD	22
Power DVD	22
.....	22
.....	23
.....	24

 
PowerDirector	24
.....	24
1	25
2	25
3	25
4	26
Nero Express CD	27
QCamera.....	30
QCamera	30
.....	31
.....	31
.....	31
.....	31
CD	31
QPower	32
QPower	32
.....	32
.....	32
.....	32
.....	33
.....	34
QPresentation	35
QSurround.....	35
SmartAudio.....	35
QMedia XS.....	36
.....	36
.....	36
.....	36
.....	37
.....	37
.....	38
.....	41
Windows	41
.....	41
CD.....	42

.....	42
QMedia XS	42
.....	43
.....	43
.....	43
.....	44
.....	45
.....	47
.....	49
.....	49
.....	49
Joybook.....	49
.....	50
BenQ Joybook	50
Joybook	50
.....	51


1

Joybook



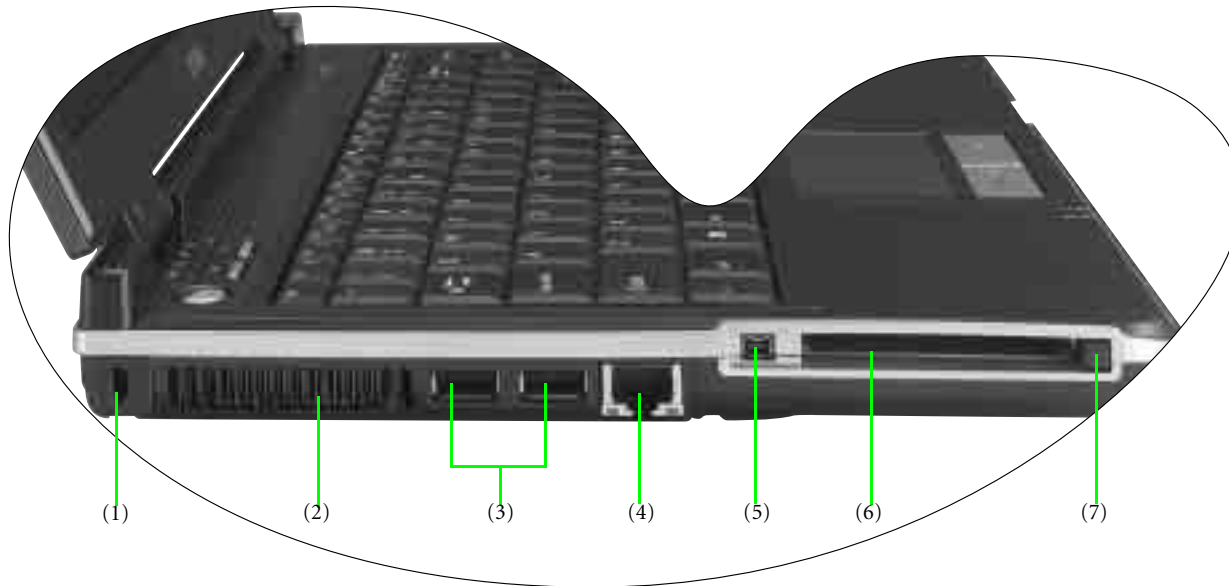


(1)  **Kensington**
Kensington

(5)  **IEEE 1394**
IEEE 1394

(7) **PC**
1. PC PC PC

(2)

(6)  **PC**
PC

Type-II PC
PC


2. PC

(3)  **USB 2.0**
USB
MP3

Joybook

PC

3. PC

(4)  **LAN**
Joybook 10/100Mbps Ethernet



(1)

(2)

(3)

 


(2) **DVD Super-Multi/DVD+RW/DVD & CD-RW Combo**

CD VCD DVD
CD-R/CD-RW DVD+R/DVD+RW
/



Joybook

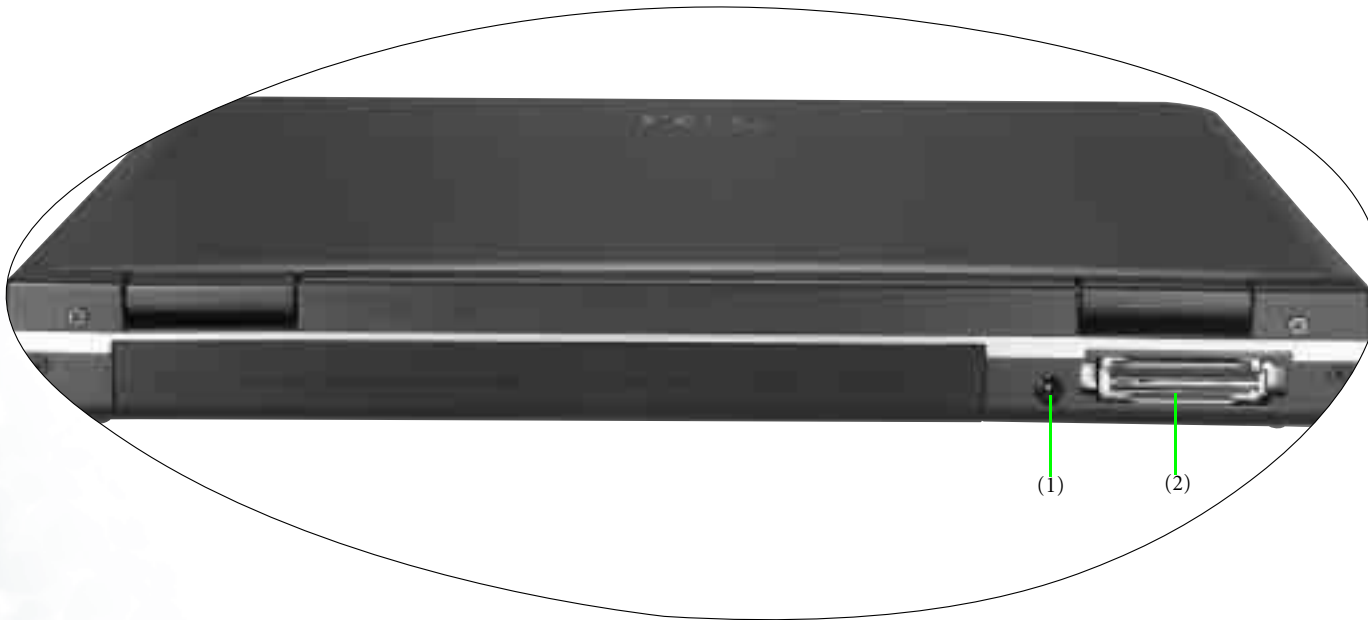



(1) 


(2)

PS/2

 Joybook S52
USB

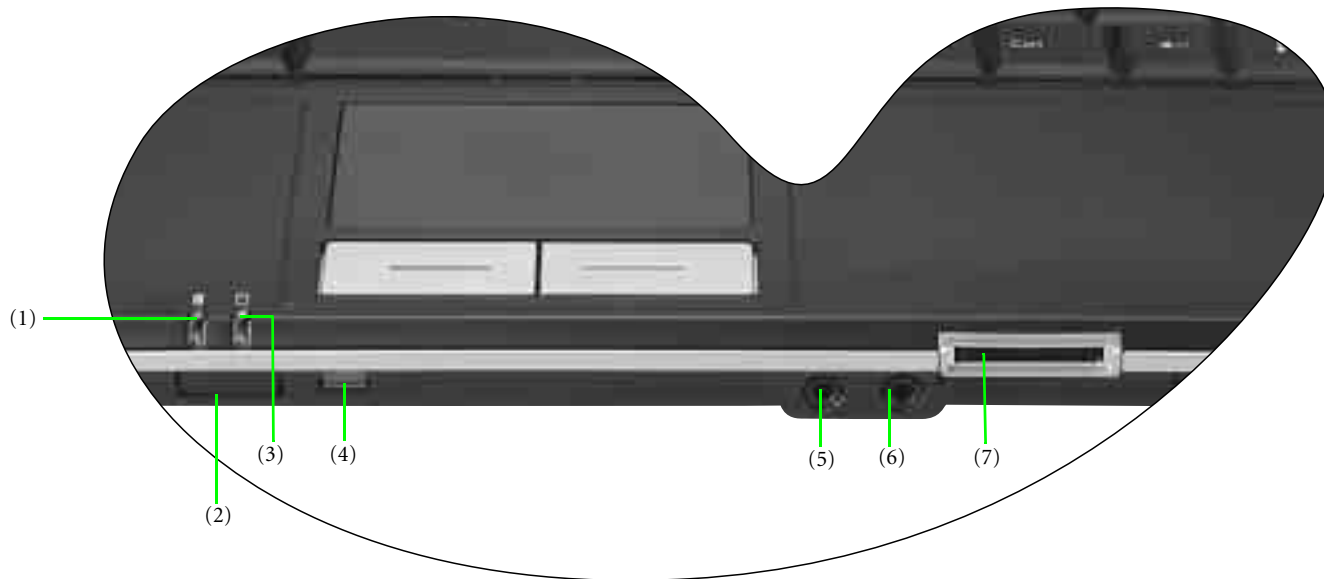


- (1) 
- Joybook
 -
 -

- (3) 
- Pro XD SD MMC

- Memory Stick (6) 

- (4) /
- WLAN Bluetooth RF Bluetooth

- (7) 
- Memory Stick Pro XD SD MMC

Memory Stick Pro

- (2)
- Joybook PDA

- (5)  /SPDIF

Joybook

Fn



Fn + F1

Fn + F2 Joybook

Fn + F3 /

Fn + F4

Fn + F5

Fn + F6

Fn + F7

Fn + F8

Fn + F9

Fn + F10 QPower

Fn + F12 WLAN Bluetooth /

 Bluetooth



 Windows

Windows

Start



 + Tab

Windows

 + E

My Computer

 + M

Shift () +  + M

 + R

Run

Num Lk

Caps lock



Windows XP

Windows XP

Joybook

Windows XP

Support Center

Joybook



Windows XP

Start
Windows XP



Help and Support

  Help and

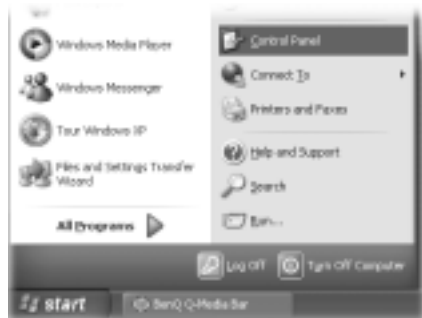


1. **Start****Control Panel**2. **Date, Time, Language, and Regional Options**3. **Regional and Language Options**4. **Advanced**

  5.

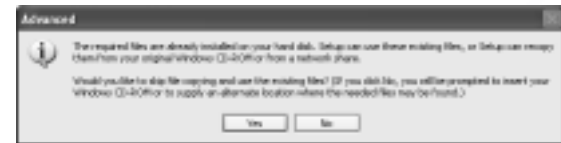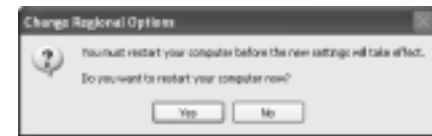6. **Apply**7. **Yes**8. **Yes**

 Q-Media Bar

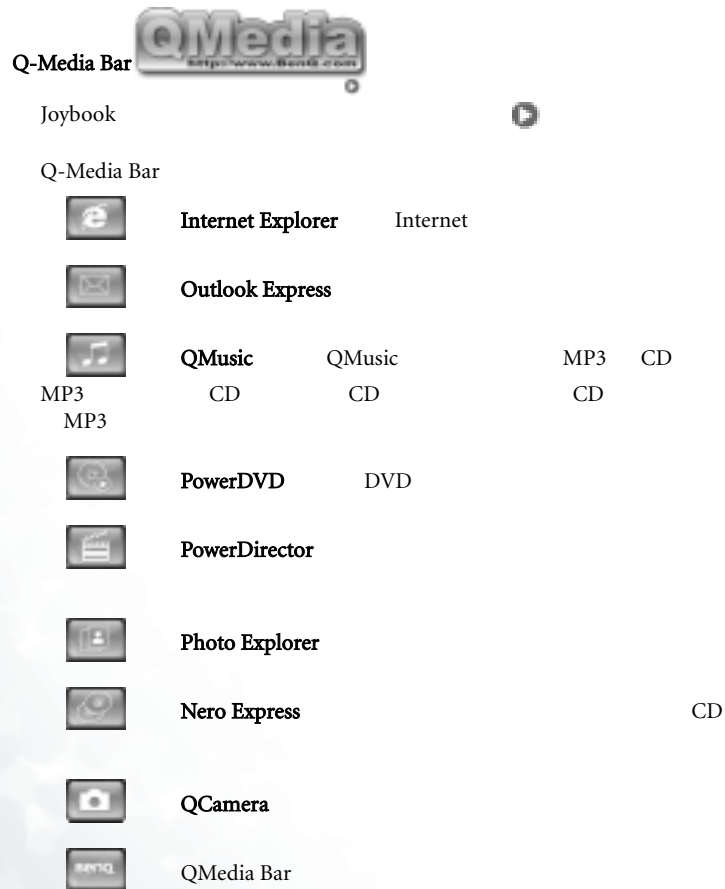

QMedia Bar

QMedia Bar



- **Always on top** QMedia Bar
- **Exit** QMedia Bar
- **Size** QMedia Bar

Outlook Express



/ISP
ISP BenQ
Internet service provider Internet

1. Joybook

 


QMedia Bar



Outlook Express

2. Outlook Express

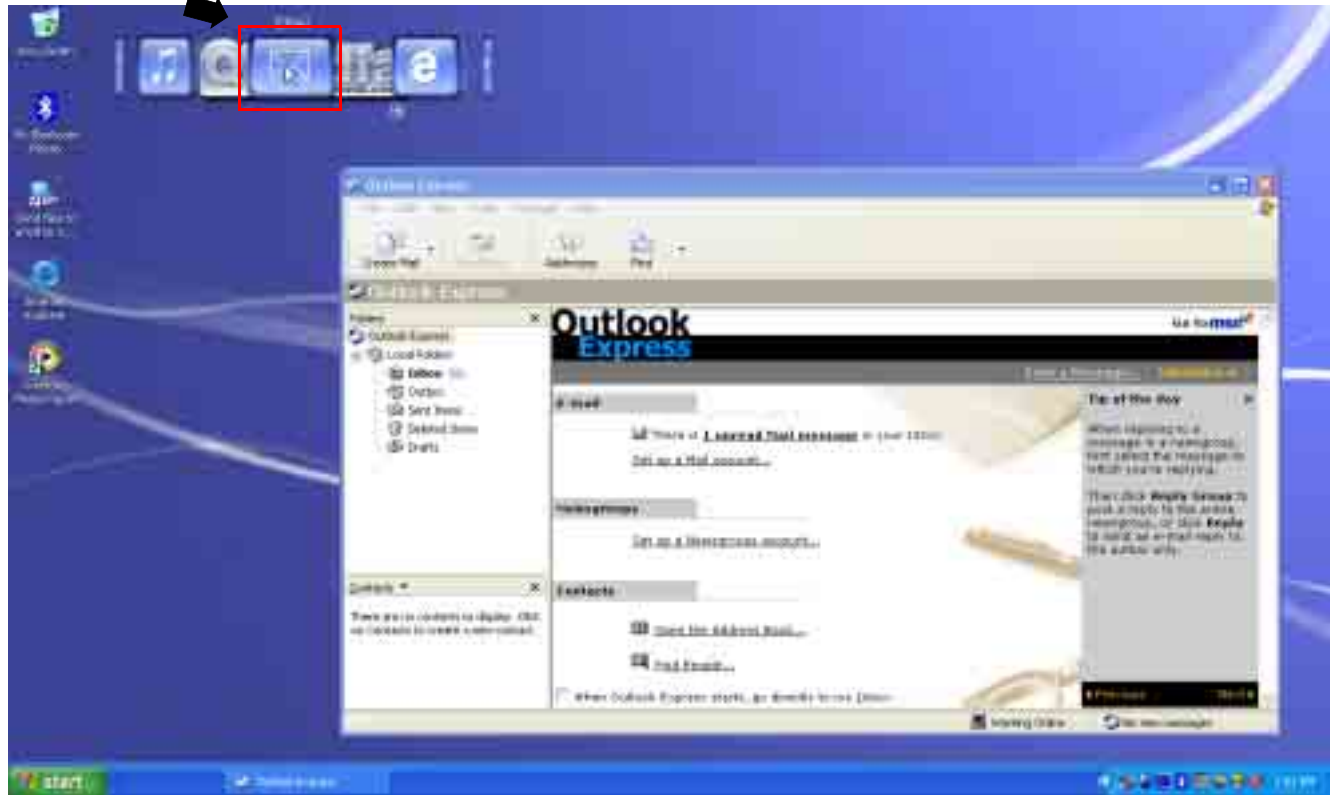


Outlook Express

Help

Contents and Index

Internet Explorer Internet
 /ISP BenQ ISP Internet service provider Internet

1. Joybook
 QMedia Bar

 Internet Explorer
 Address
2. Internet Explorer
 Address

Go to



 Internet Explorer Help Contents and Index

LAN

Joybook

LAN

Ethernet

8.

Configure

9.

Next

10.

ISP

Next

11.

OK

12.

Profiles

13.

LAN

Connect

14.

LAN

1. LAN

2.

Fn + F12

LAN

3.

LAN



4.

Use Intel PROSet/Wireless

Intel PROSet/

6

5.

LAN

6.

Open Intel PROSet/Wireless

Intel PROSet/



7.

Available Networks

LAN



LAN



Internet

Joybook

ISP

WLAN

ISP

ADSL

Help

Bluetooth

Bluetooth

PDA

Bluetooth

PC

PIM

Bluetooth

Bluetooth
Bluetooth

Bluetooth
Bluetooth

Bluetooth

Bluetooth

Bluetooth

1.

Fn + F12

Bluetooth

2.

Bluetooth

Bluetooth



•

Bluetooth

10

•

Joybook

Bluetooth

7

Bluetooth

3.

Windows

Bluetooth

 


Next



4. Computer name

Joybook

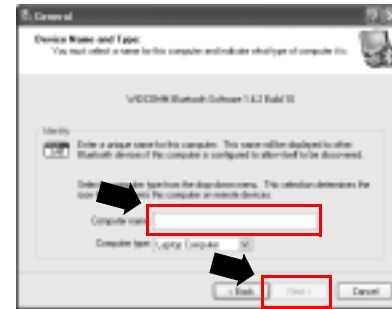

Next

5.

Next



6.

Joybook

 
Next



7. Windows




8. Next

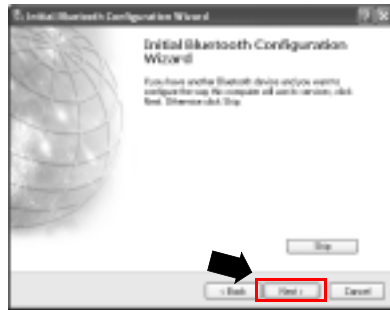

9. Joybook

 Bluetooth
Next

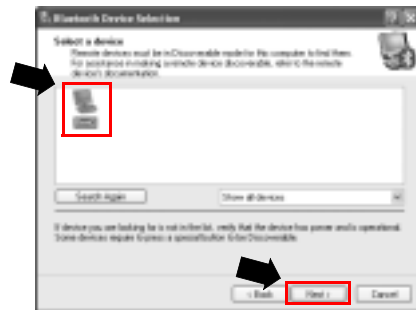

10.

 
Bluetooth
Joybook Bluetooth PIN PIN

PIN Code
Pairing

PIN


PIN

Initiate

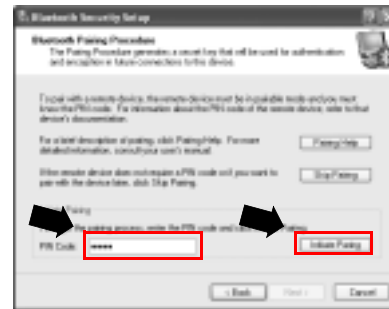

11.

 Bluetooth

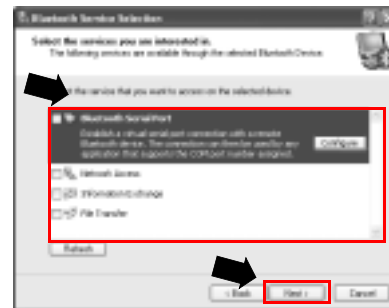

Cancel

Next

 
Bluetooth

Bluetooth

1. Joybook Bluetooth

Bluetooth

My Bluetooth Places

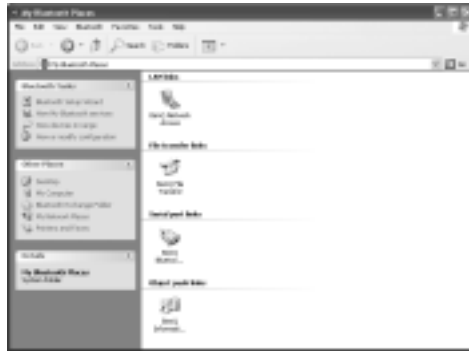

2.

Bluetooth
Joybook
information management

PIM personal

Information Exchange

Joybook

PIM

 
- Bluetooth
- Audio Gateway PC Bluetooth PC
- Fax Bluetooth PC PC
- Bluetooth PC Bluetooth

Bluetooth
Bluetooth

Bluetooth

Quick Connect

Windows

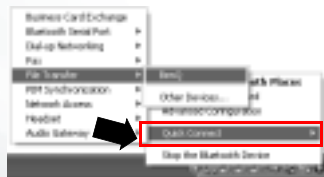


Bluetooth

Bluetooth

Bluetooth

My Bluetooth Places

 Search for devices in range

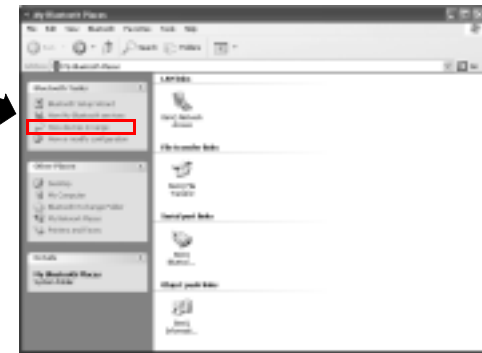


Joybook

Bluetooth


Joybook

My Bluetooth Places
View My Bluetooth Services

 
Bluetooth
Bluetooth

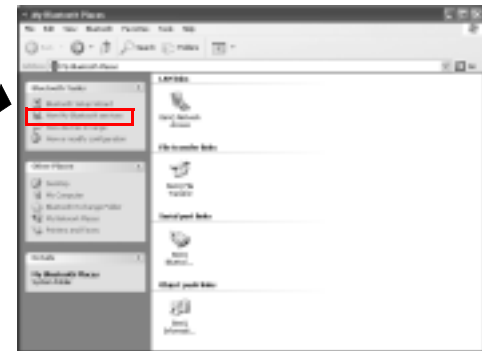

Joybook

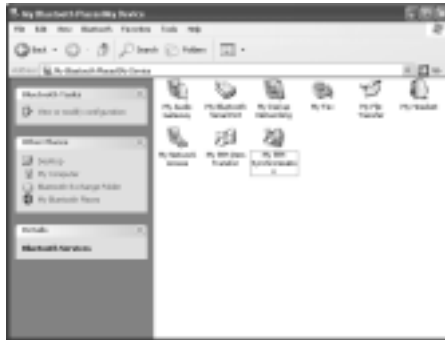 

Bluetooth
Windows
Configuration

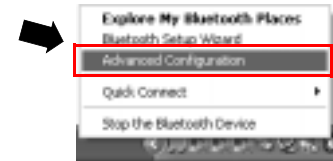 


Bluetooth
Bluetooth
Bluetooth



QMusic
CD MP3 MP3 CD
QMedia Bar

 QMusic

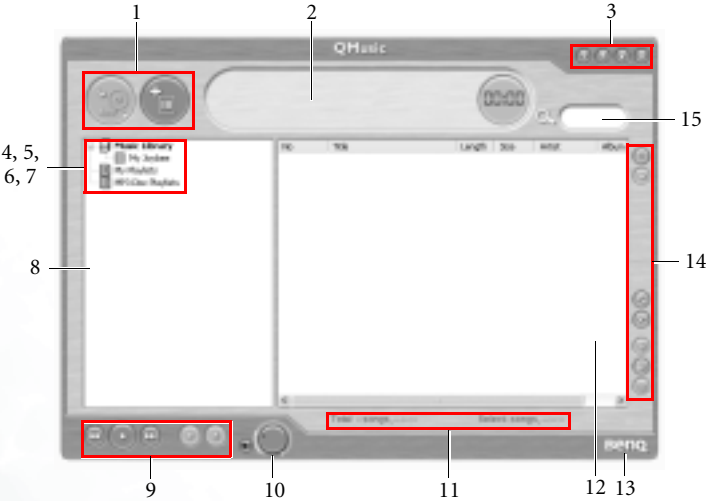

	/	
1		QMusic CD
2		
3		QMusic
4		
5	Joybee	Joybee
6		

7	MP3	CD MP3
8		CD
9		
10		
11		
12		
13	QMusic	QMusic
14		QMusic
15		

CD

- 1. CD Joybook
- 2. CD
- 3. CD

Music Library

- 1.
 - 2.
 - 3.
 - 4.
 - 5.
 - 4
- OK
- Open



CD

MP3

1. CD Joybook

2. CD

3. 

Album

QMusic

New

4.

Change playlist name

MP3

CD



MP3

CD

CD-

1. CD-

2.

MP3

3.



QMusic



Burn MP3 data disc


Photo Explorer

QMedia Bar



Photo Explorer

 Photo Explorer

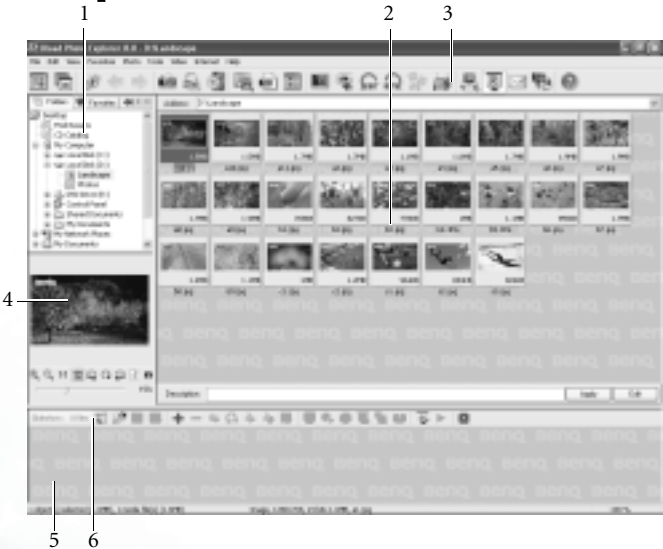

	/	
1		
2		
3		
4		/

5		
6		

- 1.
- 2.
- 3.

Viewer

Photo Explorer

/

- 1.
- 2.
- 3.
- 2 3
- 4.

Slideshow

Add

Move

Remove



Slideshow Options



Default duration

Control

manually with keyboard or mouse

- 7.

Slideshow Options



8.

•

•

9. **Show**



10.

Save
(*.*UES)



11.

•

10

(*.*UES)

Joybook

•

Package



Photo Explorer

•

Export



EXE
Photo Explorer

Web

Web

•

Screen Saver



1.

Calendar

Tools

2.

Calendar
- Portrait



Template
Landscape



3.

4.

5.

6.

Color

Text Preview

Font and Color
Item

Font and

7.

•

Print Setup

Print

•

Wallpaper

Windows

•

To Clipboard

8.

Close

Calendar



Help

Photo Explorer
Ulead Photo Explorer

Help

Ulead Photo Explorer

DVD/VCD

QMedia Bar



PowerDVD

 
PowerDVD

Joybook

DVD/VCD

PowerDVD

Power DVD

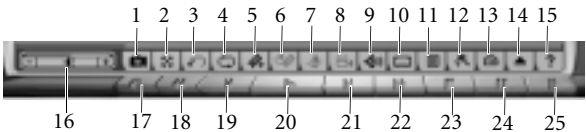

	/	
1		
2		
3	/AB	DVD AB
4		
5		DVD
6		
7	OK	OK
8		
9		
10		
11		DVD
12		
13		
14		
15		

16		
17		
18		
19		
20		
21		
22		
23		
24		
25		



	/	
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		

DVD

1.
- Power DVD
- DVD

2. DVD

OK

3.

Add

<Ctrl>

<Shift>

3.

DVD

 PowerDVD

DVD

DVD



4.

OK

PowerDVD

Help

DVD

1. Power DVD

DVD

Play

Select Source

2. DVD

3.

DVD

4.

VCD/SVCD

1. Power DVD

VCD/SVCD

Select Source

2. Play

VCD/SVCD

VCD/SVCD

3.

PowerDVD

.m3u .pls

PowerDVD

1. PowerDVD

Windows

2.

PowerDVD

3.

1. PowerDVD

Play

2.

Menu

Clear

Reset

Joybook

PoweDirector

7		
---	--	--

 
QMedia Bar



PowerDirector

PowerDirector


PowerDirector

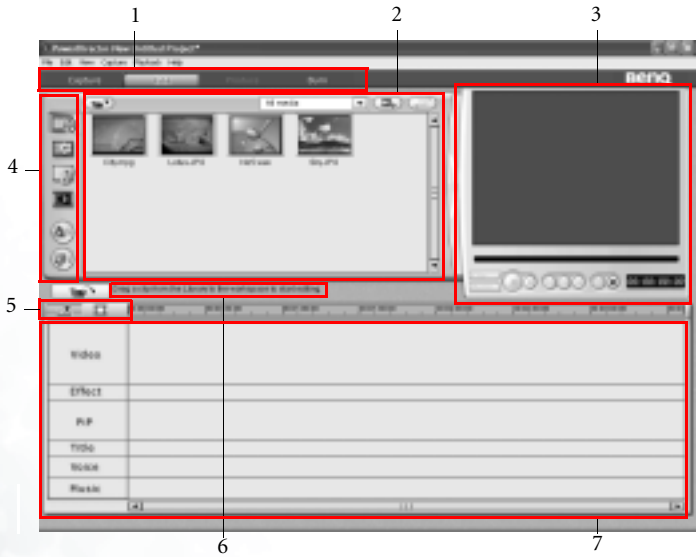

1		
2		
3		
4		
5		
6		



 PowerDirector

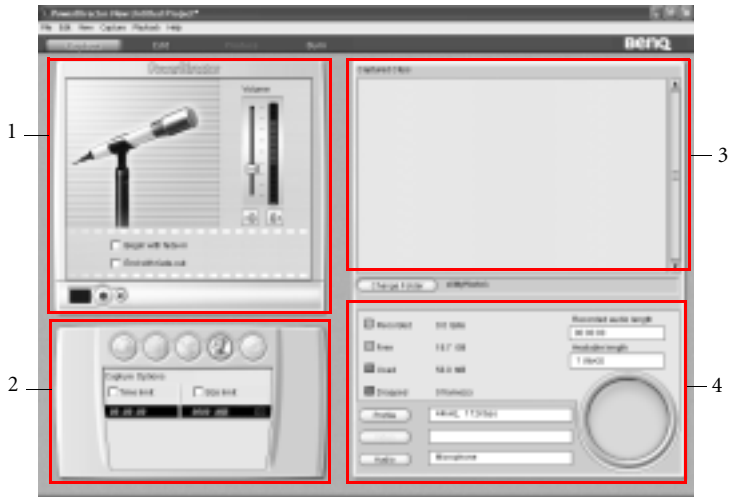

1		
2		
3		
4		

PowerDirector

PowerDirector

PowerDirector

DVD DVD CD CD
CD-R DVD+RW

1

PowerDirector



2. Filter



Load media file(s)

4.



Load a media folder

3.

OK

2

1.



2. Filter

All Media

Video

Image

3.



PiP

PiP



1.



2. Filter

Audio

All Media

3.



•

3

/ /

1.



2.



PowerDirector

Power Producer

Help

1.

2.

1.

2.



1.

2.

4

1.



2.



Next

3.

•

Output to

• Country/Video Format of Disc /

4. After production, make disc in Power Producer

Power Producer

Power Producer

5. Next

6.

7. Start

8.

Power Producer Express



9. CD-



Nero Express CD

Joybook

Nero Express

CD

QMedia Bar



Nero Express

1. CD

CD-

2.

CD

CD

 


Make Audio CD



3.


Add

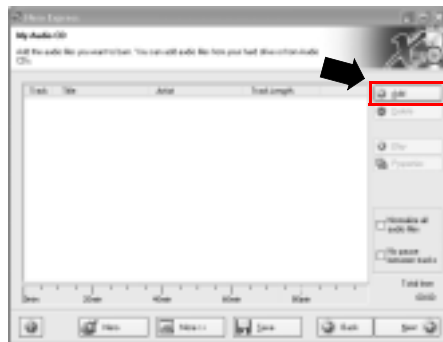

4.


CD

 Add

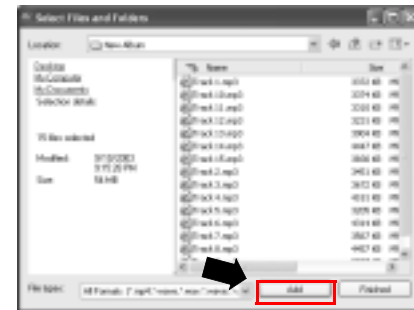

5.

 
Finished

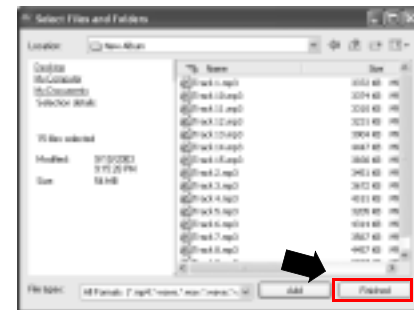

6.


Delete

 Next

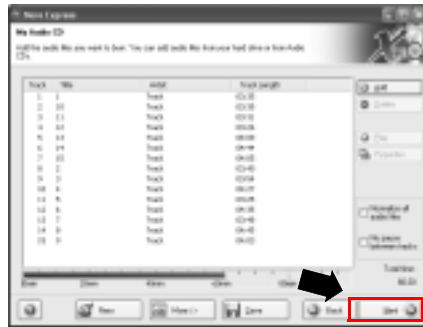


7.

 Burn

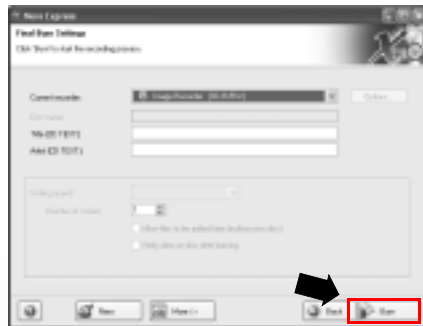

8. Nero Express

 CD

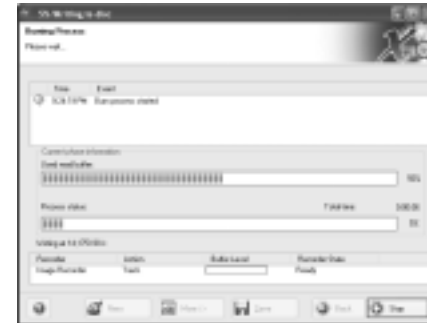


9.

OK



10.

 Next

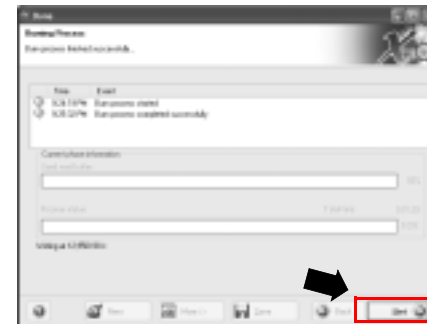

11.

CD

 
Cover Designer

CD

CD

CD
Nero Express

Exit

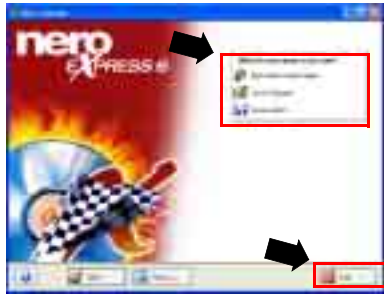

Nero Express
Help Topics

Nero Express



QCamera

QCamera

CD

QMedia Bar



 
QCamera



QCamera

WDM

QCamera

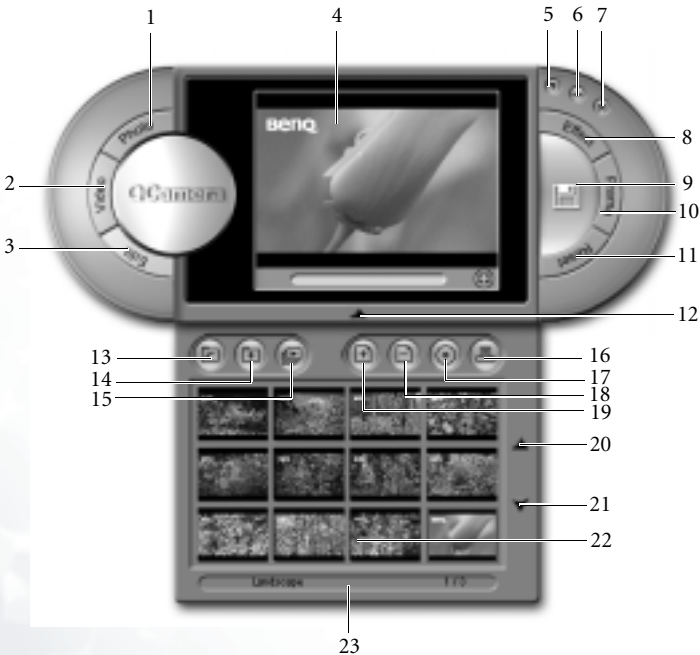

	/	
1		
2		
3		

4		/
5		
6		QCamera Windows
7		QCamera
8		Filter /
9		/
10		Frame /
11		/
12		
13		
14		
15		
16		
17		CD
18		
19		
20		
21		
22		/ /
23		/

1. **Video Mode**
2. **Capture**
- 3.

QCamera



1. **Photo Mode**
2. **Capture**
- 3.

QCamera

1. **Photo Mode**
2. **Filter**
3. Filter effect
4. Capture

Filter effect

1. **Video Mode**
2. **Filter**
3. Filter effect
4. **Capture**
5. **Capture**

Filter effect

1. **Photo Mode**
2. **Frame**
3. Filter effect

Frame effect

4. **Capture**

1. **Video Mode**
2. **Frame**
3. Frame effect
4. **Capture**
5. **Capture**

Frame effect

Reset

1. **New Album**
2. **OK**

1. **Add Photo**
2. **OK**
3. 2

CD



1. CD- CD- CD-
2. **Burn Album** Burn album
3. CD
4. **Burner** CD-

5. **Burn** Erase



QCamera

Help

QPower

QPower
Windows

Joybook

QPower

2.

-
-
-

QPower

QPower
Windows

Joybook



QPower

1. Windows
Programs

Start
QPower **QPower**

All

2.

Windows

QPower

3.



-
-

• Automatic Switch



1. Windows

QPower



2.

Windows
Automatic Switch

QPower



Normal

(Fn + F10)
Max. Battery Life

3

Max. Performance

1. Windows

QPower



1. Windows

QPower



2.

Configuration...

3. QPower



4. Profiles
Profile description


5. Settings

Settings

	StandbyTi mer (命)	Joybook	
	Hiber- nation ()	Joybook	
	Lid Close ()	Joybook	
	CPU Speed (CPU)	CPU	CPU

	Brightness ()		
	Turn-off Timer ()	Joybook	
	S c r e e n Saver()		
HDD	Turn-off Timer()	Joybook	
		Joybook	QPower
			Don't Care

 6.



DVD

1. Windows QPower
2. Configuration...
3. QPower
4. Profiles
Associated Applications Profile description

5.



QPower

6.

Available

7. Available



Current

Available
Available

Current

Available
(.exe)

Open



Current



8.



1.

Windows

QPower



2.

Configuration...

3.

QPower

4.

Profiles

5.



QPower

6.

Available

7.

Current



Available



8.





QPower



QPresentation




1. Joybook VGA QPresentation
Fn+F3 Joybook
2. Joybook
Joybook Joybook
QPresentation
1. QPresentation 
2. QPresentation

2. QPresentation Automatic Switch

QSurround



- SRS 3D Surround Joybook SRS Joybook
- QSurround
1. SRS 
 2. SRS



2. SRS Turn off SRS SRS

SmartAudio

- SmartAudio
- SmartAudio 
- 
- Microphone Noise Reduction
 - Echo Cancellatioin
- SmartAudio 

QMedia XS

QMedia XS CD VCD DVD
Windows QMedia XS   Joybook
QMedia XS

 **Fn+F1**

QMedia XS





QMedia XS

QMedia XS

Enter		
Esc		
E	Esc	DVD-ROM

DVD-ROM

DVD-ROM

CD

- 1. **Music**
- 2. Music DVD-ROM1
- 3.
- 4.

Setup QMedia XS **Language**
Setup
Video Output **Audio Output**
Restore default settings

5

 
Joybook
Fn + F3

 
Joybook




- Joybook BenQ
- Joybook 2 GB
- FAQ BenQ Joybook
1. BenQ
2. FAQ
3. Joybook
- (<http://support.BenQ.com>)

1. Joybook

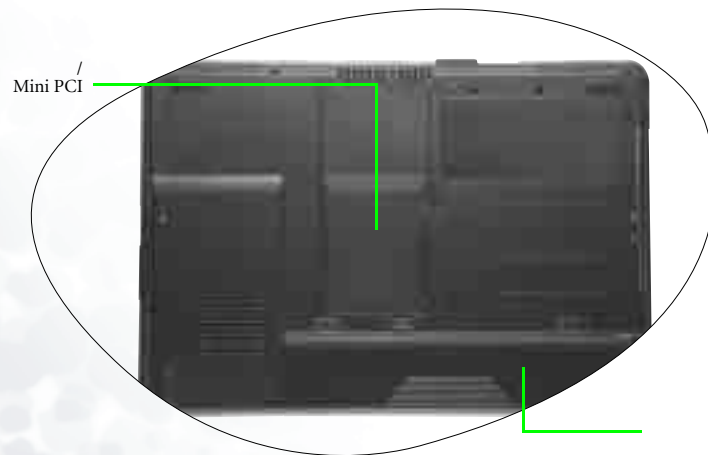


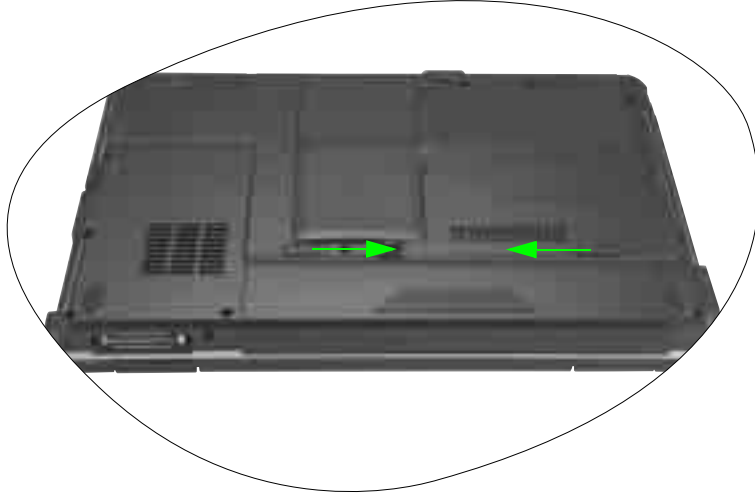

 
2.

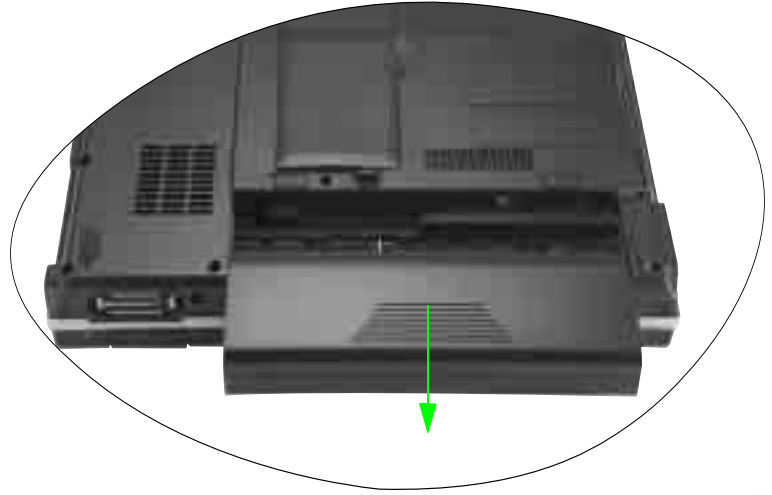

 3.

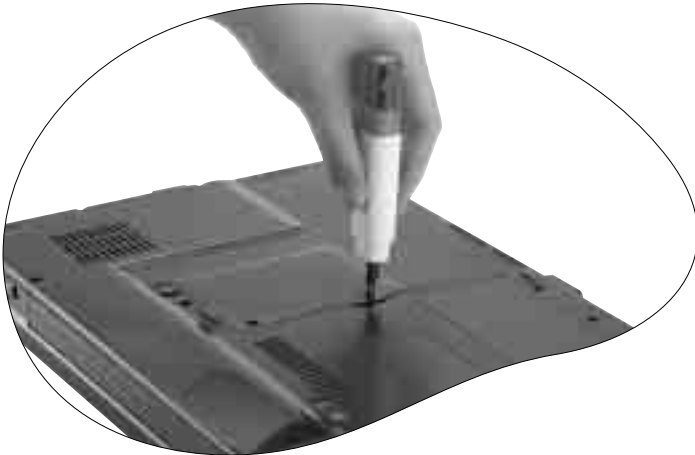

 4.

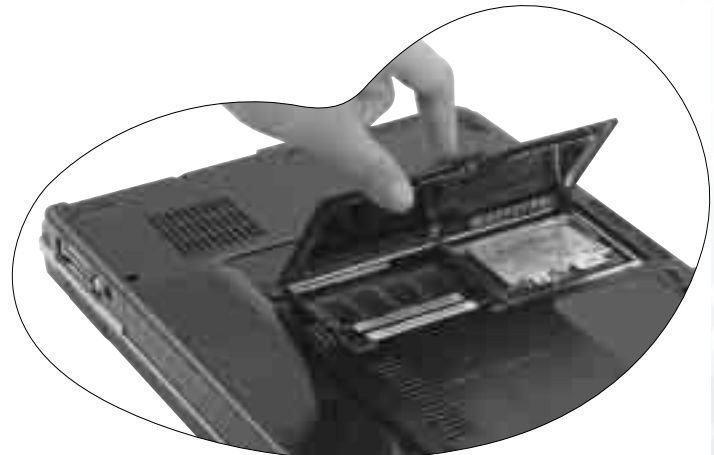


5.




6.



 7.

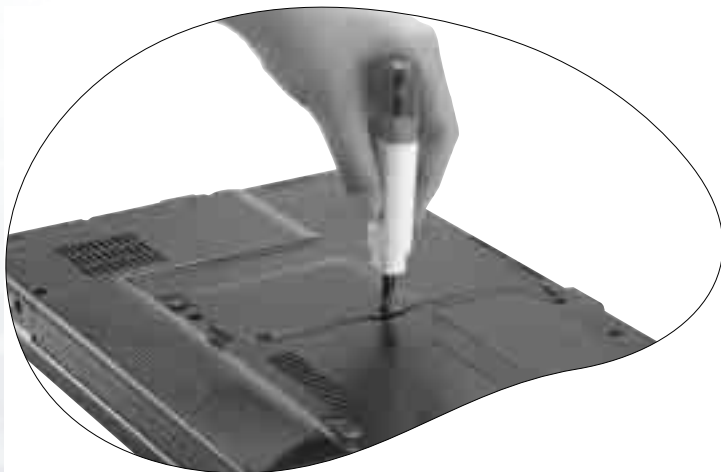

 8.

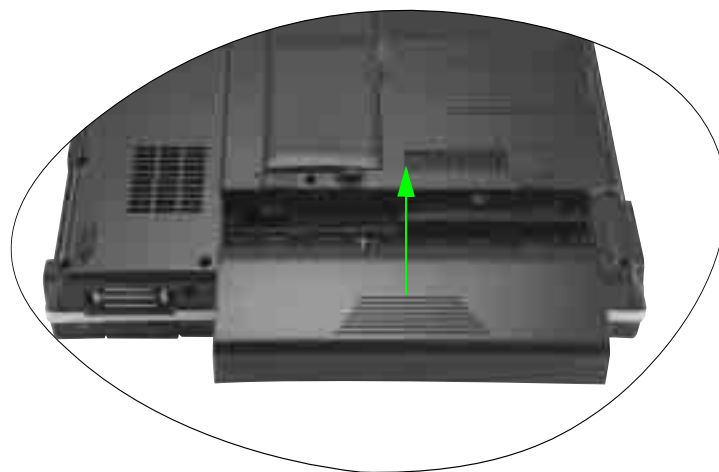

9.
Joybook



1. Windows
2. Joybook
3. CD



Windows

Windows

1. Joybook Windows
2. Recovery CD Disc 1
3. Windows

Joybook

1. Joybook
- 2.
- 3.

F10 to Recover

F10

Tab

Enter

(C:)
(C:)



C:

D:

(C:)

(D:)

Next
C:

D:

Next

FAT32
D:
C:

D:



D:

FAT32
3GB

D:

C: 6GB

D:
D:

D:

1. Start
2. C:

My Computer

Properties

D: MyBackup

Mysystem.pqi

(C:)

D:



• Joybook
D:

C: 60%

2 GB

PQSERVICE

BenQ

Joybook S52
100%

100MB

100MB
QMedia XS
QMedia XS



CD

- C: D:
- CD Recovery CD Disc 2
- CD
- CD
- 1. Joybook
- 2. Joybook BenQ Joybook
(POST) Esc
- 3. Recovery CD Disc 1 CD-ROM
- 4. h i Boot Menu CD-ROM/
DVD-ROM Enter
- 5. CD
- 6. CD
- / Recovery CD Disc 2

QMedia XS

1. DVD-ROM QMedia XS CD
2. QMedia XS

①
Joybook

BenQ

②
Joybook

Joybook

③
•

30

•
40%

Joybook

④
Joybook

Joybook

Joybook

•
Joybook

Joybook

CD

⑤
56K

56K / ISP
56K

⑥
Joybook Internet
MAC

⑦ Joybook
• Joybook
• Joybook
• Joybook
• Joybook

⑧ Joybook

1. My Computer Hardware Device Manager Properties
 2. Network adapters Joybook
 3. Properties Advanced
Link speed & duplex
 4. LAN Value
OK
- Fn+F12

⑨
• Joybook LAN Fn + F12
• Start Control Panel Internet Network
Network and internet Connections

Connections

Wireless Network Connections

Joybook

- SSID
-



View available wireless network

SSID



Low on Disk Space

Out of Disk Space



Windows

Joybook

1. **Start**
- 2.
- 3.
- 4.

100MB

200 MB

Windows XP

My Computer

Properties

Disk Cleanup



BenQ

(<http://Support.BenQ.com>)



Joybook

- Windows
-

Windows

1. **Start**
 2. **Open**
 3. **Startup**
 4. **OK**
- Startup

Run...

msconfig

Joybook

Startup

Windows

1. **Folder**
2. **Start**
3. **Programs**
- 4.

New

Programs

Open

Start Menu

Startup
Properties

Startup

Cut

- 5.
- 6.
7. 1
8. Startup
9. Joybook

Windows

Edit

Paste

Windows

Startup
1

- Recycle Bin

Recycle Bin

Empty

- Window
- 1. Start
- 2. Accessories System Tools All Programs Disk Cleanup

- 3. OK
- 4. Scan Disk Defragment

- 1. Start My Computer
- 2. Properties
- 3. Tools Check Now
- 4. Start Yes
- 6.

Windows XP

- 1. Properties
- 2. Defragment Now
- 3. Tools Defragment
- 4.

? USB Microsoft Windows XP
 USB

- 1. Start My Computer
- 2. Properties Hardware
- 3. Device Manager

- 4. Universal Serial Bus Controllers
- 5. USB Root Hub Properties
- 6. Power Management
- 7. Allow the computer to turn off this device to save power

- 8. USB Root hub 5 7
- 9. OK Device Manager

? /
 Joybook

CPU /

? Joybook u I o p j k l
 num lk (Number Lock)

?
 ?
 • Windows
 • Fn + F7
 • /
 •

? CD DVD
 ?
 • Joybook CD DVD
 •
 • CD DVD



LCD



Joybook
Joybook

BenQ

BenQ

-
-
-
-
-
-
-

Windows Media Player



1. Joybook
- 2.
3. Joybook
4. Joybook
5. Joybook
6. Joybook
7. Joybook $0^{\circ}C$ $50^{\circ}C$
- 8.
- 9.
10. BenQ
- 11.

1. / 4
2. 2 3
- 3.
- 4.
- 5.
- 6.
- 7.
8. Joybook
- 9.
- 10.

11.

Joybook

1. Joybook Joybook
2. Joybook
3. LCD

BenQ Joybook

BenQ Joybook
Joybook

(<http://support.BenQ.com>)

 
- Joybook
- Joybook
- Joybook
- Joybook
- Joybook

BenQ
BenQ

Joybook

BenQ

1. Joybook 24

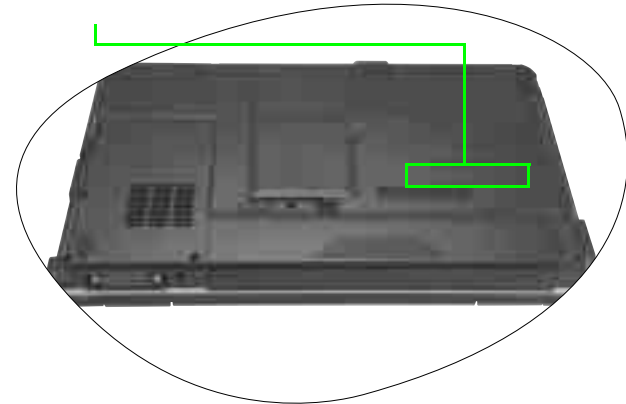

2. <http://global.BenQ.com/service>
3. **Register Now**