


Quickstart

Camera Controls

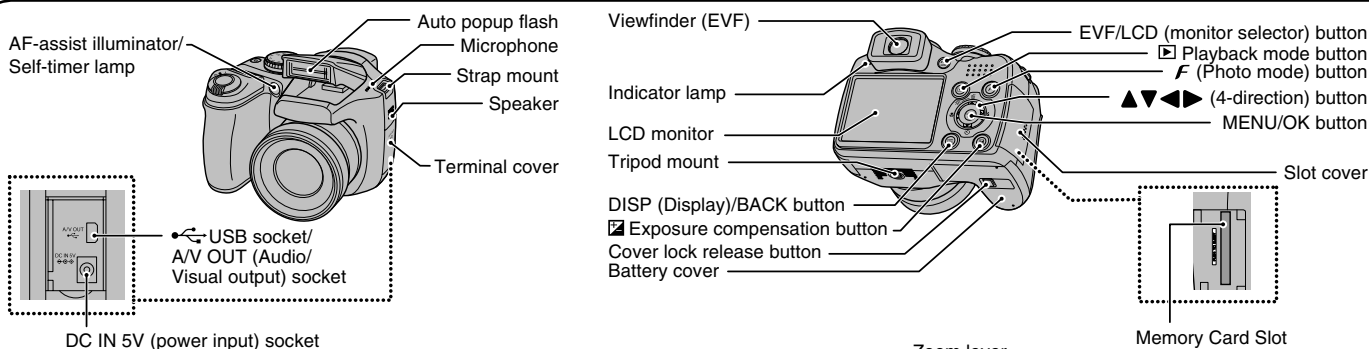

Still photography

AUTO Auto

Picture Stabilization

Natural light

Natural and Flash

SP1 Scene Position 1

Movie recording

Movie

SP2 Scene Position 2

P Programmed Auto

A Aperture-priority Auto

S Shutter-priority Auto

M Manual



Mode dial

FinePix S5700 / FinePix S700 has internal memory that can store images without Memory Card. Use a Memory Card (sold separately) for recording larger number of images.

BL00608-200(1) E

Picture Taking

Refer to Owner's Manual for more detailed instructions

A. Loading the Batteries

1.



 
Check that the camera is turned off before opening the battery cover. While pressing the cover lock release button, slide and open the battery cover.

2.



Load the batteries correctly as indicated by the polarity icons.

3.



Press on the battery cover to push the batteries down. Slide the cover closed.

B. Setting up the Camera

1.



Slide the Power switch to turn the camera on in Photography mode.

2.



言語/LANG. screen appears on the screen.

3.



 
Press ▲, ▼, ◀, or ▶ to select the language.

4.



Press MENU/OK to confirm the setting.

5.



You can select your preferred date format.

6.

 


Press ◀ or ▶ to select Year, Month, Day, Hour, or Minute. Press ▲ or ▼ to correct the setting.

* Refer to the Owner's Manual for "Turning On and Off".

C. Taking Pictures

1.



Slide the Power switch and set the Mode dial to **AUTO**.

2.



Press the shutter button halfway for focusing a camera.

3.



Press the shutter button down fully to take a picture. The camera makes a "Click" sound and takes the picture.

D. Viewing the Images

1.



Press

2.



Press ◀ or ▶ to move through your images.

How to insert a Memory Card



Gold marking


Gold contact area

Gold marking

Gold contact area

Align the gold marking with the gold contact area, then insert an **xD-Picture Card** or **SD Memory Card** completely.


Viewing Images on your PC

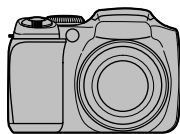

A. Installing Software

B. Connecting the Camera to your PC

C. Saving the Images

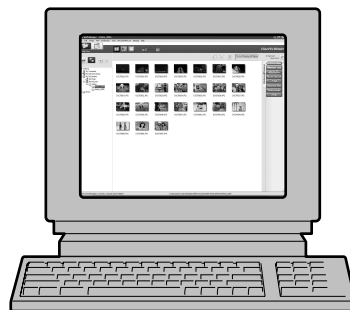

A. Installing Software

Do not connect the camera to your PC until the software installation is completed.



1. Turn on your PC and start up Windows.
 - Users of Windows 2000 Professional or Windows XP or Windows Vista should log in by using a system administrator account (e.g. "Administrator").
2. Quit all other active applications until no applications are shown in the taskbar.
3. Load the enclosed CD-ROM into the CD-ROM drive. The installer starts up automatically.
4. The Setup screen appears. Click the [Installing FinePixViewer] button.



5. After installation completed, press [Restart] button.

B. Connecting the Camera to your PC

1. Insert the Memory Card with images into the camera.
2. Connect the camera to your PC using the USB cable.

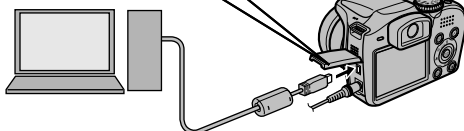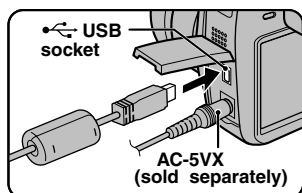

3. Press holding about 1 second to turn the camera on in Playback mode.


4. Windows 98 SE/Me/2000 Professional

FinePixViewer starts up automatically.

Windows XP/Vista

The "Found New Hardware" help message appears in the bottom-right corner of your screen. This message will close when the settings are completed. No action is required.

FinePixViewer starts up automatically.

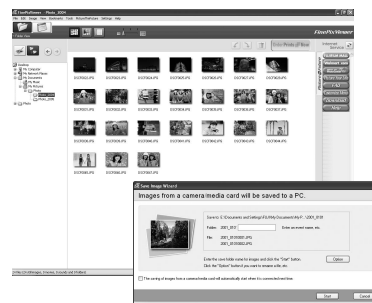


C. Saving the Images

1. The Save Image Wizard starts up. Click the [Start] button.
2. Check that the files are downloaded from the camera to your PC and that a folder with the date is created.
Ex. \My Documents \ My Pictures \ 2007_0331

D. Viewing the Images

1. Click the [Show List of Images] button.

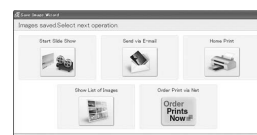

2. Select "Preview" in the View menu to display an enlarged image.

For more information

Refer to "How to use FinePixViewer" in the HELP menu, or "Software Installation" in the Owner's Manual, or visit Fujifilm "Q&A Search" in the following website.

(<http://www.fujifilm.com/products/digital/>)

For Macintosh users, refer to "Software Installation" in the Owner's Manual.