

OLYMPUS


Dock&Done

Thank you for purchasing this OLYMPUS Digital Photo Printer P-S100. This guide contains instructions for using this printer with other Olympus Dock&Done products. For details on operations and settings, refer to the supplied user's manual. For inquiries, contact the OLYMPUS service center listed in the user's manual.

Your new life of photography has begun.

What is Dock&Done?

Dock&Done is a total digital photography system that puts personal imaging into a single process. For example, by simply setting the digital camera on the cradle, new pictures are saved, photo printing is prepared, and the camera's batteries are recharged.

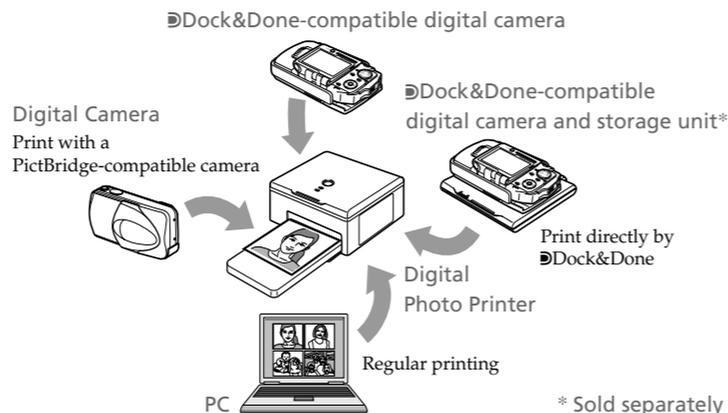

Tip

Availability of these models may vary from country to country.

User registration

To stay informed of important updates and news regarding your Olympus product, it is recommended to register your purchase. You can register by one of the following ways:

- Register online
Install the software from the supplied CD-ROM.
When restarting your computer after installation, the registration screen appears.
- Use the registration card*
Fill out the supplied registration card, and return it by mail.
* Not provided in some areas.

Printer setting

For printing, a paper-in tray and a ribbon cartridge are required (both supplied, as well as commercially available as replacements).

Setting the ribbon cartridge

- 1 Open the ribbon cartridge door.



- 2 Remove slack from the ribbon.

If the ribbon cassette has been used before, take in any ribbon slack before loading.




- 3 Insert the ribbon cartridge into the printer following the direction of the arrow, and then close the ribbon cartridge door completely.

- Push the cartridge until it clicks.
- If the ribbon cartridge door cannot be closed completely, take out the ribbon cartridge and then reinsert it.



Setting the paper-in tray

Open the paper-in tray door and insert the paper-in tray all the way.

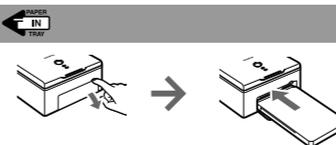



- Push the paper-in tray until it clicks into place.
- When closing the paper-in tray door, push the paper-in tray door tab in as you close the door until it clicks into place and locks.

Dock&Done printing

Go to "Printing with the PictBridge-compatible camera" for PictBridge printing. Go to "Printing with a PC" for PC printing.

Connecting with a Dock&Done-compatible digital camera


- 1 Set the print order (DPOF) for the image files to be printed on the digital camera.
- 2 Connect the USB cable to the cradle of the digital camera.
- 3 Connect the AC adapter and the power cord, then turn on the printer.
- 4 Set the digital camera on the cradle.
- 5 On the digital camera, select "PRINT" from the "PC/PRINTER" menu, then press the **OK** button. Image files with print orders are printed.

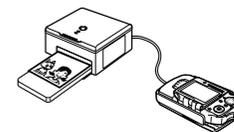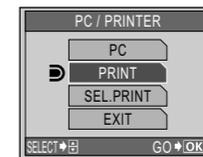


Tips

- If you do not set the print order, select "SEL.PRINT" to set printing in the PictBridge mode.
- For details on the print order (DPOF), refer to the reference manual supplied with the digital camera.

Connecting the Dock&Done-compatible digital camera to the storage unit

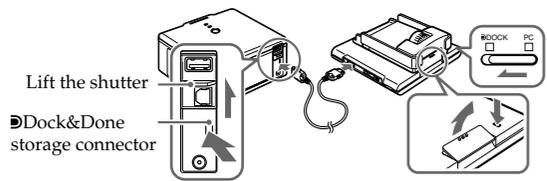

- 1 Set the print order (DPOF) for the image files to be printed on the digital camera.
- 2 Connect the printer and the storage unit with the Dock&Done cable KP16 (sold separately), connect the AC adapter and the power cord to the printer, then turn the printer on.
- 3 Dock the cradle of the digital camera to the storage unit.
- 4 Turn on the storage unit, then set the Dock&Done/PC mode switch to "DOCK."
- 5 Set the digital camera on the cradle.
The "DOCK MODE" menu is automatically displayed on the camera screen.


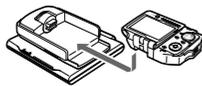


For details on connections, refer to the user's manual supplied with the storage unit.

Printing

On the digital camera, select the desired item from the "DOCK MODE" menu.

- 1 Press the / button to select the desired item.

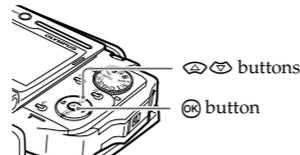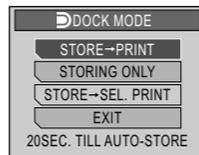

"STORE → PRINT"

Stores only the newly taken image files of the digital camera, and print the image files with the print order.

"STORING ONLY"

Stores only the newly taken image files of the digital camera.

"STORE → SEL. PRINT"* Stores only the newly taken image files of the digital camera, and the print setting screen appears.

"EXIT"

Closes the "DOCK MODE" menu without storing or printing.

* This is for PictBridge mode. For details on the print settings, refer to the reference manual supplied with the digital camera.

- 2 Press the button.



- "STORE → SEL.PRINT" is not available if print orders of image files are set.
- The storage unit starts storing image files automatically if no menu operation is performed within 20 seconds.

Cancel automatic print

- 1 Press the button on the digital camera during printing.
The confirmation screen appears.



- 2 Select "CANCEL," then press the button.

Printing is canceled, and the digital camera turns off automatically.




If you select "RESTART," printing will restart.

Printing with a PC

Use a commercially available USB cable (A-B type, less than 3 m (9.8 ft.)). Connect your PC to the printer.




For details, refer to the user's manual supplied with the printer.

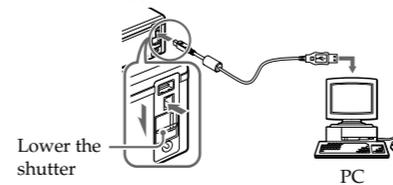

Printing with a PictBridge-compatible camera


Use the USB cable supplied with the digital camera for connection.

- 1 Connect the digital camera to the printer.

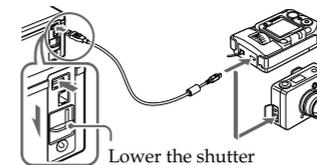


Lower the shutter

- 2 Control print operations using the digital camera.

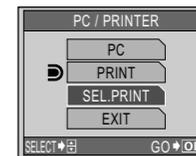

Dock&Done-compatible digital camera screen

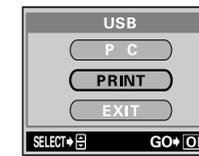

Sample digital camera screen



For details on PictBridge, refer to the instruction manual supplied with the digital camera.