



- ① Carry case with front panel stored inside
- ② Trim plate
- ③ Standard connector
- ④ Rubber cushion
- ⑤ Removal key x 2 pcs
- ⑥ Screw x 3 pcs

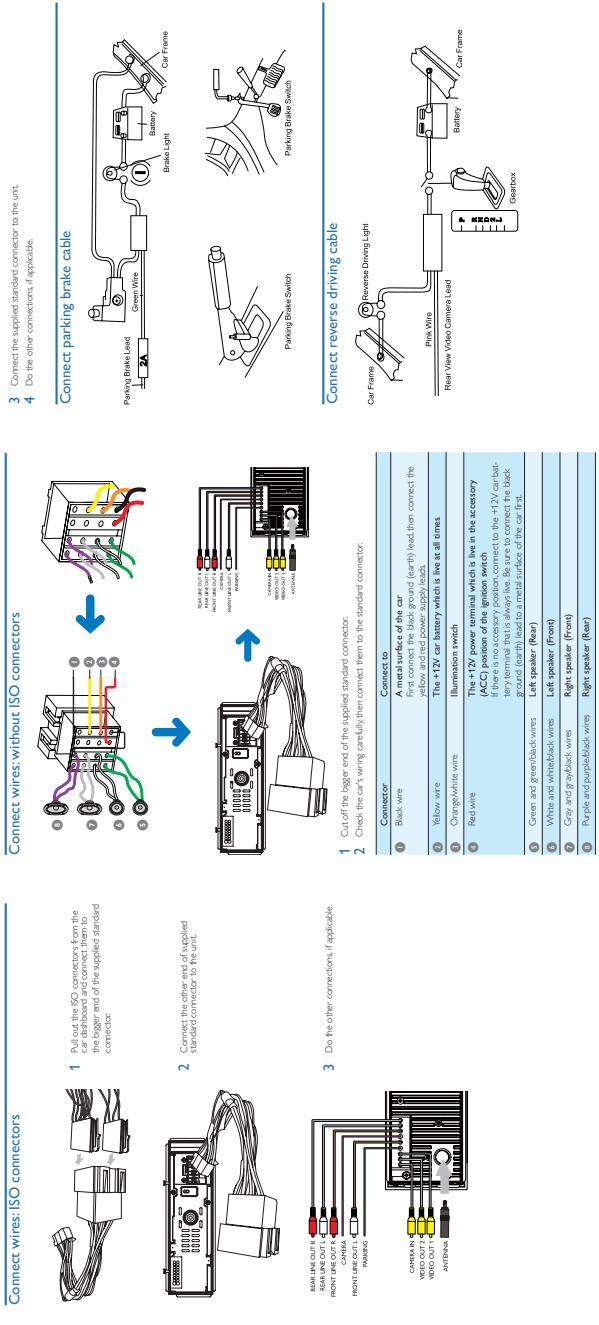

Mount in the dashboard

Note

- For proper operation of the DVD player, the chassis must be mounted within 20° degree horizontal.
- Ensure that the unit is mounted within this limitation.
- Check wire connection before you mount the unit into a car.
- If preset radio stations are lost when the ignition key is turned **OFF**, and then back **ON**, reconnect the red lead to the yellow ones.

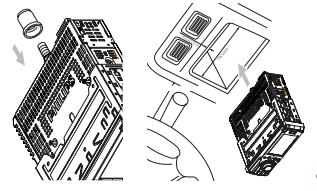


8 Reconnect the negative terminal of the car battery.

Detach the front panel

Note

- The front panel can be detached and taken with you to date theft.

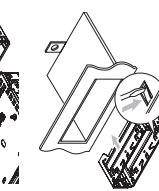

1 If the car does not have an on-board drive or navigation computer disconnect the negative terminal of the battery after you remove the car battery.

2 Ensure that the car dashboard opening is within these measurements.


3 Ensure that car dashboard opening is within these measurements.

4 Remove the two transport screws on the top of the unit.

5 Insert the sleeve into the dashboard and bend the tabs outward to fix the sleeve.

- If the unit is not fixed by sleeve, but by the supplied screws, apply this step.

Insert USB device

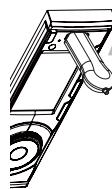

Insert SD/MMC card



Turn on

- 1 Turn the **①** knob to turn on the unit.
The unit plays the last listed program: DVD, Tuner, USB or SD/MMC Card (if there is USB device or SD/MMC card connected).
- 2 Turn off the unit by the **②** knob (for more than 2 seconds).
When the unit is off for over 3 minutes, it goes to a standby mode and displays screen saver.

Set clock

- 1 Press the navigation buttons to select [SETTINGS], then press **SEL**.
- 2 Press the navigation buttons to select [SYSTEM], then press **SEL**.
- 3 Select [SYSTEM], then press **SEL**.
- 4 Select [TIME MODE], then press **SEL**.
- 5 The time mode options are displayed:
 - [12 hour mode]
 - [24 hour mode]
- 6 Select a mode, then press **SEL**.
- 7 Press **◀▶** to return to previous menu and select [TIME ADJUST], then press **SEL**.
- 8 Press **◀▶** to enter clock, then press **SEL**.

Tune to a radio station

- 1 Press **SOURCE** to select Tuner.
- 2 Press **◀▶** to select band.
- 3 Press **◀▶** or **◀▶** to tune to a radio station manually.
- 4 Press **◀▶** or **◀▶** to search for radio station automatically.

1 Press **▲** to open the front panel.

2 Insert the disc into the disc slot with label side facing up.

3 Play resumes from the point where it was last stopped.

4 To remove the disc press the **■** button.


Close the front panel.

After a few seconds, the screen turns on.

For video discs if a menu appears press **◀▶** to select an item, then press **②** to start play.

For discs that contain MP3, WMA, or JPEG files, press **◀▶** to select a folder/folder/picture, then press **②** to start play.

Play discs

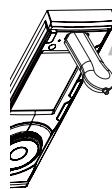

Attach the front panel


Note

- Before installing the unit, detach the front panel.


Mount the front panel



Mount in the dashboard

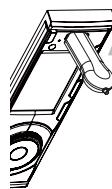

Insert USB device

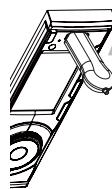

Insert SD/MMC card



© 2009 Koninklijke Philips Electronics N.V.
All rights reserved.
CD218-B-QG-V10