


Welcome

Quick start guide


- 1 Install
- 2 Connect
- 3 Enjoy



What's in the box

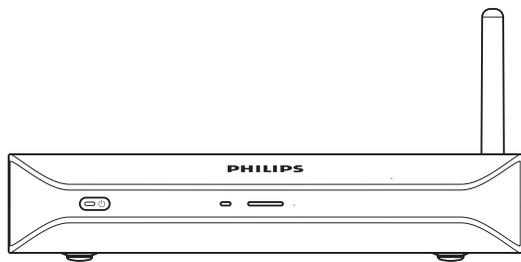


a. SLM5500
Wireless Multimedia Adapter

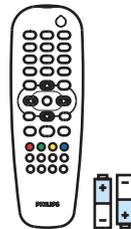


b1. Remote control
b2. 2x AA batteries




c. Quick start guide

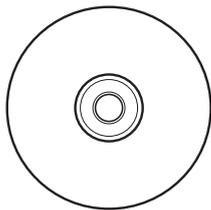

d. Installation CD

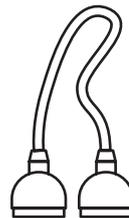

e. SCART cable

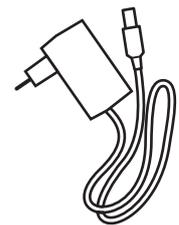

f. Power cable


What else you'll need



Television



Computer

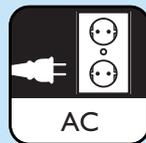


Power outlet




Wireless network

or

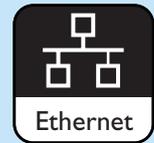

Wired network

Result after installation

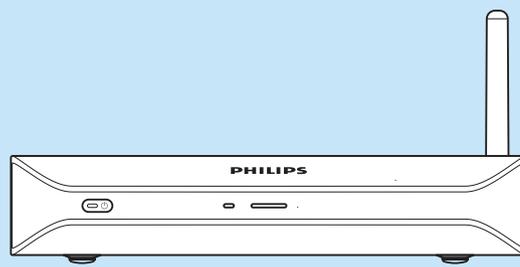


Optional components (not supplied)

Digital audio



Coaxial
audio cable


High-definition television

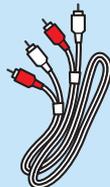

Audio cable
2x RCA



SCART to 3x RCA
adapter

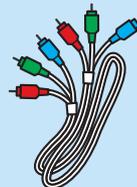

Video cable
3x RCA

Wired network



Network cable


1

Install

A Install the software

1. Put the **installation CD** (d) in the **CD or DVD drive** of the computer.
2. Click on **your preferred language**.
3. Click on **Install Philips Media Manager**.
4. Follow the **on-screen instructions**.


You will be asked to choose the folders in which you have put movies, music and pictures. Make sure that you choose the correct folders.

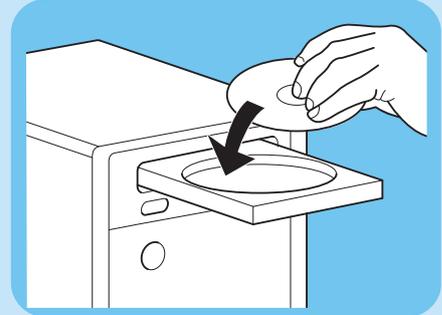

B Install the television connection

Option 1, good quality - SCART connection for all televisions

1. Take the **SCART cable** (e).
2. Set the **To TV** switch on the SLM5500 to **SCART** (left position).
3. Plug one connector into the **SCART** port on the SLM5500.
4. Plug the other connector into the **SCART** port on the TV.

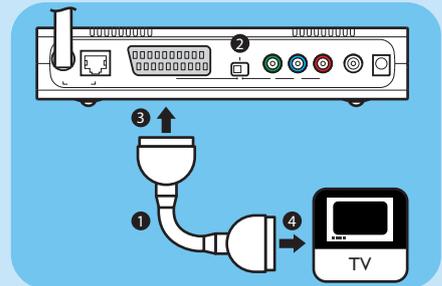


Option 2, best quality - high-definition televisions


Only for use with TVs that support the YPbPr connection (typically available on LCD or plasma TVs). The YPbPr connection is also known as YUV, 3x RCA (blue, green, red).

1. Take a **digital video cable (3x RCA)**, not supplied.
2. Set the **To TV** switch on the SLM5500 to **Y-Pb-Pr** (right position).
3. Plug the three connectors into the **Y, Pb and Pr** ports on the SLM5500.
4. Plug the other three connectors into the **Y, Pb and Pr** ports on the TV.

When you connect the YPbPr signal to a Philips TV, a VGA-to-YPbPr adapter can be required. The VGA-to-YPbPr adapter is supplied with the Philips TV.

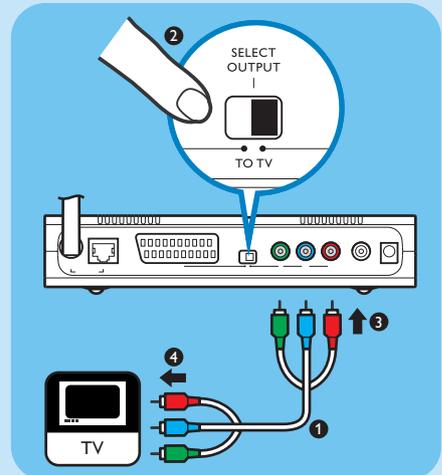


5. Take a **SCART to 3x RCA adapter** (not supplied).
6. Take a **stereo audio cable (2x RCA)**, not supplied.
7. Plug the **SCART to 3x RCA adapter** into the **SCART** port on the SLM5500.
8. Plug the **stereo audio cable** into the **SCART to 3x RCA adapter**.
9. Plug the other end into the **stereo input** on the TV.

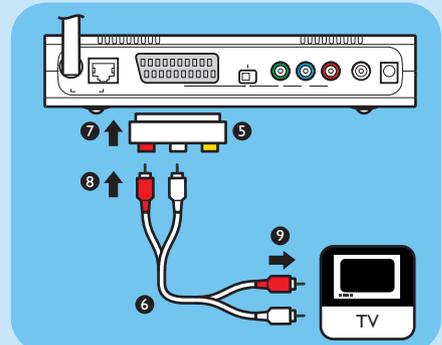

C Install the digital audio connection (optional)

1. Take a **coaxial audio cable** (not supplied).
2. Plug one connector into the **DIGITAL AUDIO** port on the SLM5500.
3. Plug the other end into the **DIGITAL AUDIO** input on the sound system.

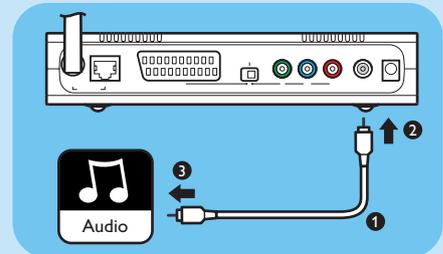

D Install the network connection


Option 1 - Wireless

1. Make sure that your wireless network devices are switched on.



Option 2 - Wired


1. Take the **network cable** (not supplied).
2. Plug one connector into the **WIRED NETWORK** port on the SLM5500.
3. Plug the other connector into the network.

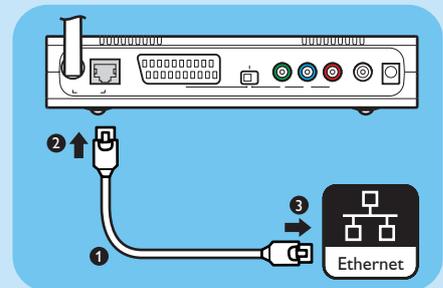

E Install the power connection


1. Take the **power cable** (f).
2. Plug the **connector** of the **power cable** into the **POWER** port on the SLM5500.
3. Plug the **power adapter** into the **power outlet**.

> The stand-by light on front of the SLM5500 comes on as red.

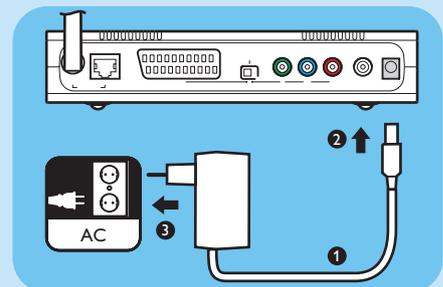

F Install the batteries

1. Open the **battery compartment** of the **remote control** (b1).
2. Insert the **batteries** (b2) correctly.
3. Close the **battery compartment**.

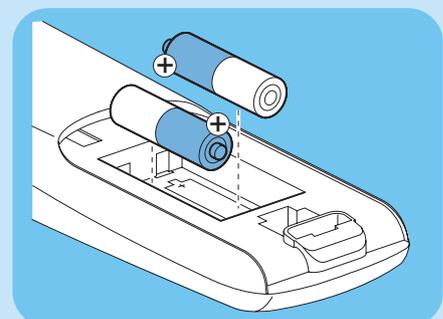


2

Connect


A Set the correct TV channel

1. Switch the TV on.
2. Set the TV to the correct external input. Refer to the user manual of your TV for details.

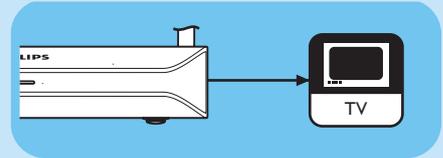

B Start the configuration wizard

1. Take the **remote control** (b1).
2. Point the **remote control** (b1) at the SLM5500 (a).
3. Push .
 - > The stand-by light on front of the SLM5500 comes on as blue.
4. Follow the **on-screen instructions**.

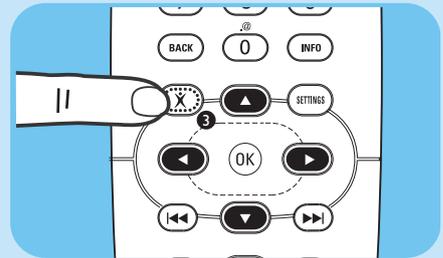

> You can navigate through the on-screen instructions with the remote control (b1).

Action

Button

Go up or down in a list



Confirm a choice



Go to the previous question



Show help information (when available)



> You can enter text in the configuration wizard with the remote control (b1).

Action

Button

Go through the available characters



Go to the next or the previous character



Confirm a choice



Go through characters . @ 0



Go through characters <space> _ - 1



Go through characters 2 a b c A B C



Go through characters 3 d e f D E F



Go through characters 4 g h i G H I



Go through characters 5 k l m K L M



Go through characters 6 m n o M N O



Go through characters 7 p q r s P Q R S



Go through characters 8 t u v T U V



Go through characters 9 w x y z W X Y Z



To go through characters, you must push the button several times quickly in succession.

3

Enjoy

A Share content on the computer

1. Click on **Start**.
2. **Either** - click on **Programs**, **Or** - click on **All Programs**.
3. Click on **Philips Media Manager**.
4. Click on **Philips Media Manager**.
5. **Either** - click **Music**, **Or** - click **Picture**, **Or** - click **Movies**.
6. **Either** - click **Add Music**, **Or** - click **Add Pictures**, **Or** - click **Add Movies**.
7. Click on **Add Files or Folders**.
8. Choose the files or folders that you want to add.

> The SLM5500 now has access to the content files that you shared.




B Basic navigation

1. Take the **remote control** (b1).
2. Point the **remote control** (b1) at the SLM5500 (a).
3. **Either** - push , **Or** - push .
4. Push  or  to go through the menu items.
5. Push  or  to confirm a choice.

Repeat steps 4 and 5 until you reach the content file that must be played.

6. Push  or  to start the content file.

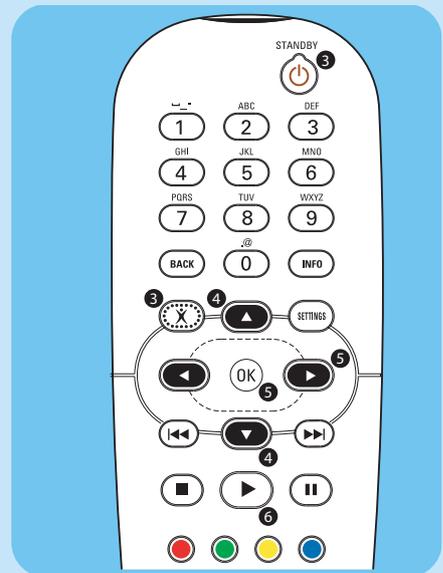

C Play protected content files

Make sure that the operating system of the computer is Windows® XP with Service Pack 2 or higher.

The procedures to start normal content files and protected content files are the same. Refer to 'B Basic navigation'.

Protected content files can have an effect on the signal of the audio and video connections.

Troubleshooting

Problem

No reaction to the supplied remote control

Tip

- Switch the SLM5500 on.
- Point the remote control at the SLM5500.
- Insert the batteries correctly.
- Insert new batteries in the remote control.

No video image on the TV screen

- Switch the TV on.
- Set the TV to the correct external input.
- Set the **To TV** switch on the SLM5500 to the correct position.
- Make sure that the TV supports the video signal of the SLM5500. Push the green button on the supplied remote control for 3 seconds to reset the video signal to the factory default values.

No sound signal from the loudspeakers of the audio system

- Switch the audio system on.
- Set the audio system to the correct external input.
- Increase the volume level of the audio system.

Cannot find the wired network

- Switch the other wired network devices on.
- Use a straight network cable (UTP 5e) to make a connection from the SLM5500 to the wired network.

Cannot find the wireless network

- Switch the other wireless network devices on.
- **Either** - make sure that the broadcast wireless network name (SSID Broadcast) is enabled on the base station or router, **Or** - enter the network name (SSID) manually. Copy the network name from the base station or router.

Cannot connect to the wireless network

- Enter the correct security code (WEP or WPA). Copy the security code (WEP or WPA) from the base station or router.
- Make sure that the firewalls in the wireless network give the SLM5500 access to the wireless network. For example, allow or unblock the MAC address of the SLM5500 on the network.

Cannot find the computer

- Start the Philips Media Manager.
- Connect the SLM5500 to the correct network.
- Make sure that the firewalls in the network give the Philips Media Manager access to the network. For example, allow or unblock the Philips Media Manager on the network.

No access to content files (music, pictures or movies)

- Make sure that the Philips Media Manager shares content files with the SLM5500 (refer to 3A).

Cannot play a content file

- Make sure that the SLM5500 supports the file format (refer to the user manual on the installation CD).
- Make sure that the Philips Media Manager shares the content file with the SLM5500.
- When you play a protected content file for the first time, the SLM5500 must have a connection to the Internet.

Cannot play Internet content

- Try again later. The Internet service can be down temporarily.
- Make sure that the SLM5500 supports the Internet format (refer to the user manual on the installation CD).
- Make sure that the firewalls in the network give the Internet service access to the network.

When you have a problem, make sure that the SLM5500 contains the latest firmware. Refer to www.philips.com/support for more information.



Need help?

User manual

Refer to the user manual on the installation CD.

Online help

www.philips.com/support

Philips Media Manager

Refer to the help of the Philips Media Manager.

Helpline

België/Belgique/Belgien	070 253 010 (€ 0.17)
Danmark	3525 8761
Deutschland	0180 5 007 532 (€ 0.20)
España	902 888 785 (€ 0.15)
France	08 9165 0006 (€ 0.23)
Ireland	01 601 1161
Italia	199 404 042 (€ 0.21)
Luxemburg/Luxembourg	26 84 30 00
Nederland	0900 0400 063 (€ 0.20)
Norge	2270 8250
Österreich	0820 901115 (€ 0.20)
Portugal	2 1359 1440
Schweiz/Suisse/Svizzera	02 2310 2116
Suomi	09 2290 1908
Sverige	08 632 0016
UK (United Kingdom)	0906 1010 017 (£ 0.15)

Specifications are subject to change without notice.

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

2005 © Koninklijke Philips Electronics N.V. All rights reserved.

www.philips.com

3122 337 03262