

ZTE G650/G651/G420/G120
GoTa Digital Trunking Phone
User Manual

Copyright © 2007 by ZTE Corporation

All rights reserved

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this manual without prior notice.

Release: V5.21

Manual number: 056584500335

09 04, 2007

Contents

Before Use	10
Introduction	10
Safety Instructions.....	10
Safety Warnings and Precautions	11
Parts Definition.....	15
Battery.....	17
Install the Battery	17
Remove the Battery.....	18
Charge the Battery.....	19
Insert and Remove R-UIM Card.....	20
Power on / off	21
Power on.....	21
Power off.....	22
Text Input.....	22
Interface Introduction	24
 Make and Receive PTT Call	 26
Make Private Calls	26
Direct Dial	27
Dial from Book	27
Dial from Call History	27
Make Group Calls	28
Direct Dial	28

Dial from Book	28
Dial from Call History.....	29
Receive PTT Calls.....	29
End PTT Calls	29
Exit from a Group Call	29
End a Group Call	30
End a Private Call.....	30
Broadcast Call.....	30
PTT Emergency Calls	31
Functions during PTT Calls	31
Group Members Status Query.....	31
Group Members Management.....	32
Upgrade Ordinary Calls to Emergency Calls.....	32
Downgrade Emergency Calls to Ordinary Calls.....	33
Switch the Sound.....	33
Make and Receive Normal Calls	34
Make Normal Calls	34
Direct Dial	34
Dial from Book	34
Dial from Call History	35
Receive Normal Calls.....	35
End Normal Calls	35
Functions during Normal Calls	35
Adjust the Volume.....	35
View the Book.....	35
Set the Mute	35

Switch the Sound.....	36
Three-Way Call.....	36
Phone Book	37
Personal Contact.....	37
Add.....	38
Search	39
View	40
Edit.....	41
Delete.....	41
Set Ringtone	41
Rename	41
Move	42
Memory Status.....	43
Delete All.....	43
Group's Book	43
Enter Group's Book	44
Add.....	44
View	44
Delete.....	44
Delete All.....	45
View System Contact.....	45
Memory Status	45
PTT Functions	46
Scan Function	46
Call Type	47

No-Disturbing	48
PTT Call Forwarding	48
Group Member Status Query	49
Missed PTT Call	49
Duty Number	50
PTT Call Number Identity Restriction	50
Call Alert Busy	51
Dynamic Management	51
Add / Delete	52
Set Priority	52
Set Talk Time	52
Emergency	53
SMS.....	54
Compose	54
Send out	54
Phrases	55
Save as Draft	55
Back	55
Inbox	55
View	56
Save Number	56
Receive New Message	56
Outbox	57
Drafts	57
Settings	57
Delete All	58

Preset Messages	58
Call History	60
Call Icons	60
View.....	60
Delete.....	61
Delete All	61
Save Number	61
Make Normal Calls.....	62
Make PTT Calls.....	62
Send Message	62
View phonebook information	62
Profiles	63
Activate	63
View.....	63
Personal Ringtone.....	64
Organizer.....	66
Calculator	66
Alarm Clock.....	66
Add.....	66
View / Edit.....	67
Delete.....	67
Turn off Alarm Ring	67
Set Alarm Ring	68

Calendar.....	68
View Event.....	68
Add Event.....	68
Goto	68
Delete.....	69
World Time	69
Stopwatch.....	69
General Time Counting.....	69
Record Multiple Time Records in the Counting	70
Settings	71
Phone.....	71
Call.....	73
Security	74
Default Reset	76
Appendix	77
Shortcut.....	77
Speed Dial	77
Quick Entry Function	77
Quick Return to Idle Mode.....	77
Delete the Current Input	78
Quick Set Profiles	78
Quick Entry into Menu	78
Quick Entry or Exit Power Save Mode during Calls ...	78
Quick Change Call Type in Idle Mode	78
Quick Search by First Letter of the Names in Book ...	78

Lock the Keypad	79
Earphone.....	79
PTT Operations with Earphone	79
Receive or End Normal Calls with Earphone	79
FallBack	80
Troubleshooting.....	80

Before Use

Introduction

Thank you for choosing ZTE G650 / G651 / G420 / G120 GoTa Digital Trunking Phone. Based on CDMA2000-1x technology, the mobile phone provides normal functions as well as PTT (Push-to-Talk) function.

The Mobile phone provides the following functions:

Group Calls	Provide one-to-many voice group call service in CDMA network service area with PTT functions;
Private Calls	Provide one-to-one voice call service in CDMA network service area with PTT functions;
Normal Calls	Provide traditional voice communication service based on CDMA network;
SMS	Receive, send and edit short messages;
Book	Store up to 300 entries of contacts and 70 groups of PTT group numbers;
Data Communication	Provide data services based on CDMA2000 -1X technology;

Safety Instructions

If your mobile phone is lost or stolen, notify your network service provider immediately to prevent unauthorized use. Meanwhile you need to provide the service provider with your phone's ESN, which can be found on the back of the mobile phone after the battery is removed. Keep the ESN properly for future use.

To protect your mobile phone against abuse, take the following precautions:

- Set a PIN code (if your mobile phone supports R-UIM card) and modify it from time to time.
- Don't leave your phone on the seat or other visible places when you are away from your car. Carry the phone or lock it in the trunk.
- Set call restriction.

Safety Warnings and Precautions

Precautions for using the phone

- Do not use your mobile phone near TV set, radio or office automated equipments to avoid mutual interference.
- Power off your mobile phone as required when you are on airplane or in hospital. As mobile phones may affect the normal operation of electronic devices or medical apparatus, you are required to follow the mobile phone usage regulations in the above cases.
- Do not use your mobile phone in the place where there is weak signal or near the high-precision electronic devices. Radio wave interference may cause malfunction or other problems to electronic devices, especially medical devices such as audiphone and pacemaker, fire detector and auto-control equipments such as auto-door. For details on the influence that your mobile phone would probably have upon pacemaker or other medical devices, consult the manufacturer or the local distributor.
- Do not use your mobile phone in gas station. Power off your mobile phone near fuels or chemicals.

- Occasionally, using phone in the vehicles of certain models might bring negative effect to the internal electronic devices. In this case, do not use your mobile phone to ensure safety.
- Keep your mobile phone away from magnetic objects such as magcards because radio wave of your mobile phone may erase the information stored in floppy disks, deposit cards or credit cards.
- Protect your mobile phone against dampness. Water or other kinds of liquid entered your mobile phone might cause overheating, creepage or failure.
- Do not disassemble or reassemble your mobile phone because this might cause damage, creepage or circuit failure.
- Do not use your mobile phone if your antenna is damaged. It may cause body injury.
- Do not user your mobile phone while driving, and follow the local corresponding rules and regulations.
- Keep the phone out of the reach of children. The phone may cause body injury if used as a toy.
- Do not press keys with needles, pen points or other sharp objects to avoid damage or misoperation.
- Keep tiny metal objects such as thumb pins away from the phone. The phone speaker is magnetic and thus magnetizes those metal objects, which may hurt people or damage the phone.
- Use the original accessories or those authorized by ZTE. Using any unauthenticated accessories may affect your mobile phone's performance, damage your phone or even cause danger to your body and violate related national regulations about telecom terminals.

Precautions for using the battery

- The battery life is limited, and becomes shorter and shorter if the battery is charged frequently. If the battery fails to be charged several times, it shows the battery is worn out and needs to be replaced.
- Do not throw the battery into household garbage but dispose it as required in specified place.
- Do not throw the battery into fire. It might cause fire or explosion.
- Do not press the battery with great force. It might cause battery leakage, overheating, explosion or fire.
- Do not disassemble or reassemble the battery. It might cause battery leakage, overheating, explosion or fire.
- Replace the battery that gets heated, changed in color or deformed during use, charging or storage.
- Prevent the battery against dampness, otherwise it might cause overheating, smoldering or erosion.
- Do not expose the battery in direct sunshine, around a car or near any place where there is high temperature, but place it in ventilated and cool places. Otherwise it might cause leakage or overheating. This might affect the battery's performance and shorten its life.
- Do not keep charging the battery continuously for more than 24 hours.

Precautions for using the charger


- Use the power voltage between 110VAC and 220VAC. Using the voltage beyond the range may cause leakage, fire or damage to the phone and charger.
- Do not short-circuit the charger, otherwise it might cause electric shock, smoldering or damage.

- Do not charge in the places where there is direct sunshine, dampness, dust or vibration, or near electric apparatus such as TV set, radio.
- Do not use the charger with damaged power cables. It might cause fire or electric shock.
- Do not place water containers near the charger to avoid water splashing. If water or any other kind of liquid splashes on the charger, immediately remove the charger from the power socket to avoid overheating, fire, leaking, electric shock or failure.
- Do not disassemble or reassemble the charger. It might cause body injury, electric shock, fire or damage.
- Do not touch any charger, power cable or power socket with wet hands to avoid electric shock.
- Do not place heavy objects onto power cables or refit power cable. It might cause electric shock or fire.
- Remove power plug from the socket before cleaning and maintenance.
- Clean the accumulated dusts from the power socket in time.
- Hold the charger rather than pull the power cable while removing the plug from the socket. Otherwise it might cause damage, electric shock or fire.

Cleaning and maintenance

- Clean the phone, battery and charger with a soft dry cloth.
- Do not clean the phone with the liquor such as alcohol, dilution agent or benzene.
- Clean the socket at intervals because a dusty socket might cause disconnection, power failure, or even charging failure.

Parts Definition

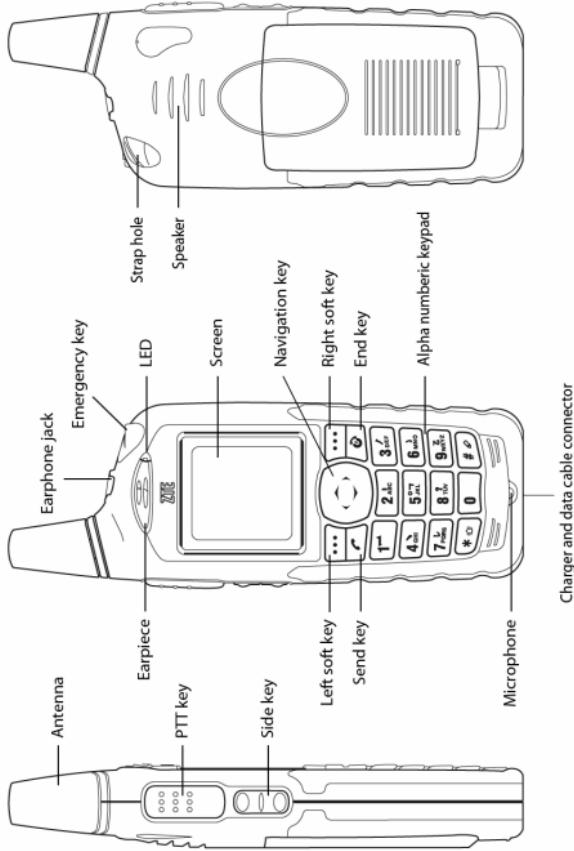

Key Definition

Name	Description
PTT Key	Used to make PTT calls. During the conversation, hold the key to speak, and release it to listen.
Side Key	Used to adjust volume, or as shortcut to set Call Type. Shortcut to view PTT call history. The key to view the current scan group. The key to set normal scan.
Left Soft Key	Correspond to the words at the bottom left corner of the screen. Used to view menu or confirm.
Right Soft Key	Correspond to the words at the bottom right corner of the screen. Used to return/exit, or as shortcut of book.
Navigation Key	Used to move up/down/left/right the highlight/contents/cursor.
Send Key	Used to dial or receive the numbers, or as shortcut to view call history.
End Key	Used to power on/off, or end a call.
0~9 Alphanumeric keypad	Used to input numbers or characters.
* Key	Used to input *, or as shortcut to switch between profiles.
# Key	Used to input #, or as shortcut to switch between input methods, or lock the keypad.


Battery

Install the Battery

1. Insert the battery into the slot of the phone, shown as below:




2. Push the back cover in the direction indicated by the arrow until you hear the sound of "KA".

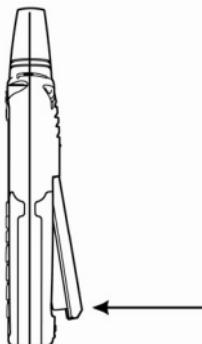


Remove the Battery

1. Push the separation button on the back of the phone in the direction indicated by the arrow.

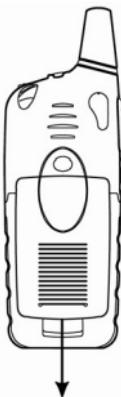

2. Pull the battery in the direction indicated by the arrow and take out the battery.

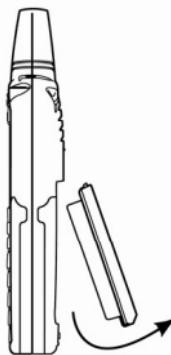

Charge the Battery

The new battery is not fully charged, so please fully charge it before use.

1. Insert the charger plug into the bottom of the phone (the side with arrow is upturned).



2. Connect the charger to 110V/220V electrical outlet.

Note	Please press the button on the charger plug before pulling it out.
-------------	--



Insert and Remove R-UIM Card

Consult your network service provider whether your phone needs R-UIM card or not.

Note	Skip this section if your phone does not need R-UIM card.
-------------	---

If R-UIM card is required, then your network service provider will provide a valid R-UIM to your mobile phone. At this point, R-UIM card is the key to CDMA network. New R-UIM card is generally put into a piece of card, which should be taken out carefully before installation. Follow the steps below:

1. Power off your phone to remove the charger and battery.
2. Insert R-UIM card into the socket, show as below:



3. Please power off your phone to remove the charger and battery before taking out R-UIM card as shown in the figure below:



Power on / off

Power on

Press and hold until you see power-on animation on the screen.

If your phone supports R-UIM card and no R-UIM card is inserted, then your phone will prompt with "UIM card not detected". At this point, you need to power off your phone to reinsert a valid R-UIM card, and then power on.

If your phone supports R-UIM card and the PIN code of R-UIM card is set, your mobile phone requires inputting PIN code when powered on. Enter correct PIN code, and press left soft key to confirm.

If you set **Lock Phone as Power-on** in **Security**, the mobile phone will prompt with "Verify Password" when powered on. Enter correct password to unlock the phone.

Note	The initial password is “0000”. The PIN code of R-UIM card will be sent to you with R-UIM card together. If not, please consult your network service provider. Generally, the default PIN code is “1234”, and it's recommended to change it as soon as possible.
-------------	--

Power off

Press and hold  until you see power-off animation on the screen. The screen becomes black after the phone is powered off.

Text Input

You could enter characters, numbers and symbols through standard alphanumeric keypad.

To enter numbers, directly input digits in number mode;

To enter characters, press  key to select the input method;

To enter symbols, press  key;


Icon descriptions for Input Methods

Icons	Descriptions	Icons	Descriptions
 abc	Lowercases	 ABC	Capital Letters
 Abc	Intelligent English Input Method	 123	Numbers
 拼音	Pinyin Input Method	 笔画	Stroke Input Method

Descriptions

Input Capital Letters /Lowercases	<p>1. Select “ABC”/ “abc” input method; 2. Each alphanumeric key corresponds to multiple letters. Press the appropriate alphanumeric key once to input the first letter that appears on the key, twice for the second letter, and on the analogy of this.</p> <p>Continuously Press: After you press a key, firstly a black block appears at the cursor, and then an upright line. “Continuously Press” means pressing the key before the upright line appears. e.g.:</p> <p>To enter letter “a”, press [2 ABC] key once;</p> <p>To enter letter “c”, press [2 ABC] three times continuously;</p> <p>To enter letter “aa”, press [2 ABC] once, and press [2 ABC] again after the upright line appears at the cursor.</p>
Input Symbols	<p>1. Press [* #] key to input symbols; 2. Press the appropriate alphanumeric key to input the symbol that appears on the key.</p>
Input Numbers	<p>Press the appropriate alphanumeric key to input, or press the appropriate alphanumeric key to input after selecting number input method;</p>
Input Space	<p>Press [0] to input the space in Abc mode.</p>
Pinyin Input Method	<p>1. Press [#] key to select Pinyin Input Method; 2. Press the appropriate alphanumeric key to input Pinyin; 3. Use ◀ ▶ key to select Pinyin; 4. Use ▲ ▼ key to view the characters; 5. Press [OK] and the appropriate alphanumeric key to input Chinese character.</p>
Stroke Input Method	<p>1. Select Stroke Input Method; 2. Press the appropriate alphanumeric key to input strokes; 3. Use ▲ ▼ key to view the characters; 4. Press [OK] and the appropriate alphanumeric key to input Chinese character.</p>

Interface Introduction

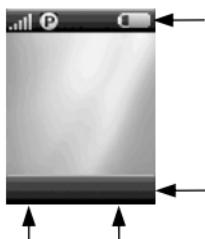

Descriptions of Status Bar

Icons	Descriptions
	Network Signal Strength
	PTT high performance
	PTT high performance and pre-emptive
	PTT high performance and no-disturbing
	PTT high performance, pre-emptive and no-disturbing
	PTT normal performance and pre-emptive
	PTT normal performance and no-disturbing
	PTT normal performance, pre-emptive and no-disturbing
	Sound comes out from earpiece
	Sound comes out from speaker
	In Roaming
	New Short Message; Flicker means that inbox is full, and un-useful short messages should be deleted

	Incoming Call Vibration Status
	Silence mode
	Alarm Clock is set
	Battery Level
	FallBack

Make and Receive PTT Call

Adopting the method of Push-to-Talk, PTT calls are different from normal calls. PTT calls could be classified into **Group Calls** and **Private Calls**.

PTT Private Calls provide one-to-one voice call service in CDMA network service area with PTT functions. Each PTT mobile phone has one unique PTT number, namely PTT private number. Dialing this number in PTT mode could make PTT private calls. You could save and view this number in **Personal Contact**.

PTT Group Calls provide one-to-many voice group call service in CDMA network service area with PTT functions. Each group has a unique group number to differentiate with other groups. Dialing this number in PTT mode could make PTT group calls. You could view the number in **System Contact** and **User Contact**.

According to call priority levels, PTT calls could be classified into Emergency Calls, Pre-emptive Priority Calls and Ordinary Calls, among which Emergency Calls have the highest priority, and Pre-emptive Priority Calls have higher priority than Ordinary Calls. (Please refer to “Call Type” in section “PTT Functions” for the setting methods)

Make Private Calls

You could make privates calls in any of the following three ways:

1. Direct dial;
2. Dial from book;
3. Dial from call history.

Direct Dial

1. Enter the desired PTT private number in idle mode;
2. Hold PTT key  to start dialing, and talk after hearing a beep sound;
3. Release PTT key  to release the floor. Listen to the other side to speak at this point.

Dial from Book

1. Press **Book** in idle mode to access the phone book, and select **Personal Contact** ;
2. Press **▲/▼** key to select your desired contact;
3. Hold PTT key  to start dialing, and talk after hearing a beep sound;
4. Release PTT key  to release the floor. Listen to the other side to speak at this point.

Note	If you can't make a call after holding PTT key  , then it means that there is no PTT private number for your current contacts.
-------------	---

Dial from Call History

1. Press the upside of side key  shortly in idle mode to display PTT calls list; or press **Menu** and Select **Call History** to enter;
2. Press **▲/▼** key to select your desired private call record;
3. Hold PTT key  to start dialing, and talk after hearing a beep sound;

4. Release PTT key  to release the floor. Listen to the other side to speak at this point.

Make Group Calls

You could make group calls in any of the following three ways:

1. Direct dial;
2. Dial from book;
3. Dial from call history.

Direct Dial

1. Enter “#” firstly, and then dial the desired group numbers in idle mode;
2. Hold PTT key  and talk after hearing a beep sound;
3. Release PTT key  to release the floor. Listen to the other members to speak at this point.

Dial from Book

1. Press **Book** in idle mode to enter in phone book interface;
2. Press **▲/▼** key to select **System Contact / User Contact**, and then press **Select** to enter; press **▲/▼** key to select the desired group;
3. Hold PTT key  and talk after hearing a beep sound;
4. Release PTT key  to release the floor. Listen to the other members to speak at this point.

Dial from Call History

1. Press the upside of side key  shortly in idle mode to display PTT calls list;
2. Press **▲/▼** key to select your desired group call record;
3. Hold PTT key  to start dialing, and talk after hearing a beep sound;
4. Release PTT key  to release the floor. Listen to the other members to speak at this point.

Receive PTT Calls

When receiving PTT calls, users will firstly hear a short beep sound, and then listen to the other members to speak without any operation. After the other members finish speaking, hold PTT key  and speak after hearing beep sound. Release PTT key  to release the floor, and at this point listen to the other members to speak.

End PTT Calls

Exit from a Group Call

During the conversation, you could exit from a group call, while others continue the conversation.

Operation Method

Press **Option** and select **Exit Call** in PTT group call, or press  key to exit from PTT group call.

End a Group Call

During the conversation, all members in the group will exit from a group call after it is ended.

Operation Method

Press **Option** and select **End Call** during the conversation;

Note	Only the group caller or group head has the authority to end a group call.
-------------	--

End a Private Call

Press  key to end a private call, or press **Option** and select **End Call** to end it during the conversation.

Broadcast Call

Broadcast Call is an unilateral call. It broadcasts the call to the group members and the group members can receive the call but can't answer the call.

Operation Method

1. Enter “ ## ” in idle mode;
2. Enter the group number of the call;
3. Hold PTT key  to start the broadcast call and talk after hearing a beep sound;

PTT Emergency Calls

With the highest priority, emergency calls could be made through the emergency key. Select **PTT Functions** and then **Emergency** to set emergency call numbers (please refer to section "Emergency" for details).

Functions during PTT Calls

Group Members Status Query

Offline Members Status Query

During PTT calls, you could inquire the status of those uncalled members (Offline Members) in the group.

Operation Method

1. Press **Option** and then **OfflMembStat** to view the list of offline members;
2. Press **▲/▼** key to turn pages;
3. Press **Back** to return to the call interface.

Group Members Status Query

During PTT calls, you could inquire the status of all members in the current group.

Operation Method

1. Press **Option** and then **GrMembStat** to view the number of both online and offline members;
2. Select **Detail** and then **Online Member / Offline Member** to view the detailed list of members;
3. Press **Next** to turn pages;

4. Press **Back** to return to the call interface.

Note	The icons in different colors in front of the member names in the list represent different statuses.
-------------	--

Icons	Descriptions
	Power off
	Away
	Call Forwarding
	No-disturbing
	Out of service area
	Call restricted

Group Members Management

During PTT calls, you could manage the members in the group.

Operation Method

Press **Option** and then **Dyna Mgmt** to perform corresponding operations
(For details, please refer to section “Dyna Mgmt”)

Upgrade Ordinary Calls to Emergency Calls

During PTT calls, press **Option** and then **Upgrade Call**.

Downgrade Emergency Calls to Ordinary Calls

During PTT calls, press **Option** and then **Downgrade Call**.

Switch the Sound

During PTT calls, you could receive the call either from the speaker or from the earpiece.

During PTT calls, press **Option** and select **To Speaker** or **To Earpiece**.

Make and Receive Normal Calls

Normal calls indicate CDMA traditional voice phone calls you normally dial.

Make Normal Calls

You could make normal calls in any of the following three ways:

1. Direct dial;
2. Dial from book;
3. Dial from call history.

Direct Dial

Enter the desired phone number in idle mode and press  key to dial it.

Dial from Book

1. Press **Book** in idle mode, and select **Personal Contact**;
2. Press **▲/▼** key to select your desired contact;
3. If there are multiple numbers for this contact, press **◀/▶** key to switch between different numbers;
4. Press  to dial the number covered by the highlighted bar.

Note	If the current number is a short PTT private number, pressing  key will not dial this number.
-------------	--

Dial from Call History

1. Press  key in idle mode to display Normal calls list;
2. Press Δ/∇ key to select your desired phone record;
3. Press  to dial the number covered by the highlighted bar.

Receive Normal Calls

Press  key to receive an incoming call, and press  to end it;

End Normal Calls

When you are making a call or already in a conversation, press  key to end it.

Functions during Normal Calls

Adjust the Volume

During calls, press Side key  to adjust the volume of the earpiece.

View the Book

During calls, press **Book** to enter the menu. You could inquire, edit, or delete phone numbers. For details, please refer to next chapter “Book”.

Set the Mute

During calls, press **Option** and select **Mute** or **Unmute**.

If you select **Mute** , the word “Mute” will appear on the screen, and the other side couldn’t hear your voice.

If you select **Unmute** , you will exit from **Mute** , and the other side could hear your voice again.

Switch the Sound

During calls, you could receive the call either from the speaker or from the earpiece.

During calls, press **Option** and select **To Speaker** or **To Earpiece**.

Three-Way Call

Your phone has a three-Way Call feature, which enables you to have conference calls with two parties. Please follow the procedure to set up a Three Party Call:

1. Dial a call to set up a normal call connection.
2. In the call screen, enter the number of the third party directly.
3. Press  key to call the third party and complete another call connection.
4. Press  key again to enter the first party into the conversation.

Note	Please make sure your phone get the service support from the operator before using this function.
-------------	---

Phone Book

The book could be classified into: **personal contact** and **group's book**.

1. Personal Contact manages the name and phone number of the contacts;
2. Group's Book manages PTT group names and PTT group numbers.

Personal Contact

The contacts in personal contact could be saved either in phone or in R-UIM card.

There might be multiple phone numbers for each contact saved in phone, such as PTT private number, home number, office number, mobile phone number, other phone number. Among those phone numbers, "PTT private number" is PTT number of the contact.

There is only one phone number for each contact saved in R-UIM card.

For easy search, you could classify your contacts into several groups: **Family** , **Friends** , etc.

Note	The contacts can be saved only in phone if your phone doesn't support R-UIM card. Please skip the related contents.
-------------	---

Icons in Personal Contact

Icons	Descriptions	Icons	Descriptions
	PTT Private Number		Home Number

	Office Number		Mobile Phone Number
	Other Phone Number		Remarks

Add

1. In idle mode, press **Book** to select **Personal Contact**, and press **Option** to select **Add**;
2. Select location **Phone** or **UIM** and press **Select** to edit; (If your phone doesn't support R-UIM card, please skip this step).

In phone

1. Press **▲/▼** key to scroll the highlight, and edit each highlighted item;
 - Name: enter contact's name;
 - 、、、、: enter the corresponding number.
 - : enter the remarks.
 - **Spd. Dial:** Press **◀/▶** key to select speed dial number (Home number, Office number, Mobile phone number or Other phone number).
 - **Location:** Press **◀/▶** key to select storage location (Number for speed dialing). If you do not select, then the phone will automatically set the storage location.
 - **Group:** Press **◀/▶** key to select the group (Family, VIP, Office, Friends, Schlmate, Other and None).

When inputting contents, press key to switch between input methods, and press key to input the symbols. Please refer to the previous section "Text Input" for details on input methods.

2. Press **Save** to save the contents.

Note	Under the editing status, press [Clear] key to clear the inputs on the screen one by one, and hold [Clear] key to clear all the inputs on the screen.
-------------	---

In UIM

1. Press **▲/▼** key to scroll the highlight between **Name** and  , and edit the highlighted item;
 - **Name**: enter contact's name.
 -  : enter the number.
2. Press **Save** to save the contents.

Search

The phone provides four methods of searching for contacts: direct search, search by name, search by group and fast matching search.

Direct search

1. Press **Book** and select **Personal Contact** in idle mode;
2. All contacts in **Personal Contact** will be listed; press **▲/▼** key to search for your desired contact.

Search by name

1. In idle mode, press **Book** to select **Personal Contact** and then press **Option** to select **Srch by Name**;
2. Enter the name and press **Ok** to search for all contacts meeting the search conditions;
3. Press **▲/▼** key to select the contact you are searching for.

Search by group

1. In idle mode, press **Book** to select **Personal Contact** and then press **Option** to select **Srch by Group**;
2. Press **▲/▼** key to select your desired group, and then press **Option** to select **View** to view all contacts in the group;
3. Press **▲/▼** key to select the contact you are searching for.

Fast Matching Search

1. Press **Book** in idle screen, select **Personal Contact**;
2. Enter the first three letters of the contact name using the keypad directly;
3. The highlighted name will be the first matching contact;
4. Navigate the **▲/▼** key to search near the highlighted name to find the name.

View

1. Find the contact you want to view (Please see "Search");
2. Press **Option** to select **View** to view the details of the contact;
3. Press **▲/▼** key to select the number, press  key to make a normal call, and hold  key to make a PTT call.

Edit

1. View the contact you want to edit (Please see “Search”);
2. Edit the contact information. The operation is the same as “Add”.

Delete

1. Firstly find the contact you want to delete (Please see “Search”);
2. Press **Option** to select **Delete**;
3. Press **Yes** to confirm the deletion.

Set Ringtone

1. In idle mode, press **Book** to select **Personal Contact** and then press **Option** to select **Srch by Group**;
2. Press **▲/▼** key to select the group you want to set ring tone for;
3. Press **Option** to select **Set Ringtone**;
4. Press **▲/▼** key to select your desired group ringtone, and press **Select** to confirm.

Note	If the incoming call number is saved in [Personal Contact], the incoming call ringtone will be the group ringtone here, rather than the ringtone you set in [Profiles].
-------------	---

Rename

1. In idle mode, press **Book** to select **Personal Contact**, and then press **Option** to select **Srch by Group**;
2. Press **▲/▼** key to select the group you want to edit;
3. Press **Option** to select **Rename**;
4. Enter the new name and press **Ok**.

Move

Move the record from phone to R-UIM card

1. In idle mode, press **Book** to select **Personal Contact**;
2. Press **▲/▼** key to select your desired record;
3. Press **Option** to select **Move**, and then select **To UIM**;
4. Press **Yes** to confirm.

Note	When there are multiple numbers in the record, then each number will be saved as one single record in R-UIM card.
-------------	---

Move the record from R-UIM card to phone

1. In idle mode, press **Book** to select **Personal Contact**;
2. Press **▲/▼** key to select your desired record;
3. Press **Option** to select **Move**, and then select **To Phone**;
4. Press **◀/▶** key to select the type of number, and then press **OK**.

Move All Entries to Phone

1. In idle mode, press **Book** to select **Personal Contact**;
2. Press **Option** to select **Move**, and then select **All to Phone**;
3. Press **◀/▶** key to select the type of number, and then press **OK**.

Move All Entries to UIM

1. In idle mode, press **Book** to select **Personal Contact**;
2. Press **Option** to select **Move**, and then select **All to UIM**;
3. Press **◀/▶** key to select the type of number, and then press **OK**.

Note	When the length of name and number record in the phonebook exceed the maximum length in UIM card, the records can't be transmitted to each other.
-------------	---

Memory Status

In idle mode, press **Book** to select **Personal Contact**, and then press **Option** to select **Memory Status**;

Delete All

1. In idle mode, press **Book** to select **Personal Contact**;
2. Press **Option** to select **Delete All**, and select **Phone** or **UIM**;
3. If you select **Phone**, press **Yes** to enter password, and press **OK** to delete all entries in phone;
4. If you select **UIM**, press **Yes** to enter password, and press **OK** to delete all entries in UIM card.

Group's Book

Besides normal call numbers, you also have group's book for the group calls. Group's book could be classified into **System Contact** and **User Contact**. System Contact could contain up to 20 entries, which are updated automatically by the system, and users are allowed to view the entries, but not to edit. User Contact could contain up to 50 entries, which could be viewed, edited, or deleted. You can save PTT group numbers into User Contact for easy searching and calling.

Enter Group's Book

In idle mode, press **Book** to select **System Contact / User Contact**.

Add

1. Enter **User Contact**;
2. Press **Option** to select **Add** to edit, press **▲/▼** key to scroll the highlight between **Group Name** and **Group Number** :
 - **Group Name**: enter the group name;
 - **Group Number**: enter the group number;You could refer to section “Text Input” when entering the above contents.
3. Press **Save** to save the contents.

View

1. Enter **User Contact** and press **▲/▼** key to select the PTT group you want to edit;
2. Press **Option** to select **View**;
3. Edit exactly the same as adding PTT group;
4. Press **Save** to save the contents.

Delete

1. Enter **User Contact** and press **▲/▼** key to select the PTT group you want to delete;
2. Press **Option** to select **Delete** ;
3. Press **Yes** to confirm.

Delete All

- 1. Enter User Contact ;**
- 2. Press Option to select Delete All ;**
- 3. Press Yes to confirm**

View System Contact

- 1. In idle mode, press Book and select System Contact;**
- 2. Press Read to view the group names and group numbers, and press Back to exit.**

Memory Status

- 1. Enter User Contact;**
- 2. Press Option to select Memory Status .**

PTT Functions

Users could operate all PTT functions and perform corresponding settings in **PTT Functions**.

Enter **PTT Functions** : In idle mode, press **Menu** to enter, press **▲/▼/◀/▶** key to select  , and press **Select** to enter.

Scan Function

If you have the authority for scan, press “**PTT Function**” and select **Scan Function**, you can start your scan settings. This feature makes your phone can only receive the group call which be set in the current scan list. Other group calls not in the current scan list will be neglected except for the Emergency Calls.

Start the Scan

Press “**PTT Function**” to select **Scan Function**, and then press **Scan Status**. The default scan status is **Off**. In scan function on status, there are two scan modes to choose. One is Normal mode, the other is Enhanced mode.

Normal Mode

You should set the scan group among all the groups which the phone had joined in. There are only four groups can be set as the scan groups at the same time

Enhanced Mode

You can preset your own scan list in this mode. Each of your preset lists can include none scan group or at the most four scan groups. You can preset eight scan lists at the most, but only one of them can be in the scan status at a time.

Set Normal Scan

1. Select **Normal Mode**;
2. Short press the downside of the  key in idle screen to get into normal scan setting interface;
3. **Mark or Unmark** the group by left soft key, the marked group will be set as the scan group.

Set Enhanced Scan

1. Select **Enhanced Mode** in Scan Status;
2. Enter into **Scan List** interface and press left soft key to edit a scan list:

Add: Add a new scan list.

View: View the groups you have set to the selected scan list.

Delete: Delete the scan list.

Rename: Rename the scan list.

3. In a selected scan list, use left soft key to add and delete the groups in the list;
4. Press **Enable** to set the selected list as the current scan list;

Call Type

After “**Call Type**” is set, the PTT call made in the phone will be ordinary PTT call or pre-emptive priority PTT call, and the corresponding icon will display in the status bar of the standby screen.

Setting Method

1. Press **PTT Functions** to select **Call Type**;
2. Press **◀ / ▶** key to select **Normal** or **Pre-empty**;
3. Press **Save**.

Note	Please refer to section “Quickly Change Call Type in Idle Mode” for details on Call Type setting shortcut.
-------------	--

No-Disturbing

After “**No-Disturbing**” is activated, you will not receive any PTT call. You could perform the corresponding settings and query in the phone.

Setting Method

1. Press **PTT Functions** to select **Supplement Svc** , and then select **No-Disturbing**;
2. Enter the phone password and press **▲/▼** key to select **Activate**, **Deactivate** or **Status Check**;
3. Press **Select**.

PTT Call Forwarding

After “**Call Forward**” is activated, you could forward all incoming PTT calls to the number you set. You could perform the corresponding settings and query in the phone.

Note	The forwarding number you set must be a PTT call number.
-------------	--

Setting Method

1. Press **PTT Functions** to select **Supplement Svc** , and then select **Call Forward**;
2. Press **▲/▼** key to select **All Calls** , **Busy** , or **Off-Service** ;
3. Press **Select** to enter, and press **▲/▼** key to select **Activate**, **Deactivate** or **Status Check** ; if you select **Activate** , then you need to enter a forward number;
4. Press **OK** after the number is entered.

Group Member Status Query

After “**GrMembStatQry**” is activated, you could query the status of group members during PTT group calls. (For detailed operation method, please refer to section “Group Member Status Query”).

Setting Method

1. Press **PTT Functions** to select **Supplement Svc** , and then select **GrMembStatQry**;
2. Select **Activate** to activate this function;
3. Select **Deactivate** to deactivate this function;
4. Select **Status Check** to check if the function is activated or deactivated.

Missed PTT Call

After “**Msd PTT Call**” is activated, you could inquire about all missed PTT calls. A short message about all missed PTT calls will be sent to you.

Setting Method

1. Press **PTT Functions** to select **Supplement Svc**, and then select **Msd PTT Call**;
2. Press **Select** to enter, and press **▲/▼** key to select **Activate**, **Deactivate** or **Status Check**;
3. Press **Select**.

Duty Number

After “**Duty Number**” is activated and duty number is entered, you could receive the call if other users dial this number.

Setting Method

1. Press **PTT Functions** to select **Supplement Svc**, and then select **Duty Number**; press **▲/▼** key to select **Activate** , **Deactivate** or **Status Check**;
2. Select **Activate**, enter the duty number and press **OK** to activate this function;
3. Select **Deactivate**, enter the duty number and press **OK** to deactivate this function;
4. Select **Status Check** to check if the function is activated or deactivated.

PTT Call Number Identity Restriction

After “**PTT CNIR**” is activated, other users could not see the number as you make a PTT call.

Setting Method

1. Press **PTT Functions** to select **Supplement Svc**, and then select **PTT CNIR**; press **▲/▼** key to select **Activate**, **Deactivate** or **Status Check**;
2. Select **Activate** to activate this function;
3. Select **Deactivate** to deactivate this function;
4. Select **Status Check** to check if the function is activated or deactivated.

Call Alert Busy

After “**Call Alert Busy**” is activated, there is a prompt on the interface if there is a second incoming call.

Setting Method

1. Press **PTT Functions** to select **Supplement Svc**, and then select **Call Alert Busy**; press **▲/▼** key to select **Activate**, **Deactivate** or **Status Check**;
2. Select **Activate** to activate this function;
3. Select **Deactivate** to deactivate this function;
4. Select **Status Check** to check if the function is activated or deactivated.

Dynamic Management

You could add / delete the group members, set priority of the group members, and set the talk time.

Note	Only group head has the authority to perform dynamic management for group members.
-------------	--

Add / Delete

Setting Method

1. Press **PTT Functions** to select **DynaManagement** , and then select **Add Member** or **Delete Member**;
2. Enter **Group Number** and **Member Number**, or press **Option** to select from **Book**;
3. Press **Option** and select **Save** .

Set Priority

Setting Method

1. Press **PTT Functions** to select **DynaManagement** , and then select **Set Priority** ;
2. Enter **Group Number** and **Member Number** and press **◀/▶** key to select **Highest** , **High** , **Normal** or **Low** ;
3. Press **Save** .

Set Talk Time

Setting Method

1. Press **PTT Functions** to select **DynaManagement** , and then select **Set Talk Time** ;
2. Enter **Group Number** and **Member Number** and press **◀/▶** key to set the desired talk time;
3. Press **Save** .

Emergency

You could hold emergency key to make emergency call when setting emergency number.

Setting Method

1. Press **PTT Functions** to select **Emergency** and press **Select** to enter;
2. Press **◀ / ▶** key to select the type as **Group** or **Private**;
3. Press **▼** key to move the cursor to the field of **Emergency No.** , and press alphanumeric keys to directly enter numbers or press **Option** to select from **Book**;
4. Press **▼** key to move the cursor to the field of **Hold** , and press **◀ / ▶** key to select **0.5s** , **1s** , **1.5s** or **2s**;
5. Press **Save** to save the settings.

SMS

You could send, view, reply, forward, and delete short messages under **SMS** menu. The received messages are stored in the Inbox, the sent messages in the Outbox, and the unsent messages in the drafts.

If your phone supports R-UIM card, from the inbox you can view the short messages saved both in the phone and in the R-UIM card.

If your phone doesn't support R-UIM card, please skip the related contents about R-UIM card.

Enter **SMS** : In idle mode, press **Menu** to enter the main menu, press **▲/▼/◀/▶** key to select  (SMS), and press **Select** to enter.

Compose

When composing a short message, you could immediately send it out, or save it in the drafts.

Send out

1. Enter **SMS** , and select **Compose Msg** to compose a short message;
2. After entering the text, press **Option** and select **Send to** to edit the recipient;
3. Directly enter the recipient's number, or select from **Book**; (Press **Book** to select your desired recipient using **▲/▼** key).
4. After entering or selecting the recipient, press **Option** to select **Send** to send the message.

Phrases

1. Enter **SMS**, and select **Compose Msg** to compose a short message;
2. Press **Option** and select **Preset Msgs.** to edit the short message with the preset phrases in the phone;

Save as Draft

1. Enter **SMS**, and select **Compose SMS** to compose a short message;
2. After entering the text, press **Option** and select **Save as Draft** to save the message in the drafts.

Back

In the editing interface of **Compose SMS**, press **Option** and select **Back** to cancel the message editing and return to **SMS** main menu.

Inbox

Icons in the inbox

Icons	Descriptions
	Unread Messages in Phone
	Read Messages in Phone
	Unread Messages in R-UIM Card
	Read Messages in R-UIM Card

View

1. Enter **SMS** , and select **Inbox**;
2. Press **▲/▼** key to select the message you want to view, and press **View** to view it;
3. During viewing, press **▲/▼** key to view the whole message; press **Option** to select **Reply** , **Forward** , **Delete** , **Save Number** or **Move to UIM (Move to Phone)** .

Note	[Move to UIM (Move to Phone)] is available only for the phones supporting R-UIM card.
-------------	---

Save Number

You could save the recipient's phone number or the numbers in the message text into the phone book.

1. Enter **SMS** , and select **Inbox**;
2. Press **▲/▼** key to select the desired message, and press **Option** to select **Save Number**;
3. Save into the phone book after selecting the number. For detailed operation, please refer to the following chapter "Book".

Receive New Message

1. The system will alert upon receipt of a new message. Select **View** to go into the inbox directly;
2. If there are unread messages in the inbox, “✉” will display in the status bar of the standby screen.

Outbox

In the Outbox, you could view all of sent messages.

1. Enter **SMS**, and select **Outbox**;
2. Press **▲/▼** key to select the message you want to view, and press **View** to view it;
3. During viewing, press **▲/▼** key to view the whole message; press **Option** to select **Forward**, **Delete**, and **Save Number**.

Drafts

In the drafts, you could view all of unsent messages. You could send it out after editing.

1. Enter **SMS**, and select **Drafts**;
2. Press **▲/▼** key to select the message you want to view, and press **Option** to select **View** to edit it;
3. After editing, press **Option** to select **Send to** to send it out immediately; select **Save as Draft** to save it in the drafts. (refer to "Compose")

Settings

Set storage location

Note	Skip this section if your phone does not support R-UIM card.
-------------	--

The received messages could be stored either in the phone or in the R-UIM card. You have the priority to select the storage location.

1. Enter **SMS**, and select **Settings**;
2. Press **◀/▶** key to select **Phone First** or **UIM First**.

Set auto save

Your phone has the feature of auto save the SMS which you sent. If you open the function, all the sent SMS will be stored in your phone.

1. Enter **SMS**, and select **Settings** ;
2. Press **◀/▶** key to select **Yes** or **No**.

Delete All

Your phone can clear the messages in the Inbox, Outbox and Drafts.

1. Enter **SMS** , and select **Delete All** ;
2. Press **▲/▼** key to choose the desired message box;
3. Press **Select** to prompt the delete message and select **Yes** to delete.

Note	If you want to clear the Inbox message, you should choose the saving location (Phone or UIM) first before you delete.
-------------	---

Preset Messages

Your phone has some preset messages in it. You can view, edit and send it directly by the short message.

View

1. Enter **SMS** , and select **Preset Msgs.** ;
2. Press **▲/▼** key to choose the desired message;
3. Press **View** to view the message.

Edit

1. Enter into the view interface (refer “Preset Messages – View”);
2. Edit the message, press **Option** and select the **Save** to save the edit message.

Send

1. Enter into the view interface (refer “Preset Messages – View”);
2. Press **Option** and select **Send to** to send the message directly.

Call History

Recent incoming calls, missed calls and outgoing calls are saved in **Call History**. The earliest call will be deleted automatically when the records are full.

Call Icons

Icons	Descriptions
	Incoming Calls
	Missed Calls
	Outgoing Calls
	PTT Calls

View

There are two methods of viewing the call history:

View from menu

1. In idle mode, press **Menu** to enter the main menu, press **▲/▼/◀/▶** key to select  (Call History), and press **Select** to enter;
2. Press **▲/▼** key to select the category (Missed Calls, Outgoing Calls, Incoming Calls, Call Timer), and press **Select** to enter;
3. Press **▲/▼** key to select the record you want to view, and press **Option** to select **View** to view the details.

Quick view

1. In idle mode, press  key to view the list of normal calls; Short press the upside of  key to view the list of PTT calls;
2. Press **▲/▼** key to select the record you want to view, and press **Option** to select **View** to view the details.

Delete

1. Enter the list of call records (refer to section “View”);
2. Press **▲/▼** key to select the record you want to delete, press **Option** to select **Delete** to delete it.

Delete All

1. Enter the list of call records (refer to section “View-View from Menu”);
2. Press **Option** to select **Delete All**;
3. Press **Yes** to delete all call records in the current category.

Save Number

1. Enter the list of call records (refer to section “View”);
2. Press **▲/▼** key to select the record you want to save number, and press **Option** to select **Save Number** to save the number in the phone or in the UIM card.

Make Normal Calls

1. Enter the list of call records (refer to section “View”);
2. Press **▲/▼** key to select the normal call record you want to dial, and press  key to call.

Make PTT Calls

1. Enter the list of call records (refer to section “View”);
2. Press **▲/▼** key to select the PTT call record you want to dial, hold PTT key  , and speak after hearing a beep sound.

Send Message

1. Enter the list of call records (refer to section “View”);
2. Press **▲/▼** key to select the normal call record you want to send messages, and press **Option** to select **Send Message** .

View phonebook information

1. Enter in the list of call record (refer to section “View”);
2. Press **▲/▼** key to select the record, and press **Options** , then select **Book** ;

Profiles

In profiles, you could set different sounds for different occasions. There are several modes available in the phone, such as General, Silence, Meeting, Outdoors, etc., and you could also set personal ring tone.

All modes could be changed, so you could select your individual mode according to your own requirements.

Enter **Profiles** : In idle mode, press **Menu** to enter the main menu, press

 key and select (Profiles) then press **Select** to enter.

Activate

1. Enter **Profiles** , and press **▲/▼** key to select **General** , **Silence** , **Meeting** or **Outdoors** ;
2. Press **Option** to select **Activate** .

View

1. Enter **Profiles** , press **▲/▼** key to select the mode you want to edit, and press **Option** to select **View** ;
2. Select the option you want to edit, and change as below:
 - a) **Ring & Vibrate:** Press **▲/▼** key to select **Ring & Vibrate** , press **Ok** to enter, press **▲/▼** key to select **Ring & Vibrate** or **Ring Tone**, press **◀/▶** key to select **Light only** , **Ring only** , **Vibrate Only** and **VibThenRing** , and finally press **Save** to save the setting.

- b) **SMS Alert:** Press ▲/▼ key to select **SMS Alert** . The operation is the same as **Ring & Vibrate** .
- c) **PTT Voice:** Press ▲/▼ key to select **PTT Voice** , press **Ok** to enter, press ◀/▶ key to select PTT voice from **Speaker** or **Earpiece** , and finally press **Save** to save the setting.
- d) **Volume:** Press ▲/▼ key to select **Volume** , press **Ok** to enter, press ▲/▼ key to select the type **Ringer**, **Earpiece** , **Key tone** or **SMS alert** , press ◀/▶ key to adjust the volume, and finally press **Save** to save the setting.
- e) **Alert:** Press ▲/▼ key to select **Alert** , press **Ok** to enter, press ▲/▼ key to select **Call Connected** , **Call Ended** , or **1 Min Interval** , press ◀/▶ key to select On/Off, and finally press **Save** to save the setting.

Note	If you select PTT voice from [Earpiece], the phone will prompt with vibration when receiving PTT calls. The incoming call ringtone is just for ordinary numbers. For those numbers in the groups of the phone book, the incoming call ringtone is the group ringtone you set in [Book].
-------------	--

Personal Ringtone

You could set personal ringtone for up to five special incoming call numbers.

1. Enter **Profiles** , and press ▲/▼ key to select **Personal Ringtone** ;
2. Press **Select** to enter, press ▲/▼ key to select one number, and press **Select** again to set;

3. Enter a special **Phone Number**, or press **Option** to select number from **Book**;
4. Press **▼** key to enter **Ring Tone**, and press **◀ / ▶** key to select your desired ring tone;
5. Press **Save** (or press **Option** to select **Save**) to complete the setting.

Organizer

Enter **Organizer** : In idle mode, press **Menu** to enter the main menu, press

▲/▼/◀/▶ key to select  (Organizer), and press **Select** to enter.

Calculator

The phone provides a calculator, which you could use to perform basic math calculations.

1. Enter **Organizer** , and select **Calculator**;
2. Press alphanumeric keys to input numbers, press  key to input the decimal, press  key to negative the numbers, and press **▲/▼/◀/▶** key to input calculation symbols “+/-×/÷”;
3. During the calculation, press **Clear** to clear the inputs one by one;
4. Press **=** to display the calculating results.

Alarm Clock

Alarm clock could be set up to five times in the phone.

Add

1. Enter **Organizer** , and select **Alarm Clock**;
2. Press **Add** (or **Option** to select **Add**) to edit;
3. Press **▲/▼** key to scroll the highlight, and edit each highlighted item:

- **Time:** Press alphanumeric keys to enter time; press **◀ / ▶** key to switch between hour and minute;
 - **Set:** Press **◀ / ▶** key to turn on/off the alarm ring;
 - **Week:** Press **◀ / ▶** key to select the date, on which alarm clock works;
 - **Note:** Enter the remarks;
4. Press **Save** to save the setting.

View / Edit

1. Enter **Organizer** , and select **Alarm Clock** ;
2. Press **▲/▼** key to select the alarm you want to view;
3. Press **Option** to select **View** to view the alarm;
4. At this time you could also edit the alarm. (refer to “Add”)

Delete

1. Enter **Organizer** , and select **Alarm Clock** ;
2. Press **▲/▼** key to select the alarm you want to delete;
3. Press **Option** to select **Delete** to delete the alarm.

Turn off Alarm Ring

If Alarm Ring is set **On** , the alarm clock will ring as the time is up. At this point, press **OK** to turn off the ring.

Set Alarm Ring

1. Enter **Organizer**, and select **Alarm Clock**;
2. Press **Option** to select **Set Alarm Ring**;
3. Press **▲/▼** key to select your desired ring, and then press **Select**.

Calendar

View Event

1. Enter **Organizer** , and select **Calendar**;
2. Press **▲/▼/◀/▶** key to select your desired date, and press **Option** to select **View Event**;
3. Press **▲/▼** key to select the event you want to view, press **Option** to select **View Event** to view the complete contents, and then press **Option** to select **Send as MSG** to send the event as a short message.

Add Event

1. Enter **Organizer** , and select **Calendar**;
2. Press **▲/▼/◀/▶** key to select the date on which you add event, press **Option** to select **Add Event**,and then enter the event;
3. Press **Save** to save the setting.

Goto

1. Enter **Organizer** , and select **Calendar** ;
2. Press **Option** to select **Goto** , enter your desired date, and press **Goto** ;
3. View the event on that day. (Please refer to section “View Event”)

Delete

1. View the event on that day; (Please refer to section “View Event”)
2. Press **▲/▼** key to select the event you want to delete, and press **Option** to select **Delete** ;
3. Select **Delete All** to delete all events.

World Time

You could check the local time of major cities in the world.

Check Cities

1. Enter **Organizer** , and select **World Time** ;
2. Press **▲/▼/◀/▶** key to check major cities in the world.

Stopwatch

As a time counter, the stopwatch could record up to 10 records once.

General Time Counting

1. Enter **Organizer** , and select **Stopwatch** ;
2. Press **Start** to start counting;
3. Press **Pause** to stop counting;
4. Press **Cont.** to continue counting; press **Option** to select **Clear** to clear the records.

Record Multiple Time Records in the Counting

1. Enter **Organizer** , and select **Stopwatch**;
2. Press **Start** to start counting;
3. During the counting, press **Record** to save the record; you could press **Record** up to ten times;
4. Press **Pause** to stop counting;
5. Press **Option** to select **Record** to view all the records;
6. Press **▲/▼** key to view all of the records.

Settings

Enter **Settings** : In idle mode, press **Menu** to enter the main menu, press

▲/▼/◀/▶ key to select  (Settings), and press **Select** to enter.

Phone

Idle Display

You could change wallpaper or edit banner on the standby screen.

Setting Method

1. Enter **Settings** to select **Phone**, and press **Select** to select **Idle Display**;
2. Select **Wallpaper** , press **▲/▼** key to select the paper, and press **Select** to select it as standby wallpaper;
3. Select **ScrnLogo** , press **Select** to edit, and press **OK** to save the contents;
4. Select **Date & Time** , press **▲/▼** key to select your desired mode, and press **Select** to save the setting.

Backlight

Set the lasting time for backlight.

LCD Contrast

Set the contrast of the screen.

Language

The phone supports different languages, and you could select your desired language.

Shortcuts

Set the function of quick entry in idle mode.

Setting Method

1. Enter **Settings** to select **Phone**, and then select **Shortcuts** ;
2. Select any key from Left / Right keys, and press **Select** to enter;
3. Select the corresponding function of the key;
4. Press **Select**.

Personal Info

Store your personal information.

Time Format

Select the displaying format of time.

DTMF Tone

Select **Normal** or **Extended** .

PWR Saving Mode

PTT performance: Select **High** or **General**.

In conversation: Select **Activate** , **After 2 sec.** , **After 5 sec.** or **Off**.

Note	<ol style="list-style-type: none">1. If power save mode is activate, the phone will automatically enter the mode during PTT calls or normal calls.2. After power save mode is activate, the screen is black and you could adjust the volume using Side key.3. You could hold  key to enter or exit PWR Saving Mode during calls no matter whether it has been set or not.
-------------	--

Call

The settings here are especially for normal calls, instead of PTT calls. The settings for PTT calls could be performed in **PTT Functions**.

Call Forwarding

This function enables you to forward incoming normal calls to another phone number. The phone provides **All Calls**, **Busy**, **No Answer**, **Cancel All**.

Note	Network support is required for this function.
-------------	--

Call Waiting

When this function is activated, you can switch to the second incoming call by pressing  when you are already in a call.

Note	Network support is required for this function.
-------------	--

Call Answer

Set the answer mode for incoming calls.

Dial Restrict

When this function is activated, you couldn't dial any number except for emergency number and free dial numbers.

Free Dial

You could set up to ten free dial numbers. If **Dial Restrict** is activated, these numbers will not be restricted.

Set a free dial number:

1. Enter **Settings** to select **Call** and choose **Dial Restrict** .
2. After enter the password, select **Free Dial** ;
3. Press **▲/▼** key to select, and enter the number;
4. Press **OK** to save.

SpdDial Restrict

This function enables you to turn on/off speed dial function.

Security

The phone password is needed to enter the security. Generally, the default password is: "0000".

Once you get a new phone, it's recommended to modify the password to guarantee the safety of information.

Lock Phone

Set the phone lock mode. After the phone is locked, you need to input password to unlock it.

Change Password

1. Enter old password;
2. Enter new password;
3. Enter new password again;
4. Press OK.

Note	If your phone needs R-UIM card, please read the following contents; otherwise please skip this section.
-------------	---

Require PIN

When it is set “On”, the phone requires PIN code of R-UIM card as powering on. Enter correct PIN code to unlock the phone.

Lock UIM to Phone

When this function is activated, only the R-UIM card in the phone could be used. If you change R-UIM card, you need to input lock code to unlock.

Note	Lock code is set by yourself as the function is activated.
-------------	--

Chang PIN

1. Enter old PIN code;
2. Enter new PIN code;
3. Enter new PIN code again;

4. Press OK.

Note	The R-UIM card will be locked if you enter wrong PIN code three times. Then you need PUK code to unlock the R-UIM card. The PIN code and PUK code may be provided together with the R-UIM card. If not, contact your network service provider. The default PIN code is normally 1234. Please replace it with your own PIN code as soon as possible.
-------------	---

Default Reset

After you select **Default Reset** , all settings will return to the factory default settings.

Appendix

Shortcut

Speed Dial

Speed Dial Normal Calls

Speed dial refers to quickly dial out the numbers in **Personal Contact** in idle mode. To quickly dial out numbers, you need firstly enter **Settings** to select **Call** , then select **SpdDial Restrict** to enter, and finally select **Deactivate**.

Operation Method

If you want to dial the number ranking 132, firstly input “13”, and then hold the alphanumeric key “2” until the number is dialed.

Speed Dial PTT Calls

In idle mode, hold PTT key to dial PTT Speed Dial Number in current screen. You could set PTT Speed Dial No. to the current number by pressing ▲/▼ key in idle screen

Quick Entry Function

In idle mode after enter the menu, press ▲/▼/◀/▶ key to enter **Settings** , select **Phone** , and then select **Shortcuts** .

Quick Return to Idle Mode

Press  key (rather than hold) to return to the idle mode quickly.

Delete the Current Input

During the input status, press **Clear** to delete the current inputs one by one, and hold **Clear** to delete all the current inputs.

Quick Set Profiles

In a conference room or on other public occasions, you could conveniently set the phone in **Silence** mode or other modes.

In idle, hold  key to scroll the highlight among **General**, **Silence**, **Meeting**, and **Outdoors**, and release  key until the highlight is at your desired mode.

Quick Entry into Menu

In the main menu, there is a serial number in front of each option. Press the serial number's corresponding alphanumeric key to quickly enter the menu.

Quick Entry or Exit Power Save Mode during Calls

During calls, hold  key to enter or exit pwr saving mode.

Quick Change Call Type in Idle Mode

In idle mode, hold upside of the Side key to switch between **Normal** and **Pre-emptive**, and release until the desired Call Type is selected.

Quick Search by First Letter of the Names in Book

Press the corresponding alphanumeric key of first letter to search the relevant names in book.

Lock the Keypad

When you don't use your phone temporarily, you could lock your phone keypad to avoid misoperations. In this case, you are only allowed to dial emergency numbers.

Lock the keypad

In idle mode, hold  Key.

Unlock the keypad

When the keypad is locked, firstly press **Unlock** and then  key to unlock the keypad.

Earphone

Please follow the steps below to use the earphone:

PTT Operations with Earphone

During PTT calls, you could use the earphone to take or release the floor. Hold PTT key on your earphone, start talking after hearing a beep sound, and release PTT key to let others speak after finishing talk.

Receive or End Normal Calls with Earphone

With PTT key on your earphone, you could receive or end a normal call. When there is an incoming call, you could receive it by holding PTT key on your earphone for about 0.5 second. When you are already in a call, you could use PTT key on the earphone to end the call.

FallBack

Your phone has a FallBack function. When there are some troubles on PTT system, the phone will start FallBack mode.

FallBack indication

When the signal icon turns to the icon () and twinkles, it stands for the phone in the FallBack mode.

FallBack Function

In FallBack mode, the phone only can execute part of the PTT functions. The Groups Calls such as Normal Group Call, Emergency Group Call, and Broadcast Call can work well, but for other call functions can't work.

Troubleshooting

Symptoms	Possible Causes	Solutions
Power-on Failure	Inadequate battery Level	Charge the battery
	Poor battery contact	Re-install the battery
Auto Power-off	Seriously poor battery Level	Recharge the battery
Inadequate Standby Time	Decreasing of battery performance	Replace the battery
	Poor network signal	Power off as network signal is poor
Network Connection Failure	Poor network signal	Move to other places
	Out of the service area	Confirm whether it is in the CDMA network service area

PTT Call Failure	Service unavailable	Contact the operators
	Network disconnected	Refer to "Network Connection Failure"
Call drop during a call	Poor network signal	Move to other places
No ring for a incoming call	The phone is set to Silence, or the ring volume is set to 0	Enter Profiles and change the mode; or check the ring volume
Prompt to input PUK	R-UIM card is locked due to successive inputting false PIN code for three times	Contact the operators

If the problems cannot be solved after the above handling, you may contact our customer service personnel, or feed back your information directly by sending emails to zte_mobile@zte.com.cn. We will reply to you as soon as possible.