
1 Pick a Spot for Your Radio

Install the Dash or Vent Mount

You can use either the Dash Mount or the Vent Mount for your Xpress^{RCI}, depending upon your vehicle and the location where you want to place your radio.


CAUTION! Make sure your radio isn't in a place where it could interfere with driver visibility or safe deployment of the



Dash


Mount

Installing the Dash Mount:



in your vehicle to bring the temperature up to 60°F.


- 1 Locate a flat surface for the Dash Mount. (Options 1, 2, or 3.) Make sure there is ample room for the dock and radio when installed.
- 2 Set the orientation of the mount before adhering it. Loosen the knob and adjust the adhesive foot for the location you selected:
- Option 1 & Option 3 should be oriented
- Option 2 should be oriented as II.




Adhesive Foot Dock Mounting Pla











Pick a Spot for Your Radio (continued)

Installing the Vent Mount:


- 1 Locate a suitable vent in your vehicle which is strong enough to hold the Xpress^{RCi} and the *Power*Connect Vehicle Dock. (Options 4
- 2 If the vent louvers are recessed, you'll have to use the extended vent clamps. The Vent Mount is assembled with the short vent clamps, so you will have to remove the short clamps and install the extended clamps as shown below.




Vent Mount

Option 4

Option 5



- 3 Push the Vent Mount onto the vehicle vent as shown (1) until hooked on the rear of the vent louver (2).
- Rest the foot against the bottom of the vent (2). If necessary, adjust the tilt of the Vent Mount by repositioning the foot to a different tilt adjustment hole (3).




2 Install the Magnetic Mount Antenna

Mount the Magnetic Mount Antenna

Choose the best location for the antenna considering your vehicle type. Refer to the antenna placement tips and cautions in the User Guide beginning on page 24.

- Sedan or Coupe: We recommend mounting the antenna just above either the front windshield or the back window.
- Pickup Truck: We recommend mounting the antenna just above the front windshield.
- Convertible: We recommend mounting the antenna at the leading edge of the trunk.
- SUV: We recommend mounting the antenna at the rear of the roof.





Feed the antenna wire under the rubber molding around the front or rear windshield, and into the seal around the trunk or door. For a convertible, the cable can be routed directly into the trunk.






When the antenna is mounted at the rear of the vehicle, it's usually easiest to run the cable from the rear to the front toward the radio by routing the cable along the interior trim where it meets the carpet, gently pushing it behind the edges of the trim. Bring the cable out from the trim and route it under the carpet toward the







TIP! Avoid damaging or compromising the window, door, and trunk seals.






Decide How to Connect


You will listen to Xpress^{RCi} through your vehicle's stereo system or FM radio. First, Xpress^{RCi} must be receiving the XM signal. Ensure your vehicle is outside with the antenna having a clear view of the sky. Your audio connection options are:


Best: Use the Aux In Cable if your vehicle's stereo system has an auxiliary input connection. Plug one end of the cable into the green AUDIO connector on the *Power*Connect Vehicle Dock and the other end into the vehicle stereo system's auxiliary input jack. Set the stereo system to play from the auxiliary input source.




the vehicle's cassette deck. Set the stereo system to play from 🕺








4 Finish the Installation and Power On

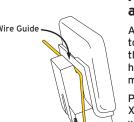

Attach the PowerConnect Vehicle Dock to the mount that you selected. Utilize the wire guide at the rear of the dock to help organize the wire and cables, and make your installation neater.

Place the Xpress^{RCi} into the dock. Your Xpress^{RCi} should turn on automatically when it is plugged in and receiving power. If it does not, press the **Power** button to turn it On.

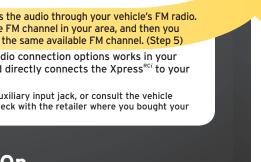

o Quality GOOD BETTER BES

FM Direct Adapter (FMDA)

Cassette Adapter

PowerConnect PowerConnect

5 PowerConnect

If you have connected the audio in step 3 using the Aux In Cable or Cassette Adapter, continue with step 6.

Tune the Xpress^{RCi} and Vehicle FM Radio to the Same FM Channel


1 Find an Available FM Channel in Your Area

An available FM channel is one that's not being used by an FM radio station in your area. When you tune your FM radio to an available channel, you should only hear static or silence - not talk or music. We recommend one of the following methods to find an available FM channel:

g Use the SIRIUS | XM FM Channel Finder at www.xmradio.com/fmchannel. Go to the website and enter your zip code. The Channel Finder will suggest a list of available FM channels in your area. For convenience, write down or print out the list.



b Manually tune through your local FM channels on your vehicle's FM radio. Locate and create a list of channels that aren't being used by any FM radio station. Write down the list. Once you have created your list of available FM channels, you will need to find the one that provides the best match for



Tune vour Vehicle's FM Radio

a Pick the first FM channel on your list.

b Turn on your vehicle's FM radio (if you have not already done so) and tune it to this FM channel.

3 Turn the Xpress^{RCir}s FM Transmitter On.

a Press menu.

b Press the Select button to select Vehicle Mode.

c Press the Select button to select FM Transmitter which will turn vellow.

d Turn the Control knob clockwise to display On and press the Select butto



- a If you are still in the Vehicle Mode menu option with FM Transmitter turned On, skip to step c. If not, press menu.
- **b** Press the **Select button** to select **Vehicle Mode**.
- c Turn the Control knob to scroll to and highlight FM Channels. Press the Select button. d Turn the Control knob to scroll to and highlight storage location FM-2 and
- press the Select button. • From the list of FM channels displayed, turn the Control knob to highlight
- the available FM channel you found in step 1, and press the Select button. f Press the Select button to select Start Using.

the above channel to

Set vour vehide radio t

FM Transmitter (On)

PowerConnect (continued)

- **q** The selected FM channel will be confirmed on the display screen, and the Xpress^{RCI} will tune to
- **h** You should hear XM through your vehicle's radio when Xpress^{RCi} is tuned to channel 1. If you are satisfied with the sound quality, you're done.

5 You May Need to Try Other FM Channels on Your List

If the chosen FM channel doesn't work well for you, work down the list of FM channels until you find one that allows you to hear XM clearly. Each time, you will need to tune your vehicle's FM radio and Xpress RCi to the same FM channel.

6 Activate

Activate Your Service

Before you can enjoy Commercial-Free Music, plus Sports, News, Talk & Entertainment, you need to activate your

- 1 Make sure your Xpress^{RCi} is properly installed, turned on, and receiving the XM signal so that you can hear the audio on channel 1.
- Make a note of your XM Radio ID. You can find it:
 - On channel O (zero)
 - On a label on the bottom of the gift box
- On the label on the back of your Xpress^{RCi}



in the top right corner

• By phone: Call 1-800-XM-RADIO (1-800-967-2346)

When your service is activated, your Xpress^{RCi} will receive all channels to which you have subscribed. At this time, if you turn the Control knob you can scroll and tune other channels. Activation usually takes 10 to 15 minutes, but may take up to an hour. We recommend that your radio remain on until activated.



TIP! If the signal reception

is low, check to see if the

antenna's view of the sky

is blocked by a tree, a

building, a bridge, or by anything on the vehicle

roof such as a roof rack or

luggage container, etc.

receiving a good signal.

To check the signal, press

highlight Signal Indicator

Press the Select button t

menu, turn the Control

knob to scroll to and

display the Signal

Indicator screen.

Adiust until vou are


























What's in the Box?

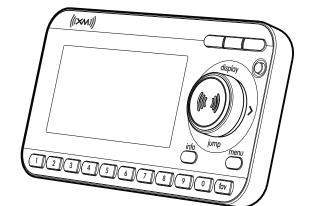

Xpress^{RCi} Radio



PowerConnect Vehicle Dock



Power Adapter



Magnetic Mount





Antenna & Dash Mount **Alcohol Preparation Pads**

Vent Mount

and Extended

Vent Clamps

Aux In Cable



Quick Start Guide

SIRIUS (((XM)))




xmradio.com

SIRIUS XM Radio Inc. 1221 Avenue of the Americas New York, NY 10020

1.800.967.2346

© 2009 SIRIUS XM Radio Inc. XDRC2QSG 092809a

Xpress^{RCi} Button & Control Knob Functions

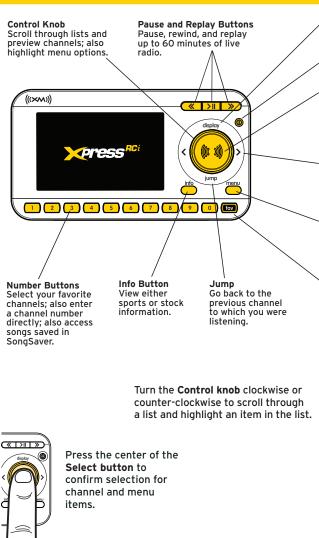

Display
Customize the way you view content on the display.

Power Button
Turn radio on and off.

Press to confirm selection for

channel and menu items; also press and hold to GameSelect to TuneSelect, or to save a

Left and Right Arrows Search for channels by

category; also when in Replay mode, rewind or fast-forward through content.

> Menu Button Access advanced features and configuration options; also press and hold to

access FM presets. Fav Button

Choose among the Go back to the different tuning modes: previous channel

to which you were

Direct, Favorite Channels, and SongSaver.

Turn the Control knob clockwise or counter-clockwise to scroll through



Press the edge to tilt the Select button to select >, <, display, or jump.

