

Oculus Go 32 GB Quickstart Guide




VR Expert
Demkaweg 11
3555HW, Utrecht

Info@vr-expert.nl
030 7116158



Hardware

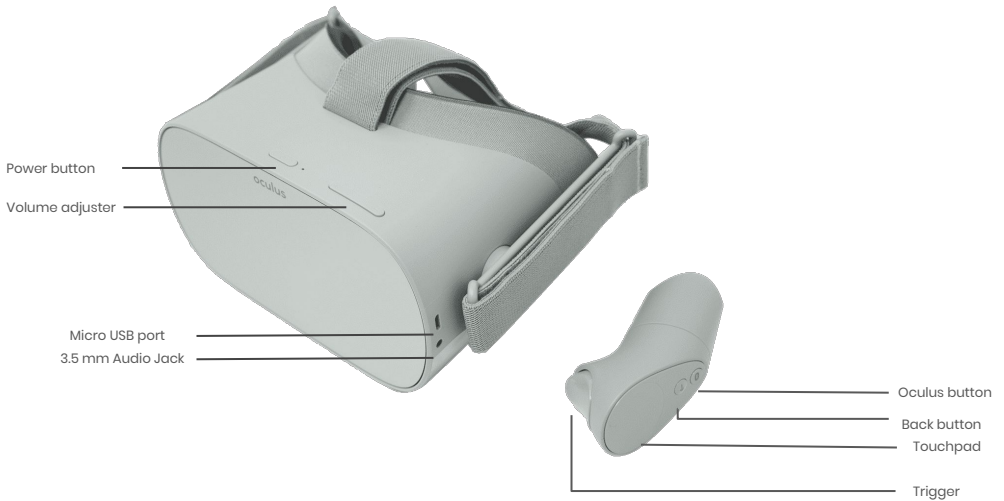

In the box

- 1x Headset Oculus Go 32 GB
- 1x Oculus Go motion Controller
- 1x AA Battery
- 1x Micro-USB cable
- 1x Eyeglas Spacer
- 1x Cleaning Cloth
- 1x Walkthrough booklet by Oculus
- 1x Lanyard

Before you start

- Do not allow the lenses to come in contact with periods of **direct sunlight**. This will permanently damage the screen and does not fall under warranty.
- Please install the Oculus App on your smartphone. This is necessary to install the device.

How to install

1. Put on the Oculus Go 32 GB headset and hold the “Power-Button” for approximately 3 seconds.
2. The instructions of the headset will start automatically.
 - a. Take your phone and download the Oculus App.
Android:
<https://play.google.com/store/apps/details?id=com.oculus.twilight>
or
IOS:
<https://apps.apple.com/us/app/oculus-vr/id1366478176>
 - b. Create an Oculus Account here:
<https://secure.oculus.com/sign-up/>
 - c. Log into the Oculus app.
 - d. Choose the Oculus Go on your phone.
 - e. Follow the tutorial on your phone.
 - f. The phone will search for your Go automatically.
 - i. Choose the device by selecting the serial number corresponding to your headset. This number can be found on the left side of the headset.
 - g. Please read the menu on your phone at the end of the installation. The menu contains useful information.
 - h. Confirm the instructions and the Oculus Go 32GB headset will automatically start the update
3. After the update the Oculus Go will start the main menu - enjoy the ride!

Still questions? Please click the link for more installation tips:

<https://www.youtube.com/watch?v=2WTK4pI-Pp0>

Wi-Fi - How to connect

- Click on 'settings' in the task bar inside the Oculus Go.
- Click on 'Wi-Fi'.
- Choose the Wifi you want to connect with and select it.
- Enter the password of the selected wifi and click connect.

Main Menu in the device

- *Task bar of the Menu*
 - Here you will find the most common functions/symbols. (Navigate - Social - Sharings - Notifications - Settings)
- *Home*
 - The last used application and the most popular Oculus applications are displayed here.
- *Oculus Store*
 - Search and download new Applications.

How to download applications from the Oculus store

1. Click on 'Oculus Store' in the Oculus Go main menu.
2. Search for the desired application in the Oculus store or search for the application manually with the search function. (Navigate -> Search)
3. Click on the desired application and then press on 'download' or 'buy'.
4. After downloading, the application will appear in your Oculus library.

VR Expert tips

Developer Mode

1. Go to the Oculus app on your phone.
2. Go to settings.
3. Make sure your phone is connected with the device. (see section 1 of guide)
4. As soon as you are connected with your device, the red light will turn green and a small arrow will appear.
5. Click on the arrow.
6. Go to 'more settings'.
7. Go to 'developer mode'.
8. Turn on developer mode - The device is now in developer mode.

Want to know more about developer mode, see:

<https://developer.oculus.com/documentation/native/android/mobile-device-setup/>

VR Expert tips

How to download an application using a redeem code

1. Go to the Oculus app on your phone and log in.
2. Go to settings.
3. Scroll down to Payment.
4. Press Redeem Code.
5. Enter your Redeem Code.
6. You will now be able to download the application from your Oculus library.

How to download your own application

1. Turn on your computer and open an internet browser.
2. Go to: <https://sidequestvr.com/setup-howto>
3. Download sidequest on your computer and install the right version.
4. Connect your headset through a USB-Cable with your computer.
5. Watch the screen of your headset and click allow twice to connect.
6. Make sure the device is in 'developer mode' (see section above).
7. Make sure that the device is connected and Sidequest recognizes your device. At the sidequest window a green light should appear at the top left side.
8. Click on 'Install apk file from folder on computer' in the taskbar.
9. Select the application you want to install.
10. In 'running task' at the sidequest window you can follow the process of downloading.
11. Restart the headset.
12. In your Oculus Quest, go to "Navigate" in the taskbar.
13. Choose "library".
14. Go to 'Unknown Sources'.
15. Search for the downloaded application and open it!

Contact

If you have more questions or need more information about the Oculus Go 32 GB you may reach us

email:

sales@vr-expert.nl
support@vr-expert.nl

call us:

+31 30 71 16 158

Address:

Demkaweg 11
3335 HW, Utrecht
The Netherlands
+31 30 71 16 158
info@vr-expert.nl

Zur Mühle 2 – 4
50226, Frechen
Germany
+49 2234 – 682 953 – 0
info@vrowl.de

