

# Panasonic

## 4-Channel VoIP Gateway Card

## Getting Started

---

KX-TDA3480

Model KX-TDA0484



Thank you for purchasing a Panasonic 4-Channel VoIP Gateway Card.  
Please read this manual carefully before using this product and save this manual for future use.

---

# Table of Contents

<b>1</b>	<b>Overview</b>	<b>5</b>
1.1	Example Network Diagram	6
1.2	Network Devices and Numbering Plan	7
1.2.1	Network Application	8
1.2.2	Numbering Plan Example	9
1.2.3	Numbering Plan Summary	12
<b>2</b>	<b>Installing in the KX-TDA30 PBX</b>	<b>13</b>
2.1	Installation	14
2.1.1	Names and Locations	14
2.1.2	Installing the VoIP Gateway Card in the PBX	15
2.2	Cable Connection	17
2.2.1	Connection for Programming	17
2.2.2	Connection to the LAN	18
<b>3</b>	<b>Installing in the KX-TDA100/KX-TDA200/KX-TDA600 PBX</b>	<b>19</b>
3.1	Installation	20
3.1.1	Names and Locations	20
3.1.2	Installing the VoIP Gateway Card in the PBX	21
3.2	Cable Connection	23
3.2.1	Connection for Programming	23
3.2.2	Connection to the LAN	24
<b>4</b>	<b>Programming the VoIP Gateway Card</b>	<b>25</b>
4.1	Preparations	26
4.1.1	Preparing the PC	26
4.2	Programming the VoIP Gateway Card in the Los Angeles Office	29
4.2.1	Starting the IP-GW4 Maintenance Utility	29
4.2.2	Changing the Status of the VoIP Gateway Card	31
4.2.3	Assigning the IP Address	32
4.2.4	Assigning the Hunt Pattern	33
4.2.5	Programming the Address Translation Table	34
4.2.6	Downloading the Address Translation Table from the VoIP Gateway Card	37
4.2.7	Rebooting the VoIP Gateway Card	38
4.2.8	Confirming the IP Address Assignment	39
4.3	Programming the VoIP Gateway Card in the Chicago Office	40
<b>5</b>	<b>Programming the PBX</b>	<b>45</b>
5.1	Programming the PBX in the Los Angeles Office	46
5.2	Programming the PBX in the Chicago Office	49
<b>A</b>	<b>Guidance for VoIP Installation</b>	<b>53</b>
A1	VoIP Requirements	54
A1.1	Bandwidth Assessment	54
A1.2	Network Configuration	56
A1.3	Network Devices	59
A1.4	QoS (Quality of Service)	60
A2	VoIP Requirements Checklist	61

---

<b>B</b>	<b>Alternative Numbering Plan Example .....</b>	<b>63</b>
<b>B1</b>	<b>Extension Number Method .....</b>	<b>64</b>
B1.1	Example Network .....	64
B1.2	Numbering Plan Example.....	65
<b>B2</b>	<b>Programming for the Extension Number Method .....</b>	<b>67</b>
B2.1	Programming the VoIP Gateway Card.....	67
B2.2	Programming the PBX.....	68
<b>C</b>	<b>Initialisation of the VoIP Gateway Card.....</b>	<b>73</b>
<b>C1</b>	<b>Initialising the VoIP Gateway Card.....</b>	<b>74</b>
<b>D</b>	<b>Using the KX-TDA3480/KX-TDA0484 and KX-TDA0480 in One Network.....</b>	<b>77</b>
<b>D1</b>	<b>Considerations in Installation .....</b>	<b>78</b>



---

# Section 1


## Overview

*Panasonic PBX with VoIP Gateway Card will allow organisations to route both voice and fax communications over digital data networks.*

*The VoIP Gateway Card, designed to be easily integrated into existing IP networks, seamlessly bridges Public Switched Telephone Network (PSTN) and analogue telephones with digital data networks without interrupting pre-existing data communications. Because communications do not take place over conventional telephone networks, the high cost of long distance communications is virtually eliminated.*


## 1.1 Example Network Diagram

The following diagram illustrates a simple VoIP network connecting PBXs at 2 locations. The VoIP Gateway Card converts outgoing voice or fax signals into IP packets for transmission. On the incoming side, it reverses this process and translates the packets back into appropriate voice or fax signals.

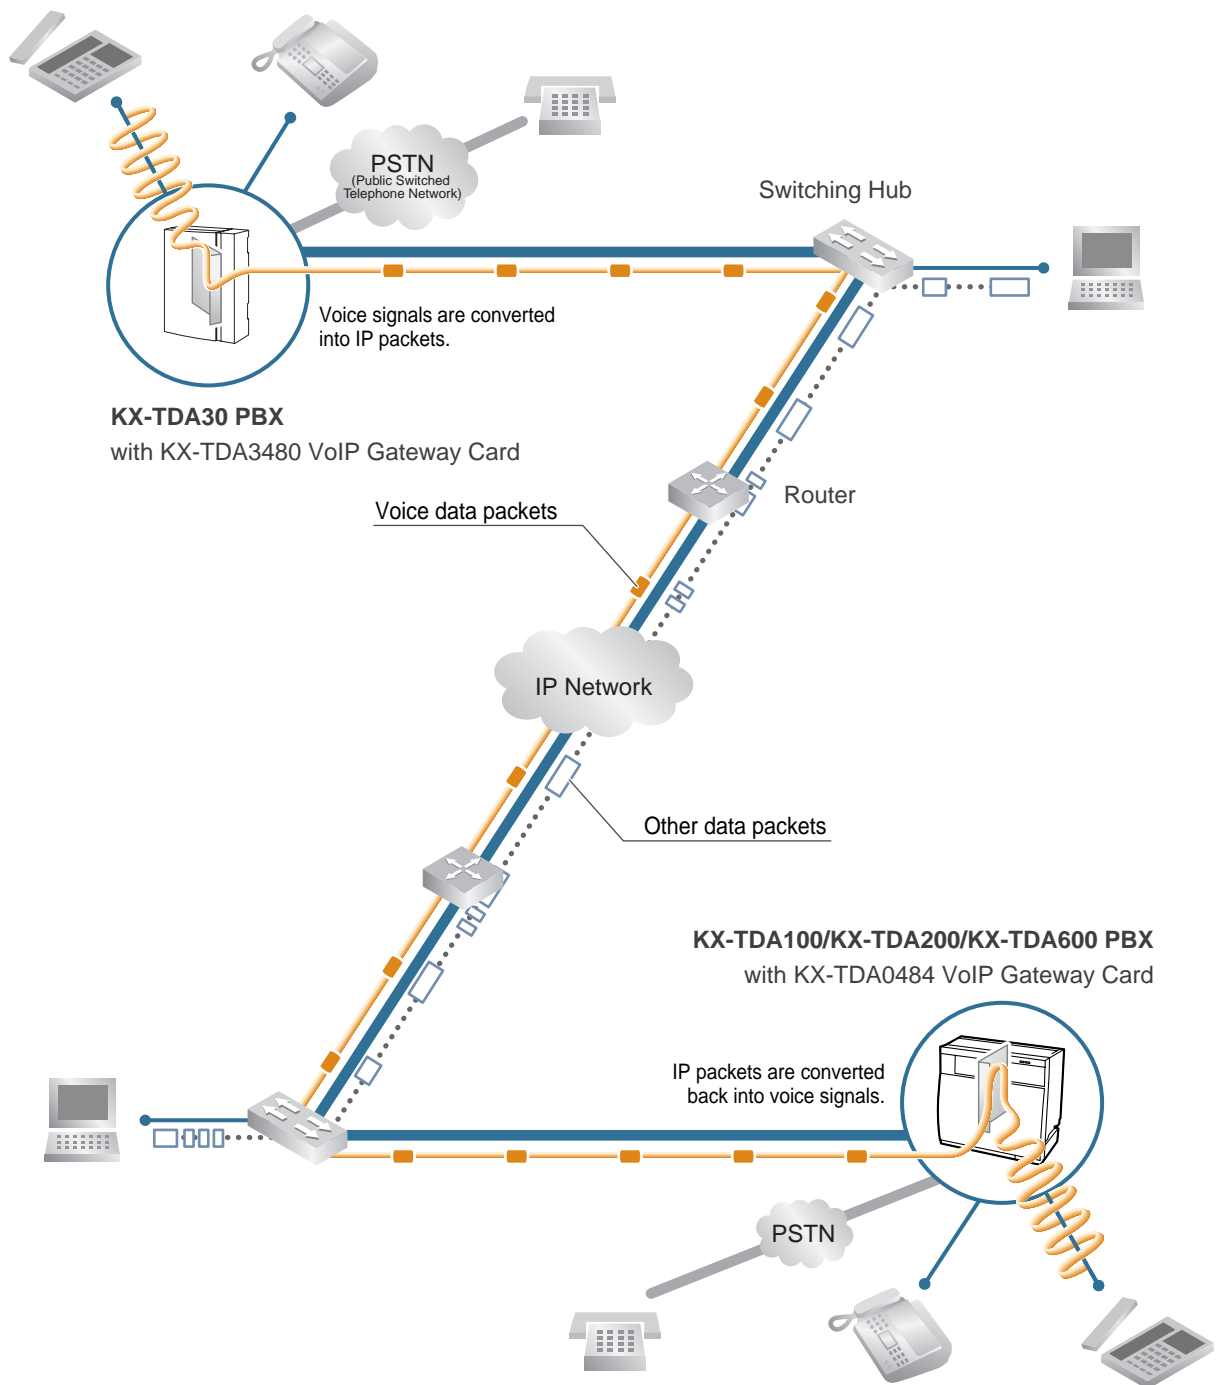

## 1.2 Network Devices and Numbering Plan

You will need to have network configuration information available to install VoIP Gateway Cards. Referring to this example diagram, consult your network administrator to obtain necessary information to configure your own VoIP network.

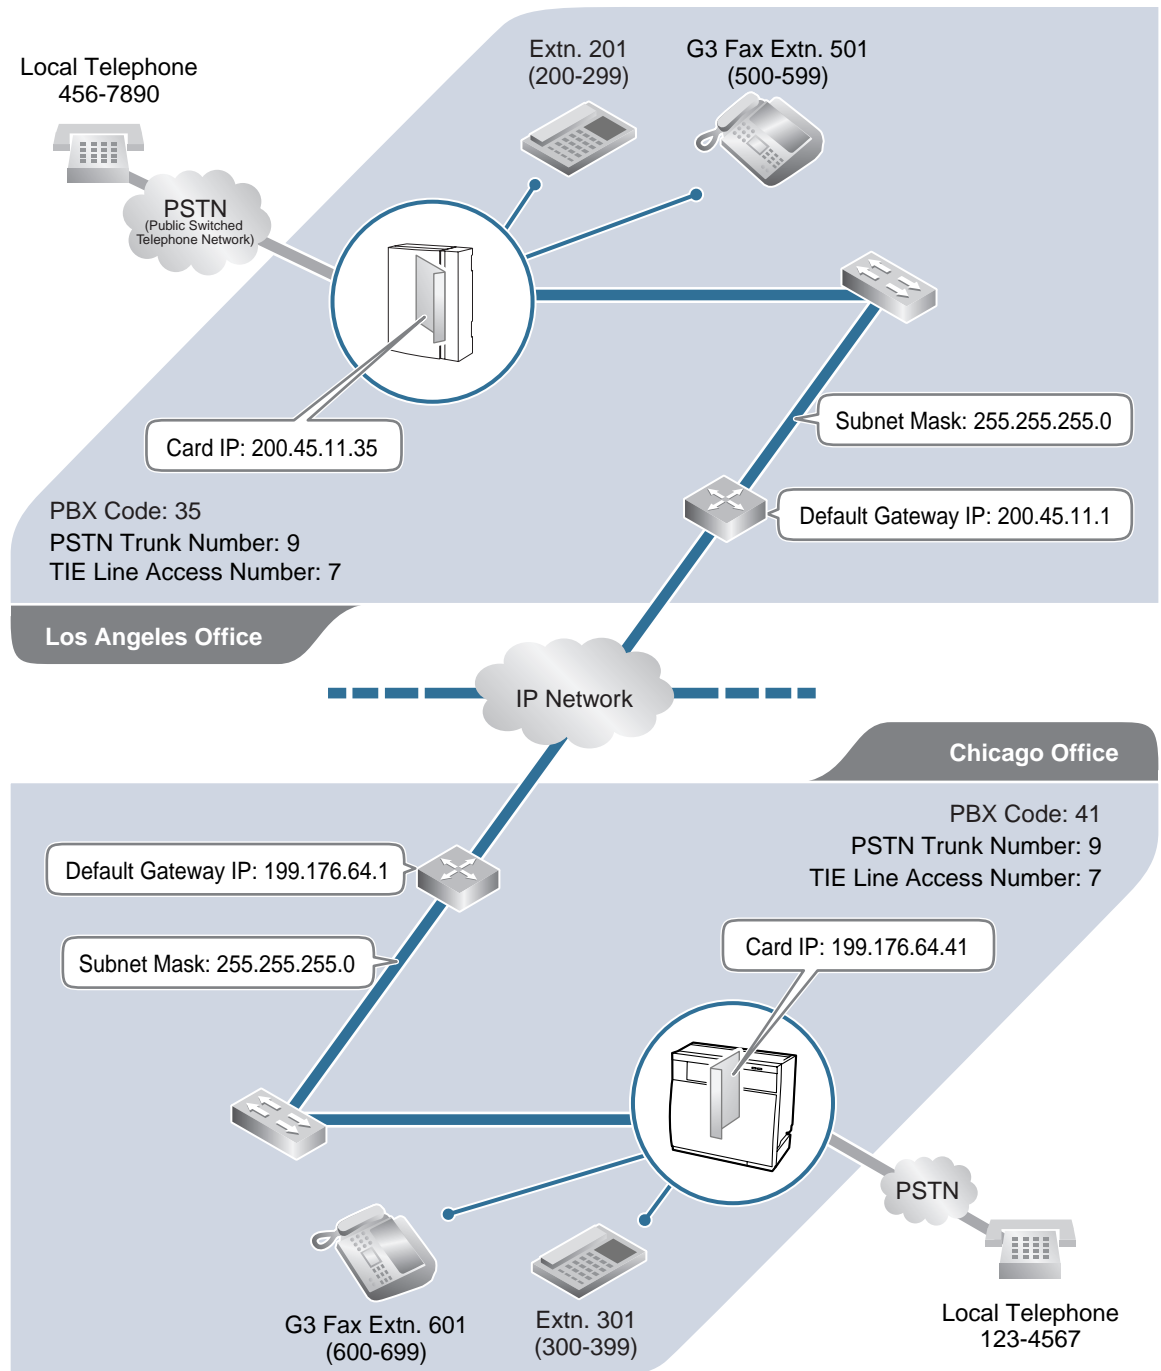

### 1.2.1 Network Application

#### QSIG Network Interface

QSIG is a protocol based on ISDN (Q.931) that offers enhanced PBX features in a private network. The QSIG network supports private communications by the TIE line service method. Implementation of VoIP Gateway Cards provides a VoIP interface to employ a QSIG network between PBXs at different locations by using an IP network instead of conventional telephone networks.

#### Types of IP Network

The VoIP Gateway Card's quality of performance depends on the type of IP network in use. Managed IP networks provide better quality of service compared to unmanaged networks, where quality of service is not guaranteed.

##### Examples of recommended IP networks

- Digital Leased Line
- IP-VPN (Virtual Private Network)
- Frame Relay

##### **Notice**

The performance of the VoIP Gateway Card may deteriorate when it is used on the Internet. Delays and loss in data transmission can degrade speech quality, and impair the card's capability to use the enhanced networking features of the PBX (for more information about these features, refer to the relevant sections of the Hybrid IP-PBX documentation.)

#### Using the KX-TDA3480/KX-TDA0484 with Other KX-TDA Series VoIP Gateway Cards

When using the KX-TDA3480/KX-TDA0484 in a network that contains other KX-TDA series VoIP Gateway Cards, keep in mind the following points:

##### 1. Making and Receiving Calls

Calls can be made and received between the KX-TDA3480/KX-TDA0484 and other KX-TDA series VoIP Gateway Cards. However, the KX-TDA0480 requires a special setting to be able to communicate with the KX-TDA3480/KX-TDA0484 on the network. Refer to "D1 Considerations in Installation" for more details.

##### 2. Using QSIG Services

All QSIG services available with the PBX can be used between the KX-TDA3480/KX-TDA0484 and KX-TDA0490. However, CLIP service is the only available QSIG service between the KX-TDA3480/KX-TDA0484 and KX-TDA0480.

#### Firewall

A firewall protects the internal networks of an organisation against unauthorised penetration from outside. When routing a VoIP network through a firewall, some performance degradation may result. If for practical reasons you must route the VoIP network through a firewall, refer to "A1.3 Network Devices" for more details.

## 1.2.2 Numbering Plan Example

There are 2 methods to plan your numbering system, as follows:

<b>PBX code method</b>	In addition to the destination number, the caller dials the unique PBX code of the PBX to which the called party is connected. Therefore, extension numbers at separate PBXs in the network can overlap. For example, each PBX in the network can have an extension whose number is 201.
<b>Extension number method</b>	The caller dials only the destination number of the called party to call through PBXs at different locations (hence there are fewer digits to dial than with the PBX code method). To employ the extension number method, no 2 PBXs can have extensions sharing the same number. For example, if one PBX in the network has an extension whose number is 201, no other PBX can have an extension with the same number (201).

This section provides a network numbering mechanism using the PBX code method based on the previous example diagram. Configure your network referring to this example.

### Note

An example using the extension number method is provided in "B Alternative Numbering Plan Example".

## IP Addressing Information

IP addressing information is typically supplied by a network administrator. Consult your network administrator for specific values.

	<b>Los Angeles Office</b>	<b>Chicago Office</b>	<b>Description</b>
Card IP Address	200.45.11.35	199.176.64.41	Identifies the location of each VoIP Gateway Card in the network during VoIP communications. A unique IP address must be assigned to each card.
Default Gateway Address	200.45.11.1	199.176.64.1	Identifies the IP address of the primary gateway (typically a router or similar device) that exchanges IP packets with the other gateways on the VoIP network.
Subnet Mask Address	255.255.255.0	255.255.255.0	Defines which digits of an IP address are used for the network address and the host address at each network location. A card IP address must fall within the same subnet as that of the default gateway (e.g., router) that is connected to the card.

## PBX Numbering Information

PBX numbering information is necessary to set up phone numbers for a VoIP network. Set the numbers conforming to existing PBX numbering systems.


	Los Angeles Office	Chicago Office	Description
PBX Code	35	41	A unique number (ranging from 1 to 7 digits) assigned to identify each PBX within a network.  In this example, for convenience, each PBX code corresponds to the last portion of the IP address of its card; that is, because the Los Angeles office card has the IP address 200.45.11. <u>35</u> , Los Angeles PBX code is <u>35</u> .
TIE Line Access Number	7	7	An access number to use the TIE line service.
PSTN Trunk Number	9	9	An access number to seize a local PSTN trunk.
Extension Number	200 to 299	300 to 399	A number assigned to each extension.
Fax Extension Number	500 to 599	600 to 699	A number assigned to each fax extension.

## Dialling Examples


The VoIP network allows you to access the PBX at one location from another to establish: (1) an extension call, or (2) an outside call through the local PSTN as if you are calling from the same area.

### Calling from Los Angeles to Chicago

To extension 301 via VoIP network

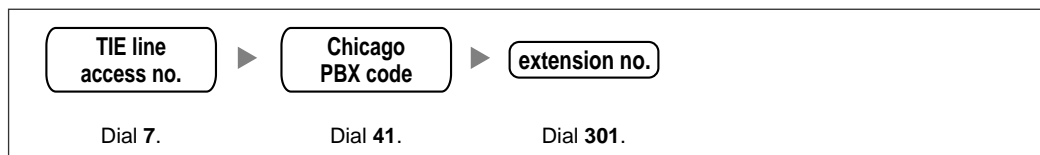



To local telephone 123-4567 via VoIP network through local PSTN

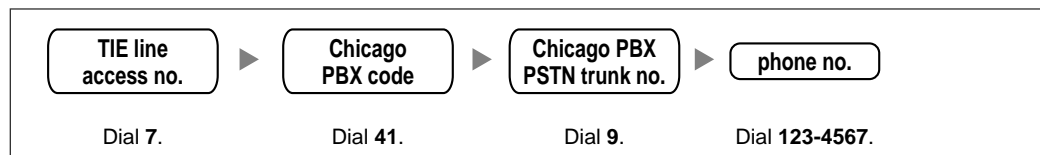

### Calling from Chicago to Los Angeles

To extension 201 via VoIP network

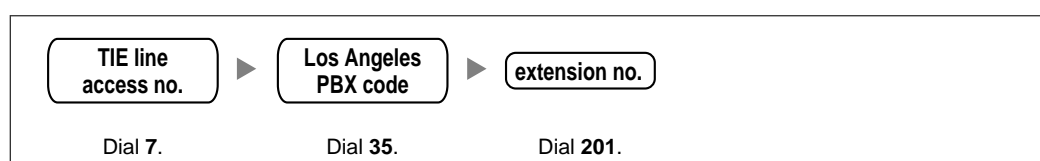

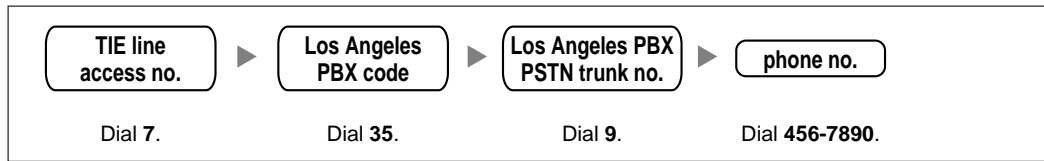**To local telephone 456-7890 via VoIP network through local PSTN****PBX Connection Information**


PBX connection information is created by combining IP Addressing Information and PBX Numbering Information. Referring to the sample below, create your own PBX connection information.

**Leading Number:**

A number composed of the PBX code followed by the first digit of the destination number. See the example on the right.

**Remaining Digits:**

The maximum number of digits to be dialled following the leading number to access the destination. (However, for example, setting the remaining digits to 7 does not mean that the user must dial all 7 digits when making a call.) See the example on the right.

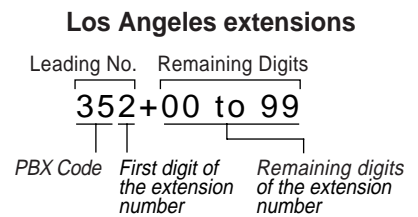
**Card IP Address:**

The IP address of each card in the network (as the access destination).

	Los Angeles Office (PBX Code: 35)			Chicago Office (PBX Code: 41)		
	Extn.	FAX Extn.	PSTN Access	Extn.	FAX Extn.	PSTN Access
Leading Number	352	355	359	413	416	419
Remaining Digits	2	2	7	2	2	7
Card IP Address	200.45.11.35			199.176.64.41		

### 1.2.3 Numbering Plan Summary

Print this page and write down your network information in the space provided below for each card in the network. Consult your network administrator to fill in the shaded entries.

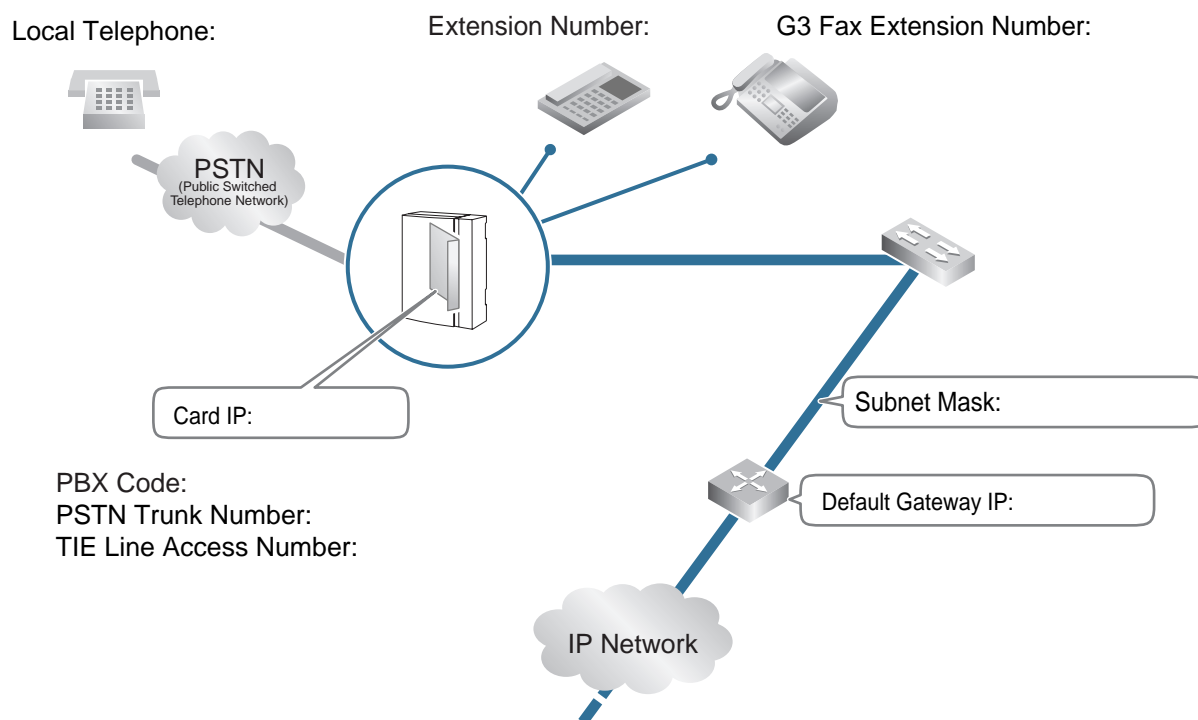

#### IP Address

Card IP Address	
Default Gateway IP Address	
Subnet Mask Address	

#### PBX Numbering

PBX Code	
TIE Line Access Number	
PSTN Trunk Number	
Extension Number	
Fax Extension Number	

#### PBX Connection

	Extensions	Fax Extensions	PSTN Access
Leading Number			
Remaining Digits			
Card IP Address			

---


## Section 2

# ***Installing in the KX-TDA30 PBX***

*This section describes the physical installation process of the KX-TDA3480 VoIP Gateway Card covering the following topics: (1) installing the card in the KX-TDA30 PBX, and (2) connecting the card to a network device using a Category 5 (CAT5) Ethernet cable.*

## 2.1 Installation

### 2.1.1 Names and Locations

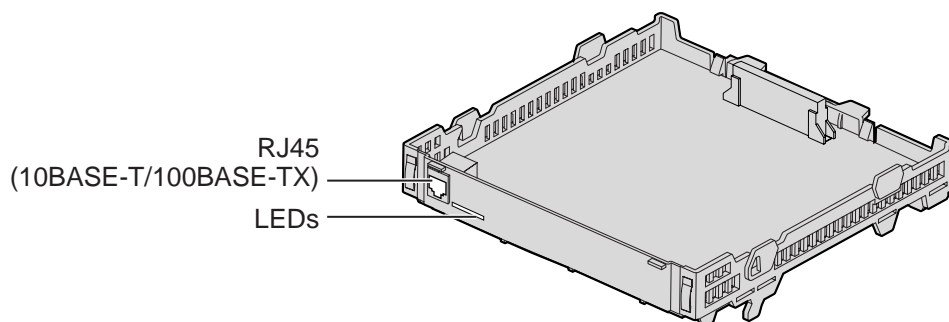

#### Indication Light (LED)


When the VoIP Gateway Card is operating, each LED should show the status identified in **bold-face letters** under normal conditions.

Indication	Colour	Description
ONLINE	Green	On-line status indication <ul style="list-style-type: none"> <li>• <b>ON: On-line mode</b></li> <li>• OFF: Off-line mode</li> <li>• Flashing: Maintenance mode</li> </ul> <b>Note</b> If the LINK indicator is OFF, the ONLINE indicator will also be OFF.
ALARM	Red	Alarm indication <ul style="list-style-type: none"> <li>• ON: Alarm</li> <li>• <b>OFF: Normal</b></li> </ul>
LINK	Green	Link status indication <ul style="list-style-type: none"> <li>• <b>ON: Normal connection</b></li> <li>• OFF: Connection error</li> </ul>
DATA	Green	Data transmission indication <ul style="list-style-type: none"> <li>• ON: Data transmitting</li> <li>• OFF: No data transmitted</li> </ul>

## 2.1.2 Installing the VoIP Gateway Card in the PBX

Install the VoIP Gateway Card in slot 05, 06, or 07 of the KX-TDA30 PBX.


1. Before installing the card, cut and remove the dummy cover plate for the appropriate slot from the main unit.

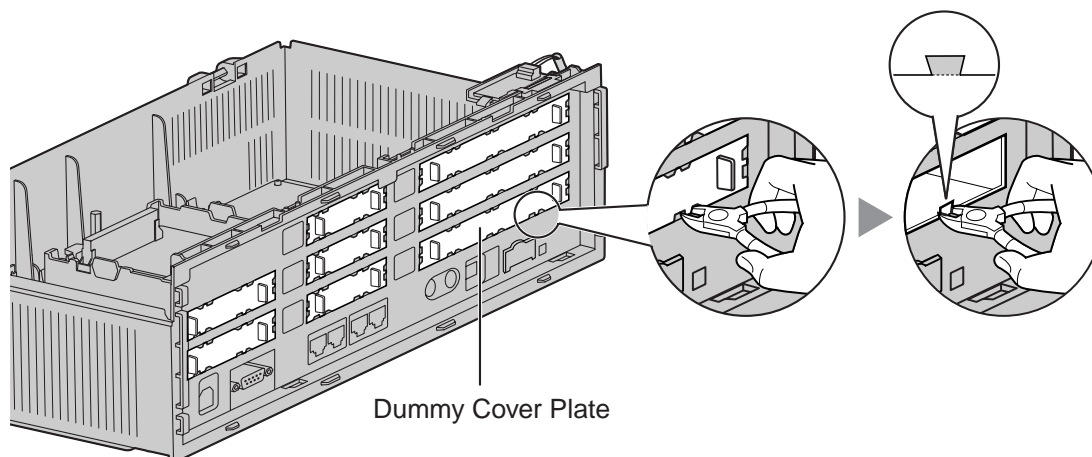

### **CAUTION**

For safety reasons, smooth the cut edges after removing the dummy cover plate.


2. Position the card in the open slot, making sure that the tabs on both sides of the card fit into place. Then, holding the card firmly in place, lower the rear end so that the hole of the card fits over the extension bolt.

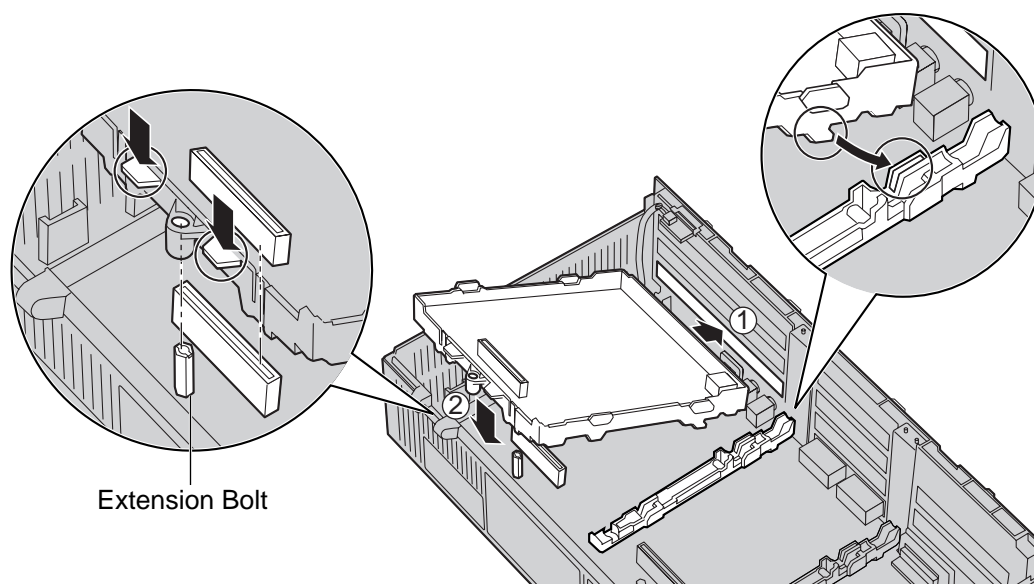

## 2.1 Installation

---

3. Insert the new extension bolt (included with the card) into the hole on the card, and tighten it to secure the card.

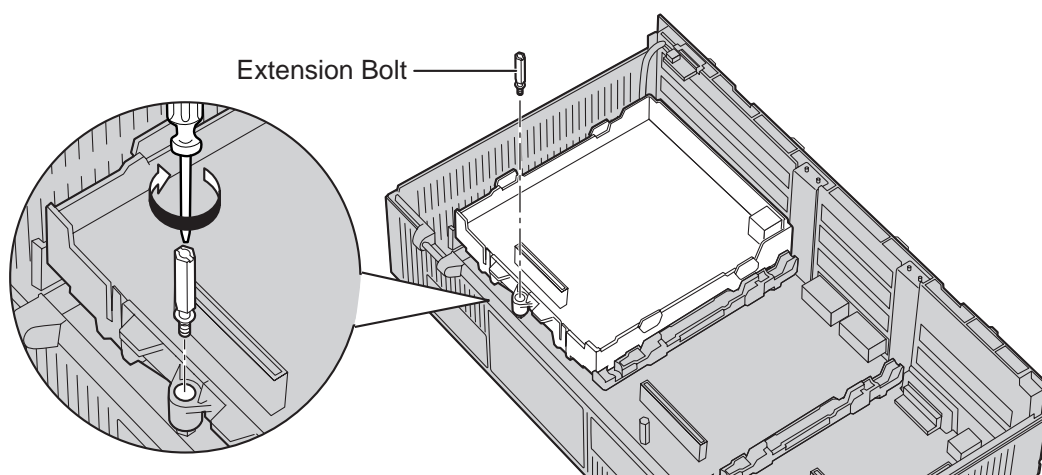

## 2.2 Cable Connection

Use a Category 5 (CAT5) Ethernet cable (10BASE-T/100BASE-TX) with an RJ45 connector to connect the VoIP Gateway Card to a network device.

When connecting the card to a switching hub, use an Ethernet straight cable; when connecting directly to a router or PC, use an Ethernet cross cable.


### **Note**

Use only CAT5 Ethernet cable for connection.

### 2.2.1 Connection for Programming

When assigning a new IP address to the VoIP Gateway Card for the first time, connect a PC directly to the card using an Ethernet cross cable.

1. Connect the Ethernet cable to the RJ45 connector of the card.
2. Connect the other end of the cable to the PC.

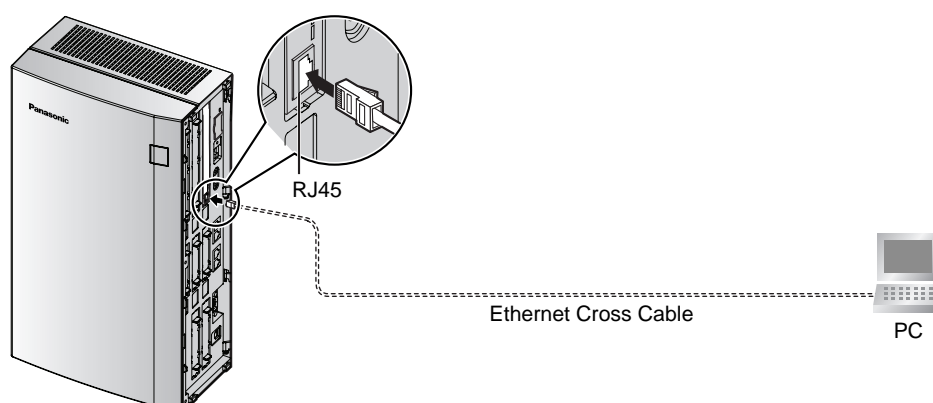


### 2.2.2 Connection to the LAN


Do not connect the VoIP Gateway Card to the LAN unless it has been assigned an IP address for actual VoIP operations on the network. Doing so may result in the default IP address of the card overlapping with an existing IP address on the LAN, or cause network failure.

1. Connect the Ethernet cable to the RJ45 connector of the card.
2. Connect the other end of the cable to the remote LAN equipment.

#### Connecting to a switching hub

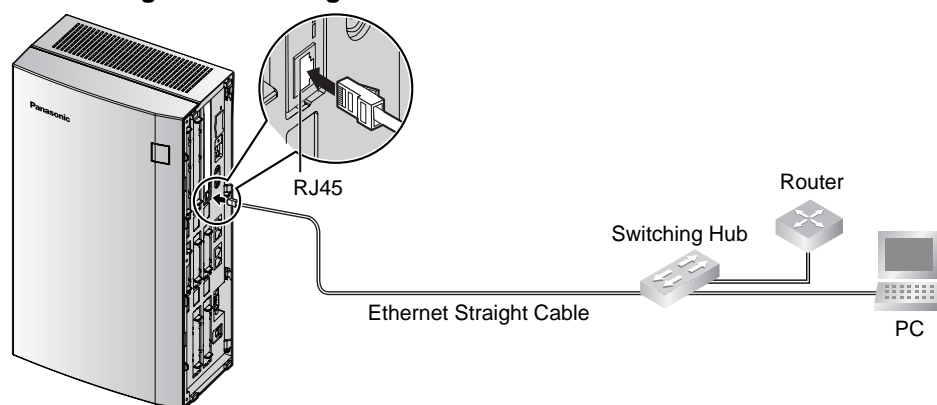

#### Connecting directly to a router

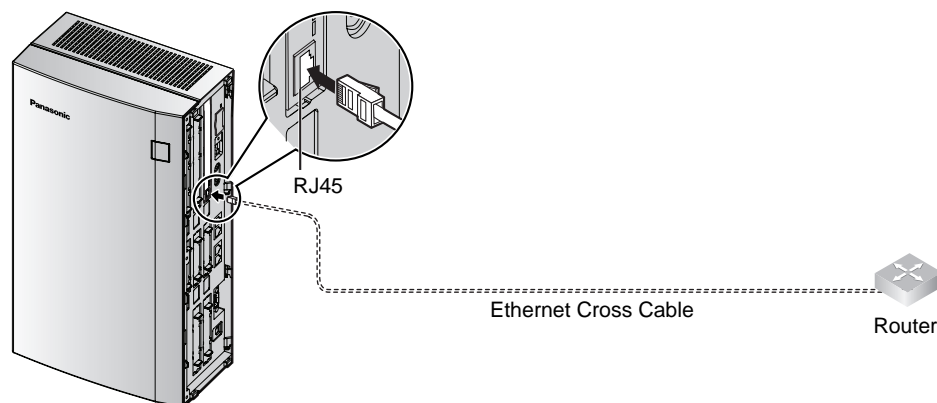

---


## Section 3

# ***Installing in the KX-TDA100/KX-TDA200/KX-TDA600 PBX***

*This section describes the physical installation process of the KX-TDA0484 VoIP Gateway Card covering the following topics: (1) installing the card in the KX-TDA100/KX-TDA200/KX-TDA600 PBX, and (2) connecting the card to a network device using a Category 5 (CAT5) Ethernet cable.*

## 3.1 Installation

### 3.1.1 Names and Locations

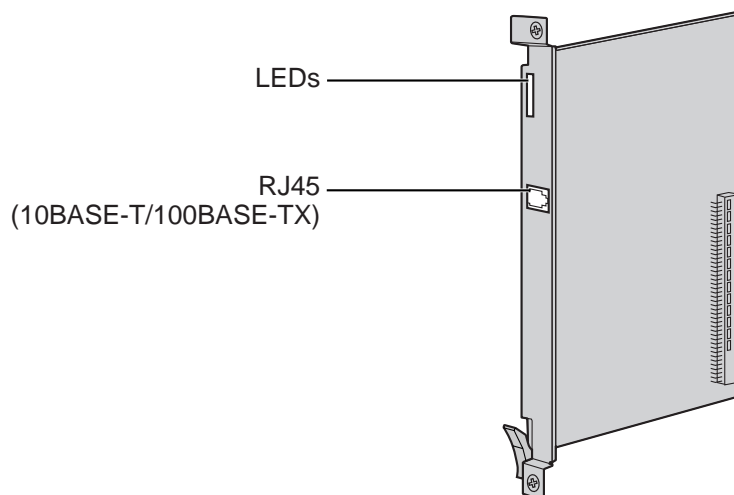

#### Indication Light (LED)

When the VoIP Gateway Card is operating, each LED should show the status identified in **bold-face letters** under normal conditions.

Indication	Colour	Description
CARD STATUS	Green/Red	Card status indication <ul style="list-style-type: none"> <li>• OFF: Power Off</li> <li>• <b>Green ON: Normal (all ports are idle)</b></li> <li>• Green Flashing (60 times per minute): Normal (a port is in use)</li> <li>• Red ON: Fault (includes reset)</li> <li>• Red Flashing (60 times per minute): Out of Service</li> </ul>
ONLINE	Green	On-line status indication <ul style="list-style-type: none"> <li>• <b>ON: On-line mode</b></li> <li>• OFF: Off-line mode</li> <li>• Flashing: Maintenance mode</li> </ul> <p><b>Note</b> If the LINK indicator is OFF, the ONLINE indicator will also be OFF.</p>
ALARM	Red	Alarm indication <ul style="list-style-type: none"> <li>• ON: Alarm</li> <li>• <b>OFF: Normal</b></li> </ul>
VoIP BUSY	Green	VoIP (H.323) process indication <ul style="list-style-type: none"> <li>• OFF: VoIP process inactive</li> <li>• ON: VoIP process active</li> </ul>

Indication	Colour	Description
LINK	Green	Link status indication <ul style="list-style-type: none"><li>• <b>ON: Normal connection</b></li><li>• OFF: Connection error</li></ul>
DATA	Green	Data transmission indication <ul style="list-style-type: none"><li>• ON: Data transmitting</li><li>• OFF: No data transmitted</li></ul>


### 3.1.2 Installing the VoIP Gateway Card in the PBX

Install the VoIP Gateway Card in a free slot of the KX-TDA100/KX-TDA200/KX-TDA600 PBX.

**Note**

The illustrations of the PBX shown in the installation procedure are based on the KX-TDA600.


1. Insert the card along the guide rails.

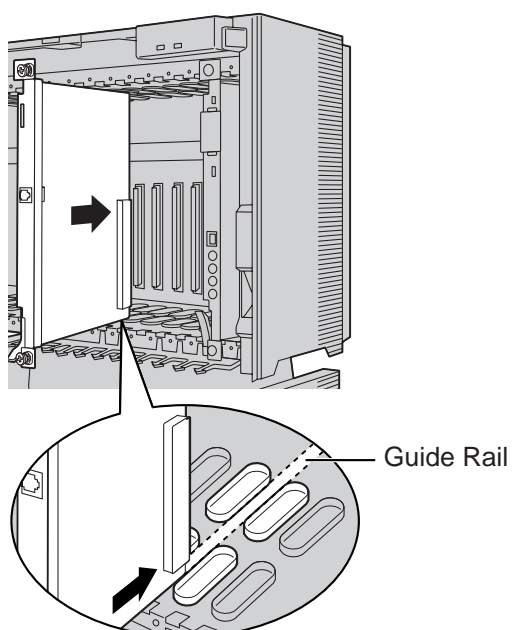


### 3.1 Installation

---

2. Holding the card as shown below, push the release lever in the direction of the arrow so that the card engages securely with the connector on the back board.

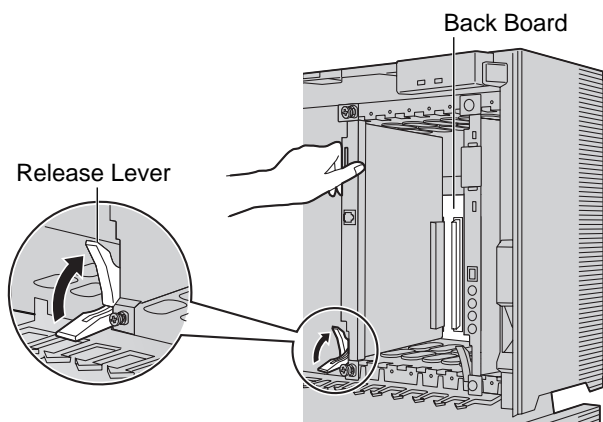

3. Turn the 2 screws clockwise to fix the card in place.

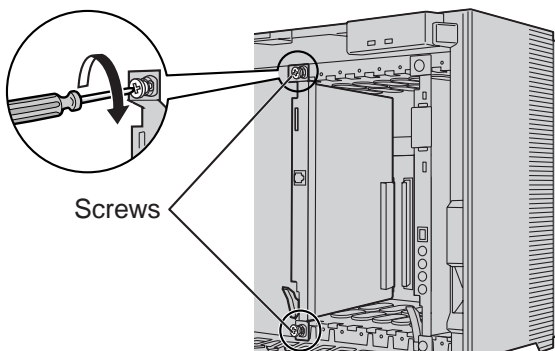

#### **Note**

Make sure the screws are tightened to earth the card securely.

## 3.2 Cable Connection

Use a Category 5 (CAT5) Ethernet cable (10BASE-T/100BASE-TX) with an RJ45 connector to connect the VoIP Gateway Card to a network device.

When connecting the card to a switching hub, use an Ethernet straight cable; when connecting directly to a router or PC, use an Ethernet cross cable.


### **Note**

Use only CAT5 Ethernet cable for connection.

### 3.2.1 Connection for Programming

When assigning a new IP address to the VoIP Gateway Card for the first time, connect a PC directly to the card using an Ethernet cross cable.

1. Connect the Ethernet cable to the RJ45 connector of the card.
2. Connect the other end of the cable to the PC.

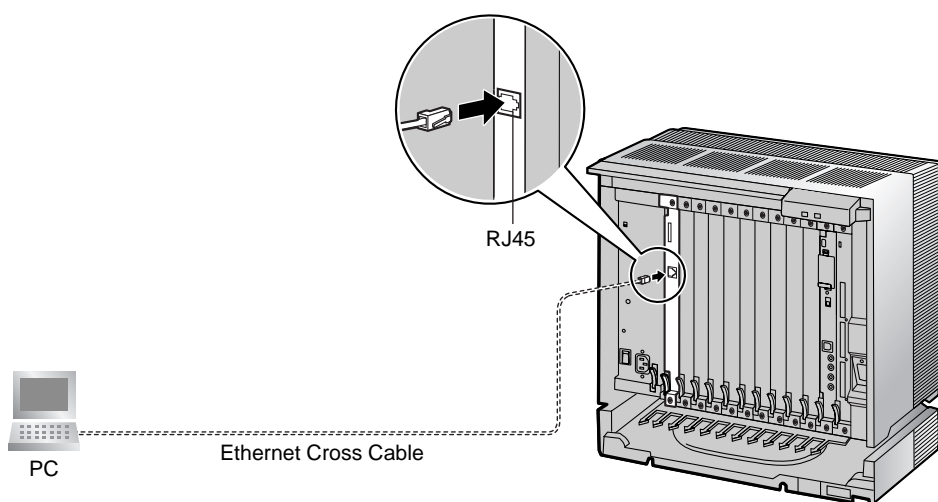


### 3.2.2 Connection to the LAN


Do not connect the VoIP Gateway Card to the LAN unless it has been assigned an IP address for actual VoIP operations on the network. Doing so may result in the default IP address of the card overlapping with an existing IP address on the LAN, or cause network failure.

1. Connect the Ethernet cable to the RJ45 connector of the card.
2. Connect the other end of the cable to the remote LAN equipment.

#### Connecting to a switching hub

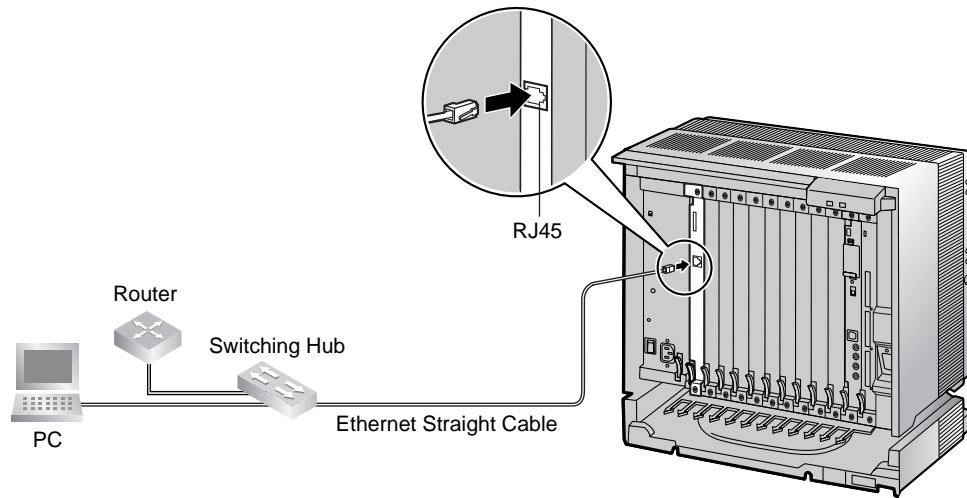

#### Connecting directly to a router

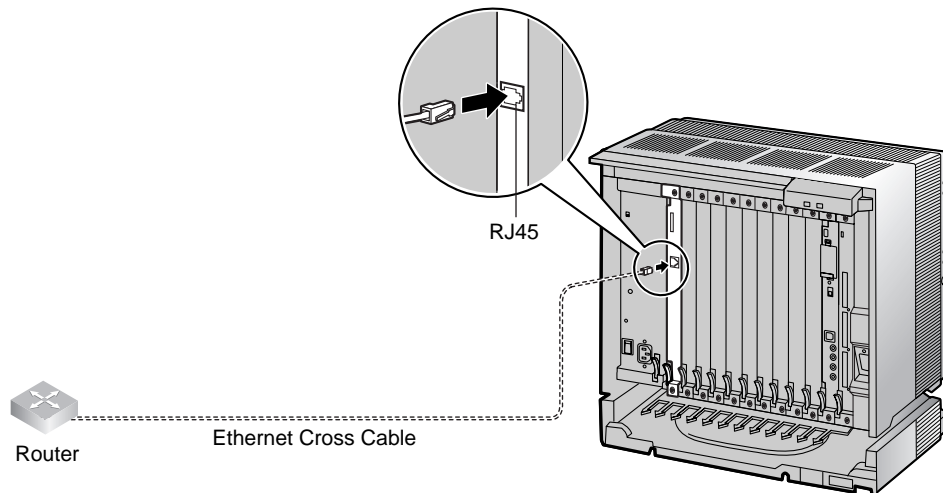

---

## Section 4

# ***Programming the VoIP Gateway Card***

*One way of setting up a VoIP network for the first time is to go through the whole programming process of a VoIP Gateway Card at one location in the network, then start programming the other cards at different locations.*

*Based on the theoretical network illustrated previously in this manual, this section demonstrates the procedure to programme the cards in the Los Angeles and Chicago offices.*

# 4.1 Preparations

A web programming utility called the IP-GW4 Maintenance Utility is available for programming of the VoIP Gateway Card.

For a complete discussion of web programming, refer to the VoIP Gateway Card Programming Guide.

### System Requirements

- The IP-GW4 Maintenance Utility requires Microsoft® Internet Explorer 5.0 or above.

### Trademarks

- Microsoft is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- All other trademarks identified herein are the property of their respective owners.
- Screen shots reprinted with permission from Microsoft Corporation.

## 4.1.1 Preparing the PC


To prepare for programming using the IP-GW4 Maintenance Utility, configure your PC by (1) assigning an IP address that belongs to the same network as that of the VoIP Gateway Card, and (2) choosing the appropriate options for the Internet properties.

### Note

The procedure below is based on the Windows XP operating system as an example.



1. Open **Internet Protocol (TCP/IP) Properties** from the **Start** menu.
2.
  - a. Click **Use the following IP address**.
  - b. In the **IP address** box, type **192.168.1.100**.  
This is an example entry for the case when the card has the default IP address (192.168.1.200).
  - c. In the **Subnet mask** box, type **255.255.255.0**.
  - d. Click **OK**.
3.
  - a. Start Internet Explorer from the **Start** menu.
  - b. Click **Internet Options** from the **Tools** menu.

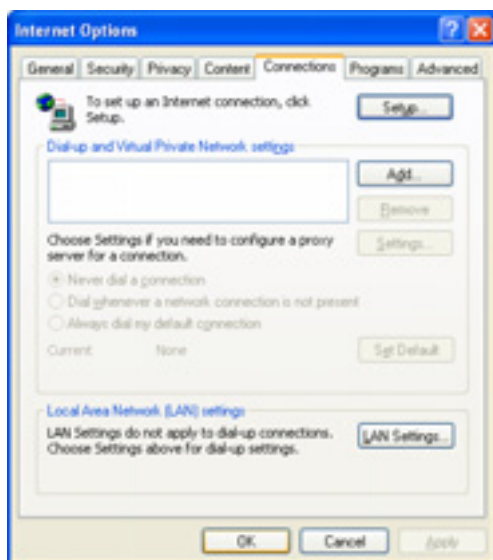

4. a. Click the **Connections** tab.
- b. Click **Never dial a connection**.
- c. Click **LAN Settings**.



5. a. Click to clear all check boxes.
- b. Click **OK**.

Your PC is now ready for programming through direct access to the card.

### Notice When Programming the Card through an IP Network


When the card is put in actual operation on an IP network, you can access and programme the card through the network. However, if the network has a proxy server installed, you must apply appropriate proxy settings to your PC. In this case, follow the steps below in substitution for step 5 above:



5. Click **Advanced**.

## 4.1 Preparations

---

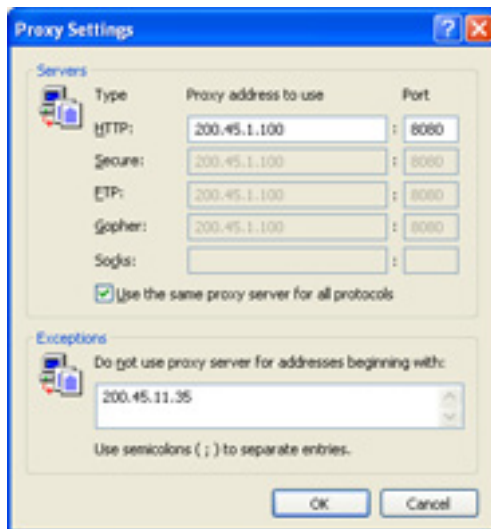

6. a. Under **Do not use proxy server for addresses beginning with:**, type the IP address of the card.
- b. Click **OK**.

Your PC is now ready for programming the card through an IP network.

## 4.2 Programming the VoIP Gateway Card in the Los Angeles Office

Based on the example network in "1.2 Network Devices and Numbering Plan", this section demonstrates the procedure to programme a VoIP Gateway Card for use in the Los Angeles office, as the first step of setting up a VoIP network. VoIP communications between the 2 offices will be possible when the cards, as well as the PBXs, in both offices are fully programmed.


The procedure to programme the card in the Chicago office is given in "4.3 Programming the VoIP Gateway Card in the Chicago Office". In addition, the procedure to programme the PBXs is given in "5 Programming the PBX".

### 4.2.1 Starting the IP-GW4 Maintenance Utility

Make sure that a PC is connected directly to the VoIP Gateway Card with an Ethernet cross cable (see "2.2.1 Connection for Programming" or "3.2.1 Connection for Programming").

The card should not be connected to the LAN at this point.

1. Start Internet Explorer from the **Start** menu.
2. a. In the **Address** box of Internet Explorer, type **http://192.168.1.200** (default IP address of the card).  
b. Press the ENTER key on the keyboard.

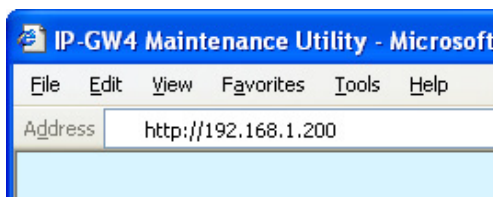

#### Notes

- If you cannot see the log-in screen, return to "4.1.1 Preparing the PC" and confirm that your PC has been configured appropriately.
- If you forget the IP address, you must initialise the card to the default setting (see "C1 Initialising the VoIP Gateway Card").

3. a. In the **Username** box, type **Administrator** (default user name).  
b. In the **Password** box, type **Administrator** (default password).  
c. Click **LOGIN**.

#### Note

If you forget the user name or password, you must initialise the card to the default setting (see "C1 Initialising the VoIP Gateway Card").



## 4.2 Programming the VoIP Gateway Card in the Los Angeles Office

---



The main menu appears.

### **Note**

For readability of the text on the screen, it is recommended that you adjust the text size of Internet Explorer to below medium.


### **Note**

If you finish a programming session without logging out from the card (e.g., quitting Internet Explorer, or returning to the log-in screen with the "Back" button of Internet Explorer), you cannot log in again for the period of time specified by the parameter **Programming Auto Disconnect Time** (default: 10 min).


For the log-out procedure and **Programming Auto Disconnect Time** setting, refer to "2.5.2 Log Out" and "2.3.2 Maintenance Settings" of the VoIP Gateway Card Programming Guide, respectively.

## 4.2.2 Changing the Status of the VoIP Gateway Card


When programming the VoIP Gateway Card, place the card in the "STOP" status.

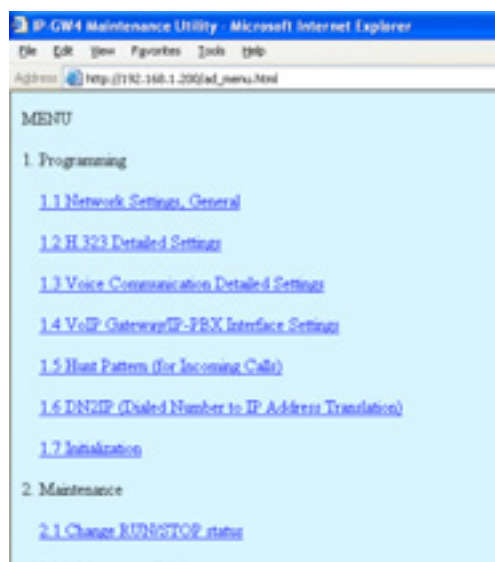


1. Click **2.1 Change RUN/STOP status** in the main menu.

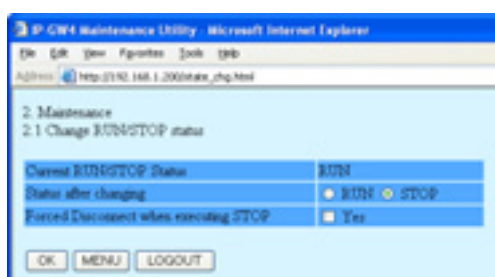

2. a. Click **STOP** for Status after changing.  
b. Click **OK**.

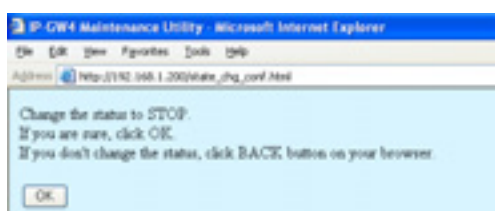

3. Click **OK**.

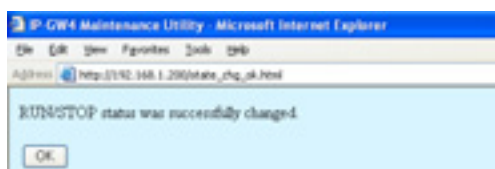

4. Click **OK**.

### 4.2.3 Assigning the IP Address

When programming the VoIP Gateway Card for the first time, a new IP address must be assigned. Once this is done and the card is on-line, it will be able to communicate with the other cards over the VoIP network.

The specific setting values are based on the table under "IP Addressing Information" in "1.2.2 Numbering Plan Example".



1. Click **1.1 Network Settings, General** in the main menu.



2.
  - a. In the **IP Address** box, type **200.45.11.35**.
  - b. In the **Subnet Mask** box, type **255.255.255.0**.
  - c. In the **Default Gateway** box, type **200.45.11.1**.
  - d. Click **OK**.



3. Confirm your entry, and then click **OK**.

#### Note


For more details about IP address assignment, refer to "2.2.1 Network Parameters" of the VoIP Gateway Card Programming Guide.

## 4.2.4 Assigning the Hunt Pattern


The hunt pattern determines how to route incoming calls through the VoIP Gateway Card to the PBX.



1. Click **1.5 Hunt Pattern (for Incoming Calls)** in the main menu.

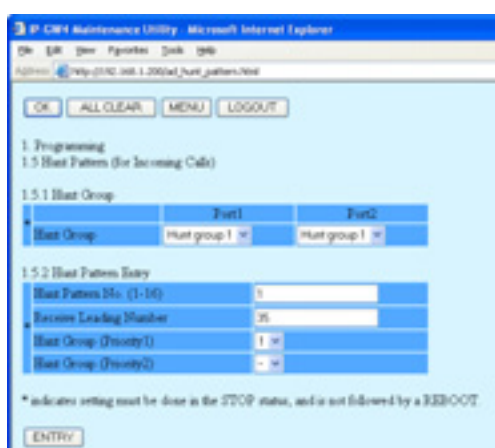

2.
  - a. In the **Hunt Pattern No.** box, type **1**.  
A hunt pattern will be created with this numbering.
  - b. In the **Receive Leading Number** box, type **35** (PBX code).
  - c. Click **ENTRY**.
  - d. Click **OK**.

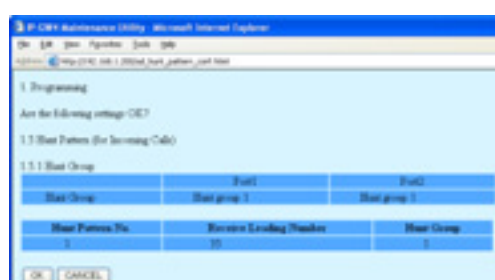

3. Confirm your entry, and then click **OK**.

### Note

For more details about hunt pattern assignment, refer to "2.2.5 Hunt Pattern Parameters" of the VoIP Gateway Card Programming Guide.

### 4.2.5 Programming the Address Translation Table

The function of an address translation table in a VoIP network is to provide 2-way translation of telephone numbers and IP addresses\*1. The address translation table is owned jointly by all VoIP Gateway Cards in the network. Therefore, whenever the address translation table is changed, it is important to update all the cards in the network with the latest information; otherwise VoIP communications cannot be established.

It is possible, at one location in the network, to programme the address translation table that contains information for the entire network. The completed address translation table can then be distributed across the network, so that all the cards share the same information (see "4.2.6 Downloading the Address Translation Table from the VoIP Gateway Card", and "Uploading Address Translation Table to the VoIP Gateway Card" in "4.3 Programming the VoIP Gateway Card in the Chicago Office").

#### Note


The address translation table created for the KX-TDA0484 or KX-TDA3480 can be shared with the KX-TDA0490.

The procedure below demonstrates the process of programming the address translation table necessary for VoIP communications between the Los Angeles and Chicago offices.

The specific setting values are based on the table under "PBX Connection Information" in "1.2.2 Numbering Plan Example".



1. Click **1.6 DN2IP (Dialed Number to IP Address Translation)** in the main menu.

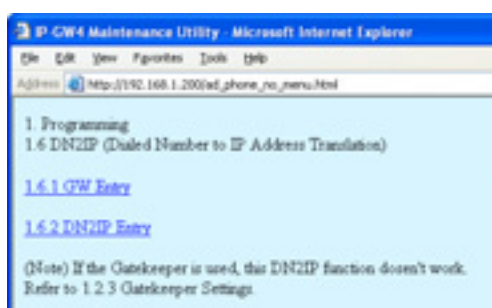

2. Click **1.6.1 GW Entry**.

\*1 IP address-to-telephone number translation can also be handled by using an H.323 Gatekeeper device. To configure Gatekeeper devices, refer to the manufacturer's documentation. This manual focuses on the method using the VoIP Gateway Card's internal address translation capabilities.

IP Gateway Maintenance Utility - Microsoft Internet Explorer

Address: http://192.168.1.200/efm\_gateway\_gm.html

OK MENU PREVIOUS LOGOUT

1. Programming

1.4 DTCIP (Dial-4 Number to IP Address Translation)

1.4.1 GW Entry

GW No. (0-511)	0
Comment	Los Angeles
IP Address	200.45.11.35
Group No.	0

\* indicates setting must be done in the STOP status, and is not followed by a REBOOT.

ENTRY

3. Do the following to configure the gateway entry for the Los Angeles office:

- a. In the **GW No.** box, type **0**.  
A gateway entry for the card will be created with this numbering.
- b. In the **Comment** box, type **Los Angeles** (a unique identifier of the card in the VoIP network).
- c. In the **IP Address** box, type **200.45.11.35**.
- d. In the **Group No.** box, type **0**.

### Note

Having the value **0** for **Group No.** means that the card does not belong to any gateway group. Grouping is useful when installing multiple cards at one location. For details, refer to "2.2.6 Address Translation Table—GW Entry" of the VoIP Gateway Card Programming Guide.

- e. Click **ENTRY**.

IP Gateway Maintenance Utility - Microsoft Internet Explorer

Address: http://192.168.1.200/efm\_gateway\_gm.html

OK MENU PREVIOUS LOGOUT

1. Programming

1.4 DTCIP (Dial-4 Number to IP Address Translation)

1.4.1 GW Entry

GW No. (0-511)	1
Comment	Chicago
IP Address	199.176.64.41
Group No.	0

\* indicates setting must be done in the STOP status, and is not followed by a REBOOT.

ENTRY

4. Do the following to configure the gateway entry for the Chicago office:

- a. In the **GW No.** box, type **1**.
- b. In the **Comment** box, type **Chicago**.
- c. In the **IP Address** box, type **199.176.64.41**.
- d. In the **Group No.** box, type **0**.
- e. Click **ENTRY**.
- f. Click **OK**.

5. Confirm your entry, and then click **OK**.

The gateway entries for the Los Angeles and Chicago offices are now configured.

IP Gateway Maintenance Utility - Microsoft Internet Explorer

Address: http://192.168.1.200/efm\_gateway\_gm.html

OK MENU PREVIOUS LOGOUT

1. Programming

Are the following settings OK?

1.4 DTCIP (Dial-4 Number to IP Address Translation)

1.4.1 GW Entry

GW No.	Comment	IP Address	Group No.
0	Los Angeles	200.45.11.35	0
1	Chicago	199.176.64.41	0

OK CANCEL

## 4.2 Programming the VoIP Gateway Card in the Los Angeles Office

IP GW4 Maintenance Utility - Microsoft Internet Explorer

Address: http://192.168.1.200/ad\_register\_ga.html

OK MENU PREVIOUS LOGOUT

1. Programming  
1.6 DN2IP (Dialled Number to IP Address Translation)

1.6.1 GW Entry

GW No. (0-511)	0
Context	Los Angeles
IP Address	208.45.11.25
Group No.	0

\* indicator setting must be done in the STOP status, and is not followed by a REBOOT

ENTRY

6. Click **PREVIOUS**.

IP GW4 Maintenance Utility - Microsoft Internet Explorer

Address: http://192.168.1.200/ad\_phone\_no\_menu.html

1. Programming  
1.6 DN2IP (Dialled Number to IP Address Translation)

[1.6.1 GW Entry](#)

[1.6.2 DN2IP Entry](#)

(Note) If the Gatekeeper is used, this DN2IP function doesn't work. Refer to 1.2.3 Gatekeeper Settings.

7. Click **1.6.2 DN2IP Entry**.

IP GW4 Maintenance Utility - Microsoft Internet Explorer

Address: http://192.168.1.200/ad\_register\_phone\_no.html

OK MENU PREVIOUS LOGOUT

1. Programming  
1.6 DN2IP (Dialled Number to IP Address Translation)

1.6.2 DN2IP Entry

Leading Number	352
Remaining Number of Digits	2
GW No/Group No. Selection	<input checked="" type="radio"/> GW <input type="radio"/> Group
GW No/Group No.	0

\* indicator setting must be done in the STOP status, and is not followed by a REBOOT

ENTRY

8. Do the following to configure the Los Angeles extensions:

- In the **Leading Number** box, type **352** (PBX code [35] + extension starting digit [2]).
- In the **Remaining Number of Digits** box, type **2** (2 digits to dial [00 to 99] following the leading number).
- Click **GW** for **GW No/Group No. Selection**.
- In the **GW No/Group No.** box, type **0** (the gateway entry for the card).
- Click **ENTRY**.

IP GW4 Maintenance Utility - Microsoft Internet Explorer

Address: http://192.168.1.200/ad\_register\_phone\_no.html

1. Programming  
1.6 DN2IP (Dialled Number to IP Address Translation)

1.6.2 DN2IP Entry

GW No/Group No.	Leading Number	Remaining Number of Digits	GW No.	Group No.	Context
0	352	2	0	0	Los Angeles
1	352	2	0	0	Los Angeles
2	352	2	0	0	Los Angeles
3	352	2	0	0	Los Angeles
4	352	2	0	0	Los Angeles
5	352	2	0	0	Los Angeles

OK LOGOUT

9. a. Referring to step 8, complete the address translation table as shown on the left.

- Click **OK**.
- Confirm your entry, and then click **OK**.


### Note

For more details about address translation programming, refer to "2.2.6 Address Translation Table—GW Entry" and "2.2.7 Address Translation Table—DN2IP Entry" of the VoIP Gateway Card Programming Guide.

## 4.2.6 Downloading the Address Translation Table from the VoIP Gateway Card

After the address translation table has been fully programmed, download the data from the VoIP Gateway Card.

The downloaded data can be uploaded to the other cards on the VoIP network (see "Uploading Address Translation Table to the VoIP Gateway Card" in "4.3 Programming the VoIP Gateway Card in the Chicago Office"), so that all the cards can communicate with each other over the network.

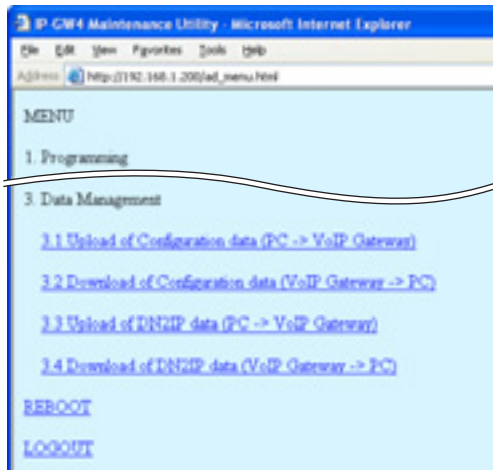

1. Click **3.4 Download of DN2IP data (VoIP Gateway → PC)** in the main menu.




2. a. Click **DOWNLOAD**.  
b. Specify the file name and the folder in which to save the file.

### Note


For more details about downloading the address translation table, refer to "2.2.4 VoIP Gateway/ IP-PBX Interface Parameters" of the VoIP Gateway Card Programming Guide.

### 4.2.7 Rebooting the VoIP Gateway Card

For all the changes to the parameters to become effective, you must reboot the VoIP Gateway Card.

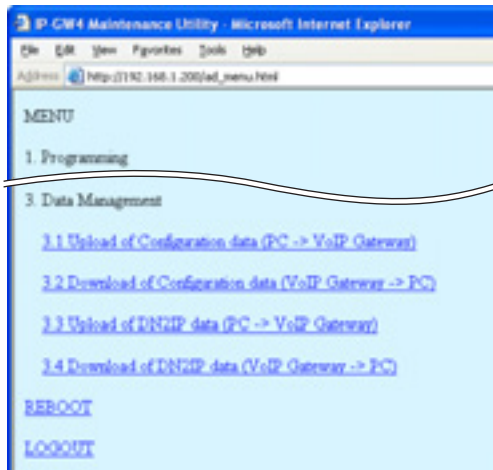

1. Click **REBOOT** in the main menu.

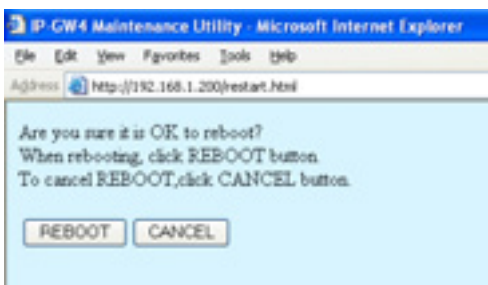

2. Click **REBOOT**.

## 4.2.8 Confirming the IP Address Assignment

After programming of the VoIP Gateway Card is finished, try to access the card with the new IP addressing information. If you can connect to the card without problems, the card can be placed on the LAN for VoIP operations (see "2.2.2 Connection to the LAN" or "3.2.2 Connection to the LAN").

Follow the procedure below, referring to "4.1.1 Preparing the PC" and "4.2.1 Starting the IP-GW4 Maintenance Utility".

1. Set the IP address settings of the PC to the following values:
  - IP address: 200.45.11.100
  - Subnet Mask address: 255.255.255.0
2. Start Internet Explorer from the **Start** menu.
3. In the **Address** box of Internet Explorer, type **http://200.45.11.35** (the new IP address of the card).
4. Press the ENTER key on the keyboard.  
If you can log in, then the card has been successfully programmed.

After you have confirmed that the card has been successfully programmed, it is strongly recommended that you download the configuration data from the card and save it on your PC for backup and archive purposes.


The procedure for downloading the configuration data is provided in "2.4.2 Download of Configuration Data" of the VoIP Gateway Card Programming Guide.

## 4.3 Programming the VoIP Gateway Card in the Chicago Office

This section details the procedure to programme the VoIP Gateway Card in the Chicago office, which for the most part is a duplication of that for the Los Angeles office. For general information that is not discussed here, refer to the relevant sections in "4.2 Programming the VoIP Gateway Card in the Los Angeles Office".


There are differences in the procedure where distinct setting values are required for parameters that are dependent on the specific network configuration of the Chicago office. Also, the address translation table does not need to be programmed, because the one downloaded from the card in the Los Angeles office already contains the information for the entire network. You can simply upload the address translation table from the Los Angeles office, and the cards can communicate with each other on the network.

### Starting the IP-GW4 Maintenance Utility

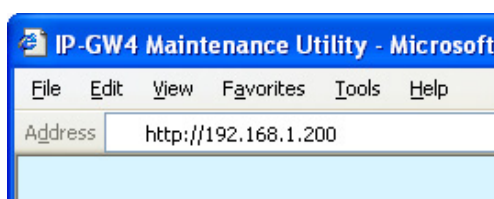

1. Start Internet Explorer from the **Start** menu.
2.
  - a. In the **Address** box of Internet Explorer, type **http://192.168.1.200** (default IP address of the card).  
Make sure that the PC has the appropriate IP address setting to access the card (refer to "4.1.1 Preparing the PC").
  - b. Press the ENTER key on the keyboard.
3.
  - a. In the **Username** box, type **Administrator** (default user name).
  - b. In the **Password** box, type **Administrator** (default password).
  - c. Click **LOGIN**.  
The main menu appears.

### Changing the Status of the VoIP Gateway Card

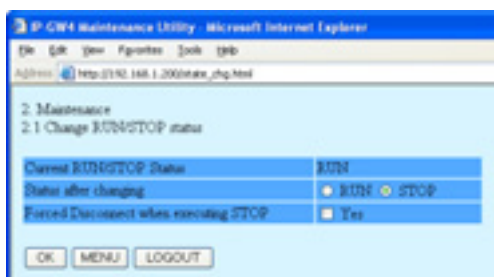


1. Click **2.1 Change RUN/STOP status** in the main menu.
2.
  - a. Click **STOP** for **Status after changing**.
  - b. Click **OK**.
  - c. Click **OK**.
  - d. Click **OK**.

## Assigning the IP Address

Note that the card in the Chicago office requires different IP address settings from the card in the Los Angeles office.




1. Click **1.1 Network Settings, General** in the main menu.
2.
  - a. In the **IP Address** box, type **199.176.64.41**.
  - b. In the **Subnet Mask** box, type **255.255.255.0**.
  - c. In the **Default Gateway** box, type **199.176.64.1**.
  - d. Click **OK**.

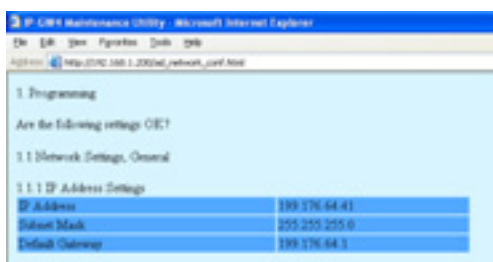

3. Confirm your entry, and then click **OK**.

## Assigning the Hunt Pattern

Note that the card in the Chicago office requires a different PBX code from the card in the Los Angeles office.

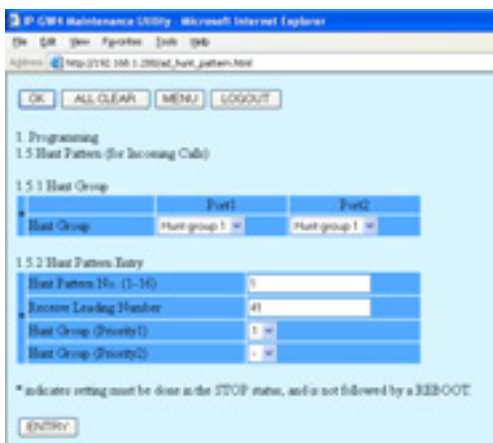

1. Click **1.5 Hunt Pattern (for Incoming Calls)** in the main menu.
2.
  - a. In the **Hunt Pattern No.** box, type **1**.
  - b. In the **Receive Leading Number** box, type **41** (PBX code).
  - c. Click **ENTRY**.
  - d. Click **OK**.




3. Confirm your entry, and then click **OK**.


### Uploading Address Translation Table to the VoIP Gateway Card

For the VoIP Gateway Cards in the Los Angeles and Chicago offices to communicate properly over the VoIP network, the cards must share the same address translation table.


Follow the procedure below to upload the address translation table downloaded from the card in the Los Angeles office (see "4.2.6 Downloading the Address Translation Table from the VoIP Gateway Card") to the card in the Chicago office.

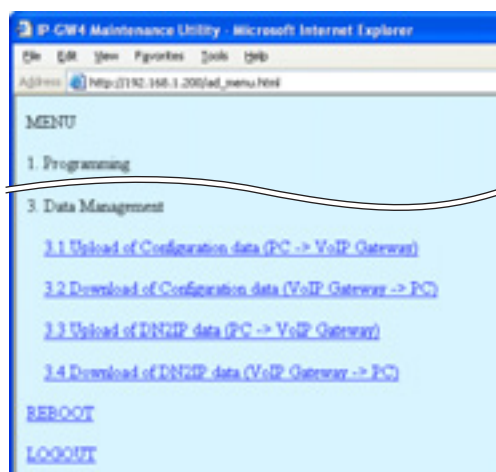


1. Click **3.3 Upload of DN2IP data (PC → VoIP Gateway)** in the main menu.

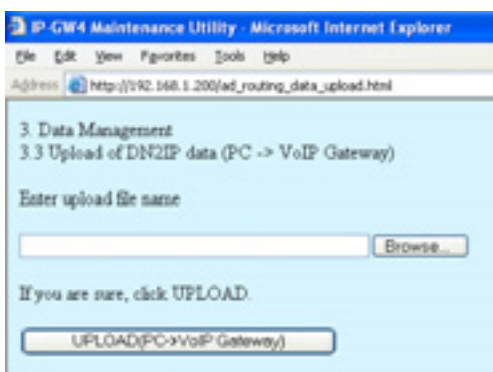

2. a. Click **Browse** and choose a file to upload.  
b. Click **UPLOAD(PC→VoIP Gateway)**.

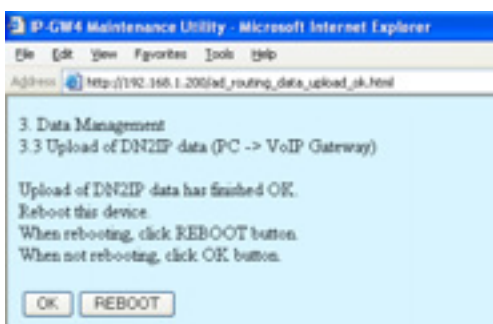

3. Click **REBOOT**.

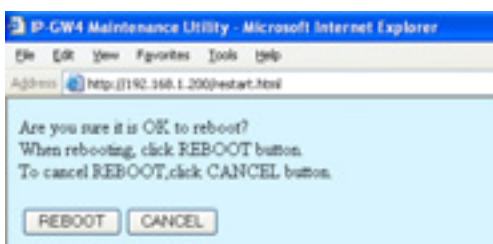

4. Click **REBOOT**.

### **Note**

For more details about uploading the address translation table, refer to "2.4.3 Upload of Address Translation Table" of the VoIP Gateway Card Programming Guide.

## **Confirming the IP Address Assignment**

Note that the card in the Chicago has been assigned a different IP address from the card in the Los Angeles office.

1. Set the IP address settings of the PC to the following values:
  - IP address: 199.176.64.100
  - Subnet Mask address: 255.255.255.0
2. Start Internet Explorer from the **Start** menu.
3. In the **Address** box of Internet Explorer, type **http://199.176.64.41** (the new IP address of the card).
4. Press the ENTER key on the keyboard.

If you can log in, then the card has been successfully programmed.

After you have confirmed that the card has been successfully programmed, it is strongly recommended that you download the configuration data from the card and save it on your PC for backup and archive purposes.

The procedure for downloading the configuration data is provided in "2.4.2 Download of Configuration Data" of the VoIP Gateway Card Programming Guide.

### 4.3 Programming the VoIP Gateway Card in the Chicago Office

---

---

## **Section 5**

# ***Programming the PBX***

*For successful operation of a VoIP network using the VoIP Gateway Card as a QSIG network interface, the PBX at each location in the network must be programmed appropriately. For a detailed discussion of related features, refer to the Hybrid IP-PBX Feature Guide.*

*This section details the procedure to programme the PBX to use the card.*


## 5.1 Programming the PBX in the Los Angeles Office

This section details the procedure to programme the PBX in the Los Angeles office using the Maintenance Console (PC programming software of the PBX). After the PBX in the Los Angeles office has been fully programmed, programme the PBX in the Chicago office with the appropriate setting values (see "5.2 Programming the PBX in the Chicago Office").


### Notes

- It is assumed that you have already installed the KX-TDA30 Maintenance Console (PC programming software of the KX-TDA30 PBX) in your PC.
- The contents and design of the software are subject to change without notice.

1. Start the KX-TDA30 Maintenance Console from the **Start** menu.

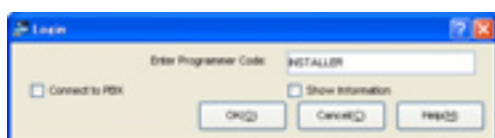

2.
  - a. Type the Installer Level Programmer Code (default: **INSTALLER**).
  - b. Click **OK**.

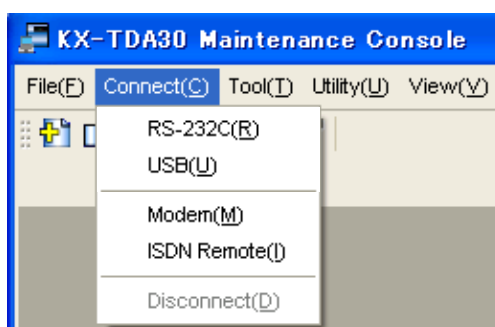


3.
  - a. Click **Connect** → **RS-232C** or **USB**.
  - b. On the next screen, type the system password for installer (default: **1234**).
  - c. Click **OK**.


The system menu appears.




4.
  - a. Under **Configuration**, click **Slot**.
  - b. Move the mouse pointer over the installed VoIP Gateway Card to display the menu of options.
  - c. Click **Port Property**.

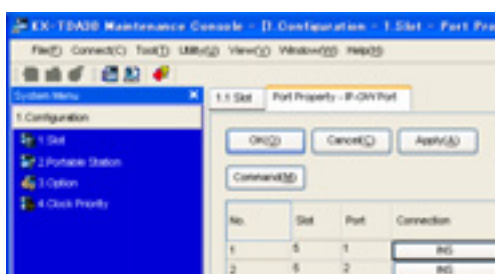


Confirm that ports 1 and 2 are in service (**INS**).

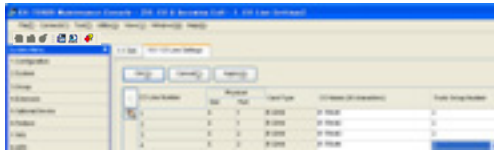

5. a. From the System Menu, click **CO & Incoming Call**.
- b. Click **CO Line Settings**.
- c. Type the **CO Name** and assign an unused **Trunk Group Number** to be used for all VoIP gateway trunks (CO lines).
- d. Click **OK**.

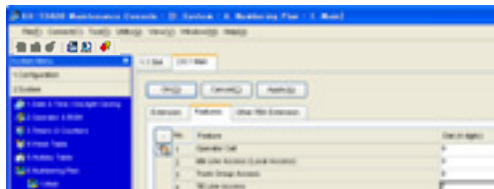


6. a. From the System Menu, click **System**.
- b. Click **Numbering Plan**.
- c. Click **Main**.
- d. Click the **Features** tab.
- e. In the **TIE Line Access** box, type the preferred dial number.
- f. Click **OK**.

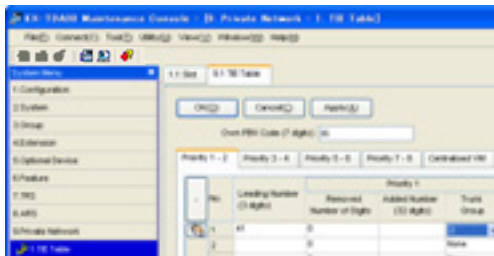

7. a. From the System Menu, click **Private Network**.
- b. Click **TIE Table**.
- c. In the **Own PBX Code** box, type **35** (the PBX code of the local PBX in the network).
- d. In the first unused **Leading Number** box, type **41** (the PBX code of the remote PBX in the network).
- e. In the corresponding **Trunk Group** list, select the number of the trunk group to be used when making calls.
- f. Set the number modification pattern, if necessary.
- g. Click **OK**.



8. a. From the System Menu, click **Configuration**.
- b. Click **Slot**.
- c. Move the mouse pointer over the installed VoIP Gateway Card to display the menu of options.
- d. Click **OUS**.  
You will see a confirmation message.
- e. Click **OK**.
- f. Move the mouse pointer over the installed VoIP Gateway Card to display the menu of options.
- g. Click **Card Property**.

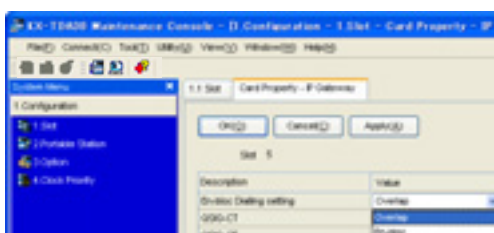

9. a. Select the preferred **En-bloc Dialling setting** (**Overlap** [default] or **En-bloc**\*1).
- b. Click **OK**.

## 5.1 Programming the PBX in the Los Angeles Office

---



10.
  - a. Move the mouse pointer over the installed VoIP Gateway Card to display the menu of options.
  - b. Click **INS**.

\*1 When "En-bloc" is selected, users need to press "#" after dialling the phone number to send the dialled digits.

### **Note**

For details about network parameter settings, refer to the relevant sections of the Hybrid IP-PBX PC Programming Manual.




## 5.2 Programming the PBX in the Chicago Office

This section details the procedure to programme the PBX in the Chicago office using the Maintenance Console (PC programming software of the PBX). Make sure to enter the setting values as appropriate for the Chicago office.

### Notes


- It is assumed that you have already installed the Maintenance Console (KX-TDA100/KX-TDA200: KXTDA Maintenance Console; KX-TDA600: KX-TDA600 Maintenance Console) in your PC.
- The screenshots shown in the installation procedure are based on the KX-TDA600 Maintenance Console.
- The contents and design of the software are subject to change without notice.

1. Start the Maintenance Console from the **Start** menu.
2.
  - a. Type the Installer Level Programmer Code (default: **INSTALLER**).
  - b. Click **OK**.
3.
  - a. Click **Connect** → **RS-232C** or **USB**.
  - b. On the next screen, type the system password for installer (default: **1234**).
  - c. Click **OK**.  
The system menu appears.
4.
  - a. Under **Configuration**, click **Slot**.
  - b. Move the mouse pointer over the installed VoIP Gateway Card to display the menu of options.
  - c. Click **Port Property**.

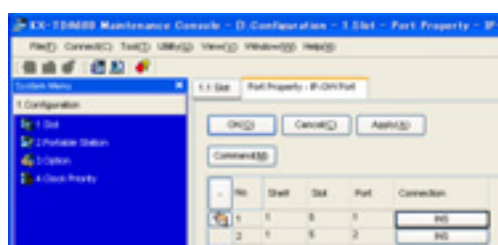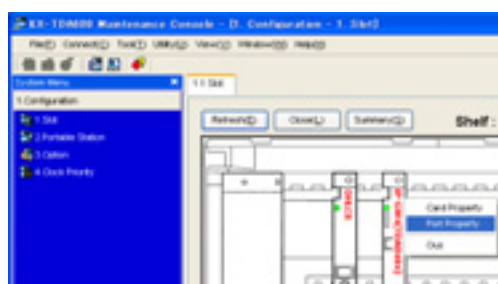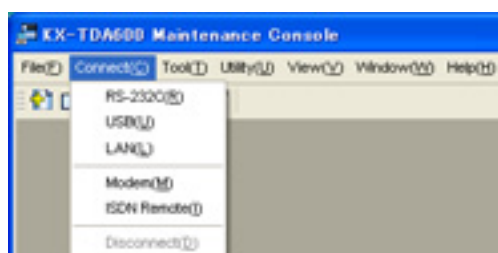


Confirm that ports 1 and 2 are in service (**INS**).


## 5.2 Programming the PBX in the Chicago Office

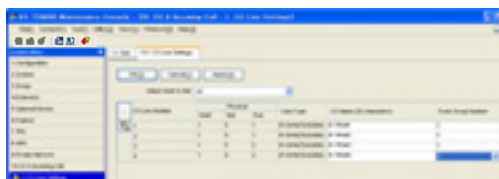


5.
  - a. From the System Menu, click **CO & Incoming Call**.
  - b. Click **CO Line Setting**.
  - c. Type the **CO Name** and assign an unused **Trunk Group Number** to be used for all VoIP gateway trunks.
  - d. Click **OK**.

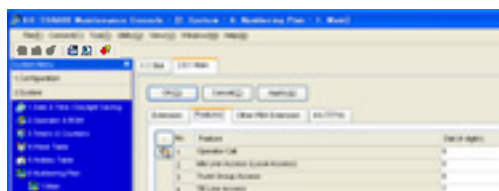


6.
  - a. From the System Menu, click **System**.
  - b. Click **Numbering Plan**.
  - c. Click **Main**.
  - d. Click the **Features** tab.
  - e. In the **TIE Line Access** box, type the dialling number.
  - f. Click **OK**.

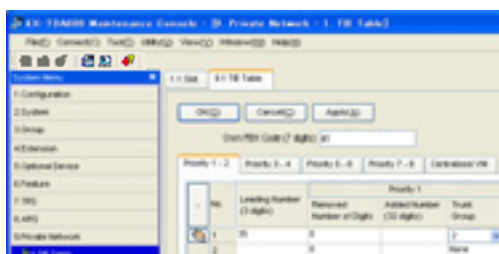


7.
  - a. From the System Menu, click **Private Network**.
  - b. Click **TIE Table**.
  - c. In the **Own PBX Code** box, type **41** (the PBX code of the local PBX in the network).
  - d. In the first unused **Leading Number** box, type **35** (the PBX code of the remote PBX in the network).
  - e. In the corresponding **Trunk Group** list, select the number of the trunk group to be used when making calls.
  - f. Set the number modification pattern, if necessary.
  - g. Click **OK**.

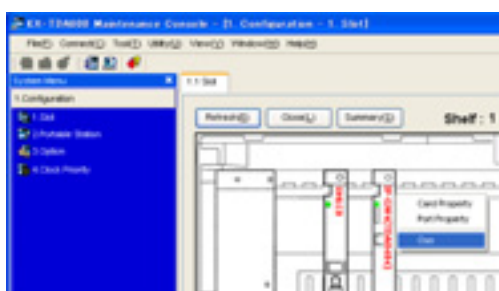

8.
    - a. From the System Menu, click **Configuration**.
    - b. Click **Slot**.
    - c. Move the mouse pointer over the installed VoIP Gateway Card to display the menu of options.
    - d. Click **OUS**.
- You will see a confirmation message.

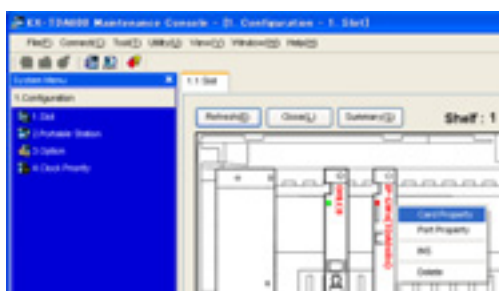

- e. Click **OK**.
  - f. Move the mouse pointer over the installed VoIP Gateway Card to display the menu of options.
  - g. Click **Card Property**.

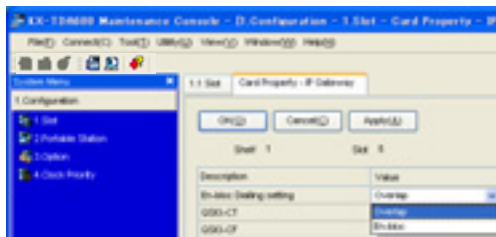

9. a. Select the preferred **En-bloc Dialing setting** (**Overlap** [default] or **En-bloc**\*<sup>1</sup>.  
b. Click **OK**.



10. a. Move the mouse pointer over the installed VoIP Gateway Card to display the menu of options.  
b. Click **INS**.

\*<sup>1</sup> When "En-bloc" is selected, users need to press "#" after dialling the phone number to enter the dialled digits.

### Note

For details about network parameter settings, refer to the relevant sections of the Hybrid IP-PBX PC Programming Manual.



---

## ***Appendix A***

### ***Guidance for VoIP Installation***

# A1 VoIP Requirements

## A1.1 Bandwidth Assessment

When using the VoIP Gateway Card, you must ensure that the IP network in use has enough bandwidth to support VoIP communications. If the amount of bandwidth required for VoIP communications is larger than what the network can accommodate, speech quality will be compromised. In addition, there may be some adverse effect on the performance of other applications (e.g., email or web applications) that use the same network. Therefore, care must be taken when assessing bandwidth requirements.

Inform your network administrator of the required bandwidth, and make sure that the network can support VoIP communications even under conditions of maximum network traffic.

### Bandwidth Calculation

Provided below is the formula to find out the amount of bandwidth required for VoIP communications:

#### Required Bandwidth

$$= (\text{No. of Fax Machines} \times \text{Required Bandwidth for Fax Communication}) + [ (4 - \text{No. of Fax Machines}) \times \text{Required Bandwidth for Voice Communication} ]$$

Required bandwidth for fax and voice communications for one VoIP channel is shown in the tables below (for more details, refer to "2.2.3 Voice Communication Parameters" in the VoIP Gateway Card Programming Guide).

### Required Bandwidth for Voice Communication

The required bandwidth depends on what combination of CODEC and packet sending interval is used. Keep in mind the following points about the type of CODEC and packet sending interval, in terms of the speech quality:

- The speech quality of the CODECs varies as follows: (High) G.711, G.729A, G.723.1 (Low)
- The shorter the packet sending interval, the higher the speech quality.
- The higher the speech quality the VoIP Gateway Card provides, the more bandwidth the card requires.

#### Via LAN

CODEC	Packet Sending Interval				
	20 ms	30 ms	40 ms	60 ms	90 ms
G.711	87.2 kbps	79.5 kbps	75.6 kbps	—	—
G.729A	31.2 kbps	23.5 kbps	19.6 kbps	—	—
G.723.1 5.3 kbps	—	20.8 kbps	—	13.1 kbps	10.5 kbps
G.723.1 6.3 kbps	—	21.9 kbps	—	14.1 kbps	11.6 kbps

**Via WAN (PPP: Point-to-Point Protocol)**

CODEC	Packet Sending Interval				
	20 ms	30 ms	40 ms	60 ms	90 ms
G.711	84 kbps	77.3 kbps	74 kbps	—	—
G.729A	28 kbps	21 kbps	18 kbps	—	—
G.723.1 5.3 kbps	—	18.7 kbps	—	12 kbps	9.8 kbps
G.723.1 6.3 kbps	—	19.7 kbps	—	13.1 kbps	10.8 kbps

**Required Bandwidth for Fax Communication****Via LAN**

FAX High Reliable Method	G.711 Packet Sending Interval		
	20 ms	30 ms	40 ms
Don't Use	87.2 kbps	79.5 kbps	75.6 kbps
Use	224.8 kbps	213.9 kbps	208.4 kbps

**Via WAN (PPP: Point-to-Point Protocol)**

FAX High Reliable Method	G.711 Packet Sending Interval		
	20 ms	30 ms	40 ms
Don't Use	84 kbps	77.3 kbps	74 kbps
Use	221.6 kbps	211.7 kbps	206.8 kbps

**Example**

Consider the following case as an example:

- Communication: via LAN
- No. of Fax Machines: 1
- G.711 Packet Sending Interval for Fax Communication (not using the FAX High Reliable Method): 40 ms (requiring 75.6 kbps per channel)
- G.729A Packet Sending Interval for Voice Communication: 30 ms (requiring 23.5 kbps per channel)

In this case, the required bandwidth will be as follows:

<b>Required Bandwidth</b> $= (1 \times 75.6) + [(4 - 1) \times 23.5]$ $= 146.1$
--

Therefore, inform your network administrator and make sure that the network can support a bandwidth of 146.1 kbps even when the network is under conditions of maximum traffic.

**Note**

It is recommended that all cards in a VoIP network have the same packet sending interval.

## A1.2 Network Configuration

You must evaluate the structure of the existing network to see if a VoIP network can be implemented. Below are the points that should be taken into your evaluation.


### Is it possible to have static IP addressing?

Because the maintenance of the VoIP Gateway Card is carried out from a personal computer (PC) through an IP network, the card must be assigned a static IP address.

Static IP addressing must be made possible even when the DHCP feature is used. For more details, refer to "2.2.1 Network Parameters" in the VoIP Gateway Card Programming Guide.

### Is network address translation (NAT/NAPT) disabled?

In a network where address translation techniques (e.g., NAT/NAPT) are used to convert between global and local IP addresses, VoIP communications based on the H.323 protocol cannot be carried out appropriately. Generally, NAT/NAPT are features that are available with routers.

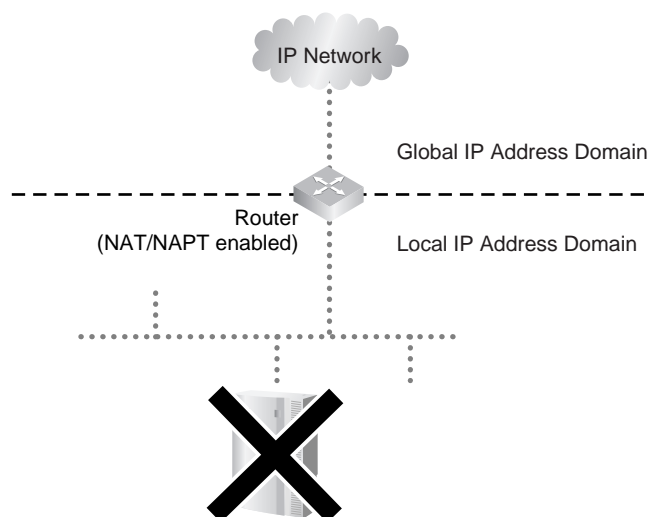


#### **Note**

If the router on the network supports the "H.323 NAT" feature, it may be possible to have VoIP communications over the network. For more information, consult your network administrator.

## Does only a single router provide access to the IP network?


In a dual network, 2 routers provide access to the IP network as shown in the diagram below. However, the VoIP Gateway Card cannot take the advantage of having 2 routers as access points to the IP network.

For example, if router A, whose IP address is assigned as the default gateway IP address of the card, fails, VoIP communications are no longer possible; the card is not able to switch its default gateway from router A to router B to access the IP network. For more details about the default gateway setting, refer to "2.2.1 Network Parameters" of the VoIP Gateway Card Programming Guide.

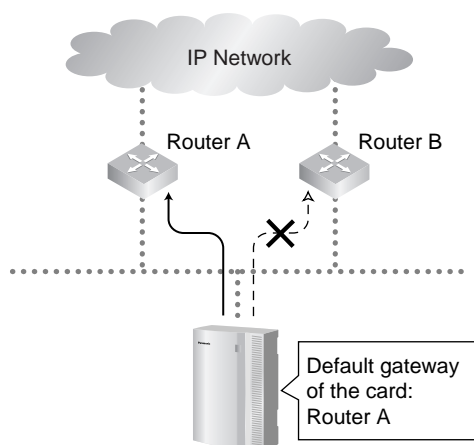

## Is there only a single IP network between 2 ends of a call?


A huge degradation in speech quality will be produced when calls are made through multiple IP networks as shown below; therefore, it is recommended that you avoid establishing a VoIP network in this fashion.

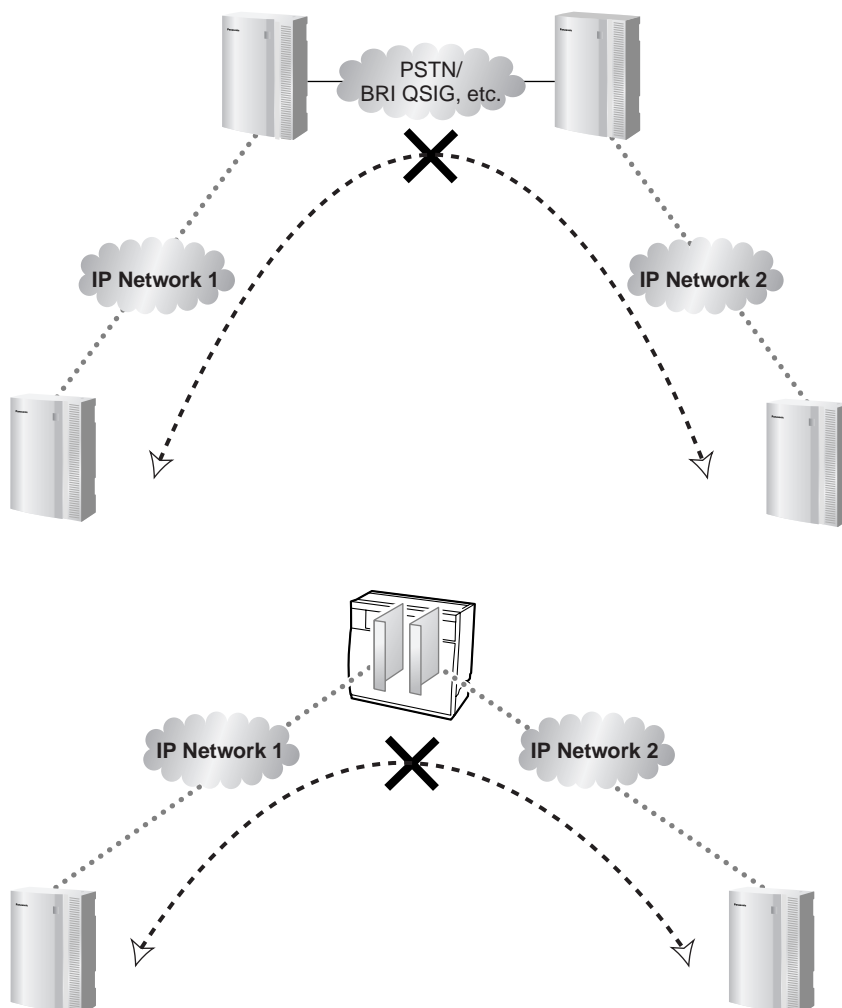

## Is the card located appropriately?

Transmission delays can cause pauses and loss in VoIP communications. The more network devices (e.g., routers and switches) there are between the communicating cards, the larger the transmission delays, because a certain amount of delay is inevitable when packets go through each network device (hop).

One preventative measure is to install the card so that the number of transmission hops is kept to a minimum. In the diagram below, the card is located as close to the IP network interface as possible.

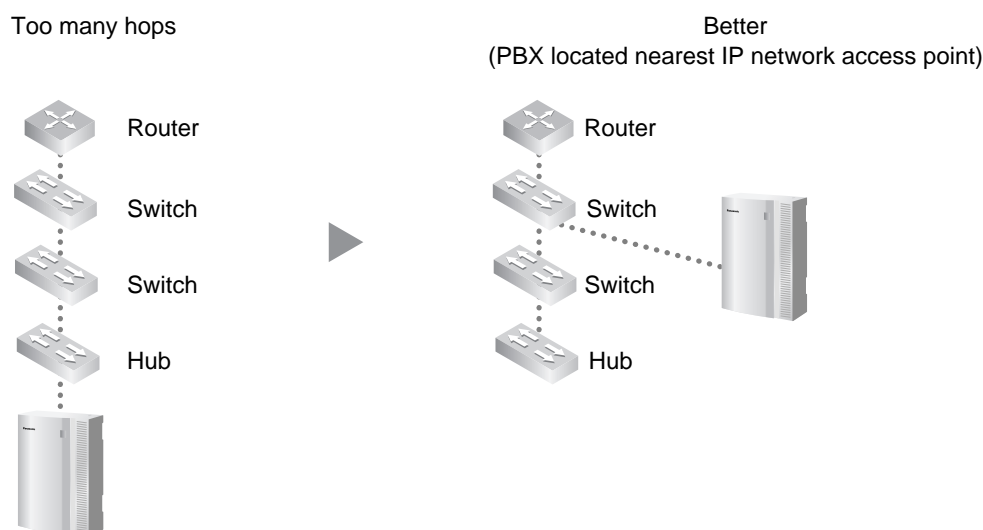

## A1.3 Network Devices

You must evaluate the network devices that are used in the existing network to see if a VoIP network can be implemented. Below are the points that should be taken into your evaluation.

### Can the firewall pass packets from the VoIP Gateway Card?

If the VoIP network contains a firewall, the firewall must be configured appropriately to allow VoIP packets, which are listed in the table below, to pass through the network without being blocked by filtering.

For more information, consult your network administrator.

Protocol	TCP/UDP	Default Port No.
HTTP* <sup>1</sup>	TCP	80
RTP/RTCP* <sup>2</sup>	UDP	5004 to 5011
H.225.0 Call Signalling* <sup>2</sup>	TCP	1720
H.245* <sup>2</sup>	TCP	1712 to 1724
H.225.0 RAS* <sup>2</sup>	UDP	1719
QSIG Connectionless Tunnelling* <sup>1</sup>	TCP	1718

- \*1 For the actual setting values, refer to "2.2.1 Network Parameters" in the VoIP Gateway Card Programming Guide.
- \*2 For the actual setting values, refer to "2.2.2 H.323 Parameters" in the VoIP Gateway Card Programming Guide.

### Are layer 2 or higher switches used?

Use of repeater hubs can increase the network load, and therefore will result in degradation in speech quality.

To ensure high speech quality, it is strongly recommended that you use layer 2 or higher switches.

### Are Category 5 (CAT5) cables used?

When connecting network devices, make sure to use CAT5 cables. If other types of cables are used, communications may not be carried out normally.

## A1.4 QoS (Quality of Service)

Some routers permit the configuration of priority control features. This allows the router to give higher priority to voice packets and lower the rate of loss and delays during transmissions, hence improving speech quality. It is strongly recommended that you use this feature, especially in networks where traffic is heavy.

Typically, a router identifies what packets to pass in priority by checking the value in the ToS field of the header of IP packets. The VoIP Gateway Card has the ability to set the ToS field of outgoing voice packets (see "2.2.3 Voice Communication Parameters" in the VoIP Gateway Card Programming Guide). When the card is appropriately configured, the router can give voice packets from the card higher priority.

Consult your network administrator when setting the ToS field, as the setting value must conform to the router's specifications.

#### **Note**

Some switches also permit the configuration of priority control features. For more information, consult your network administrator.

## A2 VoIP Requirements Checklist

Use the following checklists to see if you can implement a VoIP network. The answers identified in **underlined bold-face letters** are the required answers for the corresponding questions.

### Bandwidth Assessment

No.	Question	Answer	Memo	Ref.
1	<b>Does the network have enough bandwidth to support VoIP communications?</b> Make sure that there is more bandwidth available for VoIP communications than the amount actually required.	<input type="checkbox"/> <b><u>Yes</u></b> <input type="checkbox"/> No	<ul style="list-style-type: none"> <li>IP network bandwidth = kbps</li> <li>Available bandwidth for VoIP = kbps</li> <li>Required bandwidth for VoIP = kbps</li> </ul>	p. 54

### Network Configuration

No.	Question	Answer	Memo	Ref.
2-a	<b>Is it possible to have static IP addressing?</b>	<input type="checkbox"/> <b><u>Yes</u></b> <input type="checkbox"/> No		p. 56
2-b	<b>Is network address translation (NAT/NAPT) disabled?</b>	<input type="checkbox"/> <b><u>Yes</u></b> <input type="checkbox"/> No		p. 56
2-c	<b>Does only a single router provide access to the IP network?</b>	<input type="checkbox"/> <b><u>Yes</u></b> <input type="checkbox"/> No		p. 57
2-d	<b>Is there only a single IP network between 2 ends of a call?</b>	<input type="checkbox"/> <b><u>Yes</u></b> <input type="checkbox"/> No		p. 58
2-e	<b>Is the card located appropriately?</b>	<input type="checkbox"/> Yes <input type="checkbox"/> No	No. of hops (routers/switches) within one location:	p. 59

### Network Devices

No.	Question	Answer	Memo	Ref.
3-a	<b>Can the firewall pass packets from the VoIP Gateway Card?</b> When a firewall is used, make sure to configure the firewall appropriately to allow VoIP packets to pass through the network without being blocked by filtering.	<input type="checkbox"/> <b><u>Yes</u></b> <input type="checkbox"/> No	Model of the firewall:	p. 59

## A2 VoIP Requirements Checklist

---

No.	Question	Answer	Memo	Ref.
3-b	<b>Are layer 2 or higher switches used?</b> Do not use repeater hubs as they can increase the network load.	<input type="checkbox"/> <u>Yes</u> <input type="checkbox"/> No	Model of the switch:	p. 60
3-c	<b>Are Category 5 (CAT5) cables used?</b>	<input type="checkbox"/> <u>Yes</u> <input type="checkbox"/> No		p. 60

### QoS (Quality of Service)

No.	Question	Answer	Memo	Ref.
4	<b>Can the router or switch be configured to use priority control features?</b>	<input type="checkbox"/> Yes <input type="checkbox"/> No	Model of the router/switch:  VoIP Gateway Card's ToS field setting:	p. 60

---

## ***Appendix B***


### ***Alternative Numbering Plan Example***

## B1 Extension Number Method

This section provides a numbering plan example using the extension number method, as supplementary information to the PBX code method discussed in "1.2.2 Numbering Plan Example".

### B1.1 Example Network

The following diagram illustrates a simple VoIP network configured for the extension number method.

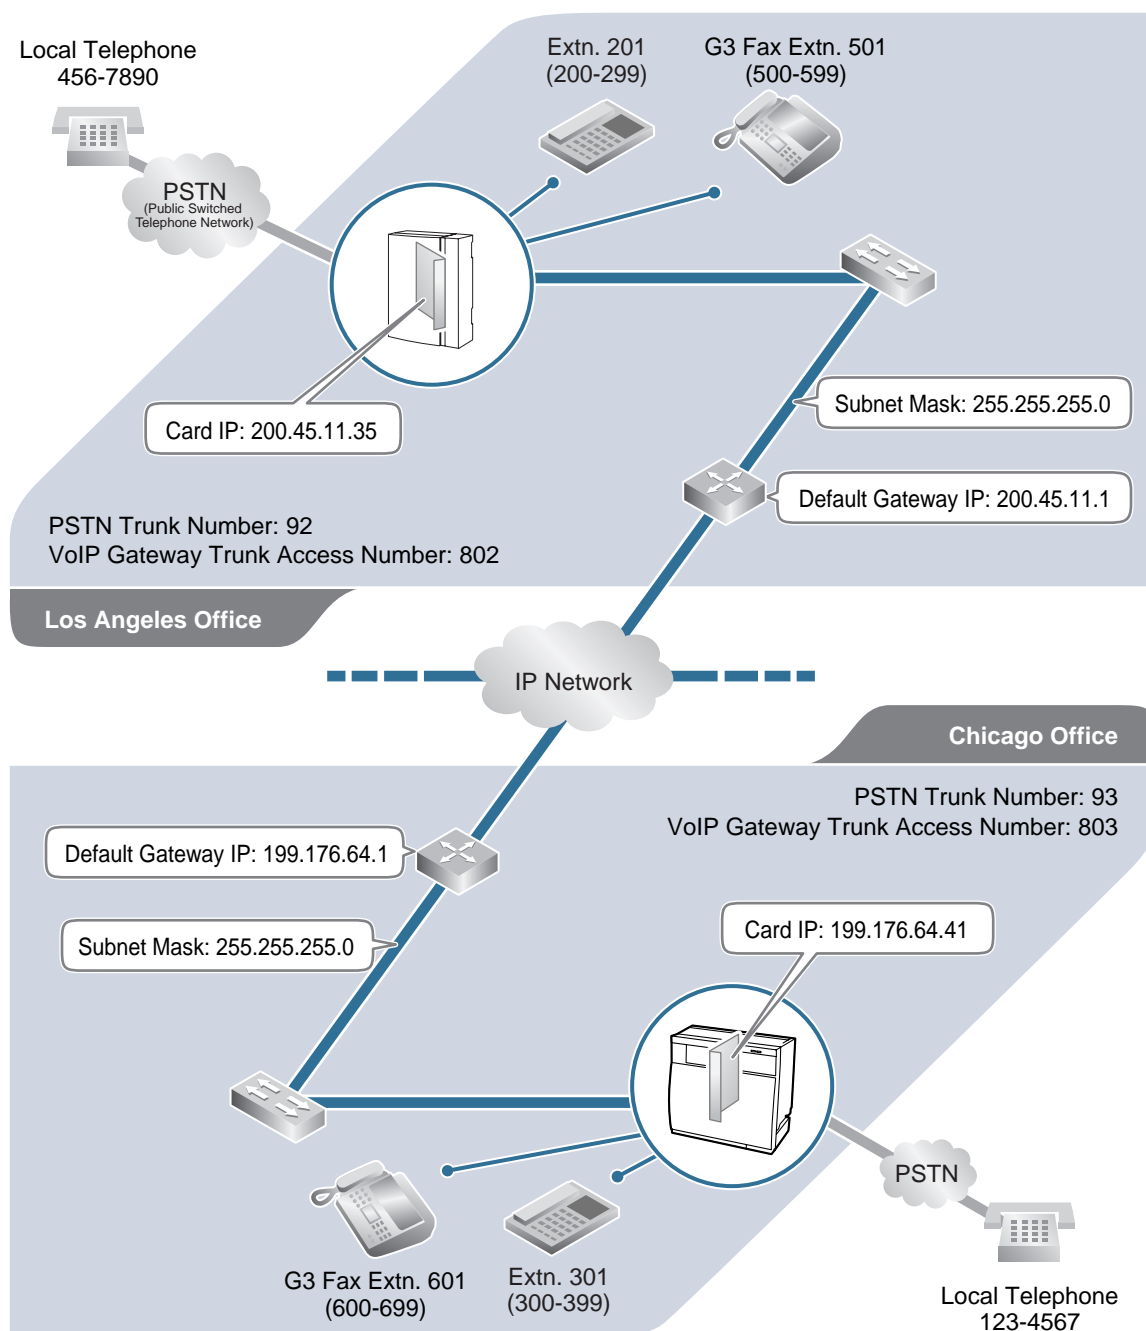

## B1.2 Numbering Plan Example

### IP Addressing Information

The following table is a duplication of the table used for the PBX code method.

	<b>Los Angeles Office</b>	<b>Chicago Office</b>	<b>Description</b>
Card IP Address	200.45.11.35	199.176.64.41	Identifies the location of each VoIP Gateway Card in the network during VoIP communications. A unique IP address must be assigned to each card.
Default Gateway Address	200.45.11.1	199.176.64.1	Identifies the IP address of the primary gateway (typically a router or similar device) that exchanges IP packets with the other gateways on the VoIP network.
Subnet Mask Address	255.255.255.0	255.255.255.0	Defines which digits of an IP address are used for the network address and the host address at each network location. A card IP address must fall within the same subnet as that of the default gateway (e.g., router) that is connected to the card.

### PBX Numbering Information

The following table contains "VoIP Gateway Trunk Access Number", instead of "PBX Code" and "TIE Line Access Number" as used in the PBX code method.


	<b>Los Angeles Office</b>	<b>Chicago Office</b>	<b>Description</b>
VoIP Gateway Trunk Access Number	802	803	An access number to seize a VoIP gateway trunk.
PSTN Trunk Number	92	93	An access number to seize a local PSTN trunk.
Extension Number	200 to 299	300 to 399	A number assigned to each extension.
Fax Extension Number	500 to 599	600 to 699	A number assigned to each fax extension.

## Dialling Examples


With the extension number method, the caller dials only the destination number of the called party to call through PBXs at different locations.

### Calling from Los Angeles to Chicago

To extension 301 via VoIP network

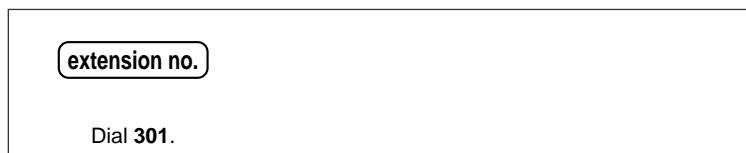


To local telephone 123-4567 via VoIP network through local PSTN

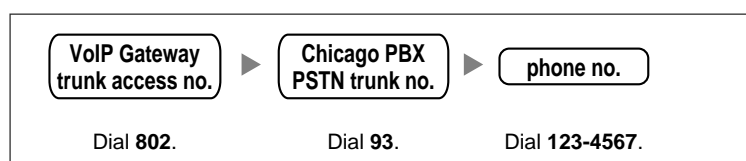


### Calling from Chicago to Los Angeles

To extension 201 via VoIP network

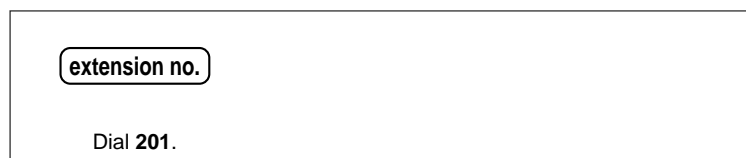

To local telephone 456-7890 via VoIP network through local PSTN

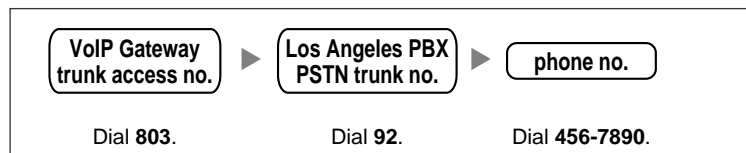

## PBX Connection Information

	Los Angeles Office			Chicago Office		
	Extn.	FAX Extn.	PSTN Access	Extn.	FAX Extn.	PSTN Access
Leading Number	2	5	92	3	6	93
Remaining Digits	2	2	7	2	2	7
Card IP Address	200.45.11.35			199.176.64.41		

## B2 Programming for the Extension Number Method

When programming the VoIP Gateway Cards and PBXs for use in a network configured for the extension number method instead of the PBX code method, some of the steps in the programming procedures require different setting values.


The following 2 sections provide specific steps that require different setting values. The steps other than those provided here have common setting values, and are therefore omitted from this explanation.

### B2.1 Programming the VoIP Gateway Card

The hunt patterns and address translation table need different setting values for the extension number method, as shown in the screen shots provided below.

#### Programming the VoIP Gateway Card in the Los Angeles Office

Create hunt patterns with the setting values shown below, following the procedure in "4.2.4 Assigning the Hunt Pattern".



1. Programming

Are the following settings OK?

1.5 Hunt Pattern (For Incoming Calls)


1.5.1 Hunt Group

Hunt Group	Port1	Port2
Hunt group 1	Hunt group 1	Hunt group 1

Hunt Pattern No.	Receive Leading Number	Hunt Group
1	2	1
2	5	1
3	92	1

OK CANCEL

Programme an address translation table with the setting values shown below, following the procedure in "4.2.5 Programming the Address Translation Table".

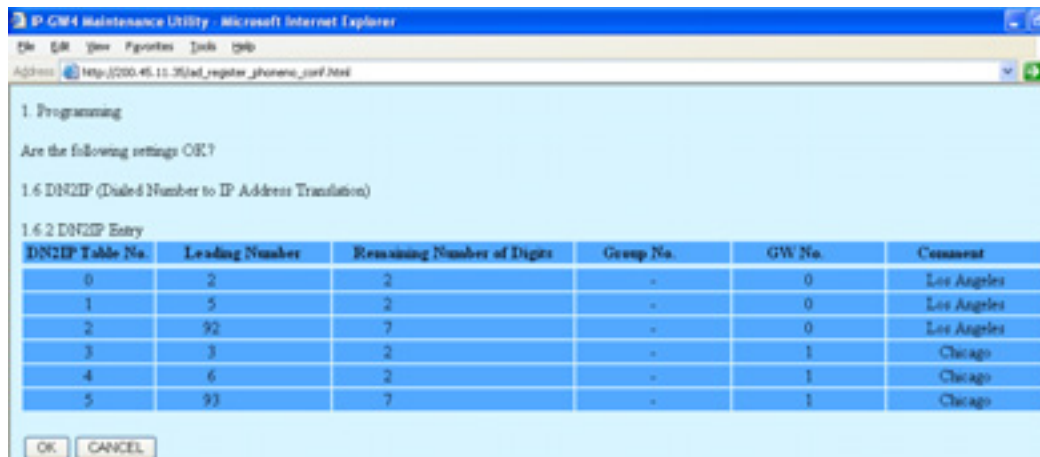

1. Programming

Are the following settings OK?

1.6 DN2IP (Dialled Number to IP Address Translation)

1.6.2 DN2IP Entry

DN2IP Table No.	Leading Number	Remaining Number of Digits	Group No.	GW No.	Comment
0	2	2	-	0	Los Angeles
1	5	2	-	0	Los Angeles
2	92	7	-	0	Los Angeles
3	3	2	-	1	Chicago
4	6	2	-	1	Chicago
5	93	7	-	1	Chicago

OK CANCEL

### Programming the VoIP Gateway Card in the Chicago Office

Create hunt patterns with the setting values shown below, following the procedure in "Assigning the Hunt Pattern" under "4.3 Programming the VoIP Gateway Card in the Chicago Office".

The screenshot shows a web browser window titled "P-CW4 Maintenance Utility - Microsoft Internet Explorer". The address bar shows "http://199.176.64.4/ldf\_hunt\_pattern\_conf.html". The page content includes a "1. Programming" section with a confirmation prompt "Are the following settings OK?". Below this is a "1.5 Hunt Pattern (for Incoming Calls)" section, followed by a "1.5.1 Hunt Group" section. This section contains two tables. The first table has columns "Port1" and "Port2", both set to "Hunt group 1". The second table has columns "Hunt Pattern No.", "Receive Leading Number", and "Hunt Group".

Hunt Pattern No.	Receive Leading Number	Hunt Group
1	3	1
2	6	1
3	93	1

At the bottom of the form are "OK" and "CANCEL" buttons.

## B2.2 Programming the PBX

The steps below are provided in substitution for steps 6 and 7 of the procedure detailed in "5.1 Programming the PBX in the Los Angeles Office" and "5.2 Programming the PBX in the Chicago Office". Programme the PBXs in both offices using the extension number method, following these steps.

### Programming the PBX in the Los Angeles Office

#### Step 6

Assign the PSTN trunk access number:

In the **Idle Line Access (Local Access)** box, type **92** (for Los Angeles office PSTN access).

The screenshot shows the "EX-TDA30 Maintenance Console" window. The left sidebar has a tree view with "2 System" expanded, showing "2.1 Main". The main area has tabs for "Extension", "Features", and "Other PBX Extension". The "Features" tab is active, showing a list of features with columns "No.", "Feature", and "Data (4 digits)".


No.	Feature	Data (4 digits)
1	Operator Call	9
2	Idle Line Access (Local Access)	92
3	Trunk Group Access	9
4	TE Line Access	7
5	Redial	#

Buttons for "OK()", "Cancel()", and "Apply()" are visible above the table.

**Step 7**

Assign the leading number used to reach the extensions of the remote PBX:

In the **Other PBX Extension Numbering (TIE)** box (01 and 02), type **3** (for the Chicago office extensions) and **6** (for the Chicago office fax extensions).

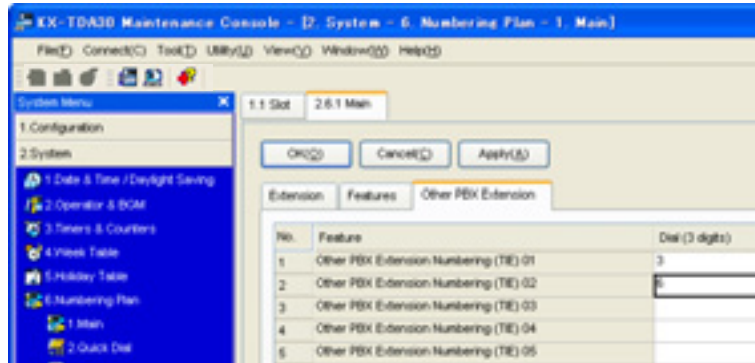
**Step 8**

Assign the routing information to route calls to the remote PBX:

In the **Leading Number** box, type **3** (for the Chicago office extensions), **6** (for the Chicago office fax extensions), and **93** (for Chicago office PSTN access).

**Note**

Do not set any value in the **Own PBX Code** box.

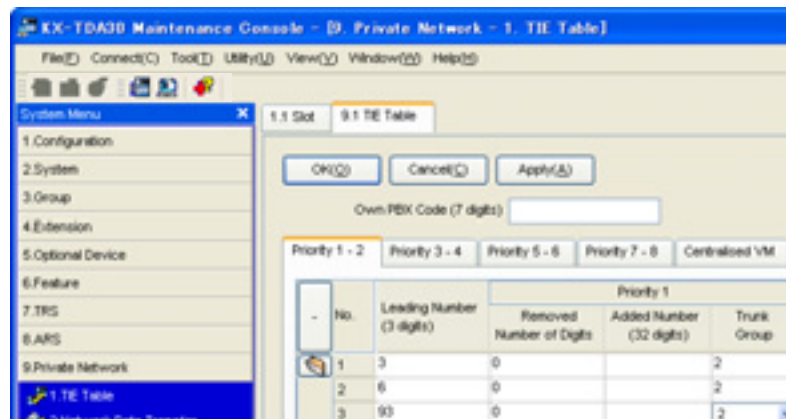


After the above step, follow the procedure in "5.1 Programming the PBX in the Los Angeles Office", starting from step 8.

## Programming the PBX in the Chicago Office

### Step 6

Assign the PSTN trunk access number:


In the **Idle Line Access (Local Access)** box, type **93** (for Chicago office PSTN access).

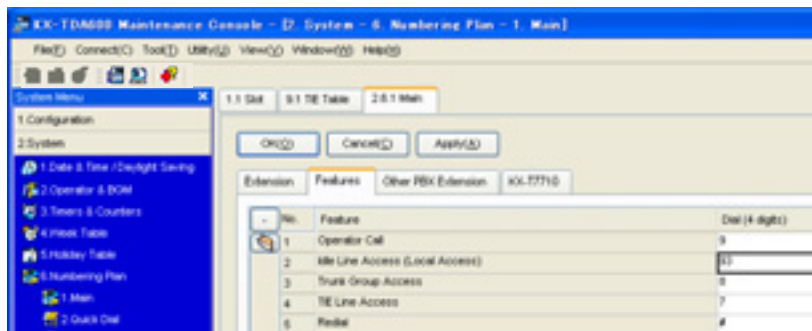

### Step 7

Assign the leading number used to reach the extensions of the remote PBX:

In the **Other PBX Extension Numbering (TIE)** box (01 and 02), type **2** (for the Los Angeles office extensions) and **5** (for the Los Angeles office fax extensions).

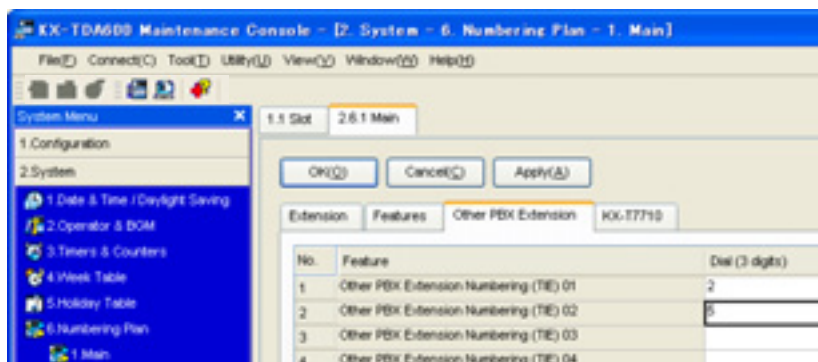

**Step 8**

Assign the routing information to route calls to the remote PBX:

In the **Leading Number** box, type **2** (for the Los Angeles office extensions), **5** (for the Los Angeles office fax extensions), and **92** (for Los Angeles office PSTN access).

**Note**

Do not set any value in the **Own PBX Code** box.

No.	Leading Number (3 digits)	Removed Number of Digits	Added Number (32 digits)	Trunk Group
1	2	0		2
2	5	0		2
3	92	0		2

After the above step, follow the procedure in "5.2 Programming the PBX in the Chicago Office", starting from step 8.



---

## ***Appendix C***

### ***Initialisation of the VoIP Gateway Card***

# C1 Initialising the VoIP Gateway Card


In case you have forgotten, for example, the IP address or log-in password you set to the VoIP Gateway Card, follow the procedure below to return the settings of the card to the factory default.

## Note


Resetting the card will restore all settings, not just the IP address and log-in password, to the factory default.

## KX-TDA3480


1. Install the card to the KX-TDA30 PBX, and then turn on the power to the PBX.

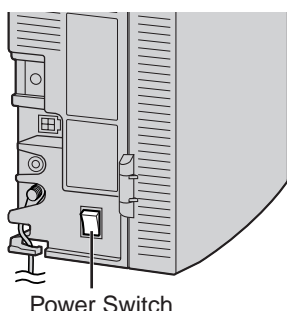

2. Using the KX-TDA30 Maintenance Console, confirm that the card is in service (INS).

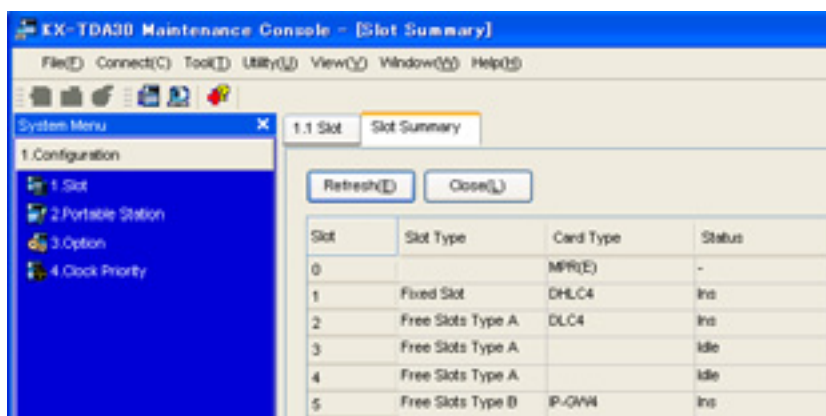

3. Set the System Initialise Switch to the "SYSTEM INITIALIZE" position.

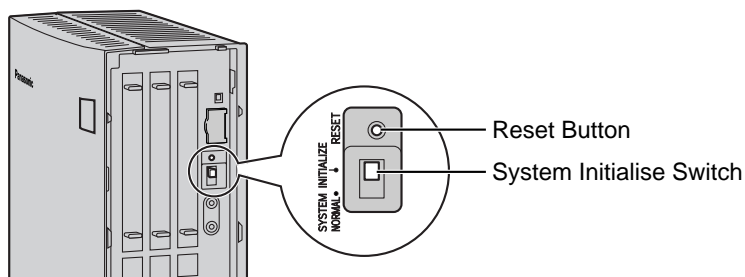


## CAUTION

Do not press the Reset Button nor turn the power off then on while the System Initialise Switch is in this position. Doing so will initialise the PBX.


4. Using the KX-TDA30 Maintenance Console, set the status of the card to **OUS**, then set it back to **INS**.
5. Return the System Initialise Switch to the "NORMAL" position.

## KX-TDA0484


1. Install the card to the KX-TDA100/KX-TDA200/KX-TDA600 PBX, and then turn on the power to the PBX.

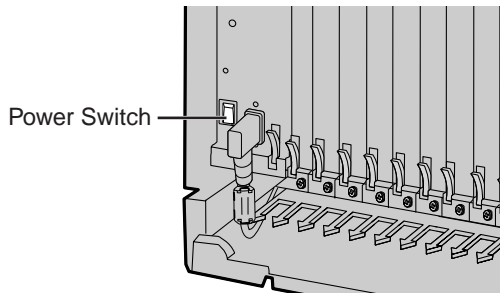

2. Using the Maintenance Console, confirm that the card is in service (INS).

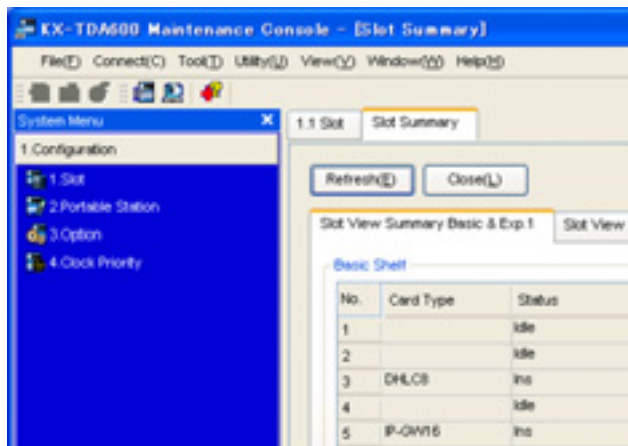

3. Set the System Initialise Switch to the "SYSTEM INITIALIZE" position.

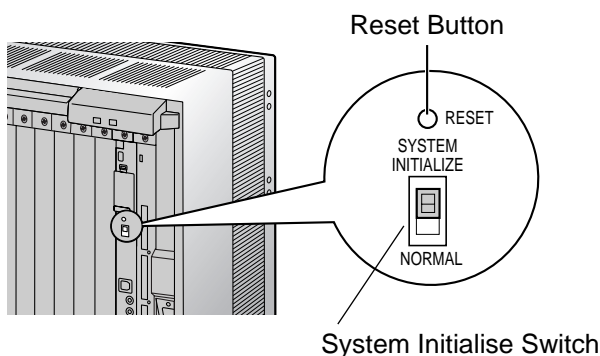

## CAUTION

Do not press the Reset Button nor turn the power off then on while the System Initialise Switch is in this position. Doing so will initialise the PBX.

4. Using the Maintenance Console, set the status of the card to **OUS**, then set it back to **INS**.
5. Return the System Initialise Switch to the "NORMAL" position.



---

## ***Appendix D***


### ***Using the KX-TDA3480/KX-TDA0484 and KX-TDA0480 in One Network***

# D1 Considerations in Installation

Provided below are the points to consider when the VoIP network contains both the KX-TDA3480/KX-TDA0484 and KX-TDA0480 VoIP Gateway Cards.

## Adding the KX-TDA3480/KX-TDA0484 to the Network Using the KX-TDA0480 Maintenance Console Software

For the KX-TDA0480 to recognise the KX-TDA3480/KX-TDA0484 in the network, you must add it as an "Other Unit" in a Unit Group (network) when programming with the MCS as shown below:

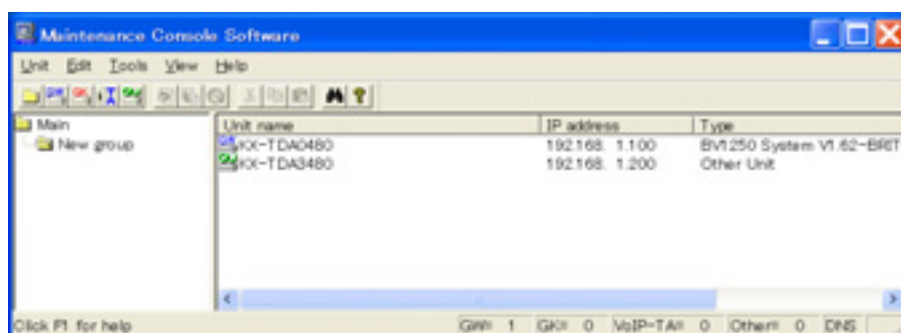

### Note

For programming instructions and other information about the KX-TDA0480, refer to the documentation for the KX-TDA0480.

## Restrictions on Feature Compatibility

Some restrictions exist when using the KX-TDA3480/KX-TDA0484 with the KX-TDA0480, as detailed below:

- CLIP service is the only QSIG service available between the KX-TDA3480/KX-TDA0484 and KX-TDA0480. There is no compatibility for other QSIG services.
- Fax communications cannot take place between the KX-TDA3480/KX-TDA0484 and KX-TDA0480.



**Panasonic Communications Co., Ltd.**

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

**Copyright:**

This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© 2005 Panasonic Communications Co., Ltd. All Rights Reserved.

# Panasonic

## 4-Channel VoIP Gateway Card Programming Guide

---

KX-TDA3480  
Model KX-TDA0484



Thank you for purchasing a Panasonic 4-Channel VoIP Gateway Card.  
Please read this manual carefully before using this product and save this manual for future use.

---

# Table of Contents

<b>1</b>	<b>IP-GW4 Maintenance Utility .....</b>	<b>3</b>
1.1	Starting the IP-GW4 Maintenance Utility .....	4
<b>2</b>	<b>Administrator Functions .....</b>	<b>7</b>
2.1	Main Menu for the Administrator .....	8
2.2	Programming .....	10
2.2.1	Network Parameters .....	10
2.2.2	H.323 Parameters .....	14
2.2.3	Voice Communication Parameters .....	18
2.2.4	VoIP Gateway/IP-PBX Interface Parameters .....	25
2.2.5	Hunt Pattern Parameters .....	27
2.2.6	Address Translation Table—GW Entry .....	32
2.2.7	Address Translation Table—DN2IP Entry .....	35
2.2.8	Initialisation .....	39
2.3	Maintenance .....	40
2.3.1	Status Control .....	40
2.3.2	Maintenance Settings .....	41
2.3.3	Diagnosis .....	43
2.3.4	Log Information .....	44
2.4	Data Management .....	45
2.4.1	Upload of Configuration Data .....	45
2.4.2	Download of Configuration Data .....	47
2.4.3	Upload of Address Translation Table .....	48
2.4.4	Download of Address Translation Table .....	50
2.5	Others .....	51
2.5.1	Reboot .....	51
2.5.2	Log Out .....	52
<b>3</b>	<b>Installer Functions .....</b>	<b>53</b>
3.1	Main Menu for the Installer .....	54
3.2	Maintenance .....	55
3.2.1	Status Control .....	55
3.2.2	Maintenance Settings .....	56
3.3	Data Management .....	58
3.3.1	Upload of Firmware Data .....	58
3.3.2	Handling of Firmware Page .....	61
3.4	Others .....	63
3.4.1	Reboot .....	63
3.4.2	Log Out .....	64
	<b>Index .....</b>	<b>65</b>

---

## **Section 1**

# ***IP-GW4 Maintenance Utility***

*Programming of the VoIP Gateway Card is carried out through a web programming utility called the IP-GW4 Maintenance Utility. This section provides the start-up procedure for the IP-GW4 Maintenance Utility.*

# 1.1 Starting the IP-GW4 Maintenance Utility

The IP-GW4 Maintenance Utility is a web programming utility for the VoIP Gateway Card. There are 2 different log-in levels available: Administrator level and Installer level. These levels provide different programming options.

For full discussions of Administrator-level programming and Installer-level programming, refer to "2 Administrator Functions" and "3 Installer Functions", respectively.

### System Requirements

- The IP-GW4 Maintenance Utility requires Microsoft® Internet Explorer 5.0 or above.


### Trademarks

- Microsoft is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- All other trademarks identified herein are the property of their respective owners.
- Screen shots reprinted with permission from Microsoft Corporation.

1. Run Internet Explorer from the **Start** menu.
2. In the **Address** box of Internet Explorer, type **http://192.168.1.200**.  
**192.168.1.200** is the default IP address of the VoIP Gateway Card.



3. Press the ENTER key on the keyboard.
4. In the **Username** box, type the user name.
  - Default Administrator-level user name: **Administrator**
  - Default Installer-level user name: **Installer**
5. In the **Password** box, type the password.
  - Default Administrator-level password: **Administrator**
  - Default Installer-level password: **Installer**

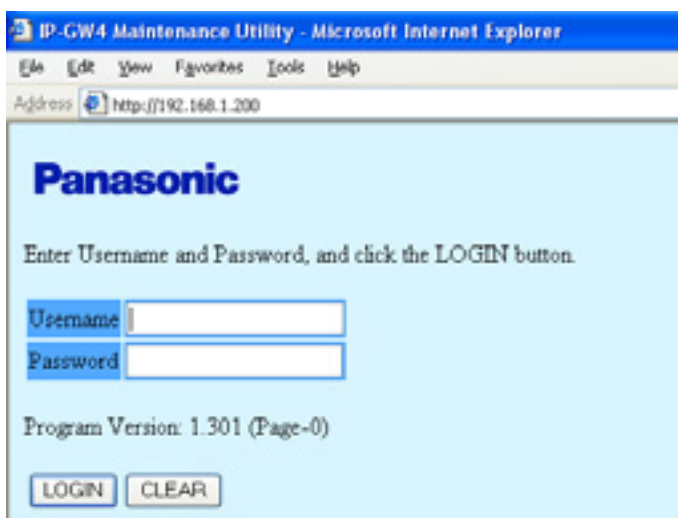

6. Click **LOGIN**.

To clear your entry, click **CLEAR**.

### **Notes**

- If another user is already logged in, you will be rejected.
- For readability of the text on the screen, it is recommended that you adjust the text size of Internet Explorer to below medium.
- If you finish a programming session without logging out from the card (e.g., quitting Internet Explorer, or returning to the log-in screen with the "Back" button of Internet Explorer), you cannot log in again for the period of time specified by the parameter **Programming Auto Disconnect Time** (default: 10 min).  
For the log-out procedure and **Programming Auto Disconnect Time** setting, refer to "2.5.2 Log Out"/"3.4.2 Log Out" and "2.3.2 Maintenance Settings", respectively.

## 1.1 Starting the IP-GW4 Maintenance Utility

---

---

## **Section 2**

# ***Administrator Functions***

*This section provides operating instructions for the IP-GW4 Maintenance Utility when logged in as the Administrator.*

# 2.1 Main Menu for the Administrator

The IP-GW4 Maintenance Utility provides the following menu to a user logged in as the Administrator.



## Programming

Menu	Section Reference
1.1 Network Settings, General	2.2.1 Network Parameters
1.2 H.323 Detailed Settings	2.2.2 H.323 Parameters
1.3 Voice Communication Detailed Settings	2.2.3 Voice Communication Parameters
1.4 VoIP Gateway/IP-PBX Interface Settings	2.2.4 VoIP Gateway/IP-PBX Interface Parameters
1.5 Hunt Pattern (for Incoming Calls)	2.2.5 Hunt Pattern Parameters
1.6 DN2IP (Diald Number to IP Address Translation)	2.2.6 Address Translation Table—GW Entry 2.2.7 Address Translation Table—DN2IP Entry
1.7 Initialization	2.2.8 Initialisation

## Maintenance

Menu	Section Reference
2.1 Change RUN/STOP status	2.3.1 Status Control
2.2 Maintenance Settings	2.3.2 Maintenance Settings
2.3 Diagnosis	2.3.3 Diagnosis
2.4 Log Information	2.3.4 Log Information

## Data Management

Menu	Section Reference
3.1 Upload of Configuration data (PC → VoIP Gateway)	2.4.1 Upload of Configuration Data
3.2 Download of Configuration data (VoIP Gateway → PC)	2.4.2 Download of Configuration Data
3.3 Upload of DN2IP data (PC → VoIP Gateway)	2.4.3 Upload of Address Translation Table
3.4 Download of DN2IP data (VoIP Gateway → PC)	2.4.4 Download of Address Translation Table

## Others

Menu	Section Reference
REBOOT	2.5.1 Reboot
LOGOUT	2.5.2 Log Out

## 2.2 Programming

### 2.2.1 Network Parameters

1. Click **1.1 Network Settings, General** in the main menu.

The screenshot shows the 'IP-GW4 Maintenance Utility' web interface in Microsoft Internet Explorer. The address bar shows 'http://192.168.1.200/ad\_network.html'. The page has buttons for 'OK', 'ALL CLEAR', 'MENU', and 'LOGOUT'. The main content area is titled '1. Programming' and '1.1 Network Settings, General'. It contains several sections with input fields:

- Current IP Address:** 192.168.1.200
- Current Subnet Mask:** 255.255.0.0
- Current Default Gateway:** 0.0.0.0
- 1.1.1 IP Address Settings:**
  - # IP Address: 192.168.1.200
  - # Subnet Mask: 255.255.0.0
  - # Default Gateway: 0.0.0.0
- 1.1.2 DHCP Settings:**
  - # DHCP Server: ☒ Use ☐ Don't use
  - # DHCP Server Port No.: 67
  - # DHCP Client Port No.: 68
  - # DHCP Lease Time (min) 0-1440min (of interest to engineers only): 1440
- 1.1.3 HTTP Settings:**
  - # HTTP Port No.: 80
- 1.1.4 QSIG Connectionless Tunneling Settings:**
  - # QSIG Connectionless Tunneling Port No.: 1718
- 1.1.5 Others:**
  - # Host Name (of interest to engineers only): VolP313845
  - # LAN Disconnect Threshold Time (s): 5

A note at the bottom states: '# indicates setting must be done in the STOP status, and must be followed by a REBOOT.'

**Current IP Address, Current Subnet Mask, and Current Default Gateway** show the current IP address settings of the VoIP Gateway Card.

2. Assign each parameter referring to the descriptions below.

At any time during the session, you can:

- Click **ALL CLEAR** to return all parameters to their previous values.
- Click **MENU** to return to the main menu (see "2.1 Main Menu for the Administrator").
- Click **LOGOUT** to log out from the IP-GW4 Maintenance Utility (see "2.5.2 Log Out").

3. Click **OK**.

You will see a confirmation screen.

#### **Note**

If your entry contains an invalid value, you will be prompted to correct your input. Enter correct values for the parameters shown in red and try again.

4. Confirm your entry and click **OK**.

To return to the previous screen, click **CANCEL**.

## Parameter Descriptions

The parameters indicated with "#" must be changed while the card is in the "STOP" status (see "2.3.1 Status Control"). The changes must be followed by a reboot to become effective (see "2.5.1 Reboot").

### IP Address Settings

Parameter & Description	Default	Value Range
<b># IP Address</b> Specifies the IP address of the card. For more information, consult your network administrator.	192.168.1.200	The following addresses are invalid: <ul style="list-style-type: none"> <li>• Class D addresses</li> <li>• Class E addresses</li> <li>• Loopback addresses</li> <li>• Addresses with host number all 0s or 1s</li> </ul>
<b># Subnet Mask</b> Specifies the subnet mask address of the card. For more information, consult your network administrator.	255.255.255.0	Any address is valid.
<b># Default Gateway</b> Specifies the default gateway IP address of the card. For more information, consult your network administrator.	0.0.0.0	Same as the parameter <b>IP Address</b> , except that the address 0.0.0.0. is allowed.

### DHCP Settings

Parameter & Description	Default	Value Range
<b># DHCP Server</b> Specifies the use of a DHCP server. For details, refer to "Detailed Explanations".	Don't use	Use, Don't use
<b># DHCP Server Port No.</b> Specifies the port number for DHCP communications by the DHCP server. Generally, there is no need to change the default value.	67	1 to 65535
<b># DHCP Client Port No.</b> Specifies the port number for DHCP communications by the card (the DHCP client). Generally, there is no need to change the default value.	68	1 to 65535
<b># DHCP Lease Time (min) 1-1440min</b> This parameter is provided for engineer use only.	1440	0 (disable), 1 to 1440

## HTTP Settings

Parameter & Description	Default	Value Range
<b># HTTP Port No.</b> Specifies the port number for HTTP communications by the card. Generally, there is no need to change the default value.	80	1 to 65535

## QSIG Connectionless Tunneling Settings

Parameter & Description	Default	Value Range
<b># QSIG Connectionless Tunneling Port No.</b> Specifies the port number for connectionless tunnelling between cards at different locations in a QSIG network. Generally, there is no need to change the default value.  <b>Notes</b> <ul style="list-style-type: none"> <li>Connectionless tunnelling enables the PBXs on a QSIG network to use enhanced networking features. (For more information about these features, refer to the relevant sections of the Hybrid IP-PBX documentation.)</li> <li>If you are using a gatekeeper, and enhanced networking features of the PBX are being used, overall performance of the card may deteriorate when network traffic is heavy.</li> <li>If you are using a gatekeeper, and "Routed" is specified for the parameter <b>Call Signaling Model</b> (see "2.2.2 H.323 Parameters"), connectionless tunnelling is not possible. In this case, the PBX cannot use the enhanced networking features.</li> </ul>	1718	1 to 65535

## Others

Parameter & Description	Default	Value Range
<b>Host Name</b> This parameter is provided for engineer use only.	VoIP + lower 3 bytes of the MAC address	Max. 255 characters
<b># LAN Disconnect Threshold Time (s)</b> Specifies the time (in seconds) until disconnection from the LAN is recognised. For example, even if a LAN cable is disconnected during a call, reconnecting the cable within this time period maintains the call.	5	1 to 10

## Detailed Explanations

### DHCP Server

When using the DHCP feature, the IP address settings of the card (IP address, subnet mask, and default gateway) will be assigned by a DHCP server.

However, keep in mind that the maintenance of the card is performed through a web browser from a PC; hence you must know the IP address of the card. Therefore, it is necessary to set up the DHCP server to assign a static IP address to the card from a pool of IP addresses that is defined in advance. For more information about DHCP server settings, consult your network administrator.

In addition, it is also necessary to specify the values for the parameters under **IP Address Settings** as they will be assigned by the DHCP server.

## 2.2.2 H.323 Parameters

1. Click **1.2 H.323 Detailed Settings** in the main menu.

The screenshot shows the 'IP-GW4 Maintenance Utility - Microsoft Internet Explorer' window. The address bar displays 'http://192.168.1.200/ad\_h323.html'. The interface includes buttons for 'OK', 'ALL CLEAR', 'MENU', and 'LOGOUT'. The main content area is titled '1. Programming' and '1.2 H.323 Detailed Settings'. It contains several sections:

- 1.2.1 Port No. Settings:** A table with four rows:
 

# H.225 Port No.	1720
# H.245 Port No.	1721
# RAS Port No.	1719
# RTP/RTCP Port No.	5004
- 1.2.2 Voice CODEC Settings:** A table with four rows:
 

1st	G.729A
2nd	None
3rd	None
4th	None
- 1.2.3 Gatekeeper Settings:** A table with seven rows:
 

# Gatekeeper	<input checked="" type="radio"/> Use <input type="radio"/> Don't use
* Primary Gatekeeper IP Address	192.168.1.3
* Primary Gatekeeper Port No.	1719
* Secondary Gatekeeper IP Address	192.168.1.4
* Secondary Gatekeeper Port No.	1719
* Gatekeeper Connection Checking Interval (min) 0-1440min	0
* Call Signaling Model	<input checked="" type="radio"/> Direct <input type="radio"/> Routed (via Gatekeeper)
- 1.2.4 Others:** A table with one row:
 

# Fast Connect	<input checked="" type="radio"/> Use <input type="radio"/> Don't use
----------------	--

At the bottom, there are two notes:
   
# indicates setting must be done in the STOP status, and must be followed by a REBOOT.
   
\* indicates setting must be done in the STOP status, and is not followed by a REBOOT.

2. Assign each parameter referring to the descriptions below.  
At any time during the session, you can:
  - Click **ALL CLEAR** to return all parameters to their previous values.
  - Click **MENU** to return to the main menu (see "2.1 Main Menu for the Administrator").
  - Click **LOGOUT** to log out from the IP-GW4 Maintenance Utility (see "2.5.2 Log Out").
3. Click **OK**.

You will see a confirmation screen.

### Note

If your entry contains an invalid value, you will be prompted to correct your input. Enter correct values for the parameters shown in red and try again.

4. Confirm your entry and click **OK**.  
To return to the previous screen, click **CANCEL**.

## Parameter Descriptions

The parameters indicated with "#" must be changed while the VoIP Gateway Card is in the "STOP" status (see "2.3.1 Status Control"). The changes must be followed by a reboot to become effective (see "2.5.1 Reboot").

The parameters indicated with "\*" must be changed while the card is in the "STOP" status (see "2.3.1 Status Control"). The changes do not have to be followed by a reboot to become effective.

### Port Number Settings

Parameter & Description	Default	Value Range
<b># H.225 Port No.</b> Specifies the port number for the H.225 protocol (call control) in an H.323 protocol suite. Generally, there is no need to change the default value.	1720	1 to 65535
<b># H.245 Port No.</b> Specifies the port number for the H.245 protocol (negotiation of channel usage and capabilities) in an H.323 protocol suite. 4 consecutive ports, starting with the specified port, will be used (by default, 1721 to 1724). Generally, there is no need to change the default value.	1721	1 to 65532
<b># RAS Port No.</b> Specifies the port number for the H.225 protocol (RAS) in an H.323 protocol suite. Generally, there is no need to change the default value.	1719	1 to 65535
<b># RTP/RTCP Port No.</b> Specifies the port number for RTP/RTCP. 8 consecutive ports, starting with the specified port, will be used (by default, 5004 to 5011). Generally, there is no need to change the default value.	5004	1 to 65528

### Voice CODEC Settings

Parameter & Description	Default	Value Range
<b>* Voice CODEC Priority 1st–4th</b> Specifies the type of CODEC for voice communications. Choose the appropriate CODEC for the network environment (e.g., bandwidth, CODEC conditions of the remote terminal). When using multiple CODECs, set them in an appropriate priority order. Prior to establishing a call, a negotiation takes place over the network and the CODEC to be used will be decided depending on the setting of this parameter. For details about relations between bandwidth and CODEC, refer to "Detailed Explanations" in "2.2.3 Voice Communication Parameters".	1st: G.729A 2nd: No default 3rd: No default 4th: No default	G.723.1, G.729A, G.711Mu, G.711A

### Gatekeeper Settings

Parameter & Description	Default	Value Range
<b># Gatekeeper</b> Specifies the use of a gatekeeper. For details, refer to "Detailed Explanations".	Don't use	Use, Don't use
<b>* Primary Gatekeeper IP Address</b> Specifies the IP address of the primary gatekeeper.	192.168.1.3	The following addresses are invalid: <ul style="list-style-type: none"> <li>• Class D addresses</li> <li>• Class E addresses</li> <li>• Loopback addresses</li> </ul>
<b>* Primary Gatekeeper Port No.</b> Specifies the port number of the primary gatekeeper.	1719	1 to 65535
<b>* Secondary Gatekeeper IP Address</b> Specifies the IP address of the secondary gatekeeper. Set this parameter when setting up a secondary gatekeeper as a redundant backup system.	192.168.1.4	The following addresses are invalid: <ul style="list-style-type: none"> <li>• Class D addresses</li> <li>• Class E addresses</li> <li>• Loopback addresses</li> </ul>
<b>* Secondary Gatekeeper Port No.</b> Specifies the port number of the secondary gatekeeper. Set this parameter when setting up a secondary gatekeeper as a redundant backup system.	1719	1 to 65535
<b>* Gatekeeper Connection Checking Interval (min) 0-1440min</b> Specifies the time (in minutes) between periodic checks of connection to the gatekeeper. When the primary gatekeeper fails, these checks can detect the failure. In this case, the connection automatically switches to the secondary gatekeeper if it is available, so that the network remains functional.	0	0 (disable), 1 to 1440
<b>* Call Signaling Model</b> Specifies whether to carry out a call control (H.225) process directly between the cards or through a gatekeeper. Direct call control is typically preferred because it involves less network load.	Direct	Direct, Routed (via Gatekeeper)

## Others

Parameter & Description	Default	Value Range
<b># Fast Connect</b> Specifies the use of the Fast Connect feature. Using Fast Connect simplifies the communication process so that calls can be established quickly. Generally, there is no need to change the default value.	Use	Use, Don't use

## Detailed Explanations

### Gatekeeper

The following are the general functions of a gatekeeper:

- Dialed number-to-IP address translation
- Authentication
- Bandwidth control

It is possible to employ a VoIP network without the use of a gatekeeper, because the card is equipped with internal address translation capabilities. However, should the network contain dozens of cards, maintenance of address translation tables in individual cards can become a strain.

A gatekeeper is useful in this case, because with the gatekeeper it is possible to consolidate the maintenance. (However, you still need to programme each card on the network with its own address translation information. For details, refer to "2.2.6 Address Translation Table—GW Entry" and "2.2.7 Address Translation Table—DN2IP Entry".) For more information about gatekeeper functions, consult the documentation of the gatekeeper.

When using a gatekeeper, make sure to choose a compatible model. For more information about gatekeeper compatibility with the card, consult a certified dealer.

## 2.2.3 Voice Communication Parameters

1. Click **1.3 Voice Communication Detailed Settings** in the main menu.

The screenshot shows the 'IP-GW4 Maintenance Utility' web interface in Microsoft Internet Explorer. The address bar shows 'http://192.168.1.200/ad\_sound.html'. The page has a navigation bar with buttons: OK, ALL CLEAR, MENU, and LOGOUT. The main content area is titled '1. Programming' and '1.3 Voice Communication Detailed Settings'. It contains four sub-sections:

- 1.3.1 QoS Field Settings:** Includes radio buttons for ToS, DSCP, and HEX. ToS is selected, and its priority is set to 0. Below it are radio buttons for Normal, Monetary Cost, Reliability, Throughput, and Delay, with Normal selected.
- 1.3.2 Jitter buffer Settings:** Contains two groups of settings for G.711/G.729A and G.723.1. Each group has fields for Jitter Buffer Minimum (ms), Jitter Buffer Maximum (ms), Jitter Buffer Default Value (ms), and Jitter Buffer Adjustment Interval (s) 1-5s.
- 1.3.3 CODEC Frame Settings:** Contains fields for Packet Sending Interval (ms) for G.723.1, G.729A, and G.711.
- 1.3.4 Others:** Includes settings for Echo Cancellation, VAD (Voice Activity Detection), DTMF Detection, FAX Signal Detection, FAX High Reliable Method (Original), and DTMF Detection Level (dB).

2. Assign each parameter referring to the descriptions below.  
At any time during the session, you can:
  - Click **ALL CLEAR** to return all parameters to their previous values.
  - Click **MENU** to return to the main menu (see "2.1 Main Menu for the Administrator").
  - Click **LOGOUT** to log out from the IP-GW4 Maintenance Utility (see "2.5.2 Log Out").
3. Click **OK**.  
You will see a confirmation screen.

### Note

If your entry contains an invalid value, you will be prompted to correct your input. Enter correct values for the parameters shown in red and try again.

4. Confirm your entry and click **OK**.  
To return to the previous screen, click **CANCEL**.

## Parameter Descriptions

### QoS Field Settings

The parameters below are used to set the ToS (Type of Service) field in the header of IP packets to control QoS of VoIP communications.

For more information about QoS, refer to "A1.4 QoS (Quality of Service)" of the VoIP Gateway Card Getting Started. For the actual setting values, consult your network administrator.

Parameter & Description	Default	Value Range
<b>ToS</b> Specifies the value in the ToS field by a generic term. For details, refer to "Detailed Explanations".	Priority: 0	0 to 7
	Normal	Normal, Monetary Cost, Reliability, Throughput, Delay
<b>DSCP</b> Specifies the value in the ToS field by a DSCP for DiffServ.	No default	0 to 63
<b>HEX</b> Specifies the value in the ToS field by a hexadecimal number.	No default	00 to FF

### Jitter buffer Settings

When voice signals are packetised and transmitted, individual packets can take different paths through the network and arrive at the destination at varied timings. This is referred to as "jitter", and it can cause degradation in speech quality. To compensate for jitter problems, the "jitter buffer" accumulates the packets temporarily for processing.

The parameters below are used to adjust the size of the jitter buffer. However, in general, there is no need to change the default values.

Parameter	Default	Value Range
<b>G.711/G.729A Jitter Buffer Minimum (ms)</b>	10	10 × n (n = 1–40)
<b>G.711/G.729A Jitter Buffer Maximum (ms)</b>	400	10 × n (n = 1–40)
<b>G.711/G.729A Jitter Buffer Default Value (ms)</b>	10	10 × n (n = 1–40)
<b>G.711/G.729A Jitter Buffer Adjustment Interval (s) 1-5s</b>	5	1 to 5
<b>G.723.1 Jitter Buffer Minimum (ms)</b>	30	30 × n (n = 1–40)
<b>G.723.1 Jitter Buffer Maximum (ms)</b>	1200	30 × n (n = 1–40)
<b>G.723.1 Jitter Buffer Default value (ms)</b>	30	30 × n (n = 1–40)
<b>G.723.1 Jitter Buffer Adjustment Interval (s) 1-5s</b>	5	1 to 5

### CODEC Frame Settings

The parameters below are used to set the interval between packet transmissions for each type of CODEC. It is recommended that all VoIP Gateway Cards in a VoIP network have the same settings for these parameters. For details, refer to "Detailed Explanations".

Parameter	Default	Value Range
<b>G.723.1 Packet Sending Interval (ms)</b>	30	30, 60, 90
<b>G.729A Packet Sending Interval (ms)</b>	20	20, 30, 40
<b>G.711 Packet Sending Interval (ms)</b>	20	20, 30, 40

### Others

Parameter & Description	Default	Value Range
<b>Echo Canceller</b> Specifies the use of the echo cancellation feature (G.168). Echo is the audible duplication of a caller's voice on the return path; when echo exists, the caller hears his or her own voice after some delay. The echo canceller eliminates this echo.  <b>Note</b> There are various factors that may cause an echo. In some cases, this feature does not eliminate the echo entirely.	Use	Use, Don't use
<b>G.723.1 VAD (Voice Activity Detection)</b> Specifies the use of the VAD feature (G.723.1). The VAD conserves bandwidth by detecting silent periods during a call and suppressing the packets of silence from being sent to the network.  <b>Note</b> To use this feature, both the local and remote cards must have this parameter set to <b>"Use"</b> .	Use	Use, Don't use
<b>G.723.1 Rate</b> Specifies the rate of the G.723.1 CODEC.	6.3Kbps	5.3Kbps, 6.3Kbps
<b>DTMF Detection</b> Specifies the use of the DTMF detection feature. DTMF detection enables end-to-end DTMF relay over the network. For details, refer to "Detailed Explanations".	Use	Use, Don't use
<b>FAX Signal Detection</b> Specifies the use of the fax signal detection feature. Fax signal detection enables end-to-end fax signal relay over the network. For details, refer to "Detailed Explanations".	Don't use	Use, Don't use


Parameter & Description	Default	Value Range
<b>FAX High Reliable Method (Original)</b> Specifies the use of the packet multiplexing feature during fax communications. For details, refer to "Detailed Explanations".	Don't use	Use, Don't use
<b>DTMF Detection Level (dB) -20-0dB</b> Specifies the level (in decibels) of DTMF detection. Generally, there is no need to change the default value.	-20	-20 to 0

## Detailed Explanations


### QoS Field Settings

The following diagrams show the bit values of the ToS field in the IP header in relation to the setting values for the parameters under **QoS Field Settings**:


#### ToS

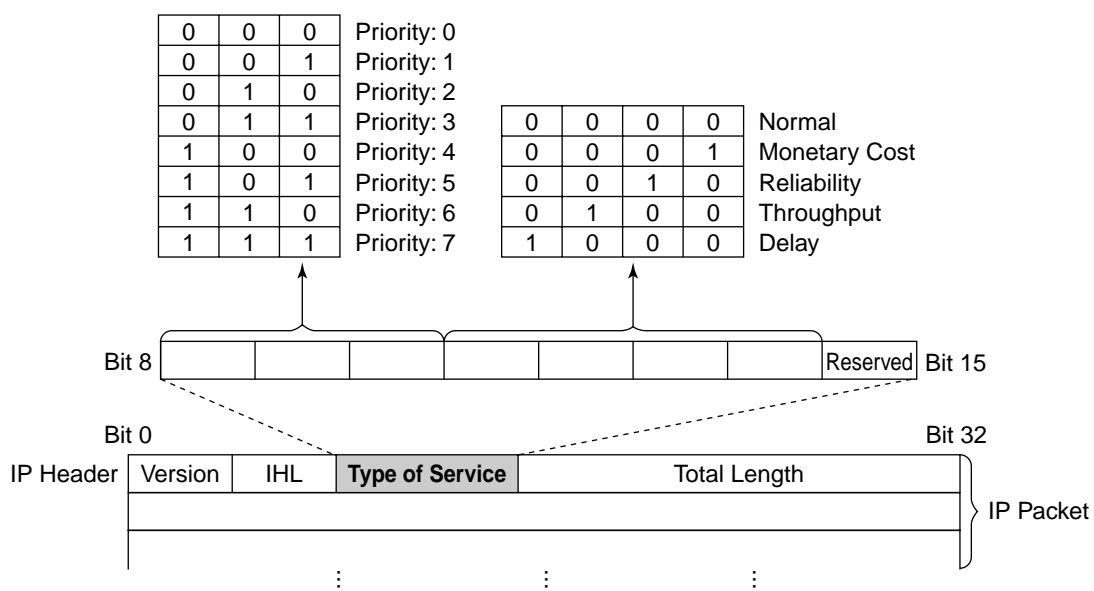

DSCP

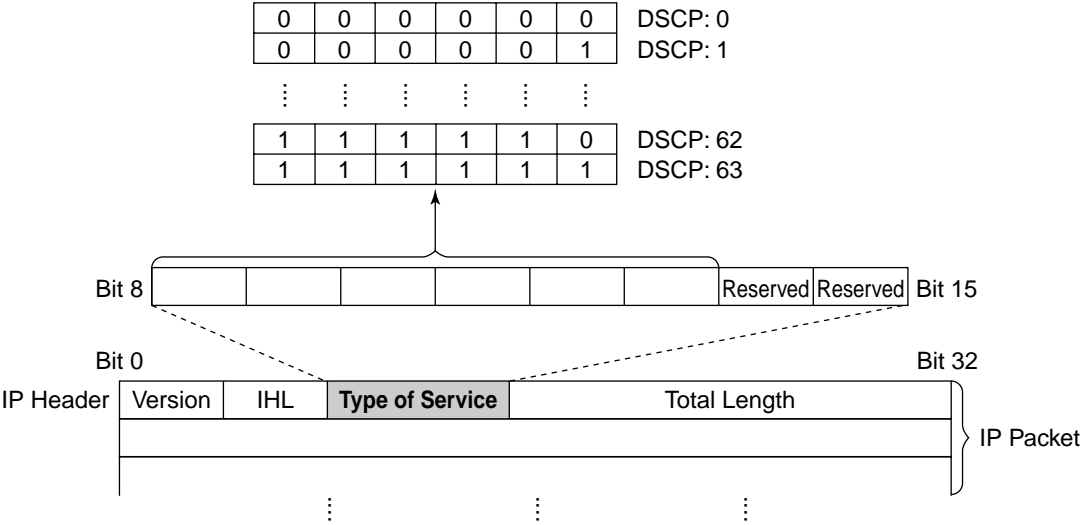

HEX

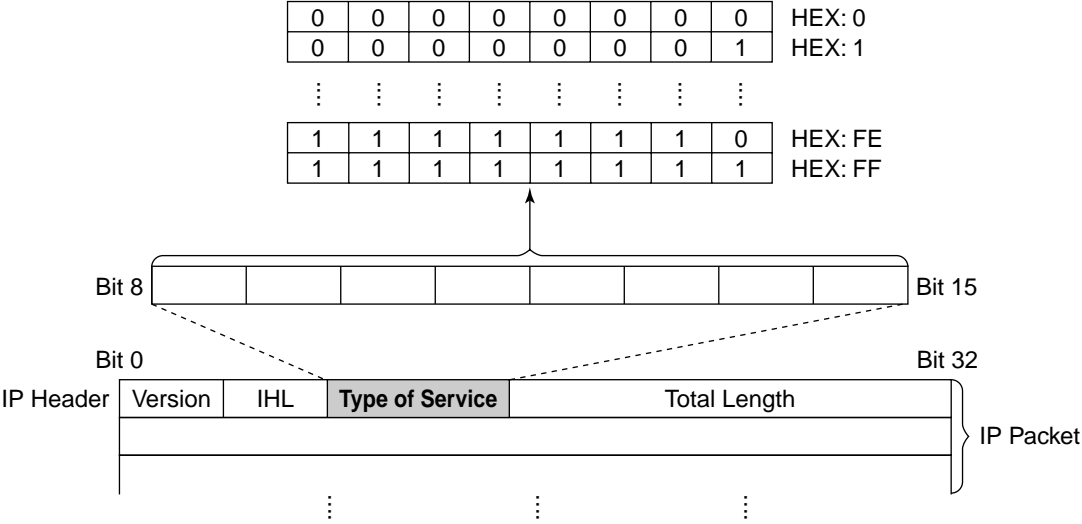

CODEC Frame Settings

The amount of required bandwidth depends on the type of CODEC and the selected packet sending interval. The tables below show the amount of bandwidth required for one VoIP channel in each case:

Required Bandwidth for Voice Communication via LAN

CODEC	Packet Sending Interval				
	20 ms	30 ms	40 ms	60 ms	90 ms
G.711	87.2 kbps	79.5 kbps	75.6 kbps	—	—
G.729A	31.2 kbps	23.5 kbps	19.6 kbps	—	—
G.723.1 5.3 kbps	—	20.8 kbps	—	13.1 kbps	10.5 kbps
G.723.1 6.3 kbps	—	21.9 kbps	—	14.1 kbps	11.6 kbps

**Required Bandwidth for Voice Communication via WAN (PPP: Point-to-Point Protocol)**

CODEC	Packet Sending Interval				
	20 ms	30 ms	40 ms	60 ms	90 ms
G.711	84 kbps	77.3 kbps	74 kbps	—	—
G.729A	28 kbps	21 kbps	18 kbps	—	—
G.723.1 5.3 kbps	—	18.7 kbps	—	12 kbps	9.8 kbps
G.723.1 6.3 kbps	—	19.7 kbps	—	13.1 kbps	10.8 kbps

When assessing your bandwidth requirements, keep in mind that the longer the packet sending interval, the smaller the amount of required bandwidth, and vice versa.

However, also consider that the shorter the packet sending interval, the clearer the expected speech quality, because delays in packet transmissions will be small. When the packet sending interval is long, delays are more likely to occur, resulting in overall degradation in speech quality with more pauses and loss in voice communications.

Therefore, it is recommended that you select the shortest packet sending interval that network bandwidth can accommodate.

**DTMF Detection**

A VoIP network does not guarantee accurate end-to-end transmission of DTMF signals because the DTMF signals are coded/decoded during VoIP communications, in the same way as voice signals. In addition, packets can get lost during transmission.

To compensate for this problem, it is possible to enable DTMF detection for the VoIP Gateway Card to carry out accurate end-to-end DTMF relay over the network. Upon detecting DTMF signals from the PBX, the card encodes the signals and then sends them to the destination, instead of as voice signals. Then at the destination, the card regenerates the DTMF signals from the received encoded signals, and then sends them to the PBX.

Note that when this feature is enabled, the sending of packets is delayed by approximately 30 ms. Therefore, it is recommended that you disable this feature unless DTMF detection is necessary.

**FAX Signal Detection**

When sending fax signals using a CODEC other than G.711, the signals cannot be received accurately at the destination because they are coded/decoded over the VoIP network, in the same way as voice signals.

To compensate for this problem, it is possible to enable fax detection for the card. Upon detecting fax signals (CED tones) from the PBX, the card automatically switches the CODEC to G.711 to communicate with the card at the destination. With the G.711 CODEC, it is possible to assure error-free fax communications to a certain extent.

To further assure fax communications, it is strongly recommended that the communicating fax machines be equipped with the ECM (Error Correction Model) feature, an automatic error correction feature. When, for example, the receiving fax machine detects errors in transmission, it can have the sending fax machine resend the relevant data.

When using the fax detection feature, the communicating cards must share the same value (either "G.711Mu" or "G.711A") for the parameter **Voice CODEC Priority** (see "Voice CODEC Settings" in "2.2.2 H.323 Parameters").

### FAX High Reliable Method

If ECM-capable fax machines are not available, it is necessary to use the "**FAX High Reliable Method**" (a proprietary feature of the card). This feature is used to multiplex the packets when sending them over the network for protection against packet loss. Hence it is possible to achieve reliable fax communications without using ECM-capable fax machines.

However, keep in mind that this feature does not entirely guarantee error-free fax communications. Also, more bandwidth is required for one VoIP channel when using this feature. The tables below show the amount of bandwidth required for one VoIP channel when this feature is in use and not in use:

#### Required Bandwidth for Fax Communication via LAN

FAX High Reliable Method	G.711 Packet Sending Interval		
	20 ms	30 ms	40 ms
Don't Use	87.2 kbps	79.5 kbps	75.6 kbps
Use	224.8 kbps	213.9 kbps	208.4 kbps

#### Required Bandwidth for Fax Communication via WAN (PPP: Point-to-Point Protocol)

FAX High Reliable Method	G.711 Packet Sending Interval		
	20 ms	30 ms	40 ms
Don't Use	84 kbps	77.3 kbps	74 kbps
Use	221.6 kbps	211.7 kbps	206.8 kbps

#### Notes

- To carry out fax communications between the KX-TDA3480/KX-TDA0484 and KX-TDA0490 VoIP Gateway Cards, it is necessary to disable the "**FAX High Reliable Method**" for the KX-TDA3480/KX-TDA0484 card.
- Fax communications cannot take place between the KX-TDA3480/KX-TDA0484 and KX-TDA0480 VoIP Gateway Cards.
- Fax communications in the Super G3 mode are not guaranteed.

## 2.2.4 VoIP Gateway/IP-PBX Interface Parameters

1. Click **1.4 VoIP Gateway/IP-PBX Interface Settings** in the main menu.

2. Assign each parameter referring to the descriptions below.  
At any time during the session, you can:
  - Click **ALL CLEAR** to return all parameters to their previous values.
  - Click **MENU** to return to the main menu (see "2.1 Main Menu for the Administrator").
  - Click **LOGOUT** to log out from the IP-GW4 Maintenance Utility (see "2.5.2 Log Out").
3. Click **OK**.  
You will see a confirmation screen.

### Note

If your entry contains an invalid value, you will be prompted to correct your input. Enter correct values for the parameters shown in red and try again.

4. Confirm your entry and click **OK**.  
To return to the previous screen, click **CANCEL**.

## Parameter Descriptions

The parameters indicated with "\*" must be changed while the VoIP Gateway Card is in the "STOP" status (see "2.3.1 Status Control"). The changes do not have to be followed by a reboot to become effective.

### Dialing Settings

Parameter & Description	Default	Value Range
<p>* <b>First Digit Time (s) 5-30s</b></p> <p>Specifies the length of time (in seconds) within which the first digit of a dial number must be dialed after seizing a VoIP gateway trunk.</p> <p>Generally, there is no need to change the default value.</p>	20	5 to 30

## 2.2 Programming

---

Parameter & Description	Default	Value Range
<b>* Inter-Digit Time (s) 1-10s</b> Specifies the length of time (in seconds) within which subsequent digits of a dial number must be dialled. Generally, there is no need to change the default value.	5	1 to 10
<b>* Digit End Code</b> Specifies the delimiter code to be used to signal the end of a dial number. Generally, there is no need to change the default value.	#	0 to 9, #, *

### Others

Parameter & Description	Default	Value Range
<b>Network CODEC of IP-PBX</b> The value of this parameter is set automatically as appropriate to the setting of the PBX. There is no need to change the value.	Not applicable	G.711 Mu-Law, G.711 A-Law

## 2.2.5 Hunt Pattern Parameters

1. Click **1.5 Hunt Pattern (for Incoming Calls)** in the main menu.

IP-GW4 Maintenance Utility - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Address http://192.168.1.200/ad\_hunt\_pattern.html

OK ALL CLEAR MENU LOGOUT

1. Programming

1.5 Hunt Pattern (for Incoming Calls)

1.5.1 Hunt Group

	Port1	Port2
Hunt Group	Hunt group 1	Hunt group 1

1.5.2 Hunt Pattern Entry

Hunt Pattern No. (1-16)	
Receive Leading Number	
Hunt Group (Priority1)	1
Hunt Group (Priority2)	-

\* indicates setting must be done in the STOP status, and is not followed by a REBOOT.

ENTRY

Sort Option

Hunt Pattern No. Ascending Order

SORT

Hunt Pattern No.	Receive Leading Number	Hunt Group

DELETE

2. Assign each parameter referring to the descriptions below.  
At any time during the session, you can:
  - Click **ALL CLEAR** to return all parameters to their previous values.
  - Click **MENU** to return to the main menu (see "2.1 Main Menu for the Administrator").
  - Sort the hunt patterns in the table at the bottom of the screen:
    - a. Click the desired sort key and sort order from the **Sort Option** lists.
    - b. Click **SORT**.
  - Delete the desired hunt pattern from the table at the bottom of the screen:
    - a. Select the appropriate check box for the hunt pattern you want to delete.
    - b. Click **DELETE**.
  - Click **LOGOUT** to log out from the IP-GW4 Maintenance Utility (see "2.5.2 Log Out").
3. Click **ENTRY**.  
A maximum of 16 hunt patterns can be created.
4. Click **OK**.  
You will see a confirmation screen.

### Note

If your entry contains an invalid value, you will be prompted to correct your input. Enter correct values for the parameters shown in red and try again.

5. Confirm your entry and click **OK**.  
To return to the previous screen, click **CANCEL**.

## Parameter Descriptions

The parameters indicated with "\*" must be changed while the VoIP Gateway Card is in the "STOP" status (see "2.3.1 Status Control"). The changes do not have to be followed by a reboot to become effective.

### Hunt Group

The parameters below are used to assign VoIP gateway ports 1 and 2 to the hunt groups.

For details, refer to "Detailed Explanations".

Parameter	Default	Value Range
* <b>Port1</b>	Hunt group 1	Hunt group 1, Hunt group 2
* <b>Port2</b>	Hunt group 1	Hunt group 1, Hunt group 2

### Hunt Pattern Entry


The parameters below are used to create hunt patterns.

For details, refer to "Detailed Explanations".

Parameter & Description	Default	Value Range
* <b>Hunt Pattern No.</b> Specifies the number for the hunt pattern to be created. When changing the current settings of an existing hunt pattern, first delete the hunt pattern and then re-create with new values.	No default	1 to 16
* <b>Receive Leading Number</b> Specifies the leading digits in received numbers by which to determine the hunt group to direct incoming calls. For example, to direct incoming calls with numbers starting with "9", specify the number "9" in this parameter. Likewise, to direct incoming calls with numbers starting with "1", specify the number "1". However, if you want to direct incoming calls with numbers starting with "950" and "951" to separate hunt groups, it is necessary to make 2 hunt patterns with respective numbers, "950" and "951".	No default	Max. 30 digits
* <b>Hunt Group (Priority1)</b> Specifies the hunt group to which incoming calls are directed first.	1	1, 2
* <b>Hunt Group (Priority2)</b> Specifies the hunt group to which incoming calls are directed when the VoIP gateway port assigned to <b>Hunt Group (Priority1)</b> is busy.	-	1, 2, - (disable)

## Detailed Explanations

The card and the PBX are connected with 2 VoIP gateway ports, each of which has 2 communication channels, in much the same way as an ISDN BRI port.

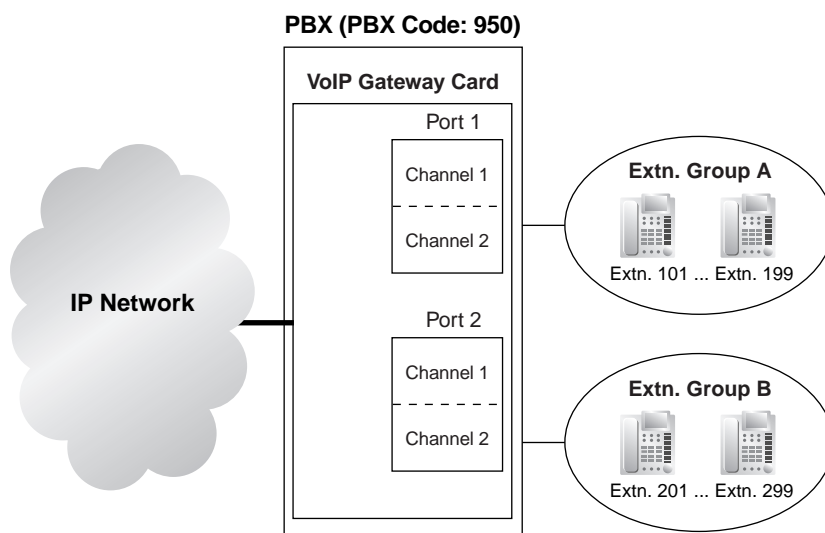

Hunt pattern programming determines the VoIP gateway ports through which to route incoming calls, depending on the received numbers. The following examples provide 2 different methods of hunt pattern programming.

### Example 1

The following configuration is used to allocate 2 VoIP gateway ports (4 channels) to route incoming calls to both extension groups A and B.


When there are 4 incoming calls to extension group A in this configuration, no call can be routed to extension group B.

#### Hunt Group

	Port1	Port2
Hunt Group	Hunt group 1	Hunt group 1

#### Hunt Pattern Entry

Hunt Pattern No.	1
Receive Leading Number	9
Hunt Group (Priority1)	1
Hunt Group (Priority2)	-

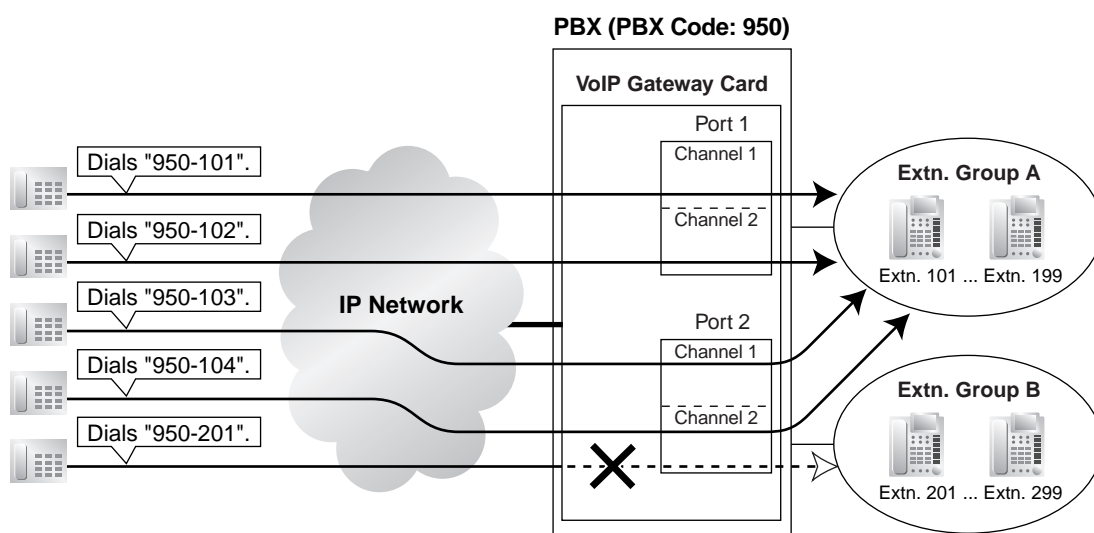

**Example 2**

The following configuration is used to allocate a single VoIP gateway port (2 channels) to individual extension groups. Specifically, with this configuration, calls to extension group A are routed through the port 1, and calls to extension group B are routed through the port 2.

This configuration rejects the third call to extension group A, while reserving the other port (the other 2 channels) through which to route calls to extension group B.

**Hunt Group**


	<b>Port1</b>	<b>Port2</b>
Hunt Group	Hunt group 1	Hunt group 2

**Hunt Pattern Entry—1**

Hunt Pattern No.	1
Receive Leading Number	9501
Hunt Group (Priority1)	1
Hunt Group (Priority2)	-

**Hunt Pattern Entry—2**

Hunt Pattern No.	2
Receive Leading Number	9502
Hunt Group (Priority1)	2
Hunt Group (Priority2)	-

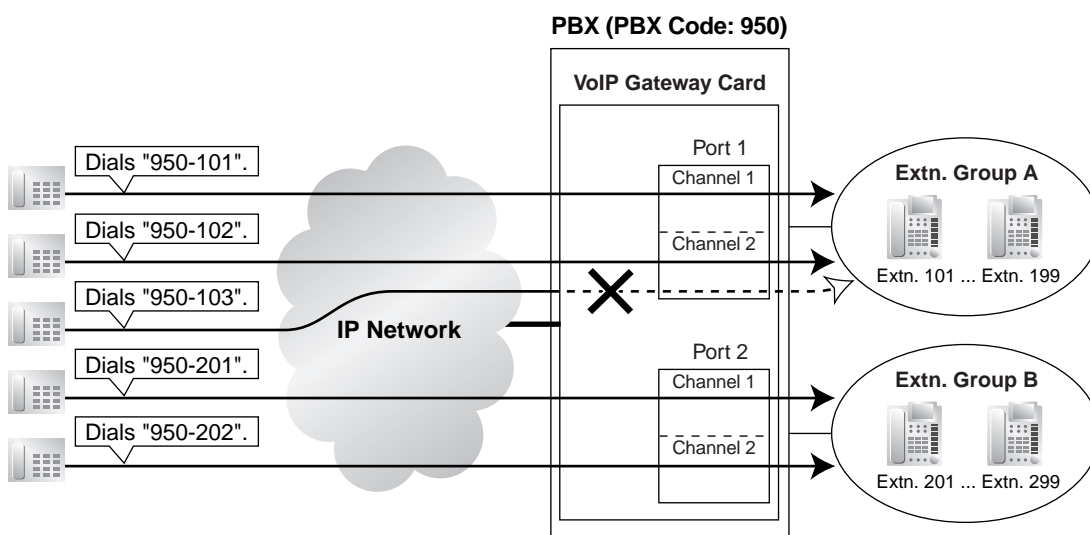

It is possible to programme the PBX to allocate a single VoIP gateway port to individual extension groups A and B for making outgoing calls. With this programming, each extension group A and B can have a port for its exclusive use.

- The VoIP gateway port the extension group A uses to make outgoing calls: port 1
- The VoIP gateway port the extension group B uses to make outgoing calls: port 2

## 2.2.6 Address Translation Table—GW Entry

1. Click **1.6 DN2IP (Dialed Number to IP Address Translation)** in the main menu.



2. Click **1.6.1 GW Entry**.

3. Assign each parameter referring to the descriptions below.  
At any time during the session, you can:
  - Click **MENU** to return to the main menu (see "2.1 Main Menu for the Administrator").
  - Click **PREVIOUS** to return to the previous screen.
  - Sort the gateway entries in the table at the bottom of the screen:
    - a. Click the desired sort key and sort order from the **Sort Option** lists.
    - b. Click **SORT**.

- Delete the desired gateway entry from the table at the bottom of the screen:
  - a. Select the appropriate check box for the gateway entry you want to delete.

**Note**

If the gateway entry is registered to a DN2IP entry (see "2.2.7 Address Translation Table—DN2IP Entry"), no check box will be shown for the gateway entry.

- b. Click **DELETE**.
- Click **LOGOUT** to log out from the IP-GW4 Maintenance Utility (see "2.5.2 Log Out").
4. Click **ENTRY**.  
A maximum of 512 gateway entries can be created.
  5. Click **OK**.  
You will see a confirmation screen.

**Note**

If your entry contains an invalid value, you will be prompted to correct your input. Enter correct values for the parameters shown in red and try again.

6. Confirm your entry and click **OK**.  
To return to the previous screen, click **CANCEL**.

## Parameter Descriptions

The parameters indicated with "\*" must be changed while the VoIP Gateway Card is in the "STOP" status (see "2.3.1 Status Control"). The changes do not have to be followed by a reboot to become effective.

### GW Entry

The parameters below are used to create gateway entries for both local and remote cards on the network, as a preliminary step to programming the address translation table (DN2IP).

For a programming example, refer to "4.2.5 Programming the Address Translation Table" of the VoIP Gateway Card Getting Started.

**Note**

If you are using a gatekeeper, create the gateway entry only for the local card.

Parameter & Description	Default	Value Range
<b>* GW No.</b> Specifies the number for the gateway entry to be created. When changing the current settings of an existing gateway entry, first delete the gateway entry and then re-create with new values.	0	0 to 511
<b>* Comment</b> Specifies the comment for the gateway entry.	No default	Max. 16 characters
<b>* IP Address</b> Specifies the IP address of the card.	No default	The following addresses are invalid: <ul style="list-style-type: none"> <li>• Class D addresses</li> <li>• Class E addresses</li> <li>• Loopback addresses</li> </ul>

## 2.2 Programming

---

Parameter & Description	Default	Value Range
<p><b>* Group No.</b></p> <p>Specifies the number of the gateway group to which the gateway entry belongs.</p> <p>Grouping is useful when there is more than one card installed in a PBX, because it allows you to use the automatic route redirection feature. For details, refer to "Detailed Explanations" in the next section, "2.2.7 Address Translation Table—DN2IP Entry".</p>	0	0 (belong to no group), 1 to 256

## 2.2.7 Address Translation Table—DN2IP Entry

1. Click **1.6 DN2IP (Dialed Number to IP Address Translation)** in the main menu.



2. Click **1.6.2 DN2IP Entry**.

3. Assign each parameter referring to the descriptions below.  
At any time during the session, you can:
  - Click **MENU** to return to the main menu (see "2.1 Main Menu for the Administrator").
  - Click **PREVIOUS** to return to the previous screen.
  - Sort the DN2IP entries in the table at the bottom of the screen:
    - a. Click the desired sort key and sort order from the **Sort Option** lists.
    - b. Click **SORT**.
  - Delete the desired DN2IP entry from the table at the bottom of the screen:
    - a. Select the appropriate check box for the DN2IP entry you want to delete.
    - b. Click **DELETE**.
  - Click **LOGOUT** to log out from the IP-GW4 Maintenance Utility (see "2.5.2 Log Out").
4. Click **ENTRY**.  
A maximum of 512 DN2IP entries can be created.

5. Click **OK**.

You will see a confirmation screen.

**Note**

If your entry contains an invalid value, you will be prompted to correct your input. Enter correct values for the parameters shown in red and try again.

6. Confirm your entry and click **OK**.

To return to the previous screen, click **CANCEL**.

## Parameter Descriptions

The parameters indicated with "\*" must be changed while the VoIP Gateway Card is in the "STOP" status (see "2.3.1 Status Control"). The changes do not have to be followed by a reboot to become effective.

### DN2IP Entry

The parameters below are used to create DN2IP entries based on the gateway entries created previously (see "2.2.6 Address Translation Table—GW Entry"). The DN2IP entries associate dialled numbers and IP address of the destination; therefore, a caller can reach the destination by dialling the number without knowing the destination IP address.

For a programming example, refer to "4.2.5 Programming the Address Translation Table" of the VoIP Gateway Card Getting Started.

**Note**

If you are using a gatekeeper, create the DN2IP entries only for the local card. In this case, you can create up to 4 DN2IP entries per card.

Note that if you are not using a gatekeeper, there is no maximum number of DN2IP entries.

Parameter & Description	Default	Value Range
<p>* <b>Leading Number</b></p> <p>Specifies the leading digits in dialled numbers by which to associate calls with the appropriate destination.</p> <p>For example, to associate calls with dialled numbers "950-xxxx" and "951-xxxx" with separate destinations, it is necessary to make 2 DN2IP entries with respective numbers, "950" and "951".</p>	No default	Max. 30 digits
<p>* <b>Remaining Number of Digits</b></p> <p>Specifies the number of digits to be dialled following the leading number to access the destination.</p> <p>For example, if the dialled numbers are either "950-xxxx" or "951-xxxx" and the numbers "950" and "951" are specified for the parameter <b>Leading Number</b> respectively, specify the number "4" in this parameter.</p>	0	0 to 29
<p>* <b>GW No/Group No. Selection</b></p> <p>Specifies the type of destination when making calls: a gateway or a gateway group.</p>	GW	GW, Group
<p>* <b>GW No/Group No.</b></p> <p>Specifies the number of the destination gateway or gateway group.</p>	GW No: 0, Group No.: 1	GW No: 0 to 511, Group No.: 1 to 256

## Detailed Explanations


### Automatic Route Redirection

When more than one card is installed in a PBX, you can assign them to a single gateway group. Grouping allows you to logically combine the channels of multiple cards in a PBX (there are 4 channels per card). This aids the effective use of channels in a PBX.

The following diagram and tables provide an example of this configuration.

### Example of Configuration

In the diagram below, there are 2 cards (cards B and C) installed in PBX 2.

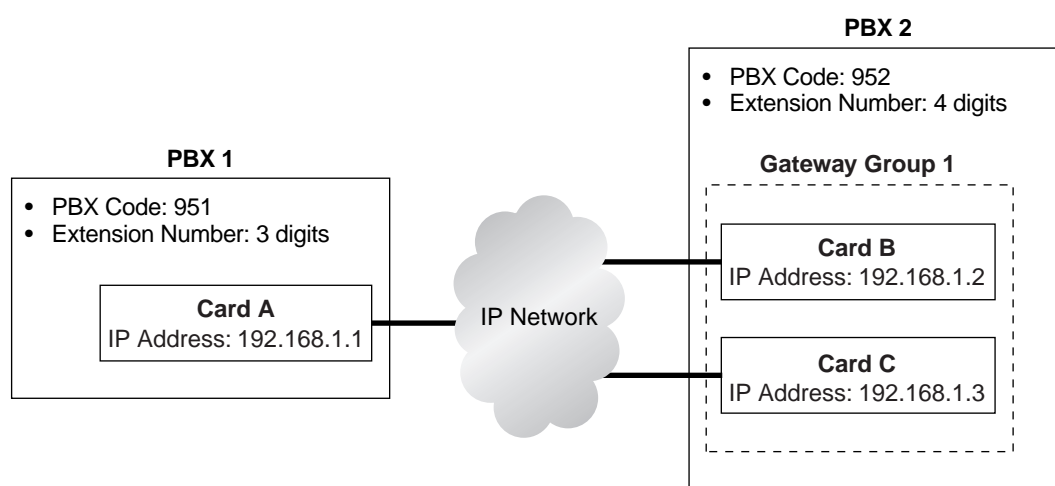

### Example of Gateway Entry Programming

Through gateway entry programming, cards B and C are grouped into a single gateway group.

Parameter	Card A	Card B	Card C
GW No	0	1	2
Comment	IP-GW Card A	IP-GW Card B	IP-GW Card C
IP Address	192.168.1.1	192.168.1.2	192.168.1.3
Group No.	0	1	1

### Example of DN2IP Entry Programming

When DN2IP entries are programmed as in the table below, calls through card A arrive at gateway group 1, which includes cards B and C.

Parameter	To Card A	To Gateway Group 1 (Cards B and C)
Leading Number	951	952
Remaining Number of Digits	3	4
GW No/Group No. Selection	GW	Group
GW No/Group No.	0	1

## 2.2 Programming

---

The automatic route redirection feature activates in this configuration. If a call is made through card A to gateway group 1 when all 4 channels of card B are busy, card A automatically redirects the call to card C.


This is possible because by grouping, PBX 1 sees PBX 2 as having a combined set of 8 channels, not 2 separate sets of 4 channels.

### **Note**


The automatic route redirection feature cannot be used in a network where a gatekeeper is used. For details about gatekeeper settings, refer to "Gatekeeper Settings" in "2.2.2 H.323 Parameters".

## 2.2.8 Initialisation

1. Click **1.7 Initialization** in the main menu.

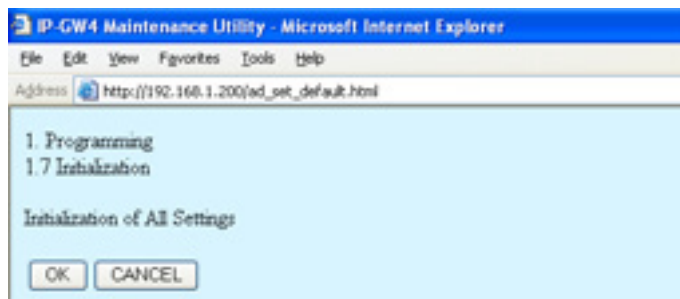

2. Click **OK** to initialise all parameters to the default values.  
To abort initialisation, click **CANCEL**. You will be taken back to the main menu (see "2.1 Main Menu for the Administrator").

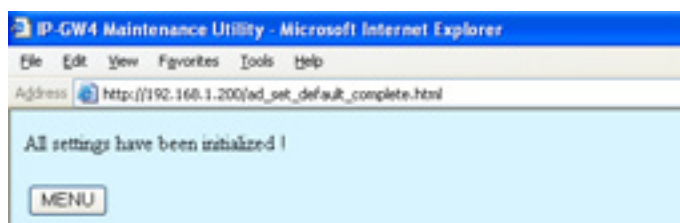

Initialisation has to be followed by a reboot to make the default values effective for the parameters indicated with "#" (e.g., IP address of the VoIP Gateway Card). If not followed by a reboot, the current setting values will remain effective instead.

3. Click **MENU** to return to the main menu (see "2.1 Main Menu for the Administrator").
4. Refer to "2.5.1 Reboot" and finish the reboot.


### **Note**

If you have forgotten the IP address or log-in password of the VoIP Gateway Card, follow the procedure detailed in "C1 Initialising the VoIP Gateway Card" of the VoIP Gateway Card Getting Started to return all settings to the factory default.

## 2.3 Maintenance

### 2.3.1 Status Control

1. Click **2.1 Change RUN/STOP status** in the main menu.

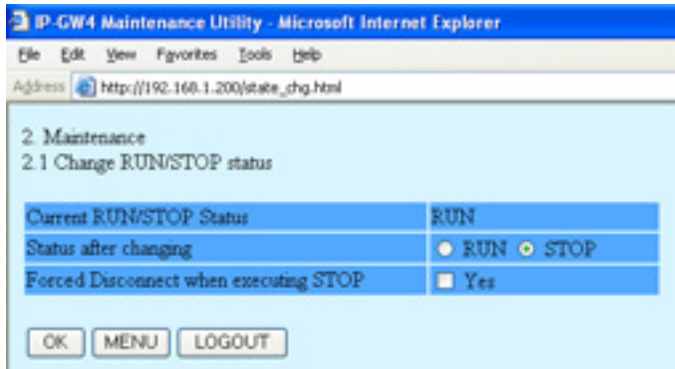

**Current RUN/STOP Status** shows the current status of the VoIP Gateway Card.

2. Click **RUN** or **STOP** for **Status after changing**.

If you want to forcibly change the status from "RUN" to "STOP" while there are ongoing calls, click the **Yes** check box for **Forced Disconnect when executing STOP**. This will allow you to place the card in the "STOP" status even when there are ongoing calls.

At any time during the session, you can:

- Click **MENU** to return to the main menu (see "2.1 Main Menu for the Administrator").
- Click **LOGOUT** to log out from the IP-GW4 Maintenance Utility (see "2.5.2 Log Out").

3. Click **OK**.

You will see a confirmation screen.

4. Click **OK**.

You will see a result screen.

#### **Note**

If the operation is not successful, you will see an error screen. Click **OK** to return to the previous screen, and then try again.

5. Click **OK**.

You will be taken back to the **Change RUN/STOP status** screen.

## 2.3.2 Maintenance Settings

1. Click **2.2 Maintenance Settings** in the main menu.

The screenshot shows the 'IP-GW4 Maintenance Utility' web interface in a Microsoft Internet Explorer browser. The address bar shows 'http://192.168.1.200/inf\_maintenance.html'. The page has a light blue background and contains the following elements:

- Buttons: OK, ALL CLEAR, MENU, LOGOUT.
- Section: 2. Maintenance
- Section: 2.2 Maintenance Settings
- Section: 2.2.1 Username/Password Settings
  - Username for Administrator: Administrator
  - Password: (empty field)
  - Password (Confirmation): (empty field)
- Section: 2.2.2 Programming Auto Disconnect Time Settings
  - Programming Auto Disconnect Time (min) 1-30min: 10
- Section: 2.2.3 Periodic Diagnosis Time Interval Settings
  - Periodic Diagnosis Time Interval (min) 0-1440min: 60
- Section: 2.2.4 Program Version
  - Program Version: Page-0.0.104

A note at the bottom states: '\* indicates setting must be done in the STOP status, and is not followed by a REBOOT.'

2. Assign each parameter referring to the descriptions below.  
At any time during the session, you can:
  - Click **ALL CLEAR** to return all parameters to their previous values.
  - Click **MENU** to return to the main menu (see "2.1 Main Menu for the Administrator").
  - Click **LOGOUT** to log out from the IP-GW4 Maintenance Utility (see "2.5.2 Log Out").
3. Click **OK**.  
You will see a confirmation screen.

### Note

If your entry contains an invalid value, you will be prompted to correct your input. Enter correct values for the parameters shown in red and try again.

4. Confirm your entry and click **OK**.  
To return to the previous screen, click **CANCEL**.

## Parameter Descriptions

The parameters indicated with "\*" must be changed while the VoIP Gateway Card is in the "STOP" status (see "2.3.1 Status Control"). The changes do not have to be followed by a reboot to become effective.

### Username/Password Settings

Parameter & Description	Default	Value Range
<b>Username for Administrator</b> Administrator-level log-in user name.	Administrator	Max. 16 characters
<b>Password</b> Administrator-level log-in password.	Administrator	Max. 16 characters

Parameter & Description	Default	Value Range
<b>Password (Confirmation)</b> Confirmation of the administrator-level log-in password.	No default	Max. 16 characters

### Programming Auto Disconnect Time Settings

Parameter & Description	Default	Value Range
<b>Programming Auto Disconnect Time (min) 1-30min</b> Specifies the time (in minutes) until programming is automatically terminated. If the specified period of time passes with no programming input, programming will automatically be terminated. This prevents problems caused by continuation of log-in status in cases such as being unable to log out due to the sudden failure of a PC.	10	1 to 30

### Periodic Diagnosis Time Interval Settings

Parameter & Description	Default	Value Range
<b>* Periodic Diagnosis Time Interval (min) 0-1440min</b> Specifies the time (in minutes) between periodic self-diagnoses to test operation as described in "2.3.3 Diagnosis". If failures are detected during the self-diagnosis, the card will alert the PBX.	60	0 (no periodic diagnosis), 1 to 1440

### Program Version


Parameter	Default	Value Range
<b>Program Version</b>	Display only	

## 2.3.3 Diagnosis


This function is used to carry out the self-diagnostic programme manually.

If failures are detected, there is a potential for trouble with the operation of the VoIP Gateway Card.

1. Click **2.3 Diagnosis** in the main menu.

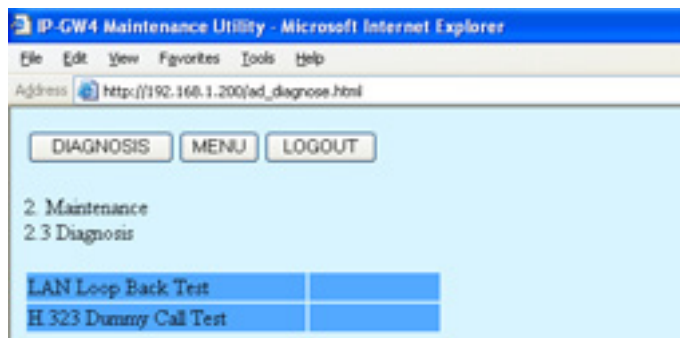

2. Click **DIAGNOSIS** to carry out the self-diagnostic programme.

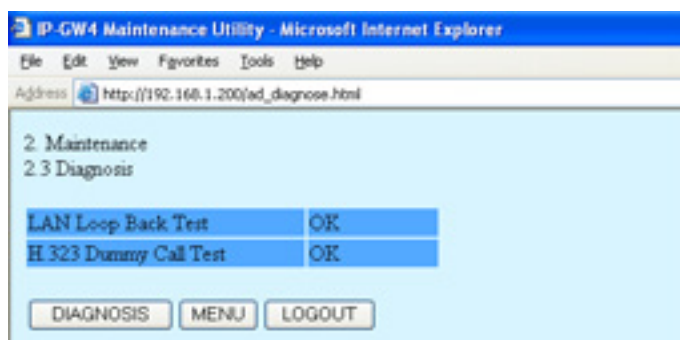

3. Do one of the following:
  - Click **DIAGNOSIS** to carry out the self-diagnostic programme again.
  - Click **MENU** to return to the main menu (see "2.1 Main Menu for the Administrator").
  - Click **LOGOUT** to log out from the IP-GW4 Maintenance Utility (see "2.5.2 Log Out").

## 2.3.4 Log Information

The function to collect log information is provided for engineer use only. However, in the case that a need should arise, this section provides the procedure for collecting the log information.

1. Click **2.4 Log Information** in the main menu.

The screenshot shows the 'P-GW4 Maintenance Utility' web interface in Microsoft Internet Explorer. The address bar shows 'http://192.168.1.200/ad\_log\_option.html'. The page content includes a navigation menu with '2. Maintenance' and '2.4 Log Information (of interest to engineers only)'. The main area contains configuration options for log collection:

Sort by Time/Date	<input checked="" type="radio"/> Ascending Order <input type="radio"/> Descending Order
Log Target	<input checked="" type="checkbox"/> Error Log <input checked="" type="checkbox"/> Call Log <input type="checkbox"/> Protocol Log
Error Log Filter	<input checked="" type="checkbox"/> Information <input checked="" type="checkbox"/> Minor Error <input checked="" type="checkbox"/> Major Error
Protocol Log Filter	<input type="checkbox"/> H.225.0 <input type="checkbox"/> H.245 <input type="checkbox"/> RAS <input type="checkbox"/> DPM <input type="checkbox"/> LAFD <input type="checkbox"/> QSIG <input type="checkbox"/> Others
Number of Log items	<input type="text" value="100"/>
Date Format	<input checked="" type="radio"/> MM-DD-YYYY <input type="radio"/> DD-MM-YYYY

At the bottom are buttons for 'OK', 'MENU', and 'LOGOUT'.

2. Click **OK**.  
Log information is displayed.

The screenshot shows the 'P-GW4 Maintenance Utility' web interface after clicking 'OK'. The address bar shows 'http://192.168.1.200/ad\_log\_info.html'. The page content includes a navigation menu with '2. Maintenance' and '2.4 Log Information (of interest to engineers only)'. The main area displays a table with log information:

Date	Time	Type	Explanation
[Log information rows would appear here]			

Below the table are links for 'Download (All)' and 'Download (Displayed portion only)'. At the bottom are buttons for 'UPDATE', 'LOG SETTING', 'MENU', and 'LOGOUT'.

3. Click **Download (All)** to download the log information.

## 2.4 Data Management


It is strongly recommended that you download the configuration data and the address translation table (DN2IP) data from the VoIP Gateway Card for backup and archive purposes.

The following sections provide the procedures for downloading and uploading.

### 2.4.1 Upload of Configuration Data

Before uploading the data, place the card in the "STOP" status (see "2.3.1 Status Control").

1. Click **3.1 Upload of Configuration data (PC → VoIP Gateway)** in the main menu.

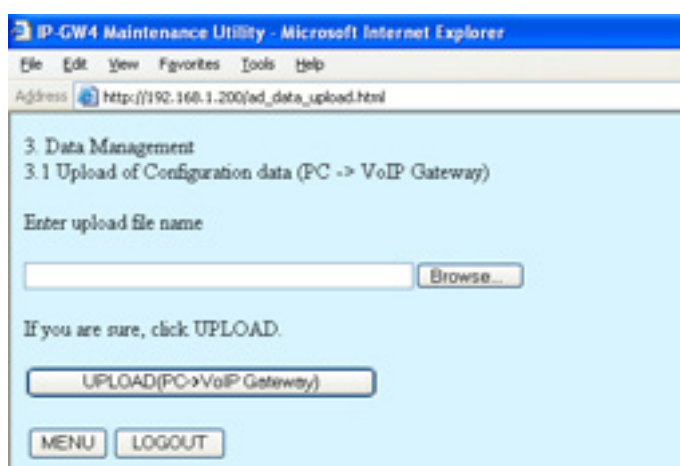


2. Click **Browse** and choose a file to upload.  
At any time during the session, you can:
  - Click **MENU** to return to the main menu (see "2.1 Main Menu for the Administrator").
  - Click **LOGOUT** to log out from the IP-GW4 Maintenance Utility (see "2.5.2 Log Out").
3. Click **UPLOAD (PC→VoIP Gateway)**.  
The upload operation starts.

#### Notes

- If the upload operation is executed while the card is in the "RUN" status, you will see an error screen. Click **Change RUN/STOP status Screen** and place the card in the "STOP" status (see "2.3.1 Status Control"), and then upload the data again.
- If the operation is not successful for other reasons, you will see another error screen. Click **OK** to return to the previous screen, and then upload the data again.

## 2.4 Data Management


---

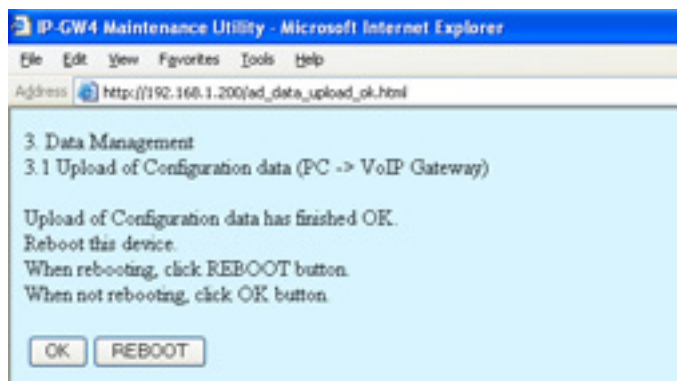

4. Do one of the following:
- Click **REBOOT** to make the changes effective now.  
You will see a confirmation screen. Refer to "2.5.1 Reboot" and finish the reboot.
  - Click **OK** to return to the previous screen without rebooting.  
However, remember to reboot the card at the end of the programming session to make changes effective.

## 2.4.2 Download of Configuration Data

1. Click **3.2 Download of Configuration data (VoIP Gateway → PC)** in the main menu.

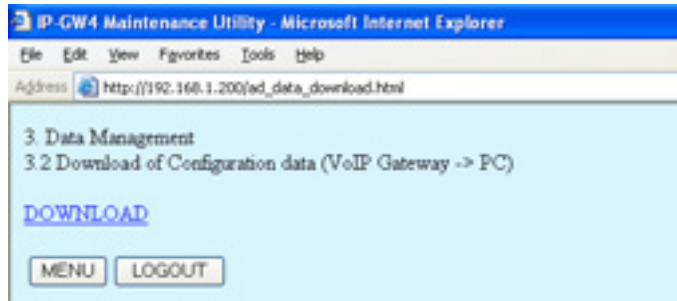

2. Click **DOWNLOAD**.


At any time during the session, you can:

- Click **MENU** to return to the main menu (see "2.1 Main Menu for the Administrator").
  - Click **LOGOUT** to log out from the IP-GW4 Maintenance Utility (see "2.5.2 Log Out").
3. Specify the file name and the folder in which to save the file.

### 2.4.3 Upload of Address Translation Table

Before uploading the data, place the card in the "STOP" status (see "2.3.1 Status Control").

1. Click **3.3 Upload of DN2IP data (PC → VoIP Gateway)** in the main menu.

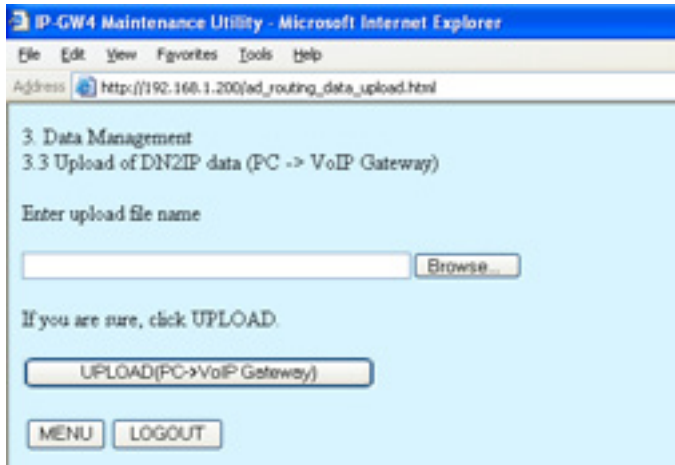

2. Click **Browse** and choose a file to upload.

At any time during the session, you can:


- Click **MENU** to return to the main menu (see "2.1 Main Menu for the Administrator").
- Click **LOGOUT** to log out from the IP-GW4 Maintenance Utility (see "2.5.2 Log Out").

3. Click **UPLOAD (PC→VoIP Gateway)**.

The upload operation starts.

#### Notes

- If the upload operation is executed while the card is in the "RUN" status, you will see an error screen. Click **Change RUN/STOP status Screen** and place the card in the "STOP" status (see "2.3.1 Status Control"), and then upload the data again.
- If the operation is not successful for other reasons, you will see another error screen. Click **OK** to return to the previous screen, and then upload the data again.

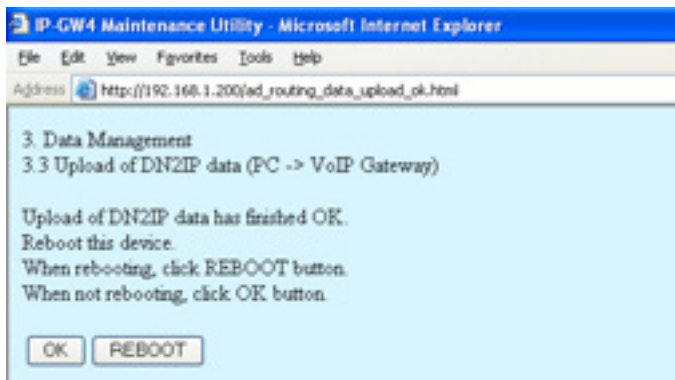


4. Do one of the following:

- Click **REBOOT** to make the changes effective now.  
You will see a confirmation screen. Refer to "2.5.1 Reboot" and finish the reboot.
- Click **OK** to return to the previous screen without rebooting.

However, remember to reboot the card at the end of the programming session to make changes effective.

### 2.4.4 Download of Address Translation Table

1. Click **3.4 Download of DN2IP data (VoIP Gateway → PC)** in the main menu.

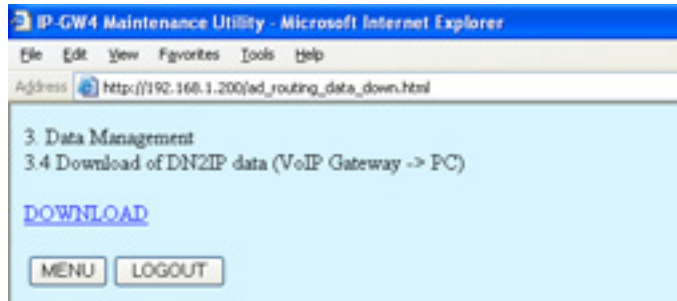

2. Click **DOWNLOAD**.

At any time during the session, you can:


- Click **MENU** to return to the main menu (see "2.1 Main Menu for the Administrator").
- Click **LOGOUT** to log out from the IP-GW4 Maintenance Utility (see "2.5.2 Log Out").

3. Specify the file name and the folder in which to save the file.

## 2.5 Others


### 2.5.1 Reboot

1. Click **REBOOT** in the main menu.

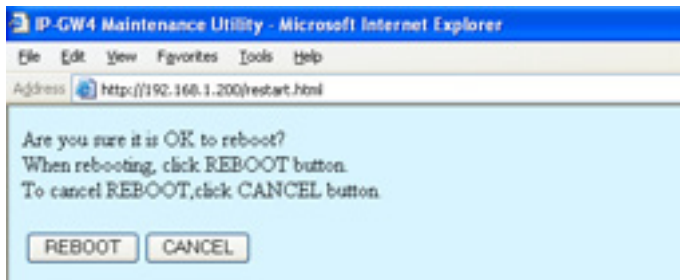

2. Click **REBOOT**.

To return to the main menu, click **CANCEL** (see "2.1 Main Menu for the Administrator").

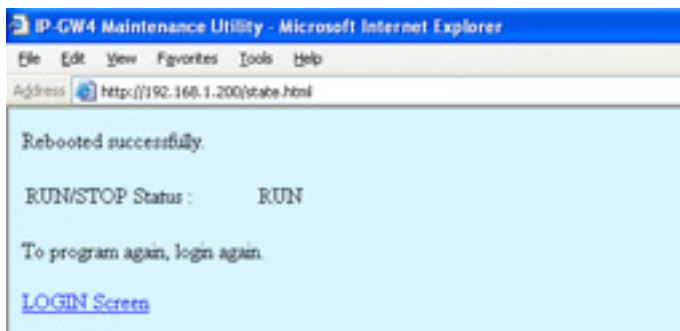


#### **Note**

If the reboot operation is not successful, you will see an error page.

3. To continue programming, click **LOGIN Screen** and log in again.  
You will see the log-in screen (see "1.1 Starting the IP-GW4 Maintenance Utility").

## 2.5.2 Log Out

1. Click **LOGOUT** in the main menu.

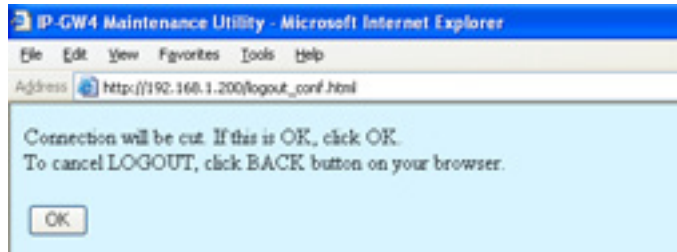

2. Click **OK** to log out.

---


## **Section 3**

# ***Installer Functions***

*This section provides operating instructions for the IP-GW4 Maintenance Utility when logged in as the Installer.*

## 3.1 Main Menu for the Installer

The IP-GW4 Maintenance Utility provides the following menu to a user logged in as the Installer.

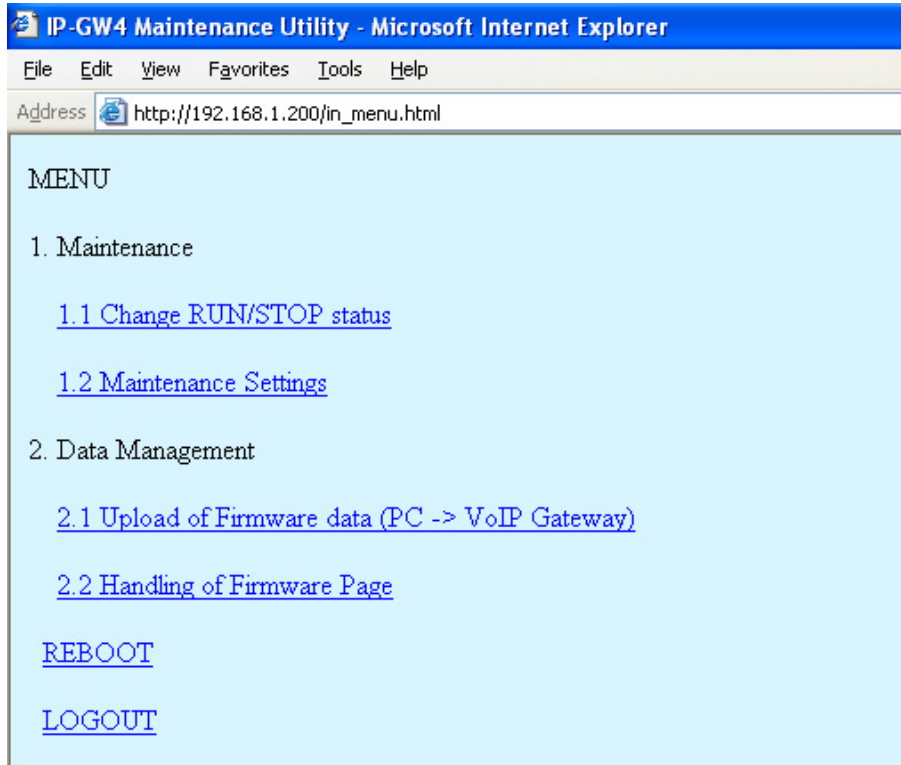

### Maintenance

Menu	Section Reference
1.1 Change RUN/STOP status	3.2.1 Status Control
1.2 Maintenance Settings	3.2.2 Maintenance Settings

### Data Management

Menu	Section Reference
2.1 Upload of Firmware data (PC → VoIP Gateway)	3.3.1 Upload of Firmware Data
2.2 Handling of Firmware Page	3.3.2 Handling of Firmware Page


### Others

Menu	Section Reference
REBOOT	3.4.1 Reboot
LOGOUT	3.4.2 Log Out

## 3.2 Maintenance

### 3.2.1 Status Control

1. Click **1.1 Change RUN/STOP status** in the main menu.

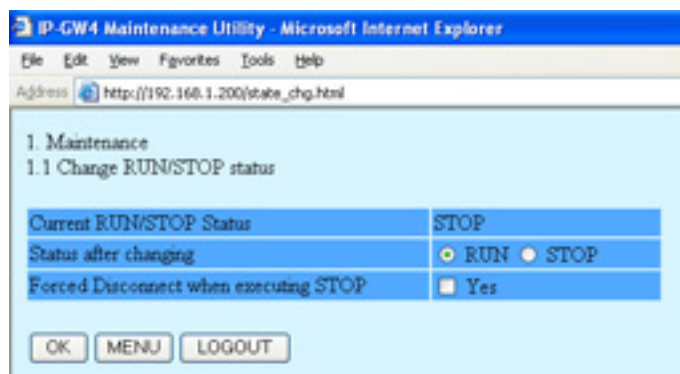

**Current RUN/STOP Status** shows the current status of the VoIP Gateway Card.

2. Click **RUN** or **STOP** for **Status after changing**.

If you want to forcibly change the status from "RUN" to "STOP" while there are ongoing calls, click the **Yes** check box for **Forced Disconnect when executing STOP**. This will allow you to place the card in the "STOP" status even when there are ongoing calls.

At any time during the session, you can:

- Click **MENU** to return to the main menu (see "3.1 Main Menu for the Installer").
- Click **LOGOUT** to log out from the IP-GW4 Maintenance Utility (see "3.4.2 Log Out").

3. Click **OK**.

You will see a confirmation screen.

4. Click **OK**.

You will see a result screen.

#### **Note**

If the operation is not successful, you will see an error screen. Click **OK** to return to the previous screen, and then try again.

5. Click **OK**.

You will be taken back to the **Change RUN/STOP status** screen.

## 3.2.2 Maintenance Settings

1. Click **1.2 Maintenance Settings** in the main menu.

2. Assign each parameter referring to the descriptions below.  
At any time during the session, you can:
  - Click **ALL CLEAR** to return all parameters to their previous values.
  - Click **MENU** to return to the main menu (see "3.1 Main Menu for the Installer").
  - Click **LOGOUT** to log out from the IP-GW4 Maintenance Utility (see "3.4.2 Log Out").
3. Click **OK**.  
You will see a confirmation screen.

### Note

If your entry contains an invalid value, you will be prompted to correct your input. Enter correct values for the parameters shown in red and try again.

4. Confirm your entry and click **OK**.  
To return to the previous screen, click **CANCEL**.

## Parameter Descriptions

### Username/Password Settings

Parameter & Description	Default	Value Range
<b>Username for Installer</b> Installer-level log-in user name.	Installer	Max. 16 characters
<b>Password</b> Installer-level log-in password.	Installer	Max. 16 characters
<b>Password (Confirmation)</b> Confirmation of the installer-level log-in password.	No default	Max. 16 characters

**Program Version**

Parameter	Default	Value Range
Program Version	Display only	

## 3.3 Data Management

The upload and update operations of the firmware data are closely related. First follow the procedure as described in "3.3.1 Upload of Firmware Data" to upload new firmware data to the VoIP Gateway Card, and then go on to "3.3.2 Handling of Firmware Page" to update the card with the newly uploaded firmware data.

### 3.3.1 Upload of Firmware Data

Before uploading the data, place the card in the "STOP" status (see "3.2.1 Status Control").

1. Click **2.1 Upload of Firmware data (PC → VoIP Gateway)** in the main menu.

IP-GW4 Maintenance Utility - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Address http://192.168.1.200/firm\_down.html

2. Data Management  
2.1 Upload of Firmware data (PC -> VoIP Gateway)

Upload Operation (Make sure to complete **Step 4.**)

Step 1: Upload the firmware data to the temporary buffer.  
Step 2: Copy the uploaded firmware data to Page-0 or Page-1.  
Step 3: Start up with the uploaded firmware (REBOOT).  
Step 4: **After the reboot, change the firmware status of the updated page from "NEW" to "Main Operation Mode".**

For details, refer to "Programming Guide - Data Management".

(Step-1) Upload to the temporary buffer.


Enter upload file name.

If you are sure, click **UPLOAD**.

2. Do the following to upload the firmware data to the temporary buffer in the VoIP Gateway Card:
  - a. Click **Browse** and choose a file to upload.  
At any time during the session, you can:
    - Click **MENU** to return to the main menu (see "3.1 Main Menu for the Installer").
    - Click **LOGOUT** to log out from the IP-GW4 Maintenance Utility (see "3.4.2 Log Out").
  - b. Click **UPLOAD (PC→VoIP Gateway)**.  
The upload operation starts.


**Note**

If the upload operation is executed while the card is in the "RUN" status, you will see an error screen. Click **Change RUN/STOP status Screen** and place the card in the "STOP" status (see "3.2.1 Status Control"), and then upload the data again.

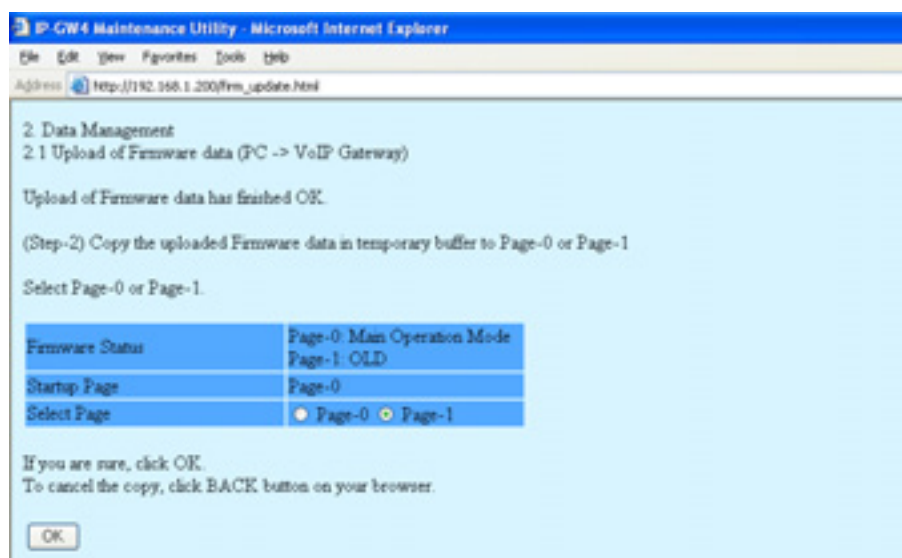

**Firmware Status** shows the current firmware status of page 0 and page 1, and **Startup Page** shows the current active page on startup. For details about these parameters, refer to "3.3.2 Handling of Firmware Page".

3. Do the following to update the desired page with the uploaded firmware data:
  - a. In **Select Page**, click the page whose current firmware status is not "Main Operation Mode".
  - b. Click **OK**.  
You will see a confirmation screen.
  - c. Click **OK**.

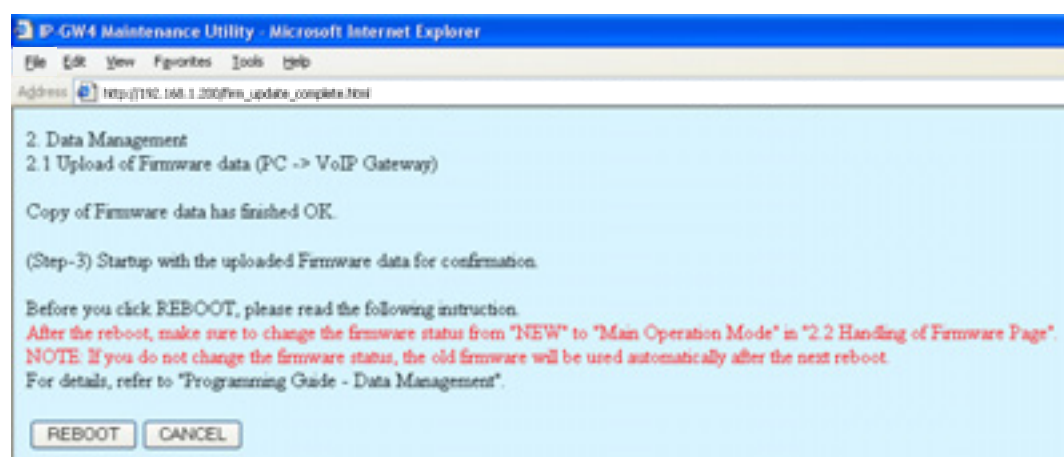


4. Click **REBOOT** to start up the card with the updated page.  
You will see a reboot confirmation screen.
5. Click **REBOOT** again.

**Notice**

Please note that rebooting the card does not finish the upload operation. The startup page will be updated only temporarily for confirmation purposes.


6. Click **Login Screen** to continue the upload operation.  
The card has rebooted with the new firmware data temporarily so that you can confirm the result of the upload operation.  
At this point, the firmware status of the updated page is "NEW". To complete the upload operation, you must proceed to the next step and change the status to "Main Operation Mode". (If you do not, the card will start up with the old firmware data after the next reboot.)
7. Switch the firmware status of the updated page from "NEW" to "Main Operation Mode", referring to "3.3.2 Handling of Firmware Page".

The following is an example of the screen where the updated page has been set to "Main Operation Mode". To set the updated page as the active page on startup, you must apply this setting.

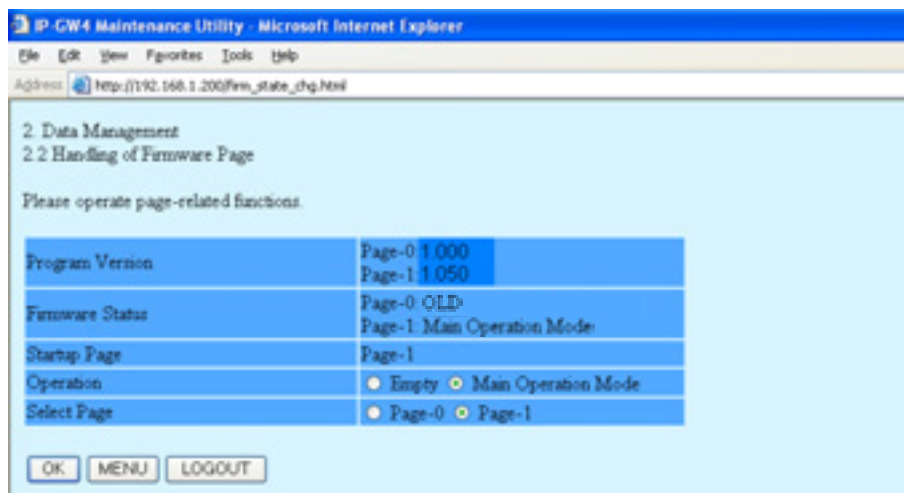

## 3.3.2 Handling of Firmware Page

1. Click **2.2 Handling of Firmware Page** in the main menu.

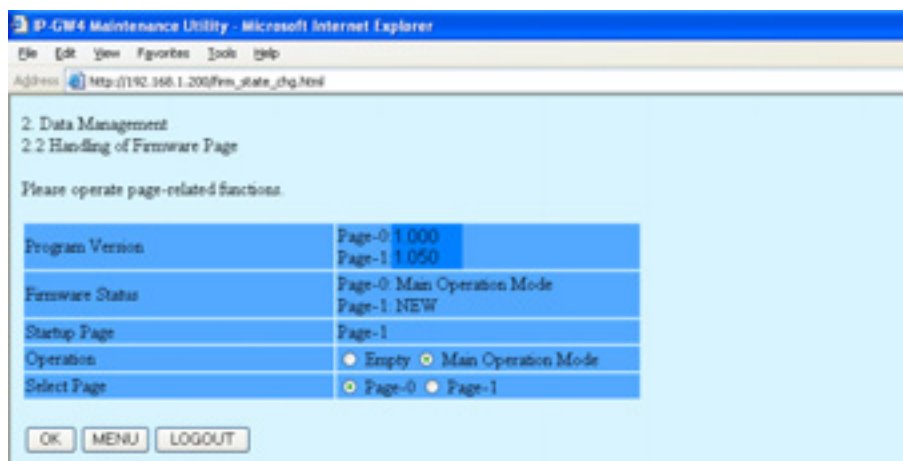

For details about the parameters on this screen, refer to the descriptions below.

2. In **Operation**, click **Main Operation Mode** to set the desired page as the active page on startup.

### Note

Do not click **Empty**, as it is an option provided for engineer use only.

At any time during the session, you can:

- Click **MENU** to return to the main menu (see "3.1 Main Menu for the Installer").
- Click **LOGOUT** to log out from the IP-GW4 Maintenance Utility (see "3.4.2 Log Out").

3. In **Select Page**, click the page whose current firmware status is not "Main Operation Mode" to specify it as the target page of the operation.
4. Click **OK**.  
You will see a confirmation screen.
5. Click **OK**.  
You will see a result screen.
6. Click **OK**.  
You will be taken back to the **Handling of Firmware Page** screen.

## Parameter Descriptions


Parameter & Description	Default	Value Range
<b>Program Version</b> Indicates the current version of the 2 firmware data in the VoIP Gateway Card: page 0 and page 1.	Display only	

Parameter & Description	Default	Value Range
<p><b>Firmware Status</b></p> <p>Indicates the current firmware status of the corresponding page. There are 3 kinds of status indications:</p> <ul style="list-style-type: none"> <li>• Main Operation Mode: Active firmware data on startup under normal operation.</li> <li>• OLD: Firmware data uploaded to the card before the firmware data in the "Main Operation Mode" status was uploaded.</li> <li>• NEW: Firmware data uploaded to the card after the firmware data in the "Main Operation Mode" status was uploaded.</li> </ul> <p><b>Note</b></p> <p>The status indications "OLD" and "NEW" are irrelevant to the version of the firmware data.</p>	Display only	
<p><b>Startup Page</b></p> <p>Indicates the active page on startup. Generally, the startup page is the firmware data whose status is "Main Operation Mode".</p> <p>The exception is when the card undergoes a reboot after a firmware data upload operation; in this case, the card starts up with the page in the "NEW" status. This is for the purposes of confirming the result of the upload operation. If you reboot again, the card starts up with the page in the "Main Operation Mode" status.</p> <p>To set the updated page as the active page on startup, you must change its firmware status to "Main Operation Mode".</p>	Display only	
<p><b>Operation</b></p> <p>Specifies whether to set the page (selected with the parameter <b>Select Page</b>) as the active page on startup ("<b>Main Operation Mode</b>"), or delete the page ("<b>Empty</b>").</p> <p>"Empty" is an option provided for engineer use only.</p>	Not applicable	Empty, Main Operation Mode
<p><b>Select Page</b></p> <p>Specifies the target page of the operation selected with the parameter <b>Operation</b>.</p>	Not applicable	Page-0, Page-1


## 3.4 Others

### 3.4.1 Reboot

1. Click **REBOOT** in the main menu.

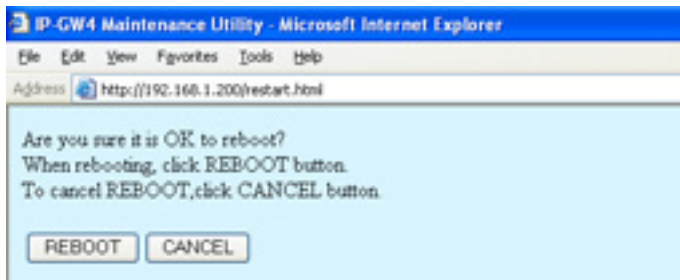

2. Click **REBOOT**.  
To return to the main menu, click **CANCEL** (see "3.1 Main Menu for the Installer").

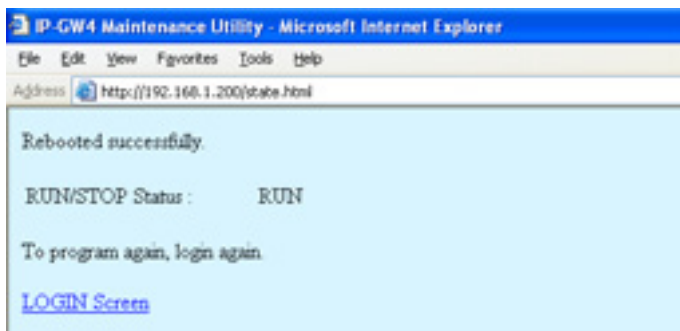


#### **Note**

If the reboot operation is not successful, you will see an error page.

3. To continue programming, click **LOGIN Screen** and log in again.  
You will see the log-in screen (see "1.1 Starting the IP-GW4 Maintenance Utility").

## 3.4.2 Log Out

1. Click **LOGOUT** in the main menu.

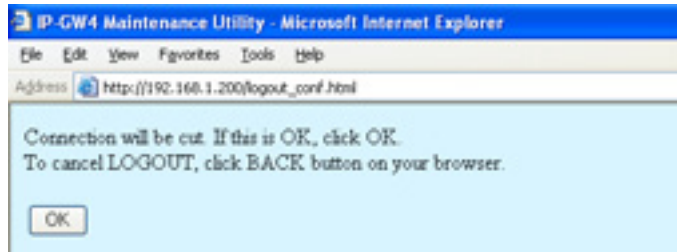

2. Click **OK** to log out.

---

# ***Index***

### A

Automatic Route Redirection 37

### B

Bandwidth 22, 24

### C

Call Signaling Model 16  
Change RUN/STOP status 40, 55  
CODEC Frame Settings 20, 22

### D

Default Gateway 11  
DHCP Settings 11  
Diagnosis 43  
Dialing Settings 25  
DiffServ 19  
Digit End Code 26  
DN2IP (Dialed Number to IP Address Translation) 32, 35  
DN2IP Entry 35, 36  
Download of Address Translation Table 50  
Download of Configuration Data 47  
DSCP 19, 22  
DTMF Detection 20, 23  
DTMF Detection Level 21  
DTMF Relay 20, 23

### E

Echo Cancellor 20  
ECM (Error Correction Model) 23  
Empty 62

### F

Fast Connect 17  
FAX High Reliable Method 21, 24  
FAX Signal Detection 20, 23  
Firmware Status 62  
First Digit Time 25

### G

G.168 20  
G.711A 15  
G.711Mu 15  
G.723.1 15  
G.723.1 Rate 20  
G.723.1 VAD (Voice Activity Detection) 20  
G.729A 15  
Gatekeeper Settings 16  
GW Entry 32, 33

### H

H.225 Port No. 15  
H.245 Port No. 15  
H.323 14  
H.323 Detailed Settings 14  
Handling of Firmware Page 61  
Host Name 12

HTTP Settings 12  
Hunt Pattern (for Incoming Calls) 27

### I

Initialisation 39  
Inter-Digit Time 26  
IP Address 11  
IP Address Settings 11  
IP Header 19, 21

### J

Jitter buffer Settings 19

### L

LAN 22, 24  
LAN Disconnect Threshold Time 12  
Log Information 44  
Log Out 52, 64

### M

Main Menu for the Administrator 8  
Main Menu for the Installer 54  
Main Operation Mode 62  
Maintenance Settings 41, 56

### N

Network CODEC of IP-PBX 26  
Network Settings, General 10

### P

Packet Sending Interval 20, 22, 23, 24  
Periodic Diagnosis Time Interval Settings 42  
Port Number Settings 15  
PPP (Point-to-Point Protocol) 23, 24  
Program Version 42, 57, 61  
Programming Auto Disconnect Time Settings 42

### Q

QoS Field Settings 19, 21  
QSIG Connectionless Tunneling Settings 12

### R

RAS Port No. 15  
Reboot 51, 63  
RTP/RTCP Port No. 15

### S

Startup Page 62  
Subnet Mask 11  
Super G3 Mode 24

### T

ToS 19, 21

### U

Upload of Address Translation Table 48

---

Upload of Configuration Data	45
Upload of Firmware Data	58
Username/Password Settings	41, 56

**V**

VAD (Voice Activity Detection)	20
Voice CODEC Settings	15
Voice Communication Detailed Settings	18
VoIP Gateway/IP-PBX Interface Settings	25

**Panasonic Communications Co., Ltd.**

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

**Copyright:**

This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© 2005 Panasonic Communications Co., Ltd. All Rights Reserved.